

Configuration API

Solstice Host URL: `IPAddress/api/config`

The configuration API is focused on setting and reading configuration settings that are available in the Configuration Panel and the Solstice dashboard. These are admin settings that are concerned with customization, security, and network configuration options.

The top level keys are primarily associated with device-specific settings and are not grouped into a sub-hierarchy. For each table, other than the 'Top Level' table that does not require a hierarchical key, the hierarchical key is shown in the first row. This is the key to the set of values that can be set in that table.

Product/Global Settings

Top Level			
Key	Type	Get/Post	Description
m_displayId	string	Get	This is the unique identifier that Solstice uses to manage a single instance, regardless of how the display is named or its current IP Address
m_serverVersion	string	Get	The current software version running on the Solstice host
m_productName	string	Get	The name of the Solstice software (Solstice).
m_productVariant	string	Get	The generation and type of Pod hardware as a name. For example, 'Gen1' or 'Gen2'
m_productHardwareVersion	int	Get	The Pod hardware generation as a version number (Pod-only). For example, 1 or 2.

Display Communications Settings

m_displayInformation			
Key	Type	Get/Post	Description
m_ipv4	string	Get	The current primary IP Address assigned to the Solstice display/endpoint.
m_displayName	string	Get/Post	The display name used for Solstice discovery. This name is shown on the Solstice splash-screen and appears in the client discovery list for connecting to the Solstice display.
m_hostName	string	Get/Post	The Solstice host device's current hostname.
m_port	int	Get/Post	The base port that Solstice will utilize for TCP/IP communications. Solstice uses three ports defined by the base port value, +1, and +2.

Global Display Settings

m_generalCuration			
Key	Type	Get/Post	Description
language	string	Get/Post	A code that denotes the current language setting. Valid options are: "en_US" for US English, "ja_JP" for Japanese, and "xx".
showSplashScreen	bool	Get	Show or hide the splash screen background image when the splash-screen is visible.
localConfigEnabled	bool	Get	Enable or disable access to the local Configuration Panel on the Solstice host (via mouse/keyboard). When disabled the onscreen configuration menu is no longer visible to users.

browserConfigEnabled	bool	Get	If this is disabled, the API cannot interact with the host since the device considers the API browser configuration.
autoConnectOnClientLaunch	bool	Get	Enable or disable quick-connect auto launch

Authentication Modes

m_authenticationCuration			
Key	Type	Get/Post	Description
screenKeyEnabled	bool	Get	Check whether screen is key protected
moderatorApprovalDisabled	bool	Get	Check whether moderator mode is enabled or disallowed
sessionKey	string	Get	The current session key currently displayed on the screen and required to be entered by clients before connecting to the display

Main Network and Feature Record

m_networkCuration			
Key	Type	Get/Post	Description
connectionShowFlags	Bitwise flags (post as decimal int)	Get/Post	Bitwise flags for showing various connection related information on the Solstice splash-screen. Bit 1: Main Screen - Display Name Enabled Bit 2: (Don't Care) Bit 3: Show IP Address on Main Screen Bit 4: Presence Bar - Display Name Bit 5: Presence Bar - IP Address Bit 6: Show Screen Key on Main Screen Bit 7: Presence Bar - Screen Key Bit 8: Show Presence Bar Bit 9: Connect by App Instructions Bit 10: App Instructions - Artwork/Icons Bit 11: Connect by Web Instructions Bit 12: Web Instructions - Artwork/Icons Bit 13: Show SSID Info (when enabled)
discoveryBroadcastEnabled	bool	Get	Enable or Disable UDP Discovery broadcast. When enabled the Solstice host will broadcast discovery information on local network every 5 seconds allowing clients to discover and connect.
publishToNameServer	bool	Get	Publish discovery information to Solstice Discovery Service so clients can discover the Solstice host without the need for broadcast traffic/discovery.
maximumConnections	int	Get/Post	The current number of maximum allowable simultaneous connections. Cannot be set past maximum allowable based on license for host.
maximumLicensedConnections	int	Get	Number of maximum allowable simultaneous connections based on the installed license.
maximumImageSize	int	Get/Post	Maximum size of an image, in bytes, shared by clients. Clients that share images past the maximum will automatically be resized (to save resources).

maximumPublished	int	Get/Post	Maximum number of posts allowed. Users who post past this limit will be given a message that the system is busy.
maximumAirPlayUsers	int	Get/Post	Maximum number of simultaneous AirPlay users allowed (ie iOS mirroring posts). Cannot be set higher than 4.
sdsHostName	string	Get/Post	Primary hostname or IP Address of Solstice Discovery Service to list discovery information.
sdsHostName2	string	Get/Post	Secondary hostname or IP Address of Solstice Discovery Service to list discovery information.
remoteViewMode	int	Get/Post	Enable or disable Browser Look-In feature. 0=disabled, 1=enabled, 2=allow users to toggle on/off at runtime. Passing a value other than 0,1, or 2 disables look-in.
firewallMode	int	Get/Post	Modifies Dual-Network firewall (Pod only) to enable or disable internet traffic between two network interfaces. 0=Block all traffic, 1=Allow ports 80/443.
postTypeDesktopSupported	bool	Get	Enable or disable support for PC/desktop full screen sharing.
postTypeApplicationWindowSupported	bool	Get	Enable or disable support for application window sharing.
postTypeMediaFilesSupported	bool	Get	Enable or disable support for image and video file sharing.
postTypeAirPlaySupported	bool	Get	Enable or disable support for iOS mirroring.
postTypeAndroidMirroringSupported	bool	Get	Enable or disable support for Android full screen mirroring.
bonjourProxyEnabled	bool	Get	Enable or disable the Bonjour Proxy feature that allows iOS users to discover display to mirror to via the Solstice App instead of the Bonjour protocol.
ethernetEnabled	bool	Get	Enable or disable the Ethernet network adapter (Pod-only).
wifiMode	int	Get	Set the wireless network adaptor mode 0 = Off, 1 = Client Mode/Attach to existing wireless, 2= Wireless Access Point.
wifiConfig (Pod Only)			
ssid	string	Get	SSID of the host wireless network to connect to via wireless client mode.
security	int	Get	Security protocol of the Pod wireless network (Pod-only). 0=open, 1=WEP, 2=WPA, 3=WPA2, 4=EAP
eap	int	Get	EAP method of authentication when in EAP mode (Pod-only). 0=None, 1=PEAP, 2=TLS, 3=TTLS, 4=PWD, 5=SIM, 6=SIM
phase2	int	Get	Phase2 authentication method. 0=None, 1=PAP, 2=MSCHAP, 3=MSCHAPv2, 4=GTC.
password	string	Get	Password used to authenticate to host network. Get returns ""
dhcp	bool	Get	Enable or disable DHCP protocol on wireless interface.
staticIP	string	Get	Static IP address to assign to device on wireless interface.
gateway	string	Get	Wireless interface gateway.
prefixlength	int	Get	Prefix setting for wireless interface.

dns1	string	Get	First DNS for wireless interface.
dns2	string	Get	Second DNS for wireless interface.
apConfig (Pod Only)			
SSID	string	Get	SSID for standalone wireless access point .
SecurityMode	int	Get	Security protocol for wireless interface when in WAP mode (Pod-only). 0=open, 3=WPA2.
PSK	string	Get	Password to use for authenticating users connecting to wireless access point.
ethernet (Pod Only)			
dhcp	bool	Get	Enable or disable DHCP for the Ethernet network interface.
staticIP	string	Get	Static IP to assign the device's Ethernet network interface (Pod-only).
gateway	string	Get	Gateway IP Address for the Ethernet network interface (Pod-only).
prefixLength	int	Get	Prefix length value (netmask, Pod-only).
dns1	string	Get	First DNS Server IP Address (Pod-only).
dns2	string	Get	Second DNS Server IP Address (Pod-only).
httpProxyServerSettings			
enabled	bool	Get	Enable or disable use of an HTTP Proxy.
ip	string	Get	IP Address of HTTP proxy server.
port	int	Get	Communications port of HTTP proxy server.
username	string	Get	Username to be used when authenticating to the HTTP proxy server.
password	string	Get	Password to be used when authenticating to the HTTP proxy server.
httpsProxyServerSettings			
enabled	bool	Get	Enable or disable use of an HTTPS Proxy.
ip	string	Get	IP Address of HTTPS proxy server.
port	int	Get	Communications port of HTTPS proxy server.
username	string	Get	Username to be used when authenticating to the HTTPS proxy server.
password	string	Get	Password to be used when authenticating to the HTTPS proxy server.

Licensing

m_licenseCuration			
Key	Type	Get/Post	Description
licenseStatus	int	Get	0=No license; 1=Error reading license; 2=License OK; 3=License Expired
trustFlags	x	x	windows only; not currently supported
fulfillmentType	x	x	windows only; not currently supported
enabled	x	x	windows only; not currently supported
fulfillmentId	x	x	windows only; not currently supported
entitlementId	x	x	windows only; not currently supported
productId	x	x	windows only; not currently supported
suitId	x	x	windows only; not currently supported
expirationDate	x	x	windows only; not currently supported
featureLine	x	x	windows only; not currently supported
numDaysToExpiration	x	x	windows only; not currently supported

maxUsers	str	Get	max number of users allowed by license. eg. "Unlimited", "4"
licensing_maxPosts	int	Get	maximum number of posts allowed by the license type.
licensing_maxPostsIsConfigurable	bool	Get	Is the user allowed to change the value of maxPosts?
licensing_atMaxPostsReplace	bool	Get	When the max post count is reached, should the next post replace (1) or not display (0)?
licensing_maxUsers	int	Get	maximum users allowed (0=Unlimited)
licensing_maxUsersIsConfigurable	bool	Get	Is the user allowed to change the value of maxUsers?
licensing_remoteViewEnabled	bool	Get	Can remote view be enabled?
licensing_remoteViewIsConfigurable	bool	Get	Is remote view able to be configured?
licensing_runtimeAccessControls	bool	Get	Can users can select the runtime access (moderated, screen key, etc.)?

Passwords

m_userGroupCuration			
Key	Type	Get/Post	Description
adminPassword	string	Post	Administrative password for host. Note - Get on this value will always return "unknown".
passwordValidationEnabled	bool	Get	Enable/Disable validation of admin password using the following rules: <ul style="list-style-type: none"> • Minimum of 8 characters. • At least one uppercase and one lowercase character. • At least one number or special character.

System Settings Record

m_systemCuration			
Key	Type	Get/Post	Description
autoDateTime	bool	Get	Enable or disable the use of an NTP time server. If disabled, date and time is set manually.
ntpServer	string	Get/Post	Non-default NTP time server IP Address. If left blank, a default internet time server will be used when autoDateTime is true.
dateTime	int	Get/Post	Date and time value, represented as a 64-bit integer in milliseconds since January 1, 1970, 00:00:00 GMT.
timeZone	string	Get/Post	Time zone code represented as a string from the set of available time zones.
timeZones	String array	Get	Array of available time zone strings. See Appendix A.

Stats API

Solstice Host URL: `IPAddress/api/stats`

The stats API reports statistics about the current status of the Solstice host. These stats are instantaneous and can provide third-party developers with a snapshot of activity.

Global Stats Record

Top Level			
Key	Type	Get/Post	Description
m_displayId	string	Get	This is the unique identifier that Solstice uses to manage a single instance, regardless of how the display is named or its current IP address
m_serverVersion	string	Get	The current software version running on the Solstice host.
m_displayInformation			
m_displayName	string	Get	The name of the display, shown on welcome screen and used for discovery.
m_productName	string	Get	The name of the Solstice software (Solstice).
m_productVariant	string	Get	The generation and type of Pod hardware as a name (Pod-only). For example, 'Gen1' or 'Pod Gen2'.
m_productHardwareVersion	int	Get	The Pod hardware generation as a version number (Pod-only). For example, 1 or 2.
m_statistics			
m_currentPostCount	int	Get	Total number of posts currently shared to the display.
m_currentBandwidth	int	Get	Total network bandwidth being used in Mbps.
m_connectedUsers	int	Get	Number of currently connected users.
m_timeSinceLastConnectionInitialize	int	Get	Time since the device last has a session initiated. Returns in milliseconds.
m_currentLiveSourceCount	int	Get	Number of current live sources such as USB camera.

Command API

Solstice Host URL: IPAddress/api/control

The Command API addresses runtime control of a Solstice host from a third-party application. Commands are executed by issuing a GET to the URL that corresponds to the command to be executed. The Command API does not make use of the JSON key/value records as the other APIs do.

Security is enforced by requiring password authentication when an administrator password has been set. If an incorrect or no password is appended to the GET when one is needed, the command will be ignored.

The URLs for each of the commands and their effects are listed below:

Command URL List	
URL	Impact
/api/control/clear	Clears the display of all posts.
/api/control/boot	Boots all connected users and deletes all posts on the display. Returns display to splash-screen.
/api/control/resetkey	Replace the current screen key with a new random screen key for connection authentication.

Valid Time Zones

The currently set time zone on a device is returned from the API call “timeZone” by id. The API call “timeZones” returns a string array of all available time zones.

id	name	offset (ms)	offset (hrs)
Pacific/Midway	GMT-11:00, Midway Island	-39600000	-11
Pacific/Honolulu	GMT-10:00, Hawaii	-36000000	-10
America/Anchorage	GMT-8:00, Alaska	-28800000	-8
America/Los_Angeles	GMT-7:00, Pacific Time	-25200000	-7
America/Tijuana	GMT-7:00, Tijuana	-25200000	-7
America/Phoenix	GMT-7:00, Arizona	-25200000	-7
America/Chihuahua	GMT-6:00, Chihuahua	-21600000	-6
America/Denver	GMT-6:00, Mountain Time	-21600000	-6
America/Costa_Rica	GMT-6:00, Central America	-21600000	-6
America/Regina	GMT-6:00, Saskatchewan	-21600000	-6
America/Chicago	GMT-5:00, Central Time	-18000000	-5
America/Mexico_City	GMT-5:00, Mexico City	-18000000	-5
America/Bogota	GMT-5:00, Bogota	-18000000	-5
America/Caracas	GMT-4:30, Venezuela	-16200000	-4.5
America/New_York	GMT-4:00, Eastern Time	-14400000	-4
America/Barbados	GMT-4:00, Atlantic Time (Barbados)	-14400000	-4
America/Manaus	GMT-4:00, Manaus	-14400000	-4
America/Halifax	GMT-3:00, Atlantic Time (Canada)	-10800000	-3
America/Santiago	GMT-3:00, Santiago	-10800000	-3
America/Sao_Paulo	GMT-3:00, Brasilia	-10800000	-3
America/Argentina/Buenos_Aires	GMT-3:00, Buenos Aires	-10800000	-3
America/Montevideo	GMT-3:00, Montevideo	-10800000	-3
America/St_Johns	GMT-2:30, Newfoundland	-9000000	-2.5
America/Godthab	GMT-2:00, Greenland	-7200000	-2
Atlantic/South_Georgia	GMT-2:00, Mid-Atlantic	-7200000	-2
Atlantic/Cape_Verde	GMT-1:00, Cape Verde Islands	-3600000	-1
Atlantic/Azores	GMT+0:00, Azores	0	0
Africa/Casablanca	GMT+0:00, Casablanca	0	0
Europe/London	GMT+1:00, London, Dublin	3600000	1
Africa/Windhoek	GMT+1:00, Windhoek	3600000	1
Africa/Brazzaville	GMT+1:00, W. Africa Time	3600000	1
Europe/Amsterdam	GMT+2:00, Amsterdam, Berlin	7200000	2
Europe/Belgrade	GMT+2:00, Belgrade	7200000	2
Europe/Brussels	GMT+2:00, Brussels	7200000	2
Europe/Sarajevo	GMT+2:00, Sarajev	7200000	2
Africa/Cairo	GMT+2:00, Cairo	7200000	2

Africa/Harare	GMT+2:00, Harare	7200000	2
Asia/Amman	GMT+3:00, Amman, Jordan	10800000	3
Europe/Athens	GMT+3:00, Athens, Istanbul	10800000	3
Asia/Beirut	GMT+3:00, Beirut, Lebanon	10800000	3
Europe/Helsinki	GMT+3:00, Helsinki	10800000	3
Asia/Jerusalem	GMT+3:00, Jerusalem	10800000	3
Europe/Minsk	GMT+3:00, Minsk	10800000	3
Asia/Baghdad	GMT+3:00, Baghdad	10800000	3
Europe/Moscow	GMT+3:00, Moscow	10800000	3
Asia/Kuwait	GMT+3:00, Kuwait	10800000	3
Africa/Nairobi	GMT+3:00, Nairobi	10800000	3
Asia/Tbilisi	GMT+4:00, Tbilisi	14400000	4
Asia/Yerevan	GMT+4:00, Yerevan	14400000	4
Asia/Duba	GMT+4:00, Dubai	14400000	4
Asia/Tehran	GMT+4:30, Tehran	16200000	4.5
Asia/Kabul	GMT+4:30, Kabul	16200000	4.5
Asia/Baku	GMT+5:00, Baku	18000000	5
Asia/Karachi	GMT+5:00, Islamabad, Karachi	18000000	5
Asia/Oral	GMT+5:00, Ural'sk	18000000	5
Asia/Yekaterinburg	GMT+5:00, Yekaterinburg	18000000	5
Asia/Calcutta	GMT+5:30, Kolkata	19800000	5.5
Asia/Colombo	GMT+5:30, Sri Lanka	19800000	5.5
Asia/Katmandu	GMT+5:45, Kathmandu	20700000	5.75
Asia/Almaty	GMT+6:00, Astana	21600000	6
Asia/Rangoon	GMT+6:30, Yangon	23400000	6.5
Asia/Krasnoyarsk	GMT+7:00, Krasnoyarsk	25200000	7
Asia/Bangkok	GMT+7:00, Bangkok	25200000	7
Asia/Shanghai	GMT+8:00, Beijing	28800000	8
Asia/Hong_Kong	GMT+8:00, Hong Kong	28800000	8
Asia/Irkutsk	GMT+8:00, Irkutsk	28800000	8
Asia/Kuala_Lumpur	GMT+8:00, Kuala Lumpur	28800000	8
Australia/Perth	GMT+8:00, Perth	28800000	8
Asia/Taipei	GMT+8:00, Taipei	28800000	8
Asia/Seoul	GMT+9:00, Seoul	32400000	9
Asia/Tokyo	GMT+9:00, Tokyo, Osaka	32400000	9
Asia/Yakutsk	GMT+9:00, Yakutsk	32400000	9
Australia/Adelaide	GMT+9:30, Adelaide	34200000	9.5
Australia/Darwin	GMT+9:30, Darwin	34200000	9.5
Australia/Brisbane	GMT+10:00, Brisbane	36000000	10
Australia/Hobart	GMT+10:00, Hobart	36000000	10
Australia/Sydney	GMT+10:00, Sydney, Canberra	36000000	10
Asia/Vladivostok	GMT+10:00, Vladivostok	36000000	10

Pacific/Guam	GMT+10:00, Guam	36000000	10
Asia/Magadan	GMT+10:00, Magadan	36000000	10
Pacific/Majuro	GMT+12:00, Marshall Islands	43200000	12
Pacific/Auckland	GMT+12:00, Auckland	43200000	12
Pacific/Fiji	GMT+12:00, Fiji	43200000	12
Pacific/Tongatapu	GMT+13:00, Tonga	46800000	13