

# Xplorer™ 64

For Nintendo™ 64

Xplorer 64 is the latest version of the Number 1 Best Seller\*, now for your Nintendo 64. Xplorer 64 blows your games wide open, allowing you to gain access to in-game secrets never found before. Infinite Lives, Unlimited Ammo, Extra Weapons vehicles, Characters and much, much more. Xplorer comes pre-loaded with 100's of cheats for the latest and greatest N64 games, and you can add new cheats from your favourite games magazines, or the Xplorer Website and Codes Hotline. Xplorer is also compatible with Action Replay™ and Gameshark™ cheat codes.

## **Connecting your Xplorer 64.**

1. Ensure your console is turned off.
2. With the LED, button and curve of the cartridge facing forwards, insert the Xplorer cartridge into the console cartridge port.
3. Insert any game cartridge into the Xplorer 64, with the label facing towards the front of the console in the normal manner. Now switch on the console.
4. After a couple of seconds, you should see the Xplorer 64 Main Menu.
5. If you do not see the Main Menu, you are probably using one of the Special Games that require a different boot sequence. Please refer to the section at the end of the manual regarding Boot Modes.

## **Selecting Cheat Codes.**

Once Xplorer 64 is up and running you will see the Main menu. From this screen you can start the game with no cheats active if you prefer, alternatively;

1. Highlight the "Select Cheats" bar using the analogue stick or directional pad and press the A button. To go to the cheat selection screen.
2. Use up and down on your controller to cycle through the available cheats (L and R will scroll the names quickly if you need a cheat near the end of the list).
3. Once you have found the game you are looking for (the pointer is pointing at the game name), you can do any of the following;
  - a) Right C button views the available cheats.
  - b) Keeping the Pointer on the game name and pressing the A button will activate all the cheats for that game, or
  - c) Moving the pointer to a specific cheat and pressing the A button will activate that cheat only. All active cheats will be shown in green.
  - d) Press Start to return to the Main Menu

The bottom of the screen will now show the name of the game you have selected cheats for and how many cheats are active for that game. If you are happy with your selection, highlight the "Start Game" bar and press the A button on your controller.

The game will start with your selected cheats active.

## **Adding New Cheats**

You can add up to 10'000 cheats to Xplorer 64. These can added in several ways. The most common method will be from the cheats and tips sections of games magazines, through our own dedicated Codes Hotline or the Official Xplorer Website. You can also add cheats using the PC X-Link software\*, Special Format Memory cards, even from your friends Xplorer. Remember you can also use Action Replay™ and GameShark™ cheat codes, but Xplorer codes will not work on other cheat cartridges.

You will notice the cheats are split into three areas;- The Game Name, The Cheat Description and The Cheat Code.

## ***Your first step is to enter the game name.***

1. Select "Select Cheats" from the Main Menu.
2. At the top of the list you will see "Add New Game". Move the pointer to this and press A.



3. You can now enter the name of the game. Using the controller, select each of the letters(or spaces etc.) in turn and press the A button to spell out the game name. Pressing the L and R buttons will move the cursor left and right and pressing the left C button will delete a character.
4. When you have finished entering your game name, press Start or select "OK". If you wish to abandon the entry, select "Can" to cancel the operation.

***Now you should enter the cheat description (e.g. Infinite Lives).***

1. Highlight the Game Name you have just entered and press the right C button.
2. Move to the "Add New Description" and press A.
3. You can now enter the Cheat Description in the same way as you entered the game name.
4. Press Start or select "OK" to complete the procedure.

***Finally, you can now enter the Cheat Code itself;***

1. Go to the game Name you have entered and press the right C button.
2. Now move the pointer to the Cheat Description you have just entered and press the right C button.
3. Now move the pointer to "Add Cheat Code" and press the A button
4. Again, you can enter the code in the same manner as above, but you can only enter the numbers 0 to 9 and letters A-F. These are the only figures the code can consist of.
5. Enter the sequence of 12 characters ensuring that you enter the code correctly. If you make a mistake, you will need to amend the code as it will not work correctly.

When you leave the cheat screen, your new codes will be stored in Xplorer's memory. You can delete the cheats at a later date if required. Turning the power off does not delete the cheats.

You can activate your new cheat as described in "Selecting Cheat Codes".

You do not need to enter the game name again if you add another cheat at a later date. Simply highlight and view the current cheats for that game and simply add a new description and code within that game-names cheats.

**IMPORTANT**

**Starting with Special Games.**

Some games require the Xplorer and console to be started differently than normal. In the past, other cheat cartridges have required you to send your cheat cartridge back to the manufacturer to be updated – Xplorer 64 has a unique key-code system which allows access to any existing and forthcoming games for entering your cheat codes.

If, after following the above instructions "Connecting your Xplorer 64" you are faced with a blank screen, you will probably need to change the Boot Mode on your Xplorer 64.

**Special Game Boot Modes**

Xplorer 64 comes initially with 4 Boot Modes that currently cover all existing game titles. These 4 modes cover the following games;

Mario, Lylat Wars and MOST other games	Boot Mode 1 (LED ON)
1080 Snowboarding, Banjo Kazooie	Boot Mode 2
Yoshi's Story	Boot Mode 3
Zelda: Ocinara of Time	Boot Mode 4

**To change the Boot Mode.**

Follow the procedure "Connecting Your Xplorer 64". If you are faced with a black screen;

1. With the power still On, press the button on the Xplorer once, the LED will flash once.
2. Turn the power off and wait for 4 seconds.
3. Power up your console.

If the game does not work, repeat the above procedure – each press of the button will switch to the next mode. This will cycle through each of the current Boot Modes. Boot Mode 1 is shown with the LED constantly ON.

To return to Boot Mode 1 (LED ON) from any other mode, press and hold the button for approx. 4 seconds.

At the time of Xplorer 64's release, all games will work in one of the above modes.



## New Boot Modes

As new games are released, FCD will make available new Keycodes which will add additional Boot Modes to your Xplorer Cartridge. No other cheat cartridge currently offers this feature.

## PC X-Link Software

Xplorer 64 is the only cheat cartridge to allow you to connect to a PC to find your own cheats. If you have access to a PC you can even upgrade your Xplorer to the very latest version with all the latest codes. You can download and upload save games, edit your saves, even email them to your friends!

For details, please visit our web-site at <http://www.x-plorer.co.uk>

## Upgrades

Xplorer 64 is the most upgradeable cheat cartridge in the world. If you have friend with an Xplorer 64 and he has more cheat codes than you, or even a more recent version of Xplorer 64, you can upgrade your cartridge to include his cheat codes!!

Take great care when following this procedure. Do not force any of the cartridges and ensure each one is connected correctly.

1. Turn off the console
2. Insert the most recent version of Xplorer (i.e. the one with the most codes) into the cartridge slot.
3. Insert the older Xplorer 64 into the top of the Xplorer already in the console.
4. Finally and carefully, insert any game cartridge into the top of the Xplorer.
5. You should now have the following from bottom to top: Console – Newer Xplorer 64 – Older Xplorer 64 – game cartridge.
6. Carefully switch the power on.
7. DO NOT remove any cartridges with the power on.
8. If an upgrade is available, on-screen instructions will be displayed.
9. During the upgrade – Do not turn the power off.
10. Once the Upgrade is completed, turn the power off and remove the cartridges.
11. You can now use your Xplorer in the normal manner with the new cheats installed!

Please return your product Registration Card. Your comments help us improve our products and keep you informed of new product and upgrade information.

If you experience problems with your Xplorer 64, please contact;

Future Console Design Ltd  
Unit 15,  
Shaw Wood Business Park  
Shaw Wood Way  
Doncaster  
DN2 5TB

Codes Hotline: 01302 380601 (Standard Rate Call Only)  
Email: [support@x-plorer.co.uk](mailto:support@x-plorer.co.uk)

*\*Official Charttrak Data*

*\*PC X-Link, Special format memory Cards available separately.*

*Action Replay is a trademark of Datel Holdings Ltd.*

*Gameshark is a trademark of Interact Accessories Ltd.*

*Nintendo and Nintendo 64 are registered trademarks of Nintendo of America.*

21 June 1999