

# GB Hunter

## INSTRUCTION MENU





# GB Hunter 說明書

## I. 功能

GAME BOY 模擬器 - 可在N64的系統上玩GAME BOY 或 COL GAME BOY遊戲；

- 內置金手指功能，可自行搜尋密碼；
- 內置百個以上的遊戲金手指密碼。

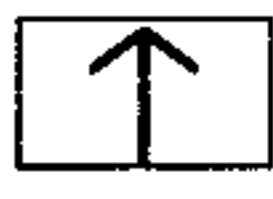 
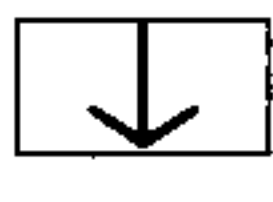 
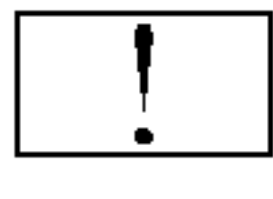 

## II 使用說明

- A
1. 關掉 N64 主機電水源；
  2. 在 GB Hunter 的背面插上 N64 遊戲帶(1080 Diddy Kong Racing, Yoshi Story and NBA courtside不可)
  3. 在 GB Hunter 的上面插上 GAME BOY 遊戲帶（合一遊戲帶不可);
  4. 將 GB Hunter 插上 N64 上;
  5. 開動 N64 主機電源；
  6. 在畫面右上角會有白色文字一閃即逝(如沒有請重插，重插後仍沒有的話請換卡)；
  7. 接著會出現 GB Hunter 的 logo；
  8. 然後會開始 GAME BOY 遊戲。

B 開始 GAME BOY 遊戲後，可同時按下 L 和 R 進入 GB Hunter 主目錄。

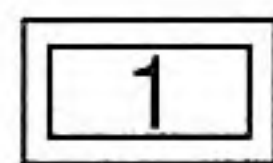 
## III 目錄指令介紹

A GAME - 回到遊戲。

- B TRAINER - 金手指密碼尋找器：
- 1 MENU - 回到主目錄；
  - 2 GAME - 回到遊戲；
  - 3  - 小於；
  - 4  - 大於；
  - 5  - 不同於；
  - 6  - 開動尋找器，在開動尋找器後，這個指令代表等於；
  - 7 RESET- 關掉尋找器。

- C CHEATS - 選擇金手指密碼：
- 1 進入後會見到一列密碼清單，尋求器的結果亦會放在這裏。頭兩個數字代表了密碼的開關，00 代表關，01 代表開；
  - 2 CHEATS - 內置的金手指密碼遊戲清單；
  - 3 MENU - 回到主目錄。

D  - 放大或縮小遊戲畫面

E  - 背景選擇

F  - 遊戲顏色選擇

# GB Hunter User Manual

## Function


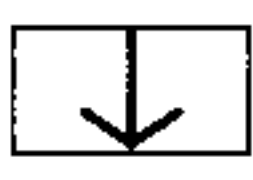 

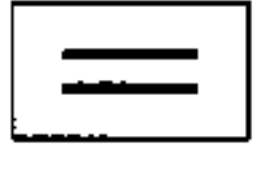 
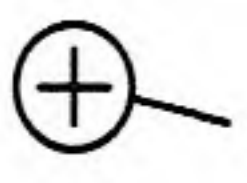 
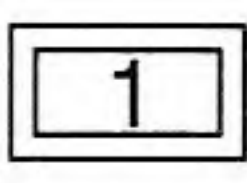 
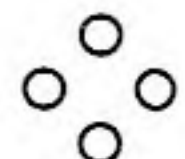 
GB Hunter is an emulator for playing GameBoy / Col Game Boy Games at N64 (Nintendo 64). There is hundreds of build-in Golden Finger Codes and it searches the Golden Finger Code automatically.

## How to Operate

1. Power Off the N64
2. Insert the N64 Game Pak (DO NOT USE the 1080 Diddy Kong Racing, Yoshi Story and NBA courtside Game Paks) in the back of GB Hunter.
3. Insert the GameBoy Game Cartridge (DO NOT USE the Multi-in-one game cartridge) on the top of GB Hunter.
4. Insert GB Hunter into the N64.
5. Power On the N64.
6. White words will be flashed on the top right of the screen (If not, repeat the stage 1 to 5 again or change the GB Hunter)
7. GB Hunter logo will be displayed on the screen.
8. GameBoy Game will be started.

Press the L and R buttons simultaneously to enter the GB Hunter Main Menu

## Main Menu

- A. GAME - quit from Main Menu to play game
- B. TRAINER - Golden Finger Codes search tool
  1. MENU - Back to Main Menu
  2. GAME - Back to game
  3.  - Smaller
  4.  - Bigger
  5.  - Unequal
  6.  - Activate the search tool and this command define as Equal.
  7. Reset - Deactivate the search tool.
- C. CHEATS - Choose Golden Finger Codes
  1. A list of codes will be displayed, code searched by search tool will be inside of the list too, the first two digits "00" & "01" represent the "OFF" & "ON" respectively.
  2. CHEATS - Build-in Golden Finger Codes list
  3. MENU - Back to Main Menu
- D.  - Maximize and Minimize the Game Screen
- E.  - Background choice
- F.  - Game Colour choice

# GB HUNTER GUARANTEE CARD

## 保 用 證

用戶姓名

Name of Client: \_\_\_\_\_

用戶地址

Address: \_\_\_\_\_

聯絡電話

Tel No: \_\_\_\_\_

購買店名

Dealer: \_\_\_\_\_

購買日期

Date of Purchase: \_\_\_\_\_

商店地址

Dealer's Address: \_\_\_\_\_

發票號碼及商店蓋章

Invoice No. and Stamp: \_\_\_\_\_

NOTE: Warranty does not apply for purchase without store stamp on this card or on invoice. Warranty service is valid for one-year (parts excluded). Please bring along the warranty card for services.

註：如無商店蓋章必須附同發票，否則保用無效，一年免費保養（更換零件除外）。維修時請出示此保用證。