

How To Get Started With The QuickConvert 2.0 Photo, Slide, and Negative Scanner from ClearClick on Vimeo.

Do you have stacks of family photo albums or boxes of old slides & negatives? Scan your photos to digital format to preserve & share them with others! With the ClearClick QuickConvert 2.0, it's easier than ever to turn your photos into digital pictures.

Unlike most conventional scanners, the QuickConvert 2.0 scans from above, which allows you to scan each photo without removing it from its mount or photo album. Alternatively, you can load a photo into the scanner's photo tray to scan it.

The scanner works with 4x6 photos or smaller, as well as 35mm slides and negatives and 110/126 negatives.

A 5" instant preview screen allows you to see each photo before you scan it. Scanning is extremely fast: just load your photo, slide, or negative, and hit the "OK/SCAN" button. In just 2-3 seconds, your photo will be scanned and converted to digital format and saved onto the included 32 GB memory card! The scanner digitizes your photos, slides, and negatives at a high-quality resolution of 22 megapixels. After you've scanned your images, you can transfer the images from the scanner to your PC or Mac using the included USB cable. Or, if your computer has a card reader, simply remove the memory card from the scanner and insert it into your computer's card reader.

Quick Start Guide

Install the battery in the battery compartment in the back of the scanner.

(Make sure the battery is inserted the correct direction by ensuring the + and - sides of the battery line up with the markings shown in the battery compartment.)

Before using the scanner for the first time, please charge the battery at least 2-3 hours.

Use the included USB cable to plug the scanner into the included USB wall power adapter.

The blue LED next to the power button will illuminate when the battery is charging. The LED will turn off when it is fully charged.

Insert the included memory card into the slot in the back of the scanner. (The gold contacts go in first, face down.)

Press the card into the slot until it clicks into place. (Maximum Card Size: 32GB)

Hold down the power button until the scanner turns on.

You will see the main menu of the scanner. You're ready to start scanning!

Caring for the Scanner

How To Clean The Scanner For Film Scanning

Use the supplied brush to clean the backlight panel: turn off and disconnect the QuickConvert® 2.0, insert the brush in the slot where you would normally insert the film holders, and brush gently.

How Do I Scan Photos?

Set BOTH switches (on the front and top of the scanner) to "PHOTO."

Make sure any film holders are removed from the scanner.

In the device's main menu, choose the "Scan Photos" option and press the "OK" button.

On the left side of the screen, the scanner will display the size of photo that it is set to scan for example, PHOTO: 4 X 6"

To adjust the size of photo being scanned, press the "Size" (left) button on top of the scanner.

The photo size options are: 4"x6", 3½"x5", 4"x4", 4.2"x3.2", or 3.4"x2.1".

The right side of the scanner will display the current scanning resolution (14MP or 22MP).

For the highest possible scanning quality, set the scanner to 22 megapixels. Press the Resolution button on the scanner until the setting is set to "22M."

To scan a photo, remove the scanner's base. Load a photo inside the base and replace the scanner on top of the base. Alternatively, you can scan photos without the base by simply placing the scanner on top of the photo. To scan a photo, simply press the "OK/Scan" button and your photo will be scanned in one second or less and saved onto the SD memory card.

(Optional) To adjust the brightness and color of the photo before each scan, press the RGB (right) button on the scanner. Use the left and right arrows to adjust the brightness of the image. To move to the red/green/blue settings, press the Play button. Then, use the right and left arrow keys to adjust the setting. To save the settings, press the "OK" button.

How Do I Scan Slides and Negatives?

Set BOTH switches (on the front and top of the scanner) to "FILM."

In the device's main menu, choose the "Scan Film" option and press the "OK" button.

Next, the scanner will ask you what type of film you would like to scan. Use the arrow buttons to select the appropriate type and press the "OK" button. You may also be asked to choose the subcategory of film. Select the appropriate type and press the "OK" button:

Locate the appropriate slide or negative holder for the type of film you'd like to scan. Each holder is described below:

35mm Negative Holder = 2 large openings

35mm Slide Holder = 3 openings

110 Film Holder = 8 openings

126 Film Holder = 7 openings

Open the slide or negative holder, insert your film so that it is aligned correctly, and close the holder, as shown in the diagrams below.

Insert the slide or negative holder into the scanner. If the holder is marked with a triangle insert it through the right side of the scanner. If the holder is marked with a circle insert it into the left side of the scanner.

Adjust the holder so that the image is visible on the LCD screen of the scanner. To scan an image, simply press the "OK/Scan" button and your photo will be scanned in one second or less and saved onto the SD memory card. Simply repeat this process for each slide or negative image. NOTE: To switch from negative to slide scanning, or vice versa, press the Home button and enter Film scanning mode again, choosing the Film type, as described in steps (b) and (c).

(Optional) To adjust the brightness and color of the photo before each scan, press the RGB (right) button once on the scanner. Use the left and right arrows to adjust the brightness of the image. To move to the red/green/blue settings, press the Play button. Then, use the right and left arrow keys to adjust the setting. To save the settings, press the "OK" button.

How Do I Transfer Images from the SD Card to a Computer?

OPTION A Using the Scanner

Download scanned images to your computer & touch up with software.

With the scanner turned OFF, plug the scanner into your computer using the included USB cable.

Turn the scanner on.

Select the "USB Upload" menu option, and press the "OK" button.

Once the scanner successfully connects to the computer, the scanner's LCD screen may turn off.

The memory card will now appear on your computer as a removable disk drive. Access it as you normally do a disk drive on your system and browse to the images. The photos will be in the "DCIM"/"100MEDIA" folder (or similar) on the memory card.

Select the images, and drag/copy them to a folder on your computer's hard drive.

To disconnect the scanner's link to your computer, simply hold down the power button to turn the scanner off and unplug the USB cable.

OPTION B Using the SD card

Remove the SD card from the scanner

Insert SD card into the SD card reader on a computer

Locate contents of SD card on the computer. (On Windows machines, use File Explorer to look for the SD card. It may be listed as a USB drive. On Mac machines use Finder to look for the SD card.)

Double-click on the SD card to open its contents

Locate the folder with your images. It likely starts with a folder labeled DCIM, and may be a nested folder under the DCIM folder

Use the thumbnail view to see small versions of the images

Select and highlight the images you want to transfer

Drag and drop the highlighted files to the appropriate folder on the computer

Confirm that files are now on the appropriate folder on the computer by clicking on the folder and checking the contents

When finished, either delete the images from the SD card and return SD card to the ClearClick scanner, or do not delete images and return the SD card to the ClearClick scanner.

How Do I View or Delete Scanned Images on the Scanner?

If you'd like, you can browse scanned images before transferring them to your computer. To do this, while the scanner is turned on, simply press the play button on the scanner.

The most recently scanned image will appear on the screen. You can browse through the scanned images by pressing the "left" and "right" arrow buttons.

To delete an image, select it and press the Delete button once, and confirm.

To view an image, press the "OK" button. To start a slide show of the images, press the Playback button again.

To exit the slideshow, press the "OK" button.

To delete all photos, press the Delete button twice

How Do I Delete Images from the SD Card

Remove the SD card from the scanner

Insert SD card into the SD card reader on the computer

Use File Explorer to locate the SD card

Open folder for SD card then look for a folder named DCIM and open it

Open subsequent folders if needed to locate images

To confirm images, you can change the view to thumbnails instead of list view by clicking on the icon in the lower right corner of the window.

Highlight all of your scanned files on the SD card

Drag and Drop highlighted files to the computer by putting them into a chosen folder.

Right-click over highlighted files and click "Delete"

Confirm that you want to delete the files off the SD card by clicking Yes.

Confirm files are no longer in the folder on the SD card

Safely eject SD card from card reader by right-clicking on top of the SD card in This PC and clicking Eject.

Then return the empty SD card to the slot in the ClearClick scanner for the next person.