

 
1D Barcode Scanner
user manual




Version

Correct usage of barcode scanner:


- (1) Make sure barcode scanner, cable ,host device connect properly;
- (2) Press trigger button and the red linear line appears , and move the linear line to cover barcodes completely , adjust barcode scanner's distance and angle to figure out best reading status;
- (3) Do not scan the setting barcodes in the manual without instruction ,it may cause barcode scanner not work properly;
- (4) Avoid 90 degree to read barcodes.




Correct Reading

 

Correct Reading

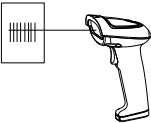


Incorrect Reading

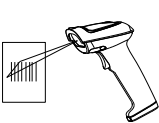


Incorrect Reading

Structure chart:

Paper Clip Socket

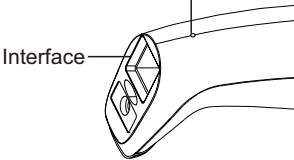

Insert paper clip into the socket and press to remove device cable

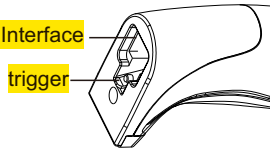

Press trigger to remove device cable

Product features:

- (1) High speed decoding engine and support to read barcodes from mobile ,computer screen etc;
- (2) Fast reading speed upto 270 scans/s;
- (3) Easy to use ,plug and play .

Specifications:

Barcode Scanner	
Data Item	Parameter
Light Sources	617 nm LED red
Decoding capability	UPC- A, UPC- E, EAN-13, EAN-8, Codabar, Code39, Code39 Full ASCII, China Post, Plessey, MSI,Code 93, Code 128, Industrial 2 of 5, Interleave 2 of 5,Matrix 2 of 5, Code 11, ISBN, ISSN, Code 32 (Italian pharm code), Code 39 extended, GS1-128 and ITF-14, SISAS,GS1Omnidirectional, GS1 Limited, Aviation25, RSS 14.
Minimum Element Resolution	4mil (0.1mm), optional 3mil
scanspeed	≥270 times/sec
ScanMode	Manual/continuous/auto flashing/Auto-sensing scan
Scan Angle	Yaw360°,Rotation30°,Pitch±55°
Scan Depth	20-330mm(0.33mm,PCS90%)
Interface	USB-HID,USB-COM,PS2,RS232
Error Rate	1/500million
Cable Length	2m
Material	ABS+PC
Working Current	150mA
Working Voltage	DC5V±1%
Shock Resistance	withstand multiple times 3 meters drops to concrete
Working Temperature	-20 - 50°C
Storage Temperature	-40°C- 70°C
Relative Humidity	5% - 95% RH (Non-condensing)

Basic configuration

Factory Default



Eg: Add suffix "Enter"

Step 1 ,Scan "Factory Default"



Step 2,Scan suffix setting barcode "Enter"



Interface



USB-HID (default)



USB-COM



PS2



RS232

Interface :

- 1,USB-HID Mode: Factory default mode , automatically identify and install driver
- 2,RS232 Mode:Require special customized RS232 cable and designated serial port APP (Default parameters :Baud Rate 9600 Data Bit:8bits Stop Bit :1bit Check Bit :None)
- 3,USB-COM ,Required to install special driver (Claim it from distributor)
- 4,PS2 Mode :it need to reboot the device to activate barcode scanner;

Scan Mode



Manual(default)



continuous



Auto-flashing

Auto-sense mode



Enable



Disable

Buzzer



Off

<div data-bbox="111 108 339 178"></div> <div data-bbox="355 134 388 154">On</div> <div data-bbox="111 258 339 327"></div> <div data-bbox="355 284 399 304">Low</div> <div data-bbox="111 401 339 471"></div> <div data-bbox="355 426 404 446">High</div> <div data-bbox="59 551 247 579">Image Inverted</div> <div data-bbox="111 604 339 674"></div> <div data-bbox="355 629 415 649">Direct</div> <div data-bbox="111 736 339 806"></div> <div data-bbox="355 762 448 782">Reverse</div> <div data-bbox="62 869 331 898">Keyboard language</div> <div data-bbox="111 932 339 1002"></div> <div data-bbox="355 958 505 978">USA (default)</div> <div data-bbox="111 1082 339 1152"></div> <div data-bbox="355 1108 388 1128">UK</div> <div data-bbox="111 1238 339 1308"></div> <div data-bbox="355 1263 429 1283">France</div>	<div data-bbox="659 104 888 174"></div> <div data-bbox="901 129 996 149">Germany</div> <div data-bbox="659 254 888 324"></div> <div data-bbox="901 279 945 299">Italy</div> <div data-bbox="659 404 888 474"></div> <div data-bbox="901 429 964 449">Japan</div> <div data-bbox="659 555 888 625"></div> <div data-bbox="901 581 980 601">Canada</div> <div data-bbox="659 706 888 776"></div> <div data-bbox="901 732 972 752">Russia</div> <div data-bbox="613 849 817 878">Suffix Settings</div> <div data-bbox="659 913 888 983"></div> <div data-bbox="901 939 1029 959">CR (default)</div> <div data-bbox="659 1076 888 1146"></div> <div data-bbox="901 1102 980 1122">CR&LF</div> <div data-bbox="659 1238 888 1308"></div> <div data-bbox="901 1263 956 1283">None</div>	<div data-bbox="1118 87 1597 115">USB-COM, RS232 serial port baud rate setting</div> <div data-bbox="1192 157 1420 227"></div> <div data-bbox="1450 182 1491 202">4800</div> <div data-bbox="1192 282 1420 352"></div> <div data-bbox="1450 308 1491 328">9600</div> <div data-bbox="1192 408 1420 478"></div> <div data-bbox="1450 434 1501 454">19200</div> <div data-bbox="1192 534 1420 604"></div> <div data-bbox="1450 559 1501 579">38400</div> <div data-bbox="1192 659 1420 729"></div> <div data-bbox="1450 685 1504 705">57600</div> <div data-bbox="1192 785 1420 855"></div> <div data-bbox="1450 811 1512 831">115200</div> <div data-bbox="1127 913 1588 1008"><p>Note:Baud Rate must be same between barcode scanner and serial port APP. Eg:Barcode Scanner default Baud Rate is 9600, the APP must choose same Baud Rate 9600.</p></div> <div data-bbox="1151 1041 1455 1069">Symbolgy configuration</div> <div data-bbox="1192 1096 1420 1166"></div> <div data-bbox="1439 1108 1586 1156">Enable UPCA to EAN13</div> <div data-bbox="1192 1235 1420 1305"></div> <div data-bbox="1439 1240 1586 1310">Disable UPCA to EAN13 (default)</div>	<div data-bbox="1730 108 1958 178"></div> <div data-bbox="1979 125 2126 168">Enable UPCA to UPCA</div> <div data-bbox="1730 268 1958 338"></div> <div data-bbox="1979 271 2137 341">Disable UPCA to UPCA (default)</div> <div data-bbox="1730 424 1958 494"></div> <div data-bbox="1979 446 2126 489">Enable EAN13 to ISBN</div> <div data-bbox="1730 594 1958 664"></div> <div data-bbox="1979 611 2153 659">Disable EAN13 to ISBN (default)</div> <div data-bbox="1730 749 1958 819"></div> <div data-bbox="1979 766 2126 809">Enable EAN13 to ISSN</div> <div data-bbox="1730 905 1958 975"></div> <div data-bbox="1979 922 2153 971">Disable EAN13 to ISSN (default)</div> <div data-bbox="1730 1061 1958 1130"></div> <div data-bbox="1979 1086 2132 1129">Enable 5-digit extra-code</div> <div data-bbox="1730 1216 1958 1286"></div> <div data-bbox="1979 1248 2132 1290">Enable 2-digit extra-code</div>	<div data-bbox="2262 108 2490 178"></div> <div data-bbox="2506 125 2691 168">Disable the additional code (default)</div> <div data-bbox="2262 268 2490 338"></div> <div data-bbox="2506 282 2642 325">Hide front 1 digit character</div> <div data-bbox="2262 424 2490 494"></div> <div data-bbox="2506 446 2642 489">Hide front 2 digit character</div> <div data-bbox="2262 594 2490 664"></div> <div data-bbox="2506 611 2642 654">Hide front 3 digit character</div> <div data-bbox="2262 749 2490 819"></div> <div data-bbox="2506 766 2658 809">Hide last 1 digit character</div> <div data-bbox="2262 905 2490 975"></div> <div data-bbox="2506 922 2658 965">Hide last 2 digit character</div> <div data-bbox="2262 1061 2490 1130"></div> <div data-bbox="2506 1086 2658 1129">Hide last 3 digit character</div> <div data-bbox="2262 1216 2490 1286"></div> <div data-bbox="2506 1248 2675 1290">Prefix F7 before all barcodes</div>
--	--	---	--	--