

Adjusting the height

The height adjustment is infinitely variable.

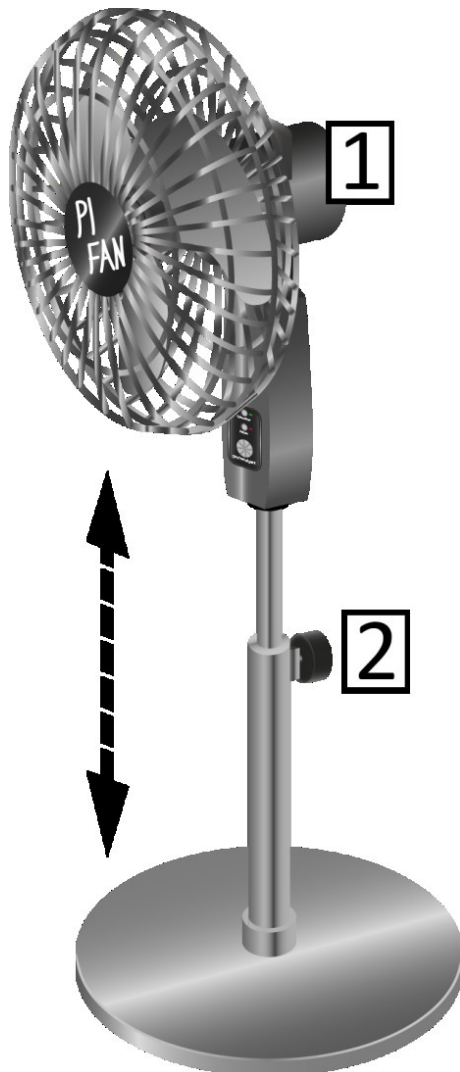


Figure 1: Adjusting the height

1. Hold the functional unit 1 by the handle at the top.
2. With the other hand loosen the retaining screw 2 at the rear of the telescopic rod.
3. Pull the functional unit 1 to the desired height.
4. Tighten the retaining screw 2 by hand again hand tight.
5. Release the handle.
→ The device is now at the desired height.