

SCRIBLES

Setting Up UART Serial Communication between Raspberry Pi and PC

Posted on [November 17, 2017](#) by [max](#)

This post shows how to setup serial communication between Raspberry Pi and PC using a [USB-Serial cable](#).

Here is the list of contents of this post.

Contents

- [Prerequisites](#)
- [Steps](#)
 1. [Wiring](#)
 2. [Setting up terminal emulator on Windows PC](#)
 3. [Enabling UART on Raspberry Pi](#)
 4. [Disabling console service](#)
 5. [Setting up terminal emulator on Raspberry Pi](#)
 6. [Test](#)

Prerequisites

These are required things for this post.

- **Raspberry Pi board** : Any Raspberry Pi should work. In this post, [Raspberry Pi 3 B+](#) running Raspbian Stretch is used.
- **PC** : The other endpoint. In this post, a Windows 10 PC is used.
- **USB-serial cable** : USB to Serial UART converter cable such as [this](#). Make sure the signal voltage level is correct.
- **3 jumper wires (male-female)** : to connect Raspberry Pi's GPIO pins and USB-Serial cable.

Also, terminal emulator programs are used both on Raspberry Pi and PC to send/receive data.

- **minicom** : Text-based terminal emulator on Raspberry Pi.
- **Termite** : Terminal emulator on Windows PC.

Steps

1. Wiring

1-1. Connect jumper wires to USB-Serial cable for Tx, Rx, and GND.

Search

RECENT POSTS

[Creating AltBeacon with Raspberry Pi using BlueZ Example Code \(updated\)](#)
July 9, 2019

[Creating iBeacon with Raspberry Pi using BlueZ Example Code \(updated\)](#)
July 9, 2019


[Setting Up I2C Serial Communication on Raspberry Pi](#) July 8, 2019

[Showing Album Cover Art Images for Bluetooth Audio](#) June 16, 2019

[Controlling Bluetooth Audio on Raspberry Pi](#)
June 12, 2019

SPONSOR LINK

1-2. Connect the other side of jumper wires to Raspberry Pi's GPIO pins. Check [this useful site](#) for pinout.

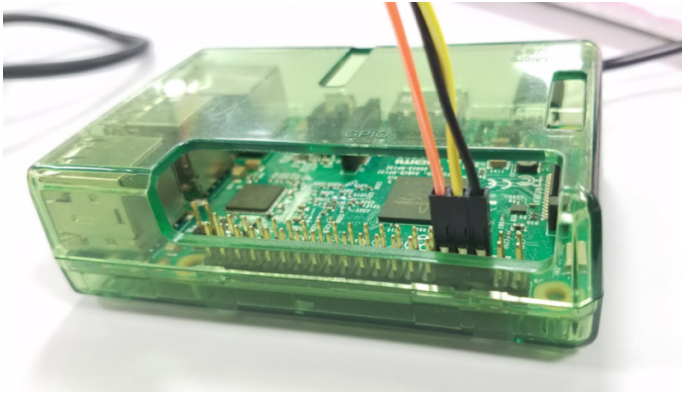


1-3. Connect USB-Serial cable to USB port on PC

2. Setting up terminal emulator on Windows PC

To send and receive serial data, let's install and setup a terminal emulator program on PC.

2-1. Download and install [Termite](#).

2-2. Open "Device Manager" and check the COM port number USB-Serial cable is using. In the case below, it's COM7.

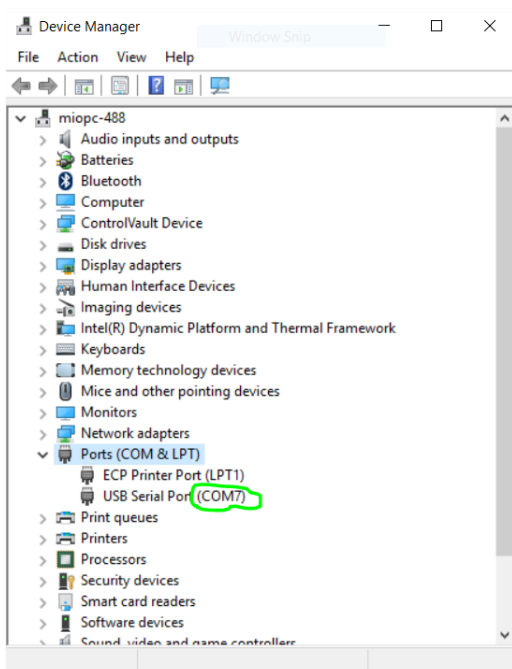

2-3. Launch Termite and click on "Settings" button.

2-4. Select Port number you checked on step 2-2.

2-5. Select "115200" as Baud rate.

2-6. Select "Append CR-LF" in "Transmitted Text".


Ad v

ACCES I/O Products, Inc.

acesio.com

RS-232/422/485
1-8-port USB,
PCI, PCI Express,
& PC/104 boards

OI

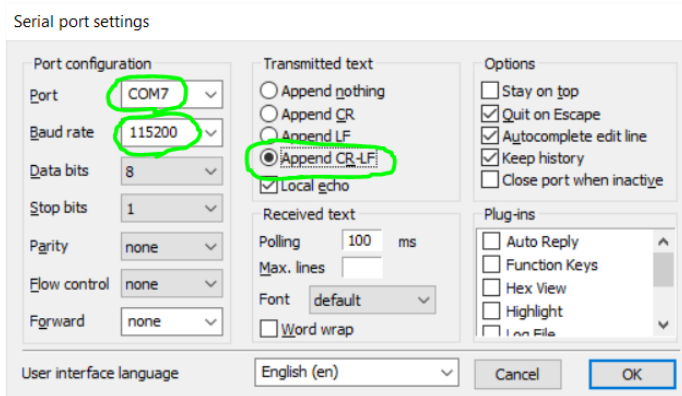

2-6. Click on “OK”.

3. Enabling UART on Raspberry Pi

3-1. Open “/boot/config.txt”.

```
1 sudo nano /boot/config.txt
```


3-2. Add the lines below at the end of the file.

```
1 # Enable UART
2 enable_uart=1
```

3-3. Reboot.

```
1 sudo reboot
```

3-4. Check the output of Termite on PC. It should be something like this:

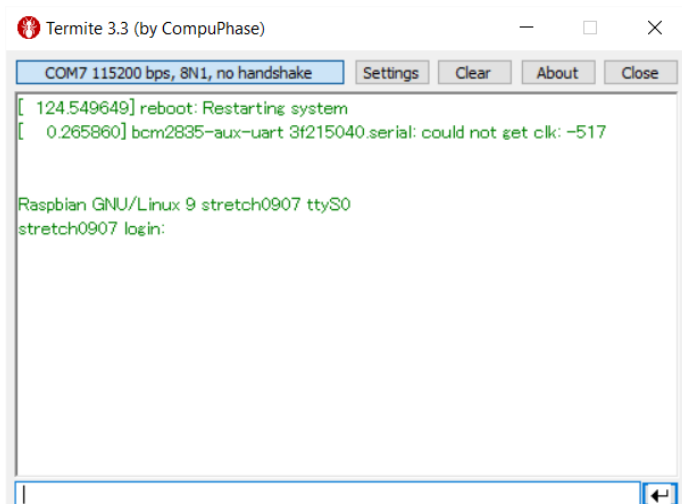


4. Disabling console service

Now, UART connection between Raspberry Pi and PC is established. However, Raspberry Pi's UART is used by console by default as you saw in the output on step 3-4. So, the next step is to disable the console.

4-1. Disable serial-getty service.

```
1 sudo systemctl disable serial-getty@ttyS0.service
```

4-2. Open “/boot/cmdline.txt”.

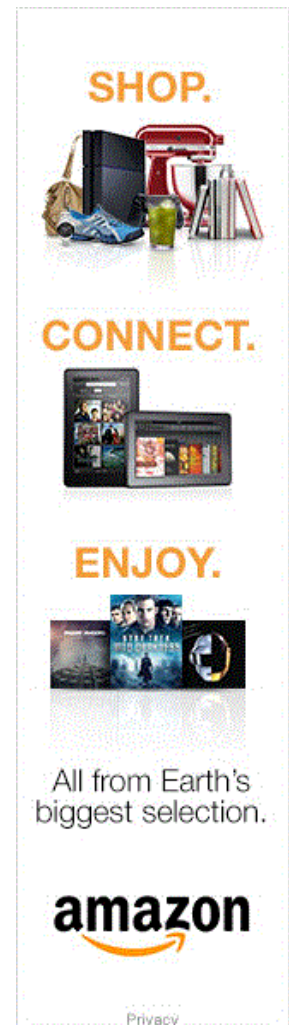

AdChoices

RPI3 Minicom

PC to UART

```
1 sudo nano /boot/cmdline.txt
```

4-3. Remove “console=serial0,115200”, then save the file.

4-4. Reboot.

```
1 sudo reboot
```

5. Setting up terminal emulator on Raspberry Pi

To send and receive data on Raspberry Pi, we'll use minicom, a text-based terminal emulator.

5-1. Install minicom.

```
1 sudo apt-get install minicom -y
```

5-2. Type below to launch minicom and connect to UART.

```
1 minicom -b 115200 -o -D /dev/ttyS0
```


You should see like below:

```
1 Welcome to minicom 2.7
2
3 OPTIONS: I18n
4 Compiled on Apr 22 2017, 09:14:19.
5 Port /dev/ttyS0, 21:13:28
6
7 Press CTRL-A Z for help on special keys
```


6. Test

Type something in minicom and Termite. If everything is fine, you should see like below.

– Termite on Windows PC

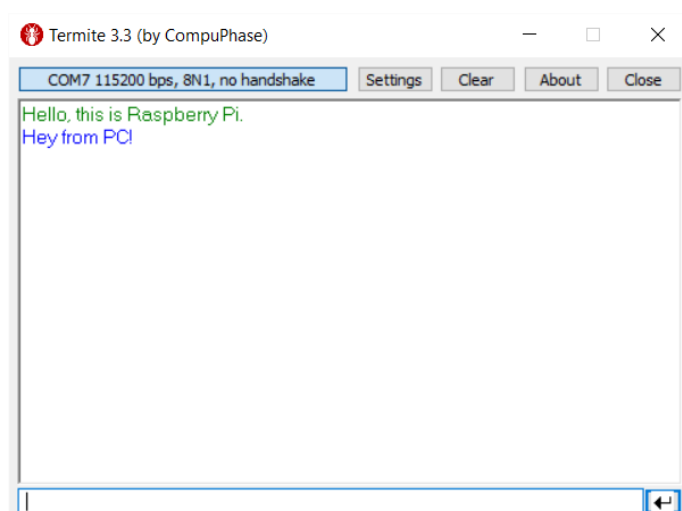

– minicom on Raspberry Pi

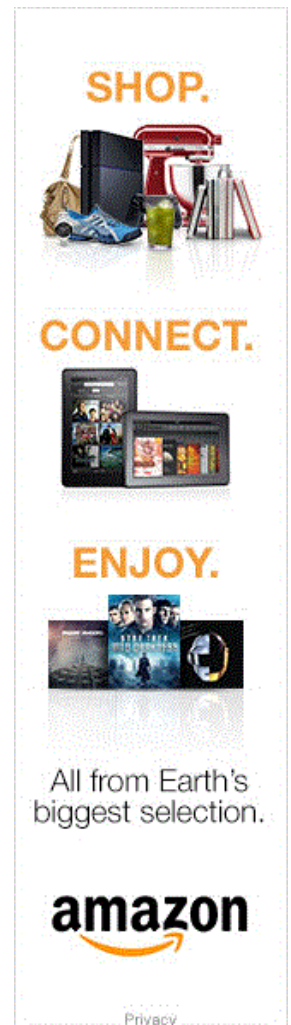


```
pi@stretch0907: ~  
Welcome to minicom 2.7  
OPTIONS: I18n  
Compiled on Apr 22 2017, 09:14:19.  
Port /dev/ttyS0, 21:35:28  
Press CTRL-A Z for help on special keys  
Hello, this is Raspberry Pi.  
Hey from PC!  
[
```

- If you want to see what you typed on minicom, turn on Local Echo by typing Ctrl-A, then E. (which I did)
- You can exit minicom by typing Ctrl-A, and X, then select “Yes”.

Posted in: [How To](#)

Tagged: [minicom](#), [Raspberry Pi](#), [Serial Communication](#), [Termite](#), [UART](#), [USB-Serial Cable](#)

Sponsor Link

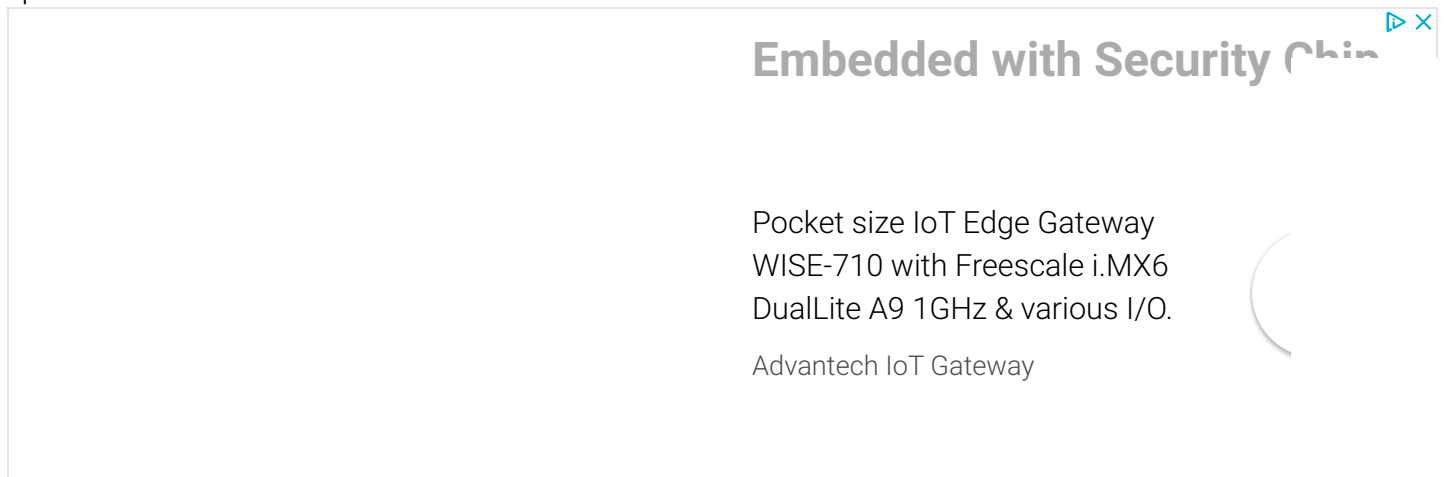

Embedded with Security

Pocket size IoT Edge Gateway
WISE-710 with Freescale i.MX6
DualLite A9 1GHz & various I/O.

Advantech IoT Gateway

8 Comments

Amit Patil says:

February 20, 2018 at 12:09 am

Hello. Thank you for this great information. I have been trying to figure this out for somedays. Thanks to your help it was easily. Although I have a question whether this communication can be achieved between two Raspberry Pi's? If yes then how to establish the connection between them first? Please reply asap.

Reply

max says:

February 20, 2018 at 10:25 am

Hi Amit, thank you for your comment.

Yes, it is possible. Instead of using USB-Serial cable, you can connect two raspberry pis directly using the three jumper wires. Please note that the Rx pin on one Raspberry Pi should be connected to the Tx pin on the other Raspberry Pi, and vice versa.

Reply

max says:

February 20, 2018 at 5:31 pm

Please check [this post](#) for detail steps.

Reply

Abdul says:

April 1, 2018 at 6:30 pm

I can receive data from computer but but unable to transfer.

Reply

max says:

April 1, 2018 at 9:13 pm

Hi Abdul, please make sure the wiring of Tx line is correct. Also, make sure the flow control is disabled on both side.

Reply

Abdul says:

April 1, 2018 at 11:59 pm

Thanks. I want to know how to increase polling time I need to read data about 72000 samples so polling time is just 100ms i wana increase the polling time please help me thanks

Reply

Abdul says:

April 2, 2018 at 12:09 am

Thanks. Can you please tell me how to increase polling time. I have to process data for long time but it allows just for 100ms

Reply

Abdul says:

April 2, 2018 at 12:24 am

I got it.. thanks 🙏

Reply

Leave a Reply

Your email address will not be published. Required fields are marked *

Comment

Name *

Email *

Website

Post Comment