

Lesson 3 Intelligent Transport

1. Working Principle

Recognize the block color first and grip it. Then read the corresponding position of the recognized color and detect the line color. After recognizing yellow line, the car will follow the line.

In the process of moving, the car will keep detecting the yellow line. When recognizing the numbers of line corresponding the colored block, the car will move to the corresponding position of color sorting. At this time, the robotic arm will put down the block and enter the next round of recognition.

The source code of program is located in:

/home/ubuntu/armpi_pro/src/intelligent_transport/scripts/intelligent_transport_node.py

```


180 # 机器人移动函数
181 def move():
182     global x_dis,y_dis
183     global position_en,stable
184     global set_visual,detect_step,place_en
185     global block_clamp,chassis_move,target_color
186     global line_width,line_center_x,line_center_y
187     global detect_color,color_center_x,color_center_y
188
189     num = 0
190     transversae_num = 0
191     move_time = time.time()
192     place_delay = time.time()
193     transversae_time = time.time()
194     position = {'red':1,'green':2,'blue':3,'None':-1} # 色块对应位置横线数
195
196     while __isRunning:
197         if detect_step == 'line': # 巡线阶段
198             if set_visual == 'color':
199                 set_visual = 'line'
200                 place_en = False
201                 visual_running('line', line_color) # 切换图像处理类型
202                 # 切换机械臂姿态
203                 bus_servo_control.set_servos(joints_pub, 1500, ((1, 500), (2, 500), (3, 80), (4, 825), (5, 625), (6, 500)))
204                 rospy.sleep(1.5)
205
206             elif line_width > 0: # 识别到线条
207                 # PID算法巡线
208                 if abs(line_center_x - img_w/2) < 30:

```

2. Operation Steps



2.1 Tool Preparation


Use tape to make a map for line following, as the figure shown below:

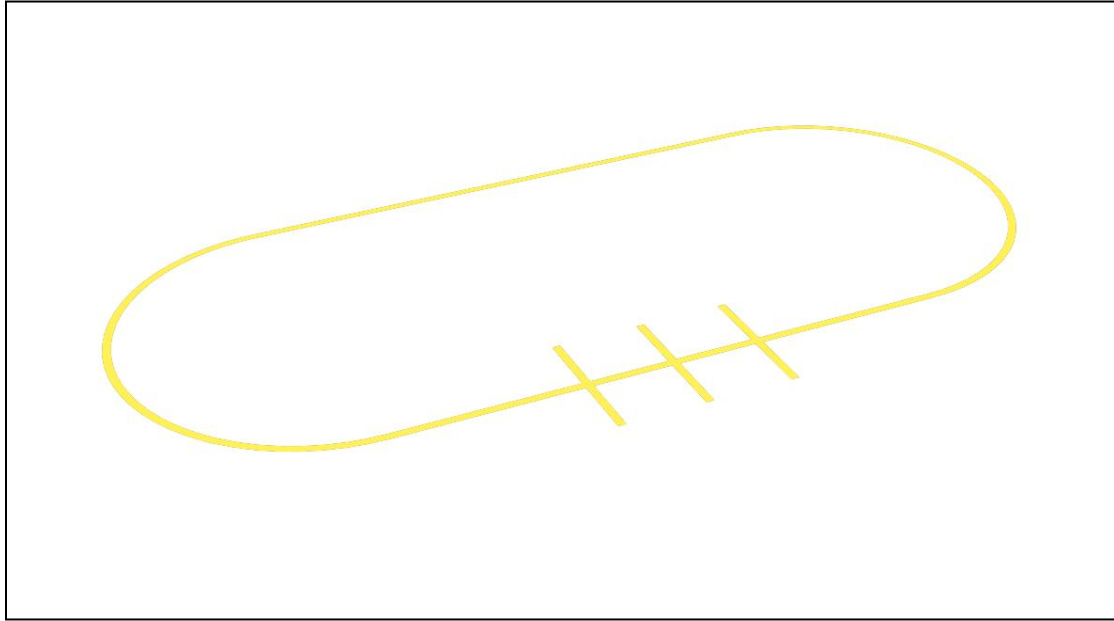

2.2 Enter Game


i It should be case sensitive when entering command and the “Tab” key can be used to complete the keywords.

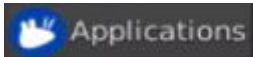- 1) Turn on ArmPi Pro and connect to the system desktop via No Machine.
- 2) Click  and select  in pop-up interface to open the terminal.
- 3) Enter command “`roslaunch intelligent_transport intelligent_transport_node.py`” and press “Enter” to enter this game. After entering, the prompt will be printed, as the figure shown below

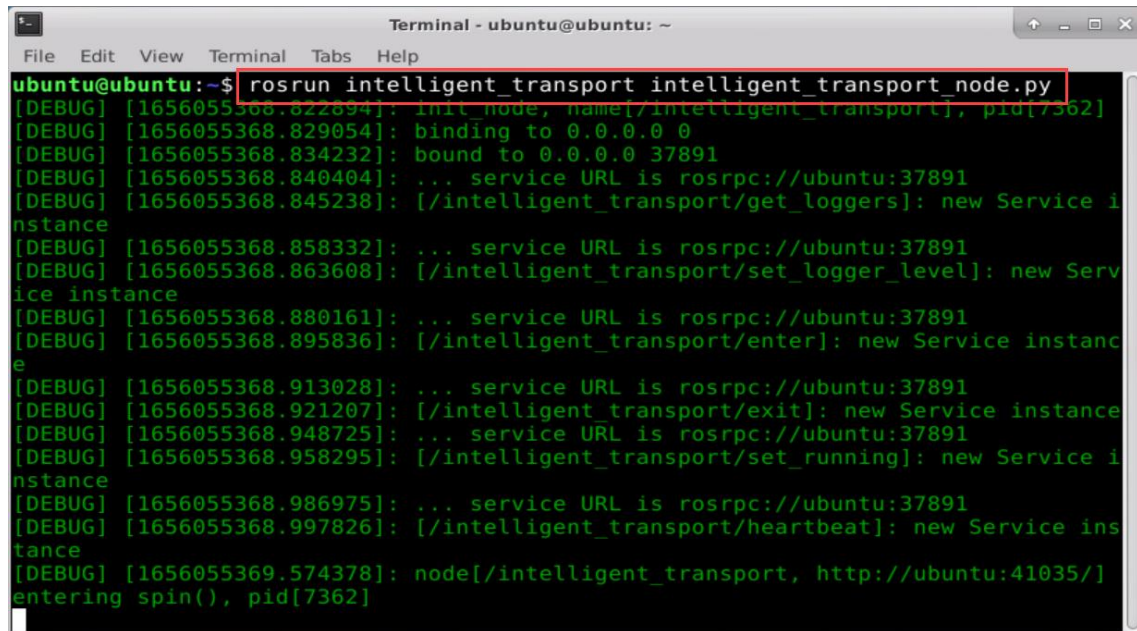

```
Terminal - ubuntu@ubuntu: ~
File Edit View Terminal Tabs Help
ubuntu@ubuntu:~$ roslaunch intelligent_transport intelligent_transport_node.py
[DEBUG] [1656055368.822894]: init_node, name[/intelligent_transport], pid[7362]
[DEBUG] [1656055368.829054]: binding to 0.0.0.0 0
[DEBUG] [1656055368.834232]: bound to 0.0.0.0 37891
[DEBUG] [1656055368.840404]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.845238]: [/intelligent_transport/get_loggers]: new Service i
nstance
[DEBUG] [1656055368.858332]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.863608]: [/intelligent_transport/set_logger_level]: new Serv
ice instance
[DEBUG] [1656055368.880161]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.895836]: [/intelligent_transport/enter]: new Service instanc
e
[DEBUG] [1656055368.913028]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.921207]: [/intelligent_transport/exit]: new Service instance
[DEBUG] [1656055368.948725]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.958295]: [/intelligent_transport/set_running]: new Service i
nstance
[DEBUG] [1656055368.986975]: ... service URL is rosrpc://ubuntu:37891
[DEBUG] [1656055368.997826]: [/intelligent_transport/heartbeat]: new Service ins
tance
[DEBUG] [1656055369.574378]: node[/intelligent_transport, http://ubuntu:41035/]
entering spin(), pid[7362]
```

- 4) Do not close the opened terminal and open a new terminal. Then enter command “rosservice call /intelligent_transport/enter “{}”” to enter and press “Enter” to enter this game. After entering, the terminal will print the prompt as the figure shown below:

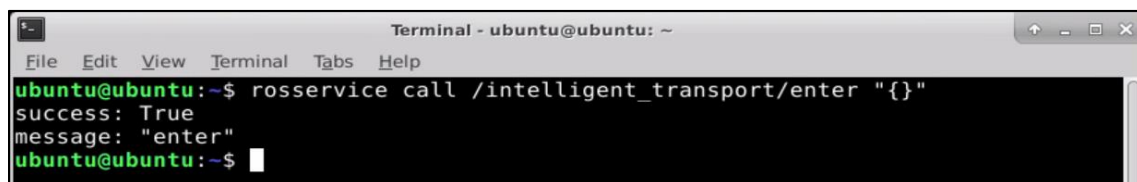

```
Terminal - ubuntu@ubuntu: ~
File Edit View Terminal Tabs Help
ubuntu@ubuntu:~$ rosservice call /intelligent_transport/enter "{}"
success: True
message: "enter"
ubuntu@ubuntu:~$
```

2.3 Start image transmission

2.3.1 Start with browser

To avoid consuming too much running memory of Raspberry Pi. It is recommended to use an external browser to start image transmission.


The specific steps are as follows:

- 1) Select a browser. Take Google Chrome as example.



2) Then enter the default IP address “192.168.149.1:8080/” (Note: this IP address is the default IP address for direction connection mode). If it is LAN mode, please enter “Device IP address+: 8080/” such as “192.168.149.1:8080/”) If fail to open, you can try it several times or restart camera.

Note: If it is in LAN mode, the method to obtain device IP address can refer to “10.Advanced Lesson”/ 1.Network Configuration Lesson/ LAN Mode Connection.

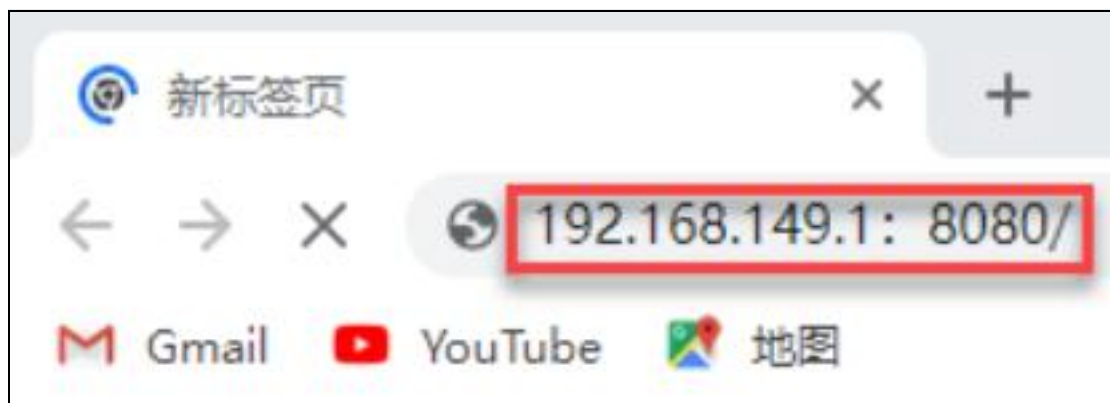

3) Then, click the option shown in the following figure to open the display window of the transmitted image.

Available ROS Image Topics:

- [/lab_config_manager/image_result \(Snapshot\)](#)
- [/visual_processing/image_result \(Snapshot\)](#)


/visual_processing/image_result




2.3.2 Start with rqt

1) After completing the steps of “2.1 Enter Game” and do not exit the terminal, open a new terminal.

2) Enter command “rqt_image_view” and press “Enter” to open rqt.

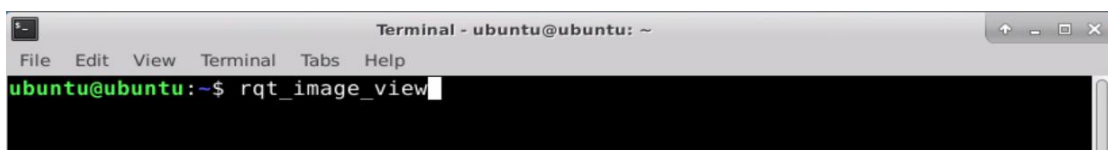

3) Click the red box as the figure shown below, select “/visual_processing/image_result” for the topic of line following and remain other settings unchanged, as the figure shown below:

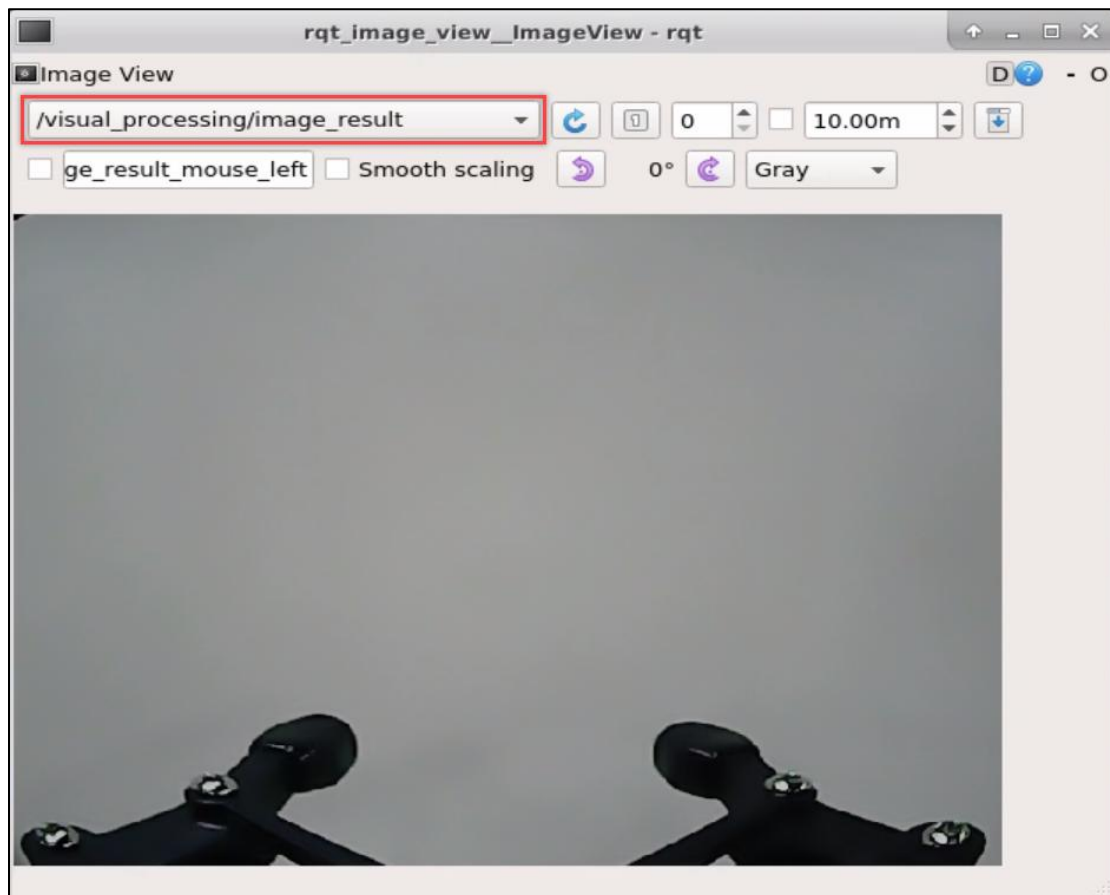

Note: After opening image, the topic option must be selected. Otherwise, after starting game, the recognition process can not be displayed normally.

2.4 Start Game

Now, enter the terminal according to the steps in “2.1 Enter Game” and input command “`rosservice call /intelligent_transport/set_running "data: true"`”. Then if the prompt shown in the following red box appears, which means game has been started successfully.

```
ubuntu@ubuntu:~$ rosservice call /intelligent_transport/set_running "data: true"
success: True
message: "set_running"
ubuntu@ubuntu:~$
```

2.5 Stop and Exit

1) If want to stop the game, enter command “`rosservice call /intelligent_transport/set_running "data: false"`”.


```
ubuntu@ubuntu:~$ rosservice call /intelligent_transport/set_running "data: false"
success: True
message: "set_running"
ubuntu@ubuntu:~$
```

- 2) If want to exit the game, enter command “rosservice call /intelligent_transport/exit “{}” to exit.

```
ubuntu@ubuntu:~$ rosservice call /intelligent_transport/exit "{}"
success: True
message: "exit"
ubuntu@ubuntu:~$
```

- 3) To avoid consume too much running memory of Raspberry Pi, after exiting the game and returning to the terminal of running game programmings, press “Ctrl+C” to exit the program. If fail to exit, please keep trying several times.

```
Terminal - ubuntu@ubuntu: ~
File Edit View Terminal Tabs Help
[DEBUG] [1656053438.125078]: ... service URL is rosrpc://ubuntu:43459
[DEBUG] [1656053438.143753]: [/intelligent_transport/set_running]: new Service 1
instance
[DEBUG] [1656053438.177367]: ... service URL is rosrpc://ubuntu:43459
[DEBUG] [1656053438.194642]: [/intelligent_transport/heartbeat]: new Service ins
tance
[DEBUG] [1656053438.750903]: node[/intelligent_transport, http://ubuntu:33897/]
entering spin(), pid[8753]
[INFO] [1656053459.639106]: enter intelligent transport
[INFO] [1656053459.643642]: intelligent transport Init
[INFO] [1656053461.651163]: enter visual_processing
[DEBUG] [1656053461.666561]: connecting to ubuntu 38919
[DEBUG] [1656053461.780406]: connecting to ubuntu 38919
[INFO] [1656053480.885201]: start running intelligent transport
[DEBUG] [1656053480.905947]: connecting to ubuntu 38919
[DEBUG] [1656053481.082566]: connecting to ubuntu 38919
[INFO] [1656053494.535896]: stop running intelligent transport
[DEBUG] [1656053494.554785]: connecting to ubuntu 38919
[INFO] [1656053510.033378]: exit intelligent transport
[DEBUG] [1656053510.044461]: connecting to ubuntu 38919
[INFO] [1656053510.079234]: 'NoneType' object has no attribute 'cancel'
^C[DEBUG] [1656053517.371324]: TCPServer[43459] shutting down
[INFO] [1656053517.941592]: shutdown
ubuntu@ubuntu:~$
```

Note: Before exiting the game, it will keep running when Raspberry Pi is powered on. To avoid consume too much running memory of Raspberry Pi, you need to exit the game first according to the operation steps above before performing other AI vision games.

- 4) If want to close the image transmission, press “Ctrl+C” to return and open the terminal of rqt. If fail to exit, please keep trying several times.

```
ubuntu@ubuntu:~$ rqt_image_view
libEGL warning: DRI2: failed to authenticate
^Cubuntu@ubuntu:~$
```

3. Project Outcome

After starting the game, hold the block within the detected range of camera.

When the block is recognized by ArmPi Pro, it will grip it and keep following line.

Then place the block with different colors to the corresponding position.

4. Program Parameter Instruction

4.1 Image Process

The source code of image process program is located in:

/home/ubuntu/armpi_pro/src/visual_processing/scripts/visual_processing_node.py

```

270 # 多颜色识别函数
271 def colors_detect(img, color_list):
272     global pub_time
273     global publish_en
274     global color_range_list
275     ...
276     if color_list == 'RGB' or color_list == 'rgb':
277         color_list = ('red', 'green', 'blue')
278     else:
279         return img
280     ...
281     msg = Result()
282     msg.data = 0
283     color_num = 0
284     max_area = 0
285     color_area_max = None
286     areaMaxContour_max = 0
287     ...
288     img_copy = img.copy()
289     img_h, img_w = img.shape[:2]
290     frame_resize = cv2.resize(img_copy, size_m, interpolation=cv2.INTER_NEAREST)
291     frame_lab = cv2.cvtColor(frame_resize, cv2.COLOR_BGR2LAB) # 将图像转换到LAB空间

```

4.1.1 Binarization

Use the inRange () function in the cv2 library to binarize the image.

```

296 frame_mask = cv2.inRange(frame_lab, tuple(color_range['min']
    ], tuple(color_range['max']))) # 对原图像和掩模进行位运算

```

The first parameter “frame_lab” is the input image.

The second parameter “tuple(color_range['min'])” is the lower limit of threshold.

The third parameter “tuple(color_range['max'])” is the upper lower of threshold.

4.1.2 Dilation and Erosion

To lower interference and make image smoother, the image needs to be dilated and eroded.

```
297 eroded = cv2.erode(frame_mask, cv2.getStructuringElement(cv2.  
MORPH_RECT, (2, 2))) # 腐蚀  
298 dilated = cv2.dilate(eroded, cv2.getStructuringElement(cv2.  
MORPH_RECT, (2, 2))) # 膨胀
```

erode() function is applied to erode image. Take code “eroded = cv2.erode(frame_mask, cv2.getStructuringElement(cv2.MORPH_RECT, (3, 3)))” as example. The meaning of parameters in parentheses are as follow:

The first parameter “frame_mask” is the input image.

The second parameter “cv2.getStructuringElement(cv2.MORPH_RECT, (2, 2))” is the structural elements and kernel that determines the nature of operation. The first parameter in parentheses is the shape of kernel and the second parameter is the size of kernel.

dilate() function is applied to dilate image. The meaning of parameters in parentheses is the same as the parameters of erode() function.

4.1.3 Obtain the contour of the maximum area

After processing the above image, obtain the contour of the recognition target. The findContours() function in cv2 library is involved in this process.

```
299 contours = cv2.findContours(dilated, cv2.RETR_EXTERNAL, cv2.  
CHAIN_APPROX_NONE)[-2] # 找出轮廓
```

The erode() function is applied to erode. Take code “contours = cv2.findContours(dilated, cv2.RETR_EXTERNAL, cv2.CHAIN_APPROX_NONE)[-2]” as example.

The first parameter “dilated” is the input image.

The second parameter “cv2.RETR_EXTERNAL” is the contour retrieval mode.

The third parameter “cv2.CHAIN_APPROX_NONE)[-2]” is the approximate method of contour.

Find the maximum contour from the obtained contours. To avoid interference, set a minimum value. Only when the area is greater than this minimum value, the target contour will take effect. The minimum value here is “50”.

```
300     areaMaxContour, area_max = getAreaMaxContour(contours)
                                     # 找出最大轮廓
301     if areaMaxContour is not None:
302         if area_max > max_area: #找最大面积
```

4.1.4 Obtain Position Information

The minAreaRect() function in cv2 library is used to obtain the minimum external rectangle of the target contour, and the coordinates of its four vertices are obtained through the boxPoints() function. Then, the coordinates of the center point of the rectangle can be calculated from the coordinates of the vertexes of the rectangle.

```
308     (centerx, centery), radius = cv2.minEnclosingCircle(
    areaMaxContour_max) # 获取最小外接圆
309     msg.center_x = int(Misc.map(centerx, 0, size_m[0], 0, img_w))
310     msg.center_y = int(Misc.map(centery, 0, size_m[1], 0, img_h))
311     radius = int(Misc.map(radius, 0, size_m[0], 0, img_w))
312     cv2.circle(img, (msg.center_x, msg.center_y), radius+5, range_rgb
    [color_area_max], 2)
```

Determine the color block with the largest area.

```
314     if color_area_max == 'red': #红色最大
315         msg.data = 1
316     elif color_area_max == 'green': #绿色最大
317         msg.data = 2
318     elif color_area_max == 'blue': #蓝色最大
319         msg.data = 3
```

4.2 Function Realization

4.2.1 Grip the block

The position of the target on x, y and z axes is obtained after processing image. Then get the target position calculated by inverse kinematics and grip it.

```

112 while __isRunning:
113     if arm_move and detect_color != 'None': # 等待可以夹取
114         target_color = detect_color # 暂存目标颜色
115         set_rgb(target_color) # 设置rgb灯颜色
116         rospy.sleep(0.1)
117         buzzer_pub.publish(0.1) # 蜂鸣器响一下
118         bus_servo_control.set_servos(joints_pub, 500, ((1, 120),))
119         #张开机械爪
120         rospy.sleep(0.5)
121         target = ik.setPitchRanges((0, round(y_dis + offset_y, 4), -0.08), -
122             180, -180, 0) #机械臂向下伸
123         if target:
124             servo_data = target[1]
125             bus_servo_control.set_servos(joints_pub, 1000, ((3, servo_data[
126                 'servo3']], (4, servo_data['servo4']], (5, servo_data[
127                 'servo5']], (6, x_dis)))
128             rospy.sleep(1.5)
129             bus_servo_control.set_servos(joints_pub, 500, ((1, 450),)) #
130             闭合机械爪
131             rospy.sleep(0.8)

```

The inverse kinematics takes “ik.setPitchRanges((0, round(y_dis + offset_y, 4), -0.08), -180, -180, 0)” as example and the meaning of parameters in parentheses are as follow:

The first parameter is “(0, round(y_dis + offset_y, 4)”. “0” is the position of the target on x-axis. “round(y_dis, 4)” is the position of the target on y-axis. “round(z_dis, 4)” is the position of the target on z-axis.

The second parameter “-180” is the angle of x-axis.

The third parameter “-180” is the range of the pitch angle.

The fourth parameter “0” is the range of pitch angle.

The servo control takes the code “bus_servo_control.set_servos(joints_pub, 20, ((3, servo_data['servo3']], (4, servo_data['servo4']], (5, servo_data['servo5']], (6, x_dis)))” as example and the meaning of parameters in parentheses is as follow:

The first parameter “joints_pub” is to publish the message of servo control node.

The second parameter “20” is the running time.

The third parameter is “((3, servo_data['servo3']], (4, servo_data['servo4']], (5, servo_data['servo5']], (6, x_dis)))”. Among them, “3” is the servo number.

“servo_data[servo3]” and the rest of parameters are the servo angle.

4.2.2 Follow line

After gripping the block, the car will follow the line. Firstly, judge if there is the line within the detected range. The code is shown in the following figure:

```
206 elif line_width > 0:
```

Then the current x-coordinate of line subtracts the value of ideal center point.

Get the yaw rate by PID mapping to adjust the speed of motor.

```
208 if abs(line_center_x - img_w/2) < 30:
209     line_center_x = img_w/2
210     line_x_pid.SetPoint = img_w/2 # 设定
211     line_x_pid.update(line_center_x) # 当前
212     dx = round(line_x_pid.output, 2) # 输出
213     dx = 0.8 if dx > 0.8 else dx
214     dx = -0.8 if dx < -0.8 else dx
215
216     set_velocity.publish(100, 90, dx) # 控制底盘
217     chassis_move = True
```

Take the code “set_velocity.publish(100, 90, dx)” as example:

The first parameter “100” is the linear velocity.

The second parameter “90” is the angular velocity.

The third parameter “dx” is the yaw rate. The larger the yaw rate, the faster the rotation speed of car.

4.2.3 Recognize the placement line

1) Determine the number of lines

In the process of identifying the color of block, we set the corresponding numbers of recognized lines for placement position of different blocks, as the figure shown below:

```
194 position = {'red':1, 'green':2, 'blue':3, 'None':-1}
```

If the recognized color is red, the robot will run the the code for transporting the

block to the first placement line when it identifies single line.

If the recognized color is green, the robot will transport the block to the second placement line when only two lines are recognized.

In the process of following line, the car will keep detecting the placement line. If the following condition is satisfied, which means the line is recognized.

```
220 if line_width > 100 and block_clamp:
```

Then determine the position of placement line.

```
226 if transversae_num == position[target_color]:
```

The width of the line is obtained by the following function.

```
147 if detect_step == 'line':
148     line_center_x = center_x
149     line_center_y = center_y
150     line_width = data
```

2) Stop recognizing

After all the lines are recognized completely, the recognition function will be stopped to prevent the interference from repeat recognition of the same placement line.

```
221 if (time.time()-transversae_time) > 1:
222     transversae_num += 1
223     print(transversae_num)
224     transversae_time = time.time()
```

4.2.4 Place the block

When the numbers of recognized placement lines is equivalent to the numbers of placement lines corresponding to the placement position of the target block, the car will stop in the corresponding position and the robotic arm will be controlled to place the block to the corresponding position.


```

235 elif place_en:
236     if time.time() >= place_delay: #
        延时停下来，把色块放到横线旁边
237         rospy.sleep(0.1)
238         set_velocity.publish(0, 0, 0)
239         target = ik.setPitchRanges((-0.24, 0.00, -0.04), -180,
        -180, 0) #机械臂移动到色块放置位置
240         if target:
241             servo_data = target[1]
242             bus_servo_control.set_servos(joints_pub, 1200, ((6,
                servo_data['servo6']),))
243             rospy.sleep(1)
244             bus_servo_control.set_servos(joints_pub, 1500, ((3,
                servo_data['servo3']), (4, servo_data['servo4']),
                (5, servo_data['servo5'])))
245             rospy.sleep(1.8)
246
247             bus_servo_control.set_servos(joints_pub, 500, ((1, 150
                ),)) #张开机械爪
248             rospy.sleep(0.8)

```

In the code shown in the figure above, the inverse kinematics is used to set the movement of robotic arm. Take code “target = ik.setPitchRanges((-0.24, 0.00, -0.04), -180, -180, 0)” as example:

The first parameter “(-0.24, 0.00, -0.04)” is the coordinate value (x,y,and z axes) of the end of robotic arm.

The second parameter “-180” is the pitch angle value of the end of robotic arm.

The third and fourth parameter “-180” and “0” is the range of the pitch angle.

Due the limitation of the detected range of camera, when the car has not moved to the corresponding position and the lines is no longer in the detected range. Therefore, it is necessary to add a delay, so that the car can keep moving when the line is not recognized,

```

228 if transversae_num == 1:
229     place_delay = time.time() + 1.1 #
        设置延时停下来时间
230 elif transversae_num == 2:
231     place_delay = time.time() + 1.1
232 elif transversae_num == 3:
233     place_delay = time.time() + 1.2

```

Then the car will continue following the line and return to the initial position, and starting the next round of recognizing and sorting.


```
256 move_time = time.time() + (11.5 - transversae_num) #  
    设置放置色块后要巡线的时间，让机器人回到初始位置  
257  
258 # 变量重置  
259 place_en = False  
260 block_clamp = False  
261 target_color = 'None'  
262 set_rgb('black')  
263 transversae_num = 0  
264  
265 if not block_clamp and time.time() >= move_time: #  
    放置色块后机器人巡线回到初始位置  
266     rospy.sleep(0.1)  
267     set_velocity.publish(0, 0, 0)  
268     detect_step = 'color'
```