

400 ~ 649 (L)

30

30



보강프레임  
REINFORCEMENT FRAME

DSCC59201H

DESKER

40 ~ 79 (W)

21 [

DESKER

30

핀원목의자

FINN

DSAX0014

4 3  
4 4  
6 4

15 [



20 ~ 39 (H)

10 [

DESKER

30

DSCC59201H

8

핀원목의자

FINN

4 2  
4

15 [



주의! 칼을 사용해 개봉할 시 제품이 파손될 수 있습니다.



조립 후 고를 열 관통에 불가능합니다.  
(제품 하단/의자 레그)

5 7  
15