

400 ~ 649 (L)

30

30



보강프레임
REINFORCEMENT FRAME

HCH9003

DESKER

40 ~ 79 (W)

21

DESKER

30

핀원목의자
FINN
DSAX0014

4 3
4 4
6 4

15



20 ~ 39 (H)

10

DESKER

30

HCH9003

8
핀원목의자
FINN

4 2
4 4

15



주의! 칼을 사용해 개봉할 시 제품이 파손될 수 있습니다.



조립 후 고를 열 부분에 불가능합니다.
(제품 하단/의자 레그)

5 7
15