

 
黑白印刷  
材质105g单粉

## 产品使用手册



使用前请仔细阅读手册以保证产品功能得到正确使用  
并请保留手册以将来查询

## 产品快速操作指南

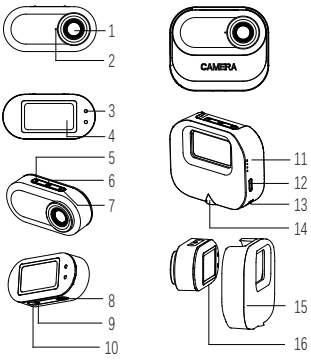

注意：外形图片以实物为准！

### ●按键功能说明

- 1、高清摄像头；
- 2、音源输入孔；
- 3、充电仓给主机充电触点；
- 4、显示屏1.47英寸TFT彩色高清显示屏；

- 5、右键：长按开机/关机，在录像、拍照、回放删除时、连接电脑模式下短按为确认键，回放预览模式下短按为下一个文件，在视频文件下长按播放、在播放录像时短按快进；
- 6、LED指示灯；
- 7、左键：短按切换模式，在回放预览模式下短按为上一个文件、长按返回切换到录像模式、双击为删除，连接电脑、删除时切换确认和取消选择；
- 8、type-c接口：带数据传输；
- 9、TF卡槽:最大支持128GB，需要FAT32格式(64G、128G第一次使用需要格式化TF卡，请注意备份资料)；
- 10、复位孔；
- 11、电池仓充电指示灯；
- 12、电池仓type-c接口；
- 13、吊绳口；
- 14、1/4铜螺母；
- 15、电池仓；
- 16、主机；

### ●开机/关机(使用本机之前，请先插入TF卡，不然无法操作)

- 1、当机器处在关机状态，长按3秒“右键”键开机。
- 2、当机器处在开机状态，长按3秒“右键”键关机。

- 3、待机状态下，无任何操作2分钟息屏3分钟机器自动省电关机。

### ●指示灯说明

- 1、待机--蓝灯长亮
- 2、摄像--蓝灯闪
- 3、充电--红灯常亮
- 4、完成充电--红灯熄灭
- 充电仓充电白色灯闪烁，充满常亮，充电仓给主机充电白灯常亮

 
### ●系统文本参数设置

先将TF内存卡，插入本机TF卡槽后。再将本机与电脑连接，待电脑中出现本机的“可移动磁盘”盘符后。打开可移动盘，找到文件名为“userConfig.txt”的文本文档。如下图：



### DCIM:视频照片文件存储位置


双击打开“userConfig.txt”文本文档。文档中会出现多组设置，按照文档中的格式，将需要的参数设置好。然后点击文档左上角的“文件”选项，选择“保存”后。将本机与电脑分离，参数设置完成。如下图：

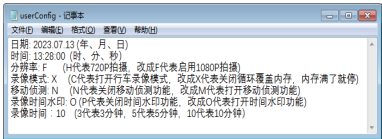

注：时间更新完成后，如更换TF内存卡或电池长时间没有电。系统时间会复原。需要重新设置系统时间。

### ●连接电脑

 将USB线的一端插入USB接口，另一端插入电脑的USB接口。请用正常的方法移除可移动磁盘，以防止数据丢失。

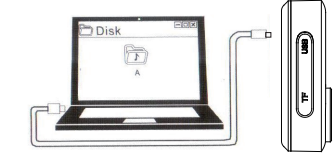

### ●充电

将USB线的一端插入USB接口，另一端插入电脑或充电器的USB接口。充电时间一般1.5小时左右即可充满，充电时指示灯红常亮，充满时红灯熄灭。

### 技术规格

外形尺寸	66x56x22MM (含充电仓)
重量	62g (含充电仓)
USB接口	USB 2.0 High Speed
TF卡	4G-128G(最大支持256G)
电池容量	3.7V/350mAh +800mAh锂电池
电池续航时间	摄像 约2+2.5小时
录像格式	AVI 1280x720P/1920x1080P
8GB TF卡储存时间	录像 约80分钟
使用温度	-5至40摄氏度
支持操作系统	Windows98/2000/XP/Windows7 Windows8/MACOS

### 产品中有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳	○	○	○	○	○	○
电路板	X	○	○	○	○	○
线缆及线缆组件	○	○	○	○	○	○
附件	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。  
○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。  
X：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

本品在有害物质含量方面，按照GB/T 26572标准生产制造。符合电子电气产品中限用物质的限量要求及RoHS环保要求。《有害物质的名称及含量表》中有材料标有“X”的原因，是因为目前国际尚无成熟的技术可替代或减少电子陶瓷、光学玻璃、钢及铜合金内的铅含量。



### 声明：

本手册中提及的产品规格及信息仅供参考。本产品软件、硬件及说明书等有任何修改，恕不另行通知。本公司拥有最终解释权；本手册没有任何形式的担保、或特定目的的保证。

请用户在国家法律允许的范围内使用本产品，请勿将本产品用于非正当用途，本公司不对使用此产品而引起的任何纠纷负责。

本产品内置有聚合物锂电池，切勿把本产品丢入火中，因为锂电池可能发生爆炸；请勿把本产品浸入水中或者其它液体中，电池短路受损坏时也可能发生爆炸；请勿将产品长期置于阳光、火源等极热的地方。

消费者使用适配器充电时，须购买使用符合国家标准且通过CCC认证DC5V-1A的电源适配器为本机进行充电。

请在使用此产品过程中，请用户自行对资料进行备份，以免造成资料丢失；本公司不对在维修过程中的资料丢失承担责任，不对在使用此手册过程中可能出现的意外损坏负责。

### 注意事项

- 1、禁止儿童单独玩耍本机，请勿摔落与硬物摩擦撞击，否则可能导致机器数据丢失或其它硬件损坏。
  - 2、建议在驾驶机动车或骑自行车时不要使用本机，请保证行车安全。
  - 3、请及时备份存放在本机的文件及数据，本公司不保内部资料，如有出现数据丢失，本公司概不负责。
  - 4、禁止本品使用超负荷电源、用力弯曲或用重物挤压电源线，以免引起发热造成火灾，禁止用湿手接电源，以防触电。
  - 5、因本产品的性能和功能而发生的变更，可能会不做另行通知，请您谅解。
  - 6、请勿将产品放入水或其他液体中和使用有机溶剂自行清洁各部件，这样会损伤机器表面腐蚀。
  - 7、本产品采用内置锂电池，禁止自行拆卸，不得将电池暴露在诸如日照、火烤或类似过热的环境中。
  - 8、如在受到磁场/电磁场、无线电波或高压影响的位置中使用，本产品可能无法正常工作。
  - 9、若因固件程序升级而导致本产品的实际设置和使用方法与本手册不一致，请与当地经销商联系。
- 感谢您的合作！

### 温馨提示：

 
若本机长时间不用，请隔3个月给本产品充/放电一次。

## Product Manuals



Please read the manual carefully before use to ensure that the product functions correctly and keep the manual for future reference.

## Product Quick Start Guide

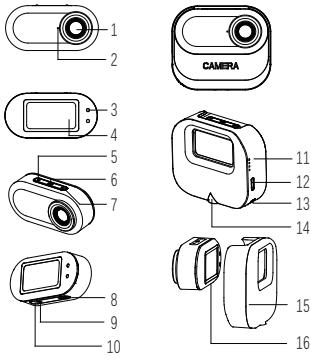

Note: The shape picture is based on the real thing!

### ● Key function description

- 1、High-definition camera;
- 2、audio input hole;
- 3、charging compartment to the host charging contacts;
- 4、display:1.47-inch TFT color high-definition display;

 
- 5、right button: long press to turn on/off, in the video, photo, playback deletion, connect to the computer mode short press for the confirmation button, playback preview mode short press for the next file, in the video file long press to play, in the playback of video short press fast forward;
  - 6、LED indicator;
  - 7、left button: short press to switch modes, short press in playback preview mode for the previous file, long press to return to switch to video mode, double-click to delete, connect to the computer, delete when switching to confirm and cancel the selection;
  - 8、type-c interface: with data transmission;
  - 9、TF card slot: maximum support for 128GB, need FAT32 format (64G,128G first time use need to format TF card, please pay attention to backup information);
  - 10、reset hole;
  - 11、battery compartment charging indicator;
  - 12、battery compartment type-c interface;
  - 13、lanyard mouth;
  - 14、1/4 copper nut;
  - 15、Battery compartment;
  - 16、Main body;
- Power on/off:(Before using the machine, please insert the TF card, otherwise it can not be operated)
- 1、When the machine is off, long press the "right button" for 3 seconds to turn on the machine.
  - 2、When the machine is in the state of power on, long press the "right button" for 3 seconds to turn off the machine.
  - 3、standby state, without any operation for 2 minutes to rest the screen for 3 minutes, the machine automatically power saving shutdown.

### ●Indicator light description

- 1、Standby – blue light long
  - 2、Camera – blue light flash
  - 3、charging – red light is always on
  - 4、finished charging – red light off
  - Charging compartment charging white light flashing, full often light, charging compartment to the host charging white light often light
- Translated with DeepL.com (free version)


### ●Parameter setting

First insert the TF memory card into the TF card slot of the machine. Then connect the machine to the computer, and wait for the "removable disk" drive letter of the machine to appear in the computer. Open the removable disk and find the:

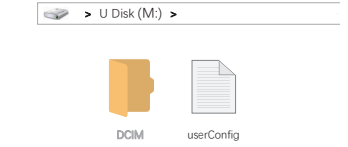

### DCIM: Video image file storage location

 Double-click to open the "userConfig.txt" text document. There will be multiple sets of settings in the document. According to the format in the document, Will need to set of parameters. Then click on the "File" option in the upper left corner of the document and select "Save". Separate the machine from the computer, and the time setting is completed.

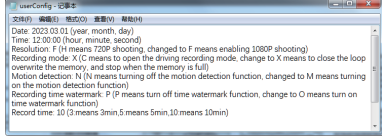

Note: After the time update is completed, if the TF memory card is replaced or the battery is out of power for a long time. The system time will be restored. The system time needs to be reset.

### ● Connect with computer:

Plug one end of the USB cable into the USB port, and the other end into the computer's USB port. Please remove the removable disk in a normal way to prevent data loss.



### ● Charge:

Plug one end of the USB cable into the USB port, and the other end into the USB port of the computer or charger. The charging time is generally about 1-2 hours to fully charge.

### technical specifications

Size	66x56x22MM (with charging compartment)
Weight	62g (with charging compartment)
USB interface	USB 2.0 High Speed
TF card	4G - 128G(Max 256G)
Battery	3.7V/350mAh +800mAh Li-Ion Battery
The video format	Recording Around 2+2.5h
Recording	AVI 1280x720P/1920x1080P
8GB TF storage time	Record around40mins
Operating Tempreture	- 5~40 C°
Support system	Windows98/2000/XP/Windows7 Windows8/MACOS

### Product name and content of the harmful substances

Part Name	harmful materials					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Shell	○	○	○	○	○	○
PCBA	X	○	○	○	○	○
Cable	○	○	○	○	○	○
Attachment	○	○	○	○	○	○

This form is prepared according to the provisions of SJ/T 11364.  
○: Indicates that the content of this hazardous substance in all homogeneous materials of this part is below the limit requirement specified in GB/T 26572.  
X: Indicates the content of the hazardous substance in at least one homogeneous material of the part  
Exceeding the limit requirements specified in GB/T 26572.

This product is manufactured in accordance with the GB/T 26572 standard in terms of harmful substance content. Comply with the limit requirements of restricted substances in electrical and electronic products and RoHS environmental protection requirements. The reason why some materials are marked with "X" in the "Table of Names and Contents of Hazardous Substances" is because there is no mature technology in the world to replace or reduce the lead content in electronic ceramics, optical glass, steel and copper alloys..



### Statement

The product specifications and information mentioned in this manual are for reference only. The software, hardware and manual of thisproduct are subject to any modification without prior notice. The company reserves the right of final interpretation; this manual does not have any form of guarantee, or guarantee of specific purpose.Users are requested to use this product within the scope permitted by national laws, and please do not use this product for illegal purposes. The company is not responsible for any disputes caused by the use of this product.

This product has a built-in polymer lithium battery. Do not throw this product into fire, because the lithium battery may explode; do not immerse this product in water or other liquids, and the battery may explode when it is short-circuited and damaged; do not Store the product in extremely hot places such as sunlight and fire for a long time.

When consumers use an adapter to charge, they must purchase a DC5V-1A power adapter that meets national standards and has passed CCC certification to charge the machine.

In the process of using this product, please back up the data by yourself to avoid data loss; the company is not responsible for the loss of data during the maintenance process, and is not responsible for the accidental damage that may occur during the use of this manual.

### Precautions

1. It is forbidden for children to play with the machine alone. Do not drop it and rub it against hard objects, otherwise it may cause data loss or other hardware damage.
2. It is recommended not to use this machine while driving a motor vehicle or riding a bicycle, please ensure driving safety.
3. Please back up the files and data stored on the machine in time. The company does not guarantee the internal data, and the company will not be responsible for any data loss.
4. It is forbidden to use overloaded power supply for this product, bend it hard or squeeze the power cord with heavy objects, so as not to cause heat and cause fire, and it is forbidden to pull out the power supply with wet hands to prevent electric shock.
5. Changes due to the performance and functions of this product may not be notified, please understand.
6. Do not put the product into water or other liquids and use organic solvents to clean the parts by yourself, as this will damage the surface of the machine and corrode it.
7. This product uses a built-in lithium battery, and it is forbidden to disassemble it by yourself, and the battery must not be exposed to sunlight, fire or similar overheating environments.
8. If used in a location subject to magnetic/electromagnetic fields, radio waves or high voltage, this product may not work properly.
9. If the actual settings and usage methods of this product are different from those of this manual due to firmware program upgrades/Manuals are inconsistent, please contact your local dealer.Thank you for your cooperation!

### Kind tips :

If the machine is not used for a long time, please charge/ discharge the product every 3 months.