


## Adaptrboard Inductive Probe Driver Board

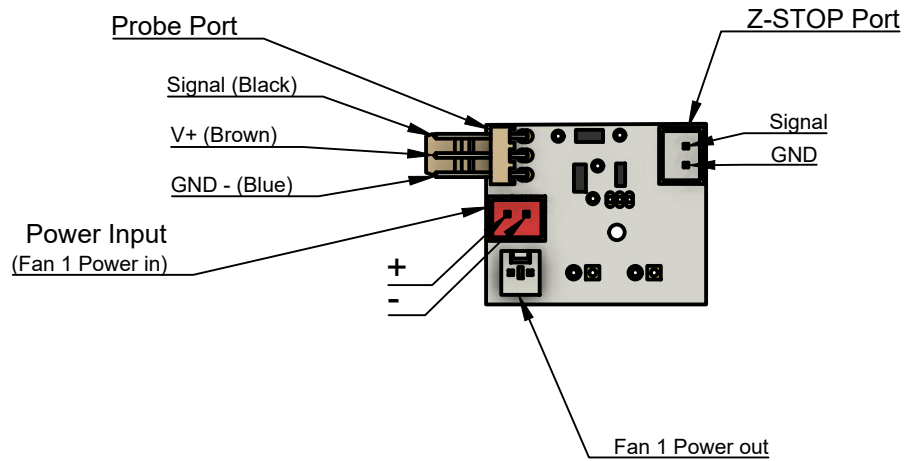

Converts PNP signal to NPN while supplying the probe with correct voltage.  
Requirements: 12v Power Supply and PNP Inductive Probe

Dept.	Technical reference	Created by <b>Philip Mally</b>	5/12/2020	Approved by
		Document type	Document status	
		Title <b>PCBs</b>	DWG No.	
			Rev.	Date of issue
				Sheet <b>1/1</b>