

How to connect additional peripherals to a Sense HAT

To connect additional peripherals to the GPIO pin of the Raspberry Pi along with Sense HAT one must follow the following steps:

1. Remove the full-length female headers at the bottom side of the Sense HAT. Remove them carefully as you will need these if you want to connect them to the Raspberry Pi during normal cases.
2. Insert 40 full-length female headers to the GPIO pins of the Raspberry Pi.
3. Now insert 40 extended male pins to the other end of the female headers.
4. Now connect your Sense HAT to this male header pins.
5. You will find the male pins projecting out of the 40 half-sized female header pins.