


To contact us:

Egypt +201023445566
UAE +9713422112
KSA +9663344411



USER MANUAL

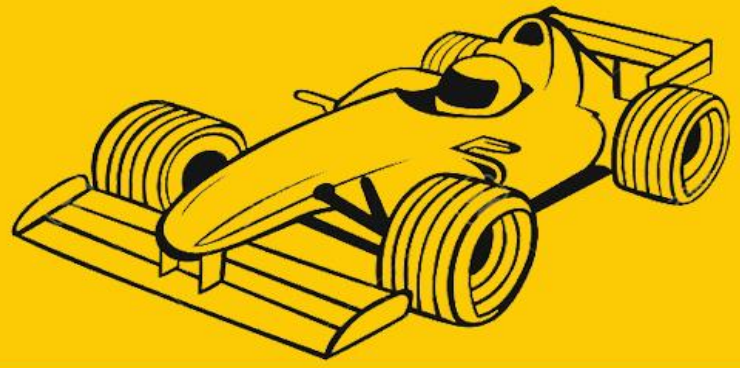

Buttons:

Button 1: Accelerates (According to the gear shifter)


Button 2: Turns Leftwards

Button 3: Turns Rightwards

Button 4: Gear Shifter (1st Gear: accelerates by 30%
2nd Gear accelerates by 60%
3rd Gear accelerates by 90%
4th Gear reverses)

Prepared By:
Team 3
(Youssef Mohamed Mansi
Zeyad Magdi
Mahmoud Morad
Nour El-Din Mohamed Hesham)

All rights reserved

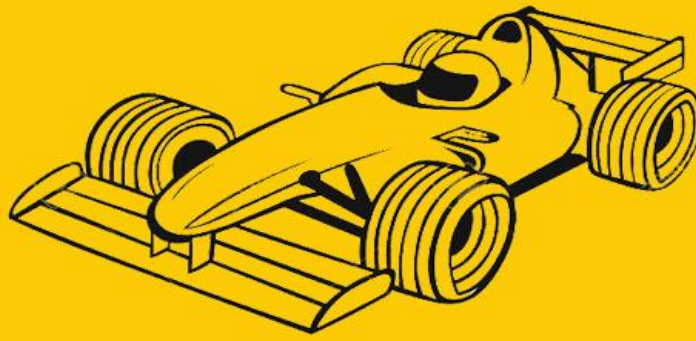

How it works?

1- To control your speed:

-When the car is at initial state (at rest), you should press on the gear shifter(button 4) to shift the gear to the first speed up to 30% of the maximum speed of the vehicle. Then press the move button (button 1) to start movement.

-At the moment you reach the first gear's maximum speed, press on the gear shifter (button 4) to accelerate up to 60% of the vehicle's maximum velocity. You need to press on the move button (button 1) to be able to speed up.

-After you speed up and reach the current gear's limit, press once again on the gear shifter (button 4) to accelerate up to 90% of the vehicle's velocity. You need to press on the move button (button 1) to be able to speed up.

-To keep movement and speeding up, you need to hold button 1.

2-To reverse:

-To reverse, you need to release your finger off button 1...At this moment the vehicle will decelerate until it stops, then press on the gear shifter (button 4) for the fourth time, then gradually you will find the car moving backwards.

3-Turning right:

-To turn rightwards, you need to stay in the first gear's range (0%-30%) and that's by slowing down your car, and then press on button 3 to turn right.

4-Turning left:

-To turn rightwards, you need to stay in the first gear's range (0%-30%) and that's by slowing down your car, and then press on button 2 to turn left.

User Manual