
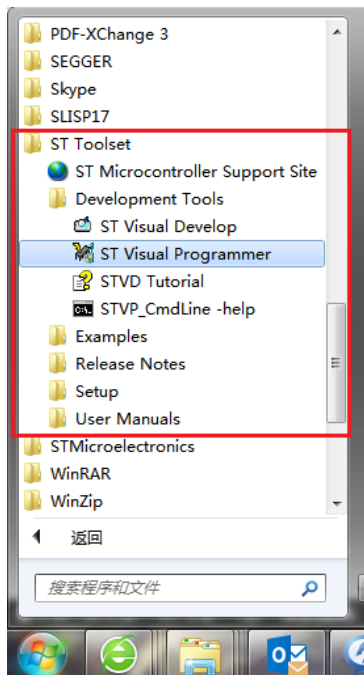
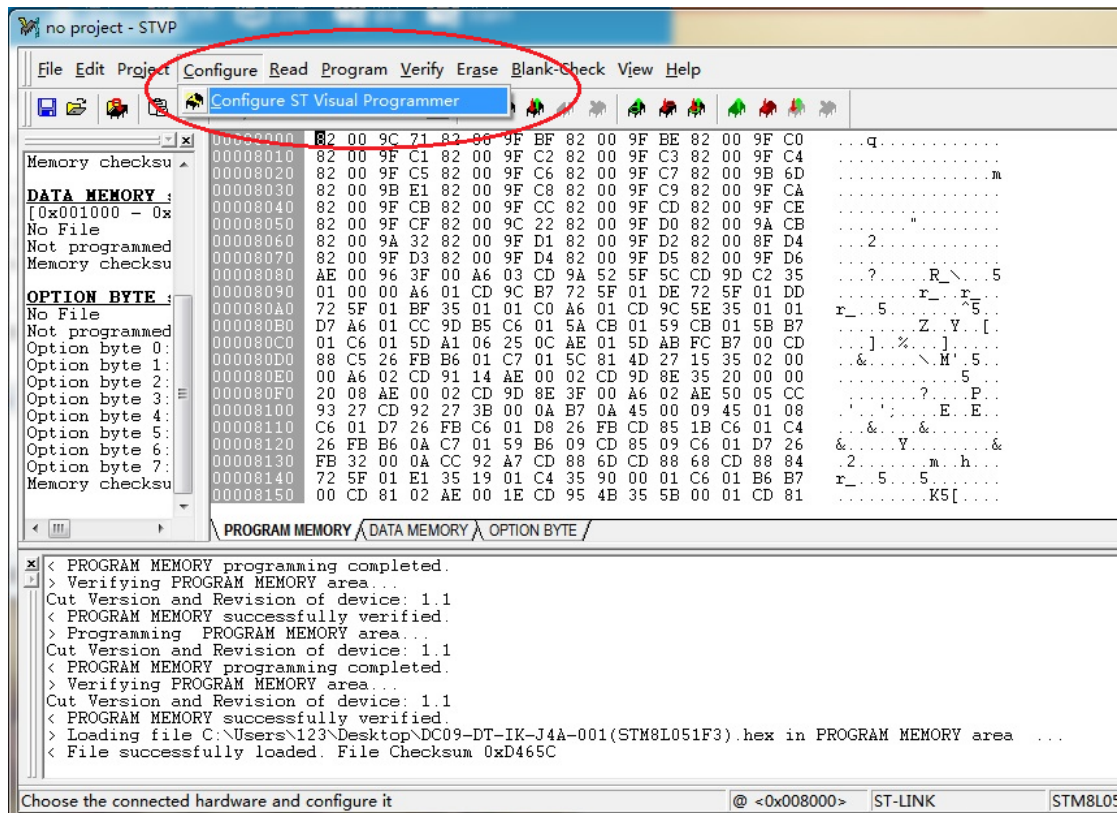


DJ4A's software update (ST_link must be short with 3V3, connect a jumper)


1. Click  **ST Visual Programmer** to open the software.




2. Click "Configure" to select right mode of chip.



3. Chose right type of chip."ST-Link";"USB";"SWIM";"STML05x3". Then click ok

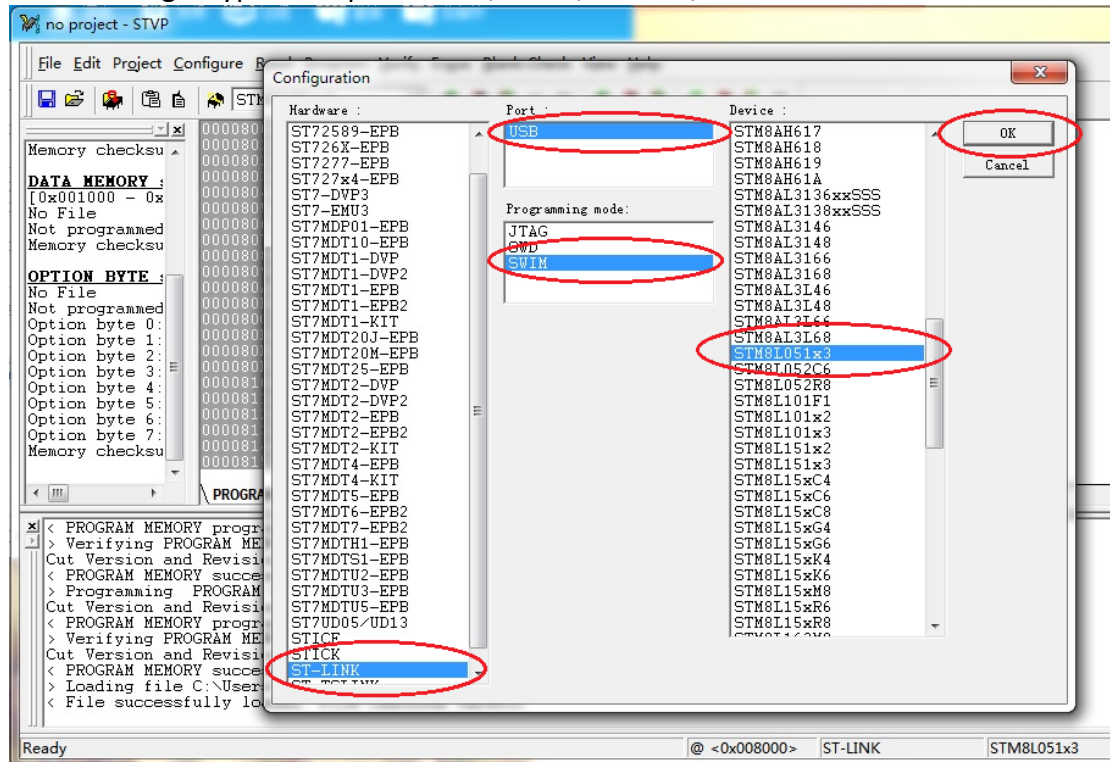

4. Open the .hex file to load DJ4A's software.

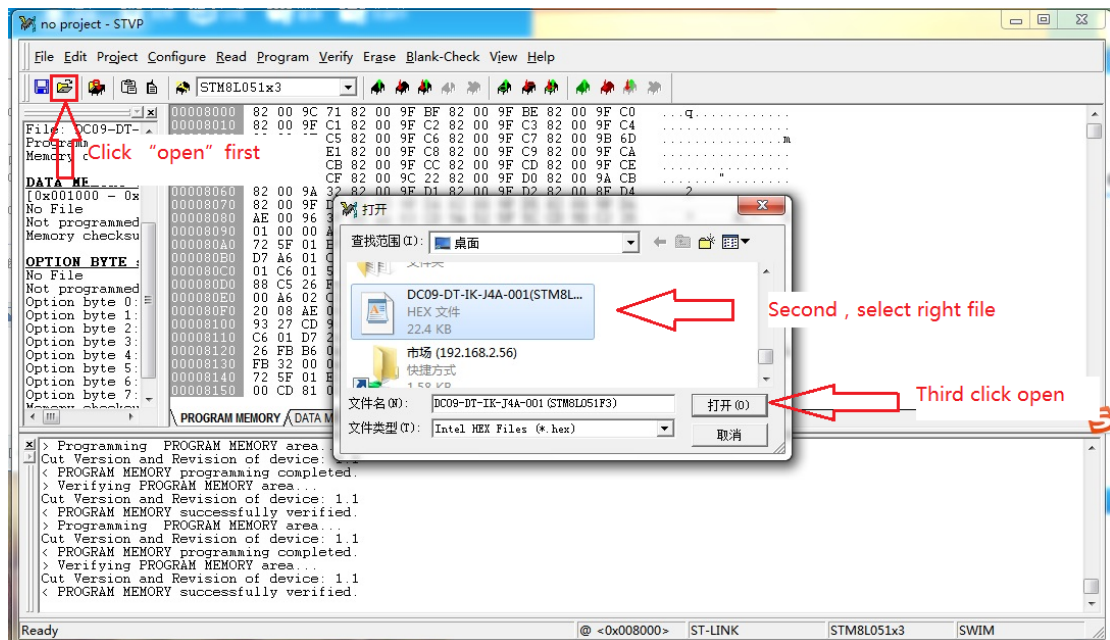

- Click "Download" to download software to DJ4A. After a while, it will have info shows that download success.

