




5V Input

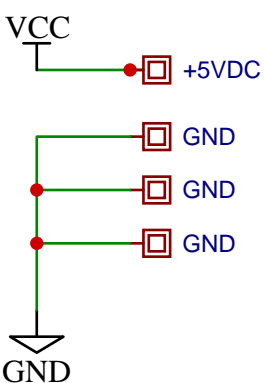


To VGA

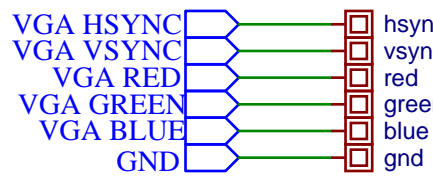

 
Wii Controller




NES Controller

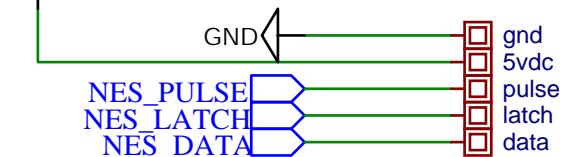


Audio Out

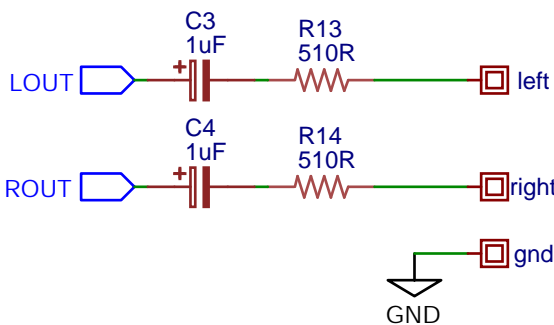


GAMEBOY RESET

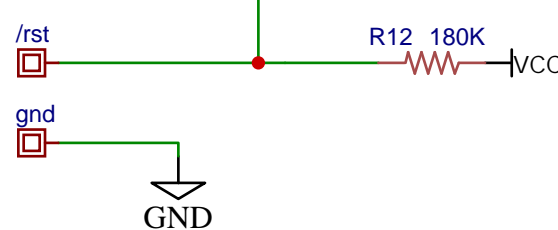

DIR PIN = LOW  
SIGNAL DIRECTION:  
A <-- B

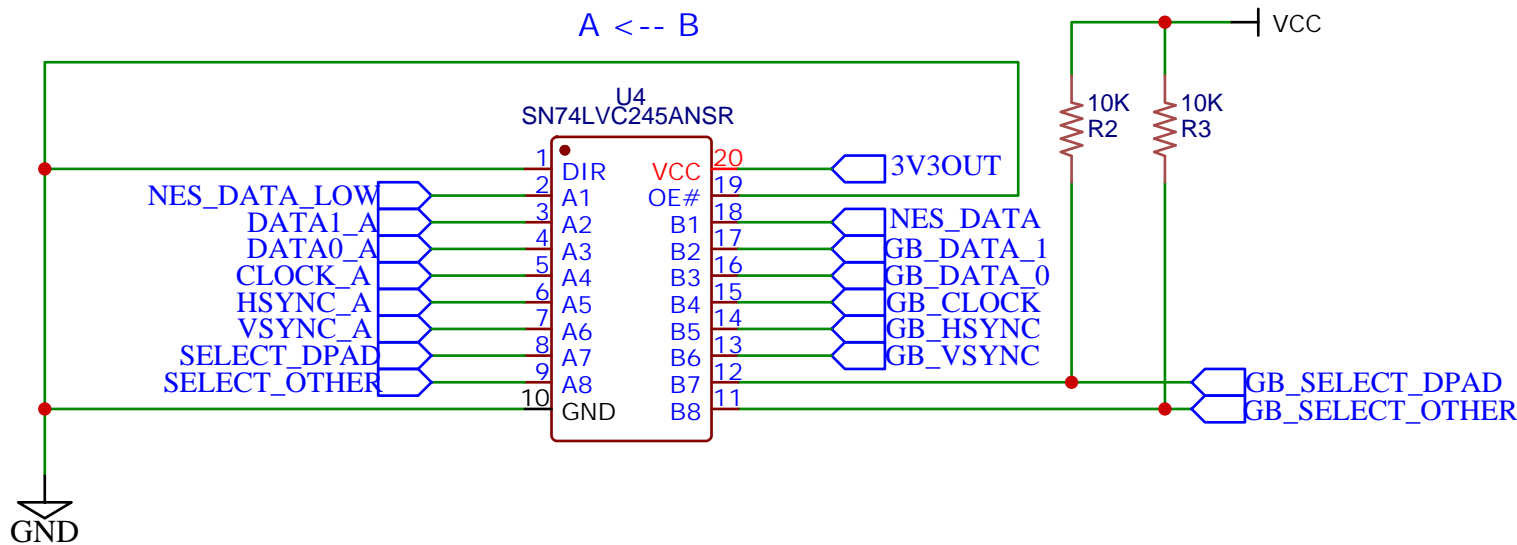

Super Gameboy Cartridge Header

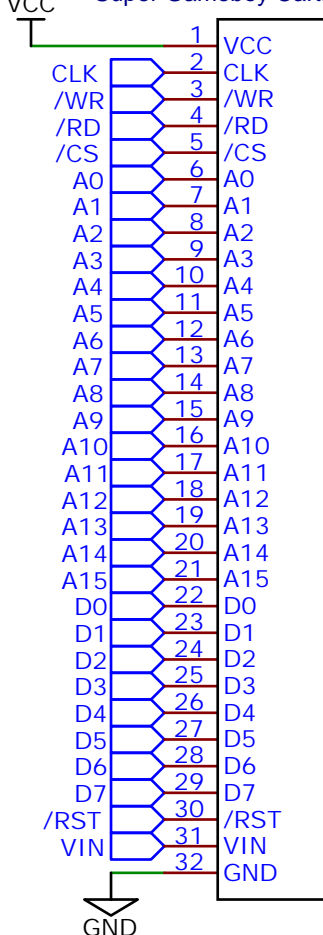

Raspberry Pi Pico

