




1. NORMALLY OPEN DIGITAL CONTACT: STOP CONTACT IS PULSE OPEN FOR TWO SECONDS. PLC MAINTAINS CONTACT CLOSED IF ALL SOFTWARE TRIPS / PERMISSIVES ARE SATISFIED. PLC MAINTAINS CONTACT OPEN IF ANY SOFTWARE TRIPS / PERMISSIVES ARE NOT SATISFIED.
2. NORMALLY OPEN DIGITAL CONTACT: START CONTACT IS PULSE CLOSED FOR TWO SECONDS.
3. CONDUCTORS SHALL BE TAGGED AT EACH END WITH ASSIGNED EQUIPMENT OR DEVICE NUMBER FOLLOWED BY WIRE NO. SUFFIX AS SHOWN ON ELEMENTARY.

FC101M

AS

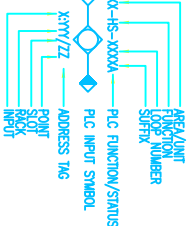

- UPS.

LEGEND:		TERMINAL OR DEVICE LOCATION
<input type="checkbox"/>	MCC TERMINAL	
<input checked="" type="checkbox"/>	MCC LUG	
<input checked="" type="checkbox"/>	FIELD DEVICE	
<input checked="" type="checkbox"/>	VARIABLE SPEED CONTROLLER	
<input checked="" type="checkbox"/>	PLC TERMINAL	
	JUNCTION BOX	

BATUHIJAU
PTINT

[illegible]