

# **<VE> Compliance View User Guide**

**<Virtual Environment> 6**

## Contents

<b>1</b>	<b>Introduction .....</b>	<b>5</b>
1.1	What is the <VE> Compliance View? .....	5
1.2	<VE> Compliance View workflow .....	6
1.3	Overview of <VE> Compliance View Interface Features .....	8
1.4	Common tools for model viewing and interrogation .....	11
<b>2</b>	<b>Site and Weather Data .....</b>	<b>12</b>
<b>3</b>	<b>Building Element Data .....</b>	<b>14</b>
3.1	What are building elements? .....	14
3.2	Construction data .....	14
3.2.1	Construction types .....	14
3.2.2	The construction type attribute for a building element .....	14
3.2.3	Changing the construction type .....	14
3.2.4	Selecting building elements for construction type editing .....	15
	At model level .....	15
	At space level .....	15
	At surface level (opening mode) .....	15
	At surface level (adjacency mode) .....	15
3.3	Changing the construction type for selected elements .....	15
3.4	Adjacency data .....	16
<b>4</b>	<b>Room Data .....</b>	<b>19</b>
4.1	What is Room Data? .....	19
4.2	Viewing and editing Room Data for a single room .....	19
4.2.1	General tab .....	20
4.2.2	Building Regs Tab .....	21
4.2.3	Room Conditions Tab .....	25
4.2.4	System tab .....	28
4.2.5	Internal Gains tab .....	31
4.2.6	Air Exchange tab .....	34
4.3	Editing Room Data for a Set of Rooms .....	36
4.4	Assigning a Room Thermal Template to a Set of Rooms .....	36
<b>5</b>	<b>Apache Systems .....</b>	<b>38</b>
5.1	What are Apache Systems? .....	38
5.2	Viewing and editing Apache Systems .....	38
5.2.1	Apache Systems dialog .....	39
<b>6</b>	<b>UK NCM System Data Wizard .....</b>	<b>46</b>
6.1	What is the UK NCM System Data Wizard? .....	46
6.2	Using the UK NCM System Data Wizard .....	46
6.2.1	Heating system .....	48
6.2.2	Cooling system: .....	49
6.2.3	System adjustment: .....	50
6.2.4	Metering Provision (Control corrections) .....	51
6.2.5	Ventilation .....	52
<b>7</b>	<b>Domestic Hot Water Data Wizard .....</b>	<b>53</b>
7.1	What is the Domestic Hot Water Data Wizard? .....	53
7.2	Using the Domestic Hot Water Data Dialog .....	53
7.2.1	DHW delivery efficiency .....	53
7.2.2	Generator type (SBEM only) .....	53
7.2.3	Later than 1998 (SBEM only) .....	54
7.2.4	Fuel Type (SBEM only) .....	54
7.2.5	DHW Generator seasonal efficiency (SBEM only) .....	54
7.2.6	Storage .....	54
7.2.6.1	Is the system a storage system? .....	54
7.2.6.1	Storage volume .....	54


7.2.6.1 Storage losses.....	54
7.2.7 Secondary Circulation.....	55
7.2.6.1 Does the system have secondary circulation?.....	55
7.2.6.1 Circulation Losses .....	55
7.2.6.1 Pump Power.....	55
7.2.6.1 Loop Length .....	55
7.3 Solar Water Heating.....	55
7.3.1 Solar heating system .....	56
7.3.2 Solar Panel .....	56
7.2.6.1 Area.....	56
7.2.6.1 Azimuth .....	56
7.2.6.1 Tilt.....	56
7.2.6.1 Shading factor .....	56
7.2.6.1 Degradation factor .....	56
7.2.6.1 Conversion efficiency at ambient temperature ( $\eta_0$ ) .....	56
7.2.6.1 First order heat loss coefficient ( $a_1$ ) .....	56
7.2.6.1 Second order heat loss coefficient ( $a_2$ ) .....	56
7.2.6.1 Flow rate.....	56
7.2.6.1 Pump power .....	56
7.2.6.1 Heat exchanger effectiveness .....	56
7.3.3 Solar Panel Storage Cylinder .....	56
7.2.6.1 Volume .....	56
7.2.6.1 Storage loss at maximum temperature .....	57
<b>8 Renewables .....</b>	<b>58</b>
8.1 PVS Generator.....	59
8.1.1 PV array type and performance parameters .....	59
7.2.6.1 PV array type.....	59
7.2.6.1 Derive performance parameters from PV array type? .....	59
7.2.6.1 PV module nominal efficiency ( $\eta_0$ ) .....	59
7.2.6.1 Nominal cell temperature (NOCT).....	59
7.2.6.1 Reference irradiance for NOCT .....	59
7.2.6.1 Temperature coefficient for module efficiency ( $\beta$ ) .....	59
8.1.2 Adjustment factors.....	59
7.2.6.1 Degradation factor.....	59
7.2.6.1 Shading factor .....	59
7.2.6.1 Electrical conversion efficiency .....	60
8.1.3 PV panel data .....	60
7.2.6.1 Area.....	60
7.2.6.1 Azimuth .....	60
7.2.6.1 Tilt.....	60
8.2 Wind Generator.....	60
8.2.1 Wind generator parameters.....	61
7.2.6.1 Wind generator.....	61
7.2.6.1 Hub height .....	61
7.2.6.1 Rated power.....	61
8.2.2 Power curve .....	61
8.3 CHP Generator .....	62
8.3.1 CHP availability and fuel.....	63
7.2.6.1 CHP generator .....	63
7.2.6.1 Fuel type.....	63
8.3.2 Performance at rated output.....	63
7.2.6.1 Heat output.....	63
7.2.6.1 Thermal efficiency .....	63
7.2.6.1 Power efficiency .....	63
8.3.3 Performance at minimum output .....	63
7.2.6.1 Heat output.....	63

7.2.6.1 Thermal efficiency .....	63
7.2.6.1 Power efficiency .....	63
8.3.4 Profiles .....	63
7.2.6.1 Profile for heat matching strategy .....	63
7.2.6.1 Profile for power matching strategy .....	64
<b>9 Building Compliance and Settings menus.....</b>	<b>Error! Bookmark not defined.</b>
9.1 Building Compliance Menu .....	<b>Error! Bookmark not defined.</b>
9.1.1 Export Room Data .....	<b>Error! Bookmark not defined.</b>
9.1.2 Save.....	64
9.2 Settings Menu .....	<b>Error! Bookmark not defined.</b>
9.2.1 Building .....	<b>Error! Bookmark not defined.</b>
9.2.2 Heating/Cooling zones .....	<b>Error! Bookmark not defined.</b>
9.2.3 Carbon emission factor for fuels .....	<b>Error! Bookmark not defined.</b>
9.2.4 Applicable regulation .....	<b>Error! Bookmark not defined.</b>
9.2.5 Building Regs Building and System Data .....	<b>Error! Bookmark not defined.</b>
<b>10 &lt;VE&gt; Compliance toolbar .....</b>	<b>68</b>
10.1 Select object.....	68
10.2 Edit selection set constructions.....	68
10.3 Edit selection set custom attributes .....	68
10.4 Assign Room Thermal Template to selection set .....	68
10.5 Heating & Cooling Zones .....	68
10.6 Apache Systems .....	68
10.7 Fuels Data.....	69
10.8 Apache profile database manager .....	69
10.9 Apache construction database manager .....	69
10.10 Apache weather/location database manager .....	69
10.11 Query .....	69
10.12 Model viewer.....	69
10.13 Renewables .....	70
10.14 Edit Multiple Adjacencies.....	70

# 1 Introduction

## 1.1 What is the <VE> Compliance View?

The <VE> Compliance View is a view within the Virtual Environment's Compliance and Ratings category.

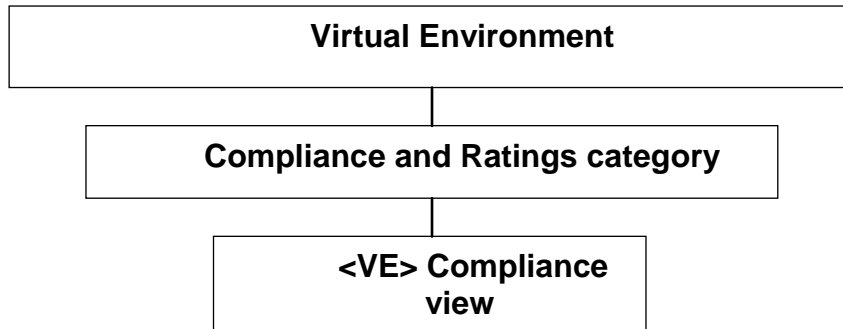

The <VE> Compliance View provides the means to test compliance with UK Building Regulations dealing with the conservation of fuel and power (Part L in England and Wales, Section 6 in Scotland, Part F in Northern Ireland) and to generate Energy Performance Certificates (EPCs). The currently supported regulatory routes are as follows:

- UK Dwellings – Initial set-up for analysis of new dwellings in the UK.
- Part L1 (SAP 9.8.0) – England/Wales: SAP calculation procedure applying to new dwellings in England and Wales.
- Part L2 (2006) – ApacheSim method: 2006 Part L regulations applying to new buildings other than dwellings in England and Wales. ApacheSim or SBEM method.
- Part F (2006) - 2006 Part L regulations applying to new dwellings in Northern Ireland. ApacheSim or SBEM method.
- Section 6 (2005) Scotland: 2005 regulations applying to new buildings in Scotland. The distinction between dwellings and non-dwellings is handled via the building type.
- Section 6 (2007) Scotland: 2007 regulations applying to new buildings in Scotland. ApacheSim or SBEM method. The distinction between dwellings and non-dwellings is handled via the building type.
- Part L (2002) – England/Wales/Ni: 2002 Part L regulations applying to new buildings in England, Wales and Northern Ireland – still applicable if construction began before 6<sup>th</sup> April 2006. The distinction between dwellings and non-dwellings is handled via the building type.
- Part L (2008) – Republic of Ireland: 2008 Part L regulations applying to new non-dwellings in the Republic of Ireland.

The methods and workflow differ for each regulatory route and are described in the following separate user guides:

- Part L1 (2006) User Guide
- Part L2 (2006) ApacheSim User Guide
- Part L2 (2006) VE-SBEM User Guide
- Part L (2002) User Guide – covers both L1 (dwellings) and L2 (non-dwellings)
- Section 6 (2005) ApacheSim User Guide – covers both dwellings and non-dwellings
- Section 6 (2007) ApacheSim User Guide – covers both dwellings and non-dwellings
- Section 6 (2007) VE-SBEM User Guide

<VE> Compliance features common to all regulatory frameworks are covered by this user guide.

## **1.2 <VE> Compliance View workflow**

This section sets out the steps involved in creating a thermal model and running the building regulations compliance checkers. It is intended as a guide. Many of the steps may be interchanged and data of all types may be edited at any stage. Where data is shared between the <VE> Compliance View and the Apache View, this data may be edited in either view. Note that different regulatory frameworks require different levels of detail in the specification of data, and that in the case of L2 (2006) certain Room Data settings are overridden by standard settings appropriate to the room 'activity'.

### **Building geometry**

The modelling process begins with the creation of building geometry.

1. Select the ModelBuilder Category and create the building geometry in ModelIT.

### **Data common to thermal applications**

The following tasks feature in the input process for a range of thermal applications and can be performed in either the Apache View or the <VE> Compliance View. Not all steps are required by all Building Regulations compliance checks. An asterisk identifies those required only for simulation-based analyses, namely L2 (2006) both ApacheSim and SBEM, and the Carbon Emissions Calculation Method in L2 (2002) or Section 6.

2. Run APlocate (Location & Weather Data) to define site location and weather data (for L2 compliance checking).
3. Run APcdb (Constructions Database) to import or define constructions.
4. Assign constructions to building elements (this can also be done via a construction template when creating a room).



5. \*Use the Building Template Manager to import or create Room Templates specifying heating, cooling, internal gains, system, ventilation and Building Regulations data for rooms.
6. \*In parallel with step 4, define the characteristics of the building's HVAC systems by creating one or more Apache Systems and assigning them either to room templates or directly to rooms.
7. \*In parallel with step 4 (as necessary) run the utility APpro (Profiles Database) to define operational profiles.
8. \*In either the Apache View or the <VE> compliance View (both in the Thermal category), assign room templates to rooms. When a room template is set as the *active template*, its data is automatically assigned to rooms or elements as they are created. Alternatively, room templates may be assigned to rooms after creation. Room template data may be overridden for individual rooms.

### **Supplementary thermal and solar data**

At this stage (or at any suitable time) you may wish to leave Apache View or <VE> Compliance View to provide further input to simulation-based regulatory frameworks:

9. \*Within the MacroFlo View set up opening air flow characteristics for the MacroFlo simulation program. (Not applicable for SBEM)
10. \*Within the ApacheHVAC View set up HVAC system data for the ApacheHVAC simulation program. (Not applicable for SBEM)
11. \*Within the SunCast view of the Solar Category perform solar shading calculations. (Not applicable for SBEM)

### **Building Regulations data**

In the <VE> Compliance View:

12. Choose a regulatory framework.
13. Set the building type for Building Regulations.
14. Set the Building Regulations Building and System Data.
15. Set Building Regulations data for individual rooms, where this is not specified in the Room Templates. In particular, indicate which rooms are to be included in the analysis, set the 'Type of room', and (where appropriate) the room 'activity'.

### **Compliance testing, trial compliance simulations and results review**

In the <VE> Compliance View:

16. Perform the compliance check appropriate to the currently selected regulatory framework.

17. In the case of the 2006 regulations, assess the summertime performance of naturally ventilated spaces in the building, (this is not applicable for the SBEM approach). An option is also provided to conduct trial simulations to check the validity of the model used for the compliance analysis.
18. Review results from the compliance checks using:
  - HTML Reports, and (where appropriate)
  - Vista – a View for displaying and exporting results.

### 1.3 Overview of <VE> Compliance View Interface Features

The <VE> Compliance View consists of the following interface features:

#### <VE> Compliance menu bar

File Edit View Tools Building Compliance Settings Help

These pull-down menus provide functions specific to the <VE> Compliance View.

#### <VE> Compliance edit toolbar



The icons provide a quick route to functions on the <VE> Compliance menu bar.

The 'Regulatory framework' selector allows the regulatory framework to be selected from the following options:

- UK Dwellings – Initial set-up for analysis of new dwellings in the UK.
- Part L1 (SAP 9.8.0) England/Wales: SAP calculation procedure applying to new dwellings in England and Wales
- Part L2 (2006) – England/Wales: 2006 Part L regulations applying to new buildings other than dwellings in England and Wales.
- Part F (2006) – N Ireland – ApacheSim and SBEM method: 2006 Part L regulations applying to new buildings other than dwellings in England and Wales.
- Section 6 (2005) – Scotland: 2005 regulations applying to new buildings in Scotland. The distinction between dwellings and non-dwellings is handled via the building type.
- Section 6 (2007) – Scotland: 2007 regulations applying to new buildings in Scotland. The distinction between dwellings and non-dwellings is handled via the building type.
- Part L (2002) – England/Wales/NI: 2002 Part L regulations applying to new buildings in England and Wales – still applicable if construction began before 6<sup>th</sup> April 2006. The distinction between dwellings and non-dwellings is handled via the building type.



- Part L (2008) – Republic of Ireland: 2008 Part L regulations applying to new non-dwellings in the Republic of Ireland.

The working of the <VE> Compliance View differs fundamentally between the different regulatory frameworks, so it is helpful to make this choice at an early stage in the design assessment process.

The 'Method' selector allows you switch between the different calculation methods (ApacheSim or SBEM)

The 'Building' selector (where relevant) allows you to switch between the various versions of the building used in the compliance/certification process:

Actual – the building as designed, but with standardised internal conditions

Notional – the comparison building for compliance assessment


Reference – the comparison building for the calculation of EPC Asset Rating

Typical – a version of the building conforming to 1995 standards, for which results are presented on the EPC


For details see the Part L2 (2006) ApacheSim User Guide.

### Model workspace

This displays the model geometry and provides a graphical means of selecting geometrical objects.

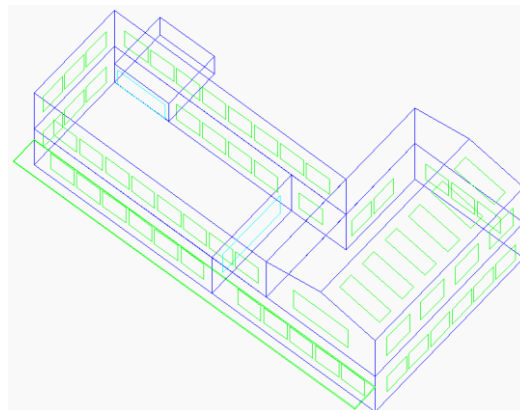

### Model view toolbar

 

This provides functions for manipulating the view of the geometrical model.

### Model Browser

This list of rooms, opening up to display surfaces and openings in those rooms, provides an alternative way to view and select geometrical objects.




## Room Group tools



These tools allow the creation, application and selection of Room Grouping Schemes. See the ModelIT User Guide for further information.

## Building Regulations panel

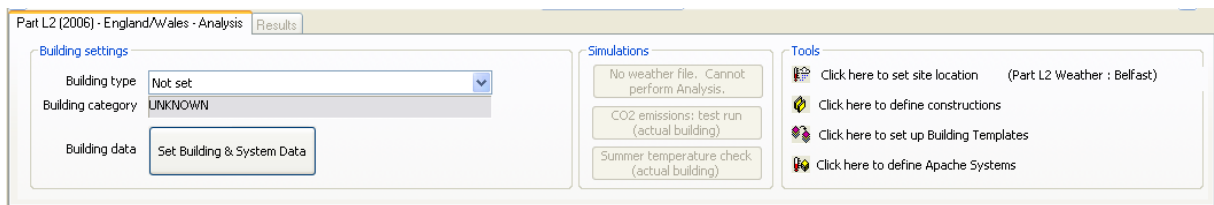

This panel (which is different for each regulatory framework) provides for the input of building and system data specific to the Building Regulations and the means to perform the appropriate compliance checking analysis. Shortcuts are also provided to the utilities for defining the site location, constructions, Building Templates and Apache Systems.

Full details are provided in the separate Building Regulations User Guides.

## **1.4 Common tools for model viewing and interrogation**

Before using the <VE> Compliance View you should familiarise yourself with the following tools, which provide the means for navigating around the model to view and set room and building element attributes:

- The Virtual Environment menu bar
- The model workspace
- The model browser
- The model view toolbar

In particular, you should be familiar with the following procedures described in the ModelIT User Guide:

- Selecting a view of the model workspace using the following buttons on the model view toolbar:

Fit view

Zoom window

Zoom in

Zoom out

Pan

Zoom previous

Zoom next

View axis (Plan, Right, Left, Front, Back, Axon.)

Set axonometric rotation

Rotate view

- Selecting a single room or a set of rooms by clicking in the model workspace.
- Selecting a single room or a set of rooms by clicking in the model browser.
- Panning and zooming the model image.
- Moving between the following model decomposition levels using the up and down arrows on the view toolbar (or by double-clicking on a room or surface):
  - Model level
  - Space level (only surface mode applies in the <VE> Compliance View)
  - Surface level (opening or adjacency mode)
- Moving between model decomposition levels by clicking in the model browser.

## 2 Site and Weather Data

The external climate is an important driving force affecting thermal conditions in a building. Location and weather data is specified in the utility APlocate.

APlocate allows you to specify weather data for the following purposes:

- Simulation of the building for design or appraisal – for this purpose any suitable weather file appropriate to the location may be used.

- Simulation of the building for Building Regulations compliance – here the Regulations stipulate particular weather files.

- Heating and cooling load calculations (ApacheCalc).

The selection of location and weather data for building regulatory compliance is a requirement for Part L 2A 2006 and the Carbon Emissions Calculation Method in Part L2 2002 and Section 6. For these compliance routes the annual simulation must use the CIBSE 2005 Test Reference Year (TRY) for the location nearest to the building site.

For Part L2A 2006 there is a further requirement to use a particular weather file for the compliance check assessing the control of solar gains (Criterion 3), where this is performed by the method described in L2A paragraph 64b. The weather file stipulated for this analysis is the Design Summer Year (DSY) for the location nearest to the building site.

The locations applicable for Part L2A 2006 compliance checking, and for which TRY and DSY datasets are available, are:

Glasgow

Belfast

Swindon

Norwich

Birmingham

London\*

Leeds

Newcastle

Nottingham

Plymouth

Manchester\*

Cardiff

Southampton

Edinburgh\*

\*Note only three locations are used for the Part L 2A (2006) SBEM compliance route. <VE Compliance> will automatically choose the closest location.

Use of the weather files for 2006 and 2002 L2 regulatory frameworks, for use with the ApacheSim route, is governed by a licence which must be purchased from CIBSE. Customers purchasing these licences from CIBSE should state that they are IES customers, and on receipt of this information from CIBSE, IES will then supply the weather data files in the format used by the <VE>.

APlocate also sets the building location and information on the setting of clocks, which is important in calculations of solar position.

APlocate may be invoked from either the Building Regulations menu bar or the Building Regulations toolbar or the Regulations Panel.

Please refer to the [APlocate](#) User Guide for further information on this utility.

## 3 Building Element Data

### 3.1 What are building elements?

A *building element* (often shortened to *element*) is a component of the building such as a wall, ceiling, floor or window. For convenience, building elements are divided into categories such as 'External wall', 'Internal glazing', etc. Where a room surface has multiple adjacencies, each adjacency is treated as a separate building element.

Two kinds of data need to be set for building elements in the <VE> Compliance View: construction data describing the element's thermal properties, and adjacency data describing its thermal boundary conditions. Construction data needs to be set for all elements. Adjacency data is set automatically as a function of building geometry, and need only be edited in special circumstances.

### 3.2 Construction data

#### 3.2.1 Construction types

A *construction type* (often shortened to *construction*) is a type of building element in the context of Apache thermal analysis. It consists of a layer-by-layer description of the element's thermophysical properties, together with other data such as surface solar absorptivity and emissivity. Construction types are created and edited in the program APcdb.

#### 3.2.2 The construction type attribute for a building element

Every building element has an attribute specifying its construction type. When the element is created in ModelIT, its construction type is set by the active Apache Constructions Template. This setting can later be changed using tools provided in the <VE> Compliance View. The construction type attribute for an element consists of a pointer to one of the construction types defined in APcdb. This means that if the construction type data is edited in APcdb, the change immediately and automatically takes effect for all elements to which that construction type is assigned.

#### 3.2.3 Changing the construction type

The mechanism for changing the construction types of building elements is as follows:

19. Select a building element or a set of building elements (this is called the selection set)
20. For the selected elements, replace all instances of one construction type with another construction type

The first operation may be done in various ways depending on the selection set required (see 'Selecting building elements for construction type editing').



For the second operation the usual method is to use the function 'Edit selection set constructions' (see 'Changing the construction type for selected elements'). An alternative method for individual elements is to use the Query button. The same mechanisms may be used to inspect the construction type of elements without changing them.

#### **3.2.4 Selecting building elements for construction type editing**

There are several ways to select a set of building elements in the <VE> Compliance View.

##### **At model level**

At the model level of decomposition you may select a single room or a set of rooms by clicking in the model workspace or the model browser. For the purposes of construction type setting, this selects all the elements contained in those rooms.

##### **At space level**

At the space level of decomposition (surface mode applies here) you may select a room surface. For the purposes of construction type setting, this selects all the elements contained in that surface.

##### **At surface level (opening mode)**


At the surface level of decomposition (opening mode) you may select a single opening or a set of openings.

##### **At surface level (adjacency mode)**

At the surface level of decomposition (adjacency mode) you may select a single adjacency.

### **3.3 *Changing the construction type for selected elements***

After you have selected a set of building elements you can change (or simply inspect) their construction types by clicking on the icon 'Edit selection set constructions' on the Edit toolbar.

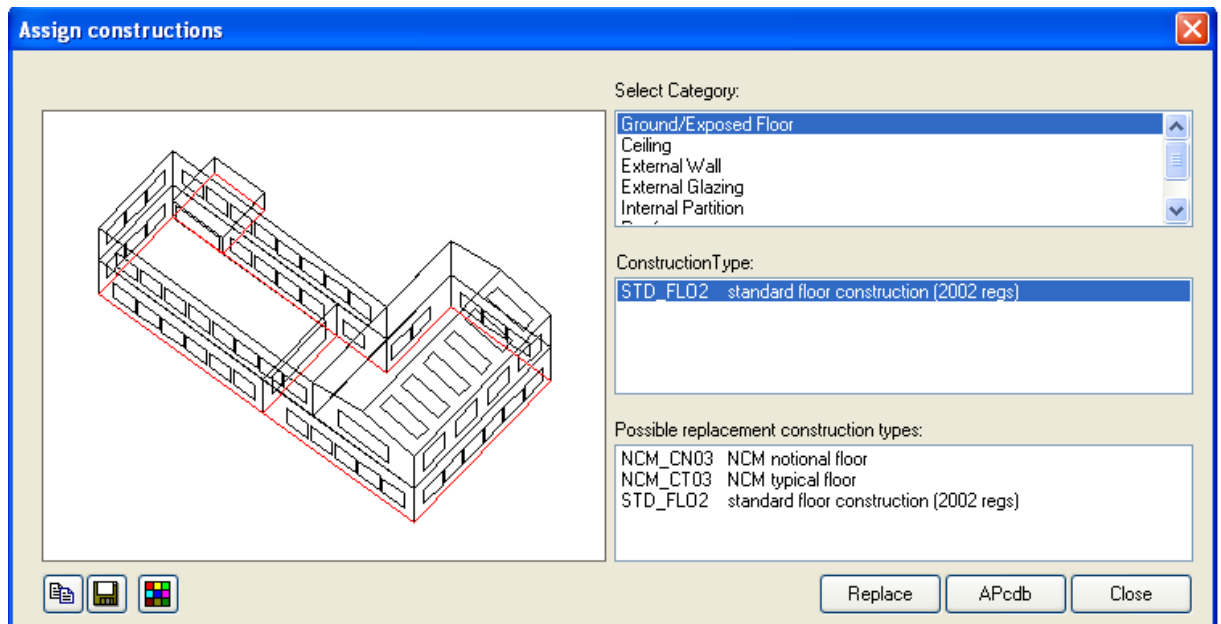

Edit selection set constructions dialog (space level shown)

On the left of the dialog a graphic of the selection set is shown. At model and space level, the graphic uses the same view rotation as the active model window. It is usually easier to see the various elements if you select an Axonometric view in the active model window before using the 'Edit selection set constructions' tool.

If more than one element category is represented in the selection set it is first necessary to select one of these categories from the list headed 'Select category'. Any edits will be applied only to elements in the selected category.

Under the heading 'Construction Type' you will see a list of the construction types currently assigned to the selected elements. By clicking on each construction type in turn you will be able to identify the elements where the construction is used. These elements are highlighted on the graphic.

At any stage in this inspection process you may replace all the highlighted instances of the selected construction type with another construction type. To do this, click on the desired replacement construction type in the list headed 'Possible replacement construction types', and then click on Replace.

If you need to create or modify construction types during this process you can run APcdb by clicking on the APcdb button.


### 3.4 Adjacency data

Adjacency data for a building element describes what lies on the other side of it (when viewed from the selected room), and the assumed thermal boundary condition applying there.

Adjacency data is set automatically by the program, but in certain circumstances may be edited.

To view the adjacency data for a building element, select a room surface by clicking in the model workspace or browser, and change the decomposition mode from 'opening' to 'adjacency' using the selector on the model view toolbar. If the surface is adjacent to two or more spaces (including the exterior space), you will need to identify, by pointing and clicking, which adjacency you wish to interrogate.

Having selected an adjacency, click on the Query icon on the Building Regulations toolbar to display the adjacency data.

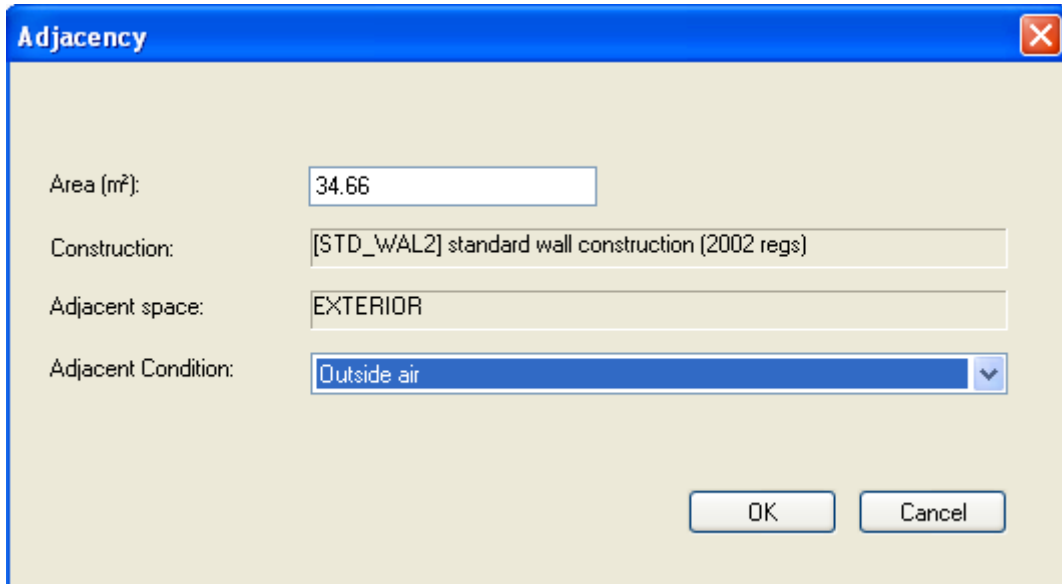

The dialog box titled "Adjacency" contains the following fields:

- Area (m²): 34.66
- Construction: [STD\_WAL2] standard wall construction (2002 regs)
- Adjacent space: EXTERIOR
- Adjacent Condition: Outside air (dropdown menu)

Buttons: OK, Cancel

The dialog shows the adjacent space, the area of the element, the Construction Type (which may be changed here) and the Adjacent Condition.

The Adjacent Condition is set initially depending on the category of element:

Category of element	Adjacent Condition
External wall or roof	Outside air
Partition wall or intermediate floor/ceiling	Internal partition
Ground floor or exposed floor	Outside air with offset temp. 0

In all cases except partition wall and intermediate floor/ceiling, the Adjacency Condition may be edited. Possible Adjacency Conditions are:

- Outside air
- Outside air with offset temperature
- Temperature from profile


*Outside air* is self-explanatory.

*Outside air with offset temperature* sets the temperature on the far side of the wall to the outside air temperature plus a constant offset. Enter the value of the offset in the Temperature Offset box. This Adjacent Condition may be used to approximate a boundary condition where the external surface of the element is exposed to outside air that has been warmed by contact with the building—for example by passing through an underground car park.


*Temperature from profile* allows you to set a constant or time-varying temperature boundary condition. The temperature is specified by an absolute profile created in APpro. The most common use of this feature is in the specification of temperature boundary conditions for ground floors. In the UK a ground temperature of about 13°C may be assumed for the ground temperature at a depth of 1m. This can be modelled using a *Temperature from profile* Adjacent Condition with the Temperature Profile set to the system weekly profile '13', a profile which has a value of 13.0 year-round.

If more than one adjacency of the same type (ie wall, ground floor, roof) are to be edited, the 'edit multiple adjacencies' tool may be used.

### Edit multiple adjacencies

 

The edit multiple adjacencies tool will apply the adjacent condition to the selected surface type, for all zones currently selected.

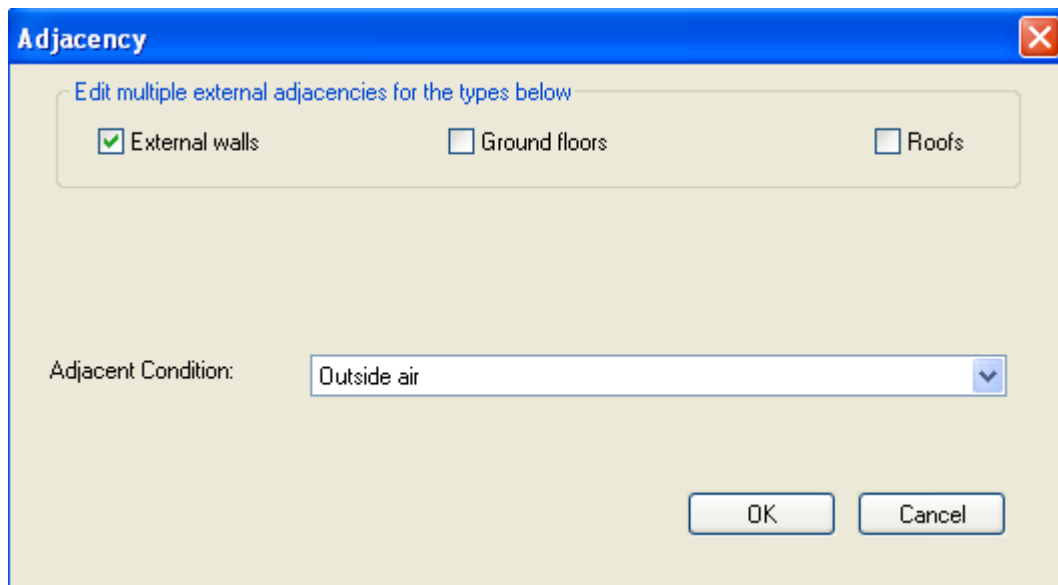

## 4 Room Data

### 4.1 *What is Room Data?*

In the <VE> Compliance View each room has a set of attributes that describe conditions in the room. This data, known as Room Data, provides input to the building regulations compliance checkers.

The Room Data used by the compliance checkers differs depending upon the regulatory framework. In particular, special rules apply to Room Data in Part L2 (2006), where certain Room Data attributes are set automatically according to the 'activity' allocated to the room. This user guide deals with the aspects of Room Data that are common to the different regulatory frameworks. These aspects are to a large extent also shared with the Apache View. The rules specific to each regulatory framework in the <VE> Compliance View are dealt with in separate user guides.

In the <VE> Compliance View Room Data is displayed on six tabs:

- General – Room name and ID, Templates, floor area and volume data, comfort parameters

- Building Regs – Building regulations specific data items relevant to the chosen room

- Room conditions – heating and cooling set points and room thermal modelling settings

- System – parameters describing the system serving the room

- Internal Gains – Specification of internal thermal gain to the room

- Air Exchange – Specification of infiltration, natural ventilation and auxiliary ventilation

### 4.2 *Viewing and editing Room Data for a single room*

To view or edit Room Data for a single room, first select the room using the model workspace or model browser. Click on the Query tool button on the Edit toolbar or select Query from the Edit menu. The Room data dialog then opens.

The Room data dialog contains the same fields as the Room Thermal Template tab in the Template Manager (see the Template Manager User Guide for further information on this facility).


Room Data is set by default from the Room Thermal Template currently assigned to the room. Where enabled check boxes next to the data items (marked 'Template') enable you to override these settings.

If an attribute in a template is changed in the Template Manager the attributes for rooms using that template will also change, unless they have been explicitly overridden.

If a template is reassigned to a room, it nullifies any exceptions made to the settings from the previous template.

The Room data dialog is split into tabbed sections, as follows.

#### 4.2.1 General tab

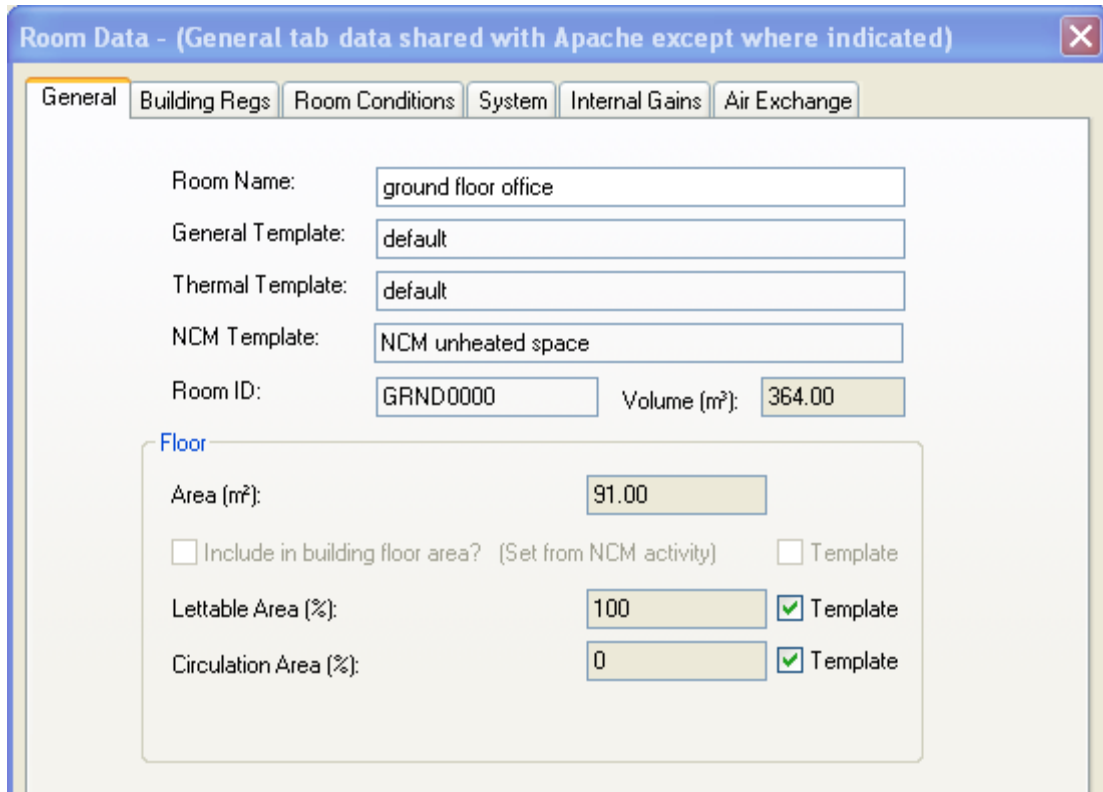

**Room Data - (General tab data shared with Apache except where indicated)**

General | Building Regs | Room Conditions | System | Internal Gains | Air Exchange

Room Name: ground floor office

General Template: default

Thermal Template: default

NCM Template: NCM unheated space

Room ID: GRND0000 Volume (m³): 364.00

**Floor**

Area (m²): 91.00

☐ Include in building floor area? (Set from NCM activity) ☐ Template

Lettable Area (%): 100 ☒ Template

Circulation Area (%): 0 ☒ Template

Room data dialog - General tab

##### Room Name

The name given to the room in ModelIT (may also be edited here)

##### General Template

The Room General Templates assigned to the room

##### Thermal Template

The Room Thermal Templates assigned to the room

##### NCM Template

The Room NCM Templates assigned to the room

##### Room ID

The ID assigned to the room in ModelIT (information only)

##### Volume (m³)

The calculated volume of the room (information only)

##### Floor area (m²)

The calculated floor area of the room, used for the calculation of internal gains (information only). See note below.

##### Include in building floor area? (deactivated)

This option should be checked and is uneditable in VE Compliance (greyed out). An unchecked state indicates that no NCM Activity has been set.

##### Lettable Area (%)



The percentage of the floor area that is lettable


Circulation Area (%)

The percentage of the floor area that is classed as circulation

Note on floor area:

Floor area is calculated as the sum of the areas of all opaque floor elements. It excludes the areas of any holes or glazing elements in the floor.

#### 4.2.2 Building Regs Tab

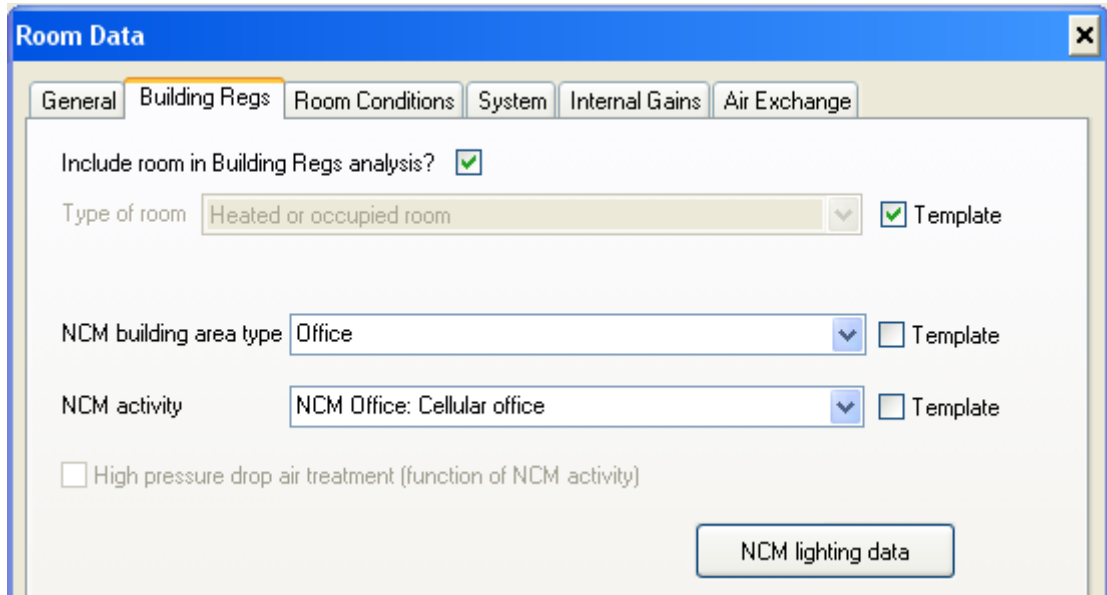

This tab controls how the current room will be interpreted by the compliance checkers for the chosen regulatory framework. Its content varies with the regulatory framework, as outlined below and described in detail in the separate user guides covering Building Regulations.

**Include room in Building Regs analysis?**

If this is ticked (checked) the room will be included in the building regulations analysis. This can be used to switch on or off groups of rooms where a project has multiple building types.

**Type of room**

The type of room dictates how the room is treated by the building regulations analysis. Different types of room apply to different regulatory frameworks.

**External ventilation rate**

For certain unheated room types such as unheated roof, glazing cavity and unheated buffer space, the external ventilation rate must be specified in order for the effective U-values to be calculated.

**NCM building area type**

This setting applies to Part L2 (2006) only.

An efficient way to set NCM activities for rooms is to set the activity in the Room Template. These room activities are filtered by the NCM building type. The activity will then be automatically set, along with other Room Template attributes, for all rooms to which the template is assigned.

For unheated rooms (those with Type of room set to anything other than Heated room), the NCM activity is undefined and is not displayed.

### NCM Activity

This setting applies to Part L2 (2006) only.

Each heated room (defined as a room for which Type of room is set to Heated room) must be assigned an NCM activity. This defines the standard operation pattern of the room for the purpose of L2 (2006), which is defined by attributes on the various Room Data tabs. The assignment of these Room Data attributes is affected by the NCM template corresponding to the activity.

See the Part L2 (2006) ApacheSim User Guide for more information.

### NCM Lighting data

**NCM lighting data**

---

**General lighting data (SBEM)**

☒ Full design carried out, with total wattage  W/m<sup>2</sup> and design illuminance  lux  
☐ Lighting chosen but not calculated  Lumens per circuit Watt  
☐ Only lamp type known

☐ Does display lighting use efficient lamps?  Lumens per circuit Watt  
☐ Are air extracting luminaires fitted?

**Time switching for display lighting**

Type

Hours off

Fraction off

**Automatic daylight zoning for light controls ?**

☐ Yes, SBEM to subdivide zone if needed  
☒ No, percentage area controlled is:  %

**Controls (applying to lighting gains for which 'NCM simple lighting control' is ticked)**

☒ Local manual switching - Local manual switching is permitted by room activity and geometry  
☐ Photoelectric options

**Control type**

☒ Switching  
☐ Dimming

**Sensor type**

☒ Standalone  
☐ Addressable

☐ Different sensor to control back half of zone?

Parasitic power  W/m<sup>2</sup> ☒ Default

**Occupancy Sensing**

Occupancy sensing

## General lighting data (SBEM)

This frame is only active in SBEM – mode, otherwise it is uneditable and greyed out.

Time switching for display lighting

Specify switching type, Hours off and Fraction off.

Automatic daylight zoning for light controls?

An area percentage can be specified to be controlled, if set to be not automatic.

Controls

Local manual switching

This is only permitted, if two conditions hold. The NCM activity permits local manual switching and room floor area is  $\leq 30\text{m}^2$  OR  $D/2 \leq \max(6.2 \cdot h)$ , where D = floor diameter and h = mean room height

Photoelectric options


Ticking this box incites the photoelectric control options; please select whether the control type is manual switching or dimmable, and whether the sensor is stand-alone or addressable.

You may also specify the inclusion of a separate sensor for the back half of the zone(s), this is usually applied for deep-plan spaces.

A further option exists to input parasitic power – an estimate of the energy lost through distribution and controls.

The occupancy sensing options allow you to specify the overall control strategy with regards occupancy sensing. For each option in the menu, a diversity factor is given – this value represents the fraction of the maximum lighting energy consumption that will be applied during the carbon emissions assessment.

### 4.2.3 Room Conditions Tab

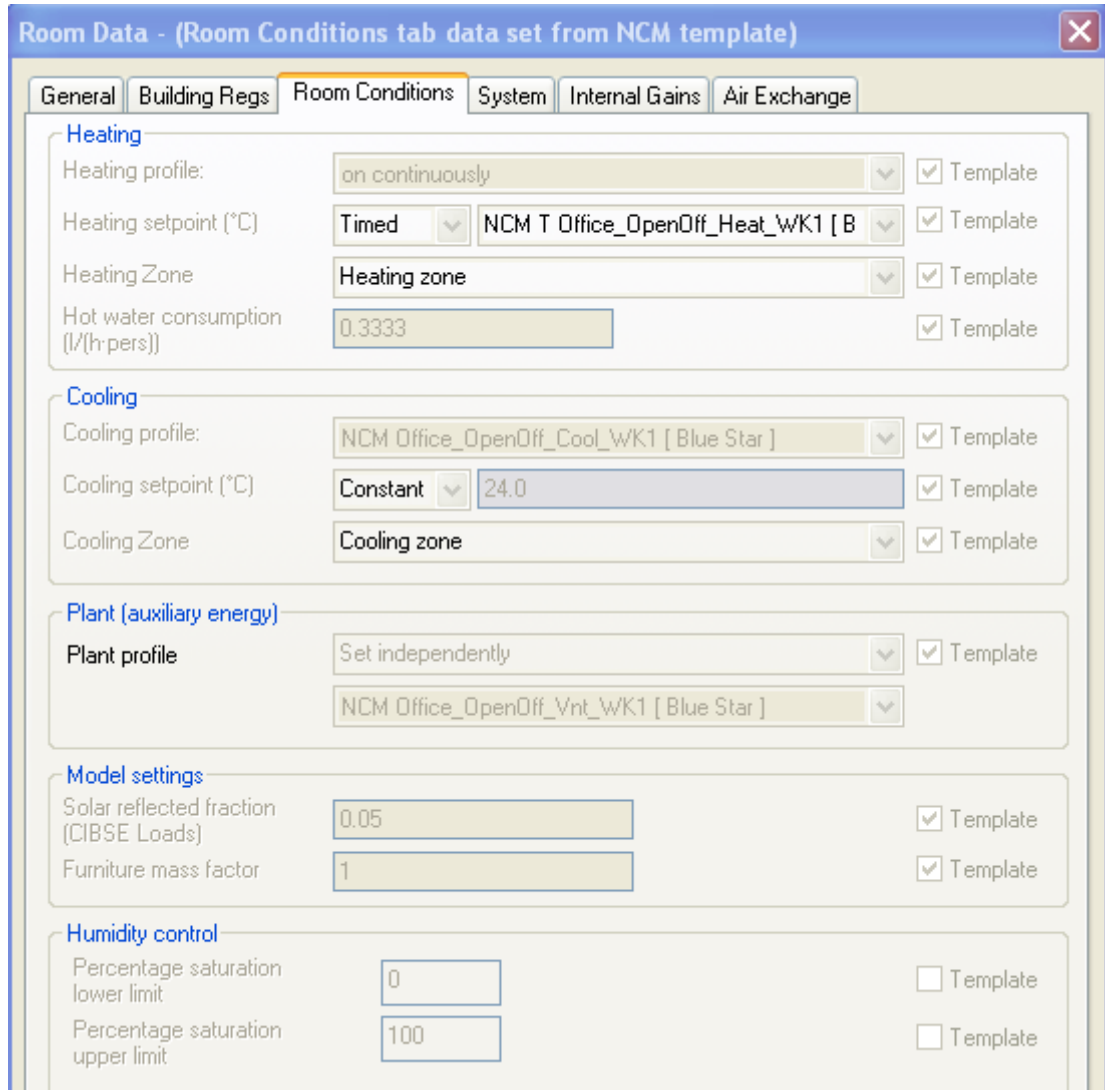

**Room Data - (Room Conditions tab data set from NCM template)**

**General** | **Building Regs** | **Room Conditions** | **System** | **Internal Gains** | **Air Exchange**

**Heating**

Heating profile: on continuously ☒ Template

Heating setpoint (°C): Timed NCM T Office\_OpenOff\_Heat\_WK1 [ B ☒ Template

Heating Zone: Heating zone ☒ Template

Hot water consumption (l/(h pers)): 0.3333 ☒ Template

**Cooling**

Cooling profile: NCM Office\_OpenOff\_Cool\_WK1 [ Blue Star ] ☒ Template

Cooling setpoint (°C): Constant 24.0 ☒ Template

Cooling Zone: Cooling zone ☒ Template

**Plant (auxiliary energy)**

Plant profile: Set independently ☒ Template

NCM Office\_OpenOff\_Vnt\_WK1 [ Blue Star ]

**Model settings**

Solar reflected fraction (CIBSE Loads): 0.05 ☒ Template

Furniture mass factor: 1 ☒ Template

**Humidity control**

Percentage saturation lower limit: 0 ☐ Template

Percentage saturation upper limit: 100 ☐ Template

Room data dialog – Room Conditions tab (illustrated for L2 (2006))

This tab allows you to view the room heating and cooling plant settings. It also deals with certain thermal modelling settings for the room.

In the case of Part L2 (2006) the data on this tab is set automatically from the NCM template, which is a function of the activity.

Heating:

Heating Profile

A modulating profile scheduling the operation of the heating plant. Heating will be available when the modulating profile value exceeds 0.5. Profiles are created and edited in APro, the Profiles Database Manager.

For compliance routes that use ApacheSim this parameter is overridden if the room is modelled in ApacheHVAC.

Heating Set Point

The temperature set point for heating control. This value must be less than or equal to the Cooling Set Point at all times. The Heating Set Point can be constant or it can follow an absolute profile.

For compliance routes that use ApacheSim this parameter is overridden if the room is modelled in ApacheHVAC.

#### Heating Zone

The Heating Zone to which the room is assigned. Assigning rooms to Heating Zones allows room loads calculated by ApacheCalc, ASHRAE Loads and ApacheSim to be aggregated.

#### Hot water consumption

The amount of hot water consumption in litres per hour per person. Hot water consumption is linked to the number of people in the space at any given time. The number of occupants is defined in the Internal Gains Tab and is explained below. Hot water consumption is accounted for in ApacheSim and Part L2 (2006) analyses but not in ApacheCalc or ASHRAE Loads.

#### Cooling:

##### Cooling Profile

A modulating profile scheduling the operation of the cooling plant. Cooling will operate when the modulating profile value exceeds 0.5. Profiles are created and edited in APro, the Profiles Database Manager.

For compliance routes that use ApacheSim this parameter is overridden if the room is modelled in ApacheHVAC.

##### Cooling Set Point

The temperature set point for cooling control. This value must be greater than or equal to the Heating Set Point at all times. The Cooling Set Point can be constant or it can follow an absolute profile.

For compliance routes that use ApacheSim this parameter is overridden if the room is modelled in ApacheHVAC.

##### Cooling Zone

The Cooling Zone to which the room is assigned. Assigning rooms to Cooling Zones allows room loads calculated by ApacheCalc, ASHRAE Loads and ApacheSim to be aggregated.

#### Plant (auxiliary energy):

##### Plant profile

Plant profile (auxiliary energy) is a modulating profile specifying the times when auxiliary energy will be incurred. The settings are taken from thermal template and auxiliary energy figures set elsewhere, which cannot be edited in <VE> Compliance.

#### Model settings:

##### Solar Reflected Fraction

(ApacheCalc only – not used in <VE> Compliance analyses) The fraction of solar radiation entering the room which is assumed to be scattered back out through glazing. The value of this parameter depends primarily on internal surface solar absorptance and room geometry.



For compliance routes that use ApacheSim, the retransmission of solar radiation is calculated directly from this data.

#### **Furniture Mass Factor**

(not ApacheCalc). For compliance routes that use ApacheSim an allowance can be made for the thermal inertia of furniture. Lightweight furniture can be modelled by assuming that its temperature closely follows the room air temperature. Under these conditions its effect is the same as that of an increase in the thermal capacity of the air in the room. The Simulation Furniture Mass Factor is the factor by which the thermal capacity of the furniture exceeds the thermal capacity of the air. If furniture is to be ignored, a value of 0 should be entered.

#### *Humidity control:*

##### **Percentage saturation lower limit**

The minimum percentage saturation level to be maintained in the room during periods of plant operation, as specified by the Cooling profile on the Room Conditions tab. If the percentage saturation in the space falls below the value entered here during plant operation, humidification will occur to meet this limit.

##### **Percentage saturation upper limit**

The maximum Percentage Saturation level to be maintained during periods of plant operation, as specified by the Cooling profile on the Room Conditions tab. If the percentage saturation in the space rises above the value entered here during plant operation, dehumidification will occur to meet this limit.

#### 4.2.4 System tab

Room data - (System tab data shared with Apache)

General Building Regs Room Conditions **System** Internal Gains Air Exchange

**Systems**

System Main system ☒ Template

☒ Use same system for auxiliary vent. system

Auxiliary vent. system Main system ☒ Template

☒ Use same system for DHW system

DHW system Main system ☒ Template

**Heating**

Simulation heating unit capacity ☒ Unlimited ☒ Template

Heating plant radiant fraction 0.20 ☒ Template

**Cooling**

Simulation cooling unit capacity ☒ Unlimited ☒ Template

Cooling plant radiant fraction 0.00 ☒ Template

**System outside air supply ('system air supply' in Vista)**

Free cooling flow capacity \* 0.0000 ac/hr 0.0000 l/s 0.0000 l/(s·m²) ☒ Template

\* Value preserved if room geometry changes Flow rates are referenced to standard density

**Ventilation & exhaust**

☐ Is there mechanical exhaust in the room?

Exhaust flow rate 0.8 l/(s·m²)

Specific fan power 1.5 W/l/s

☐ Extract fan is remote from the room

OK Cancel

Room data dialog – System tab (illustrated for L2 (2006))

This tab allows you to view the Apache System serving the room and are for compliance routes that use ApacheSim only. For further information about the parameters on this dialog please refer to the [ApacheSim User Guide](#).

In compliance routes that use ApacheSim, the system parameters entered here will be overridden (with one exception) in any rooms that feature in an attached ApacheHVAC system. The exception is the setting 'Auxiliary vent. system'. A room served by an ApacheHVAC system may also have one or more auxiliary ventilation air supplies defined on the Air Exchange tab, and these are always associated with an Apache System.

#### *Systems:*

##### **System**

The Apache System serving the room.

Use same system for auxiliary mech. vent.

If there are air exchanges of the 'Auxiliary ventilation' type defined on the Air Exchange tab these will be supplied by an Apache System

##### **Auxiliary vent. system**

The Apache System handling auxiliary ventilation air exchanges defined on the Air Exchange tab. The auxiliary ventilation system will calculate the heating, cooling and dehumidification required to process outside air to the specified supply condition.

Use same system for DHW (Domestic Hot Water)

If hot water use is included in the Room Conditions tab the energy use associated with this will be calculated by an Apache System. By default they will be handled by the main system serving the room, but you can source them from another system by un-ticking this check box and specifying a second system for this purpose.

##### **DHW system**

The Apache System that handles Domestic Hot Water. The DHW system will calculate the energy required, using a model which assumes a temperature rise of 50K between the mains water supply temperature and the hot water temperature.

#### *Heating:*

##### **Simulation heating plant capacity**

This parameter only applies to simulation runs, not to ASHRAE Loads or CIBSE Loads. It allows you to specify a maximum capacity available from the heating units in the room.

##### **Heating plant radiant fraction**

The fraction of the heating plant's output that is in the form of radiant, rather than convective, heat. A value of 0.0 is appropriate for warm air heating and a value of 0.9 for high-temperature radiant heaters. See Table 13 for further guidance.

#### *Cooling:*

##### **Simulation cooling plant capacity**

This parameter only applies to simulation runs, not to ASHRAE Loads or CIBSE Loads. It allows you to specify a maximum capacity available from the cooling units in the room.

##### **Cooling plant radiant fraction**

The fraction of the cooling plant's output that is in the form of radiant, rather than convected, heat. A value of 0.0 is appropriate for air conditioning. See Table 13 for further guidance.

*System outside air supply ('system air supply' in Vista):*

**Free cooling flow capacity**

This parameter is used to specify the availability of free cooling ventilation, in the form of either natural or mechanical ventilation at the outside air condition, up to a certain maximum flow rate. Free cooling flow capacity is the maximum flow rate of external air available for providing free cooling to the room. Free cooling is under the control of the cooling variation profile. It will be supplied when the room temperature exceeds the cooling set point, provided that it is advantageous in terms of reducing room temperature or cooling demand. If mechanical cooling is also available, this will be provided in addition if free cooling is unable to maintain the room temperature at the cooling set point. If free cooling is not required the free cooling flow capacity should be set to zero.

*Ventilation & exhaust:*

The options in this section are activated when the Apache System serving the room has Cooling/ventilation mechanism set to 'Mechanical ventilation'.

**Is there mechanical supply in this room?**

Tick the box if the room is served by a mechanical ventilation air supply. This invokes auxiliary energy calculations applied at room level when the auxiliary energy method is set appropriately. The flow rate used in the calculation is the value specified as auxiliary ventilation or Apache System air supply.

**Specific fan power**

The specific fan power to be used for the calculation of auxiliary energy associated with room-level ventilation supply.

**Mechanical exhaust**

Tick the box if the room has mechanical ventilation extract. This invokes auxiliary energy calculations applied at room level when the auxiliary energy method is set appropriately.

**Exhaust flow rate**

The exhaust flow rate.

**Specific fan power**

The specific fan power to be used for the calculation of auxiliary energy associated with room-level ventilation extract.

#### 4.2.5 Internal Gains tab

Room Data - (Internal Gains tab data set from NCM template)

General Building Regs Room Conditions System Internal Gains Air Exchange

Type	Reference
T People	NCM Office_OpenOff Occ
T Fluorescent Lighting	NCM Office_OpenOff Lit
T Miscellaneous	NCM Office_OpenOff Eqp

Add Remove

Type: People

Reference: NCM Office\_OpenOff Occ

Input mode: m<sup>2</sup>/person ☒ Template

Occupancy: 9.09 m<sup>2</sup>/person 10.01 People

Maximum Sensible Gain: 73.20 W/P 732.73 W ☒ Template

Maximum Latent Gain: 46.80 W/P 468.47 W ☒ Template

Variation Profile: NCM Office\_OpenOff\_Occ\_WK1 [ Blue Star ] ☒ Template

Diversity factor: 1 ☒ Template

Room data dialog – Internal Gains tab (illustrated for L2 (2006))

This tab is for viewing and specifying room internal gains (sometimes called casual gains).

In the case of Part L2 (2006) the data on this tab is set automatically from the NCM template, which is a function of the activity. However, editing the data is permissible in certain circumstances. Details are provided in the L2 (2006) ApacheSim User Guide.

The dialog displays a list of internal gains present in the room. By clicking on an item from the list of you can view, and if appropriate edit, its specification.

For most gain types, gains are shown in Watts as well as  $W/m^2$ , and either of these values can be modified. For people (occupancy), gains can be specified in Watts or  $W/person$ , and the occupancy density can be specified in number of persons or  $m^2/person$ . For lighting gains the power density can also be specified by the Installed Power density per 100lux (or per fc).

If you click on the Add button, the Internal Gains List will appear, allowing you to select those gains you wish to include in the room in addition to those attached to the Room Thermal Template. Any gain you add to a room must first be created in the Internal Gains List. This is done in the Template Manager. Any gain originating from the Room Thermal Template is marked with a 'T'. Other gains are unmarked.

Note: Not all items listed below are needed for each type of Internal Gain.

#### Type

The type of gain (Fluorescent Lighting, Tungsten Lighting, Machinery, Miscellaneous, Cooking, Computers or People)

#### Reference

A verbal description of the gain

#### Input mode

The mechanism used to define the internal gain, W,  $W/m^2$  or (in the case of lighting) lux.

#### NCM simple lighting control? (for Input mode 'lux' only)

Check to activate NCM simple lighting control.

#### Maximum Illuminance

The value defines the illuminance used to calculate the maximum sensible lighting gain if lighting power density is expressed as  $W/m^2/(100lux)$  or (fc).

#### Installed power density

The value used to calculate the maximum sensible lighting gain if lighting power density is expressed as  $W/m^2/(100lux)$  or (fc).

#### Maximum Sensible Gain per Person

The value used to calculate the sensible heat gain per room from occupants. Typical values are listed in CIBSE Guide A Table A7.1.

#### Maximum Latent Gain per Person

The value used to calculate the latent heat gain per room from occupants. Typical values are listed in CIBSE Guide A Table A7.1

#### Floor Area / Person

This value is used to calculate the number of people per room.

#### Maximum Sensible Gain

The peak sensible heat gain. Typical values can be found in CIBSE Guide A7.

#### Maximum Latent Gain

The peak latent heat gain. Typical values can be found in CIBSE Guide A7.

#### Radiant Fraction



The fraction of the gain that is emitted as radiant heat (the remainder being assumed to be convective). Typical values are listed in CIBSE Guide A7.

#### Maximum Power Consumption

The peak rate of energy consumption of the device being described. This parameter will normally (but not always) be equal to Maximum Sensible Gain, and on this assumption its value will be set automatically when you click in the box.

#### Fuel

Where the internal gain has an associated energy consumption, this item defines the type of fuel that it uses. For example, lights would normally use electricity, but cooking might use gas or electricity. The selected fuel type is used in conjunction with the fuel CO<sub>2</sub> factor to determine the carbon emissions associated with a particular thermal gain.

#### Variation Profile

A modulating profile specifying the variation of the gain throughout the year. This profile modulates the Maximum Sensible or Latent Gain entered above.

#### Dimming Profile

A modulating profile specifying the dimming variation of a lighting gain throughout the year. This profile operates in multiplicative combination with the Variation Profile. It therefore does not usually require scheduling with time. Dimming profiles usually involve formulae.

An example of a suitable formula for modulating a lighting gain in response to available daylight is **ramp(e1,0,1,500,.4)**. This formula modulates the lighting gain as a function of the illuminance on the working plane, e1. The value of the profile falls from 1 at zero illuminance to 0.4 at illuminance 500 lux, thereafter remaining constant at this value. The value 0.4 (which you should set as appropriate) represents the fraction of the room's lighting gain which is not subject to daylight control. The illuminance e1 must be computed using the link to Radiance.


#### Diversity factor

This value is valid for all types of gains and will be applied as a multiplicative factor in simulation runs. It doesn't effect any design simulations like CIBSE loads or Apache Loads.

#### Note on floor area:

Floor area is calculated as the sum of the areas of all opaque floor elements. It excludes the areas of any holes or glazing elements in the floor.

#### 4.2.6 Air Exchange tab

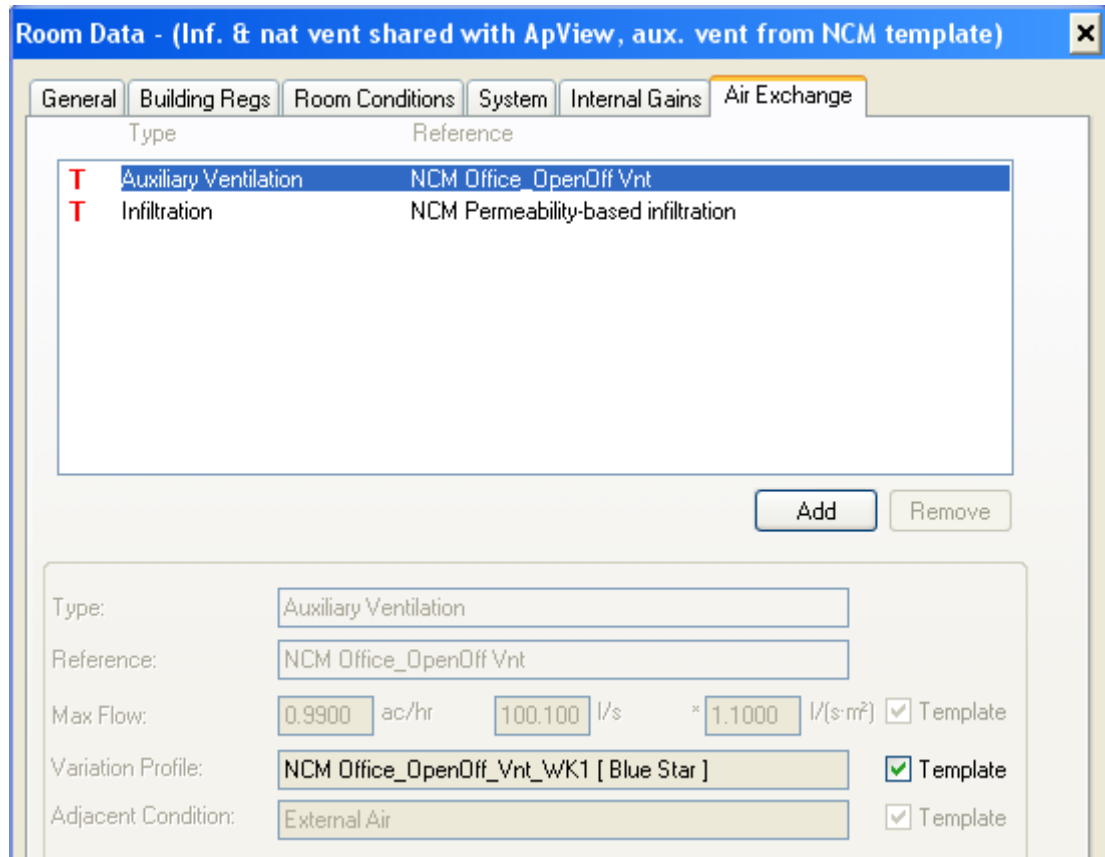

Room Data - (Inf. & nat vent shared with ApView, aux. vent from NCM template)

General Building Regs Room Conditions System Internal Gains **Air Exchange**

Type	Reference
T Auxiliary Ventilation	NCM Office_OpenOff Vnt
T Infiltration	NCM Permeability-based infiltration

Add Remove

Type: Auxiliary Ventilation

Reference: NCM Office\_OpenOff Vnt

Max Flow: 0.9900 ac/hr 100.100 l/s \* 1.1000 l/(s·m²) ☒ Template

Variation Profile: NCM Office\_OpenOff\_Vnt\_WK1 [ Blue Star ] ☒ Template

Adjacent Condition: External Air ☒ Template

Room data dialog – Air Exchange tab

This tab is for viewing or specifying room infiltration and ventilation.

The dialog displays a list of air exchanges for the room. By clicking on an item from the list of you can view, and if appropriate edit, its specification.

In the case of Part L2 (2006) some of the data on this tab (a single auxiliary ventilation air exchange) is set automatically from the NCM template, and the rest is user-specified. Auxiliary Ventilation air exchanges are intended to be used to specify minimum levels of either mechanical or natural ventilation for fresh air purposes. This type of ventilation can alternatively be specified using the 'System outside air supply' settings on the System tab. If this convention is followed ventilation will be correctly handled in simulations for building regulations compliance. SBEM has additional mechanisms to define ventilation. Further guidance on both the SBEM and ApacheSim route to compliance is provided in the L2 (2006) ApacheSim User Guide.

All air exchanges represent air flow entering the room. The source of the air may be the external environment (optionally with a temperature offset), an adjacent room or a supply at a temperature specified by an absolute profile.

Air exchanges are of three types: Infiltration, Natural Ventilation and Auxiliary Ventilation. Infiltration air exchanges are included unconditionally in ApacheCalc and ApacheSim. Natural and Auxiliary Ventilation air exchanges may be switched on and off at calculation or simulation time.

If you click on the Add button, the Air Exchanges List will appear, allowing you to select those air exchanges you wish to include in the room in addition to those attached to the Room Thermal Template. Any air exchange you add to a room must first be created in the Air Exchanges List. This is done in the Template Manager. Any air exchange originating from the Room Thermal Template is marked with a 'T'. Other air exchanges are unmarked.

Note: Different combinations of Air Exchange types with adjacent condition codes require different items of data.

#### Type

The type of air exchange (Infiltration, Natural Ventilation or Auxiliary Ventilation)

#### Reference

A verbal description of the air exchange

#### Variation Profile

A modulating profile specifying the variation of the air flow throughout the year. This profile modulates the Maximum AC Rate entered below.

#### Max Flow

The peak air change rate, expressed in air changes per hour, litres per second or litres per second per m<sup>2</sup> of floor area

#### Adjacent Condition

The source of air entering the room. The options are: 1) External Air, 2) External Air + Offset Temperature (external air with a temperature offset applied), 3) Temperature From Profile (air at a temperature specified by an absolute profile) and 4) Ventilation From Adjacent Room.

In the case of External Air + Offset Temperature and Temperature From Profile, the humidity ratio of the supply air is assumed to equal that of the room being supplied.

#### Temperature Offset

In the case of adjacency condition 'External Air + Offset Temperature', the offset to be added to the external air temperature

#### Temperature Profile

In the case of adjacency condition 'Temperature From Profile', an absolute profile specifying the (possibly time-varying) supply temperature

#### Adjacent Room


In the case of adjacency condition 'Ventilation From Adjacent Room', the adjacent room from which the air is drawn.

### 4.3 Editing Room Data for a Set of Rooms

To edit Room Data for a set of rooms, first select the rooms by clicking in the model workspace or model browser. The rooms you have selected are known as the selection set.

Next click on 'Edit selection set custom attributes' on the edit toolbar. You can now edit the Room Data parameters for all the selected rooms simultaneously. To edit a parameter, first click on the appropriate check box on the left of the dialog, then enter a value. This value will be applied to all the selected rooms, overriding their Room Thermal Template values.

Note that the data displayed in grey for boxes that are un-ticked is default data and does not necessarily correspond to the data for any of the selected rooms. For the notional building in Part L2 2006 the edit group attribute button is disabled.

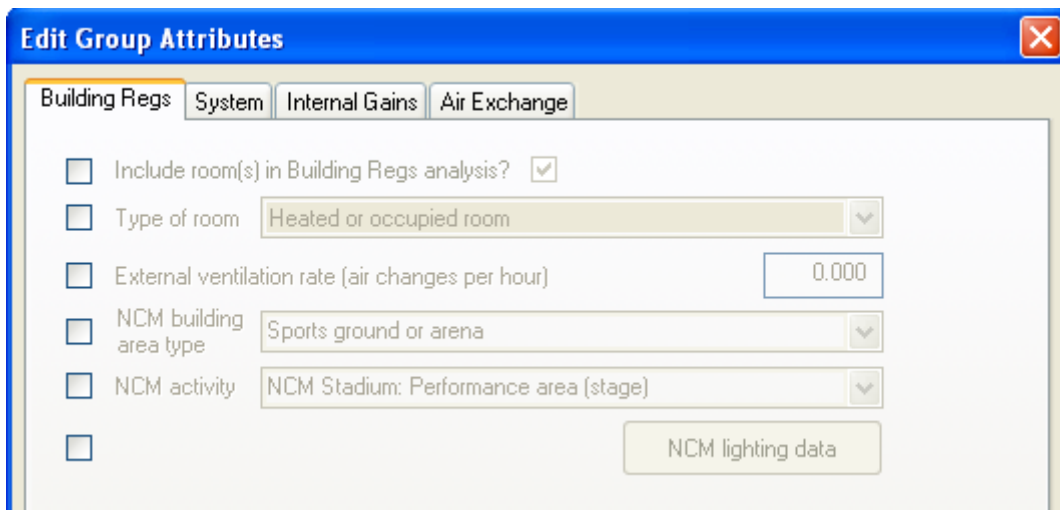

The 'Edit Group Attributes' dialog box has a blue title bar with a close button. It contains four tabs: 'Building Regs' (selected), 'System', 'Internal Gains', and 'Air Exchange'. Under the 'Building Regs' tab, there are several options with checkboxes on the left and input fields on the right:

- ☐ Include room(s) in Building Regs analysis? ☒ (checked)
- ☐ Type of room: Heated or occupied room (dropdown menu)
- ☐ External ventilation rate (air changes per hour): 0.000 (text input)
- ☐ NCM building area type: Sports ground or arena (dropdown menu)
- ☐ NCM activity: NCM Stadium: Performance area (stage) (dropdown menu)
- ☐ NCM lighting data (disabled button)

Edit Selection Set Custom Attributes dialog box

### 4.4 Assigning a Room Thermal Template to a Set of Rooms

Room Thermal Templates are created and edited in the Template Manager (accessed from the Templates menu on the VE toolbar). A Room Thermal Template contains a complete set of Room Data that can be applied to a room or a set of rooms in a single operation.

To assign a Room Thermal Template to a set of rooms, first select the rooms by clicking in the model workspace or model browser.

Next click on 'Assign Room Thermal Template to selection set' on the edit toolbar, select a Room Thermal Template from the list-box and click on OK. This will assign the Room Thermal Template to the selection set.

Note that if you edit the Room Thermal Template data in the Template Manager, your edits will immediately and automatically be applied to any rooms that use that template, without you having to reassign the template.



## 5 Apache Systems

### 5.1 What are Apache Systems?

Apache Systems allow you to describe the characteristics of systems supplying heating, domestic hot water, ventilation and air conditioning to rooms. The system specifications entered here are used for sizing central plant and calculating fuel consumption and carbon emissions.

### 5.2 Viewing and editing Apache Systems

Each room is assigned an Apache System on the Room Data System tab. (In the case of an unconditioned room, the system is set to 'None'). The system handles the room's heating, cooling and air conditioning needs in the modules ApacheCalc, ASHRAE Loads and ApacheSim.

An exception to this rule applies in ApacheSim when the room features in an ApacheHVAC system included in the simulation. In this case the ApacheHVAC system replaces the Apache System for the room in question.

The Apache Systems dialog allows you to create systems and set their properties. They can then be assigned to rooms, either in Room Data or indirectly via the assignment of room templates.

Currently all Apache Systems are given the system type 'Generic heating & cooling'. This provides a generic approach to modelling a variety of systems. In future, other specific types of system will be offered. The 'Generic heating & cooling' system provides, under the control of set points specified in Room Data, room units supplying heating, cooling, and optionally humidification and dehumidification to the room. In addition it allows a system air supply to be specified, characterised by a supply condition ('adjacent condition' setting) and a flow rate, which may be variable, specified in Room Data. Generic heating & cooling systems also handle any auxiliary ventilation air supplies set for rooms on the Room Data Air Exchange tab.

The Apache System generic heating and cooling model has three key parameters, which can be defined in summary as follows:

- SCoP – the efficiency of the heating system

- SSEER – the efficiency of the cooling system (if present)

- Auxiliary Energy Value – energy required for fans, pumps and controls

These are the most important parameters featuring in the calculation of the energy consumed by the space heating and cooling systems. Taken together with the fuels specified for heating and cooling, they encapsulate most of the important data about system performance in relation to carbon emissions.

On the Apache System dialog there are other parameters that are linked with the heating and cooling system efficiencies and do not represent independently editable settings. For example, the heating system's Generator seasonal efficiency and Heating delivery efficiency are linked to the SCoP by the relation

$$\text{SCoP} = \text{HEFF} * \text{HDE}$$



where the symbols have the following meanings:

HEFF – the heat generator seasonal efficiency

HDE – the heating delivery efficiency

so that in terms of carbon emissions HEFF and HDE can be viewed as secondary to SCoP.

On the cooling side an analogous relationship exists between SSEER and the following parameters:

SEER – the cooling system generator seasonal energy efficiency ratio

CDE – the cooling delivery efficiency, and

HRP – the heat rejection pump and fan power fraction

namely

$$\text{SSEER} = \text{SEER} * \text{CDE} / (1 + (\text{SEER} + 1) * \text{HRP})$$

In terms of carbon emissions SEER, CDE and HRP can thus be viewed as secondary to the SSEER.

Auxiliary energy value is a concept that has been developed in connection with the UK NCM methodology. This parameter indicates the power consumption of fans, pumps and controls associated with the space heating and cooling systems. It is expressed in terms of Watts per square metre of floor area served, and is incurred when the heating, cooling or ventilation systems are running. For certain types of system, the calculation of auxiliary energy also involves terms directly related to fan power associated with mechanical ventilation air supplies.

Parameters labelled in blue are autosized parameters calculated by the loads analysis program. The values of autosized parameters do not affect simulation performance or compliance/certification results. Buttons in the ASHRAE Loads and CIBSE Loads (ApacheCalc) dialogs allow these parameters to be re-zeroed or set back to the values they had before the last loads analysis.


A system data wizard that applies the UK National Calculation Methodology system information but is relevant worldwide can be used to select pre-built Apache Systems. Choices made in the wizard are interpreted into the variables required in the Apache Systems dialog. The SBEM route will show a reduced data set in the Apache Systems dialog.

A domestic hot water (DHW) dialog allows input for delivery efficiency, details on storage and secondary circulation, and the option of using a renewable system in the form of solar water heating.

### 5.2.1 Apache Systems dialog

The dialog can be accessed by clicking on the icon “Apache Systems” or choosing from the “Edit”-menu when using the Apache or the <VE>Compliance module.



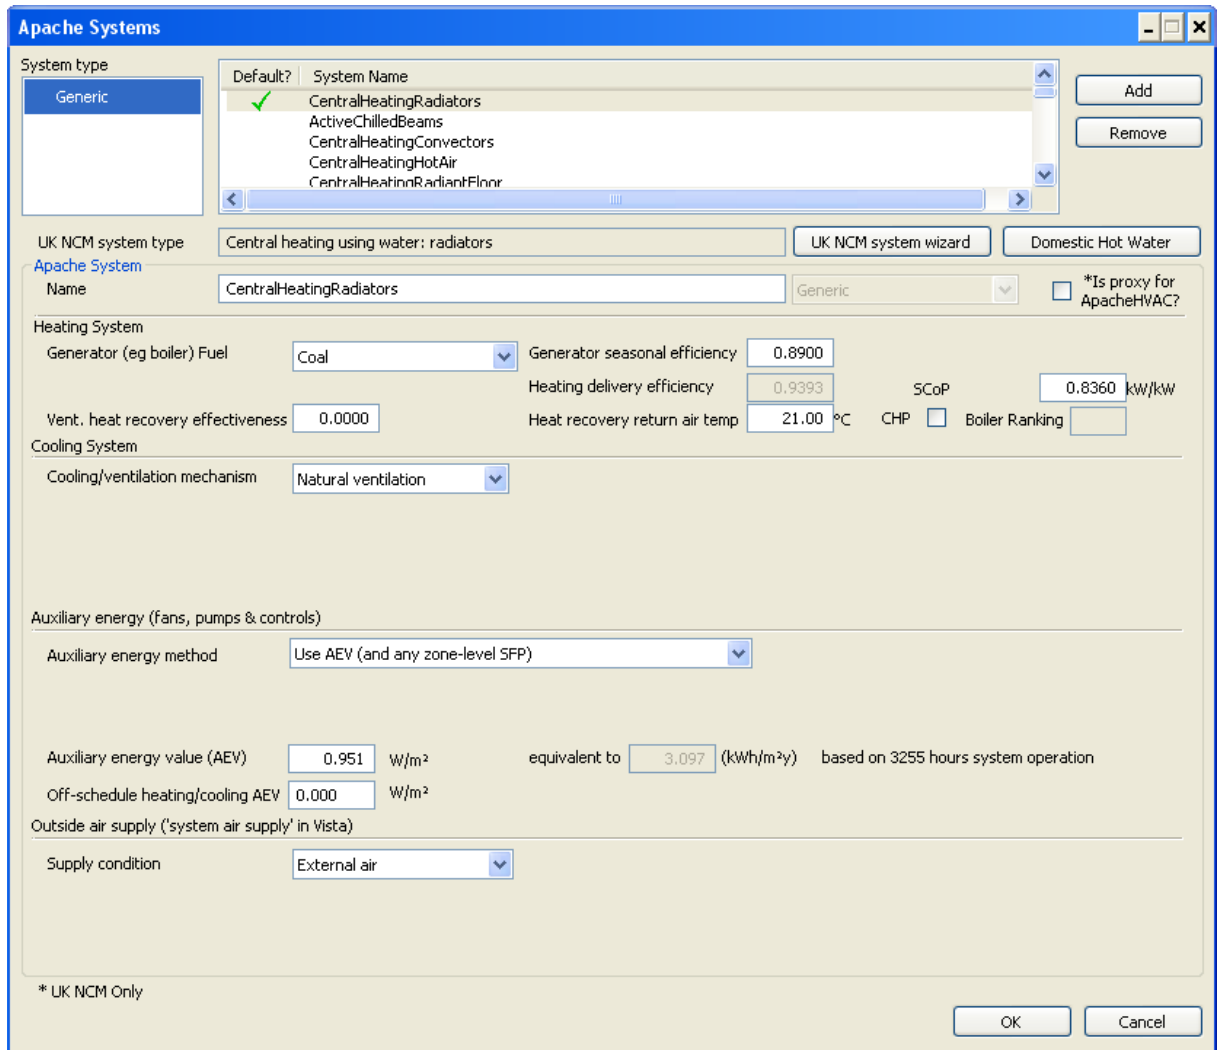

**Apache Systems**

System type: **Generic**

Default? System Name

- ✓ CentralHeatingRadiators
- ActiveChilledBeams
- CentralHeatingConvectors
- CentralHeatingHotAir
- CentralHeatingRadiantFloor

UK NCM system type: Central heating using water: radiators

Apache System Name: CentralHeatingRadiators

Heating System

Generator (eg boiler) Fuel: Coal

Generator seasonal efficiency: 0.8900

Heating delivery efficiency: 0.9393

Vent. heat recovery effectiveness: 0.0000

Heat recovery return air temp: 21.00 °C

SCoP: 0.8360 kW/kW

CHP: ☐ Boiler Ranking: ☐

Cooling System

Cooling/ventilation mechanism: Natural ventilation

Auxiliary energy (fans, pumps & controls)

Auxiliary energy method: Use AEV (and any zone-level SFP)

Auxiliary energy value (AEV): 0.951 W/m²

equivalent to: 3.097 (kWh/m²y) based on 3255 hours system operation

Off-schedule heating/cooling AEV: 0.000 W/m²

Outside air supply ('system air supply' in Vista)

Supply condition: External air

\* UK NCM Only

OK Cancel

Apache Systems for are shown for the currently selected building - Actual, Notional, Reference or Typical. For the *benchmark buildings* (the Notional, Reference and Typical buildings) the systems are created automatically and may not be edited.

Two lists appear at the top of the Apache System dialog:

#### System type

This selector relates to the way Apache Systems are handled in room templates, where only the type of system, rather than a specific system, may be imported from another project. When you click on a system type, a tick is displayed in the 'Default?' column against one of the Apache Systems listed in the system list to the right. This indicates the system which the Template Manager will assign by default to imported room templates having the selected system type.

One type of Apache System is currently offered: 'Generic heating & cooling'.

#### System name

This box displays a list of Apache Systems in the model. You can add further systems using the Add button and remove them (if they are not in use) using the Remove button. The properties of the currently selected system are displayed in the dialog area labelled Apache System.

A tick in the 'Default?' column, which should be interpreted in relation to the System type highlighted in the list at the top-left of the dialog, indicates that the system will be assigned by default to rooms for which the room template has that system type. You can change the default system for the selected type by double clicking in the 'Default?' column. This will have the effect of changing the system assigned to any rooms with templates having the selected system type. This system assignment may be overridden, like other template assignments, in Room Data.

The dialog area labelled Apache System displays the properties of the currently selected system and allows them to be edited. Boxes labelled in blue represent autosized parameters calculated by the loads analysis program. The values of autosized parameters do not affect simulation performance or compliance/certification results. They may not be edited in this dialog. They may, however, be reset to zero or wound back to the values applying before the last loads analysis using options on the ASHRAE Loads or ApacheCalc dialogues.

#### *UK NCM system type:*

The type of system chosen in the UK NCM system data wizard

#### *UK NCM system data wizard:*

This button launches the system data wizard that aids users in filling out the variables required by the Apache Systems dialog. Refer to section 6 of this user guide for more details.

#### *Domestic Hot Water:*

This button launches a dialog interfacing the parameters for the DHW system. Refer to the section 7 for further detail.

#### *Apache System – general data:*

Name

Insert a suitable description.

System type

The type of system. This is currently limited to 'Generic'.

Is proxy for ApacheHVAC?

Tick this box if the Apache System is a proxy for an ApacheHVAC system. Where an ApacheHVAC system is used in the Actual building, an Apache system must be created as a proxy for this system for the purpose of certain regulatory checks. The proxy system data is not used in the Apache analysis, is passed to the Building Regulations compliance or Energy Performance Certificate software. The proxy Apache System must be assigned to all the rooms that are served by the ApacheHVAC system, and to no other rooms.

*Heating system:*

Generator (eg boiler) Fuel

The fuel supplying the heating system. This setting is used to total fuel consumptions and determine carbon emissions.

Generator seasonal efficiency

The seasonal efficiency of the boiler or other heat source.

Heating system: Heating delivery efficiency

Efficiency of delivering the heating energy to the room.

Heating system: SCoP

The seasonal coefficient of performance of the entire heating system.

Ventilation heat recovery effectiveness

The net efficiency of a generic sensible heat recovery device. If the recovery effectiveness is set to zero no heat is recovered. The magnitude of the heat recovery is established from the system air flow rate and the heat recovery return air temperature.

Heat recovery return air temperature

The return air temperature for the heat recovery device.

CHP

Tick this box to specify that the system can receive heat input from the building's CHP plant, if it has one (see Section 8). If no CHP has been defined for the building, this setting is ignored. CHP is also ignored for a Loads analysis.

Boiler Ranking

If there is a CHP system, the *Boiler Ranking* defines the sequence in which different heating systems will be switched in to make up any shortfall in the heat provided by the CHP system. Boilers with low *Boiler Ranking* will be switched on first. These will normally be the most efficient. Where two boilers have the same Boiler Ranking the CHP plant will contribute the same fraction of the heating load for both systems.

*Cooling system:*

#### Cooling/ventilation mechanism

The mechanism for cooling and ventilation. Select Air conditioning, Mechanical ventilation or Natural ventilation. This setting determines the options available for the calculation of auxiliary energy, and categorizes the system for UK compliance and certification. When Mechanical Ventilation is selected, the rooms receiving mechanical ventilation should be indicated at room level on the Room Data System tab, under the heading 'Ventilation & exhaust'.

#### Generator (eg chiller) fuel

The fuel supplying the cooling system – most commonly electricity. This setting is used to total fuel consumptions and determine carbon emissions.

#### Generator nominal EER

The Energy Efficiency Ratio of the chiller or other cold source generator working at design capacity

#### Generator seasonal EER

The manufacturers stated seasonal Energy Efficiency Ratio. Usually descriptive of the EER at maximum operating efficiency.

#### Generator SEER

The seasonal Energy Efficiency Ratio of the chiller or other cold source generator.

#### Heat rejection pump & fan power

Heat rejection pump and fan power, expressed as a percentage of chiller load.

#### Cooling delivery efficiency

Efficiency of delivering the cooling energy to the room

#### SSEER

The system seasonal energy efficiency ratio of the chiller or other cold source generator plus the heat rejection pumps and fans.

#### Changeover Mixed Mode free cooling mechanism

This parameter is only required for UK regulations compliance and certification. For a changeover mixed mode system, indicate whether the free cooling is achieved by natural or mechanical ventilation. If the system is not a changeover mixed mode system, use the setting 'Not a CMM system'.

#### Absorption chiller

Absorption chillers can be specified as part of a CHCP system (Combined Heat, Cooling and Power).

A CHCP unit provides heating, cooling and electrical power in varying proportions as dictated by the needs of the building and the control strategy. When a chiller is defined as an absorption chiller it is assumed to create a load on the heating system boiler circuit. This may in turn be supplied by heat from the CHP plant.

When a system has the cooling/ventilation mechanism set to air conditioning the option to define an absorption chiller is available on the cooling frame. When this is selected the heating frame gives the option to define a CHCP system.

#### *Auxiliary energy (fans, pumps & controls):*

#### Auxiliary energy method

Select a method for the calculation of auxiliary energy. The options are:

Use SFPs – this method is stipulated for use by mechanically ventilated systems in the UK compliance/certification benchmark buildings, and has limited application elsewhere.

Use SFPs, subject to minimum set by AEV – this method is stipulated for use by mechanically ventilated systems in the UK compliance/certification benchmark buildings, and has limited application elsewhere.

Use SFPs and AEV – sum contributions from explicitly calculated fan power, using SFPs defined at both system and room level, and a term calculated from the auxiliary energy value. This option is appropriate when there are fixed and ventilation-dependent auxiliary contributions.

Use AEV (and any zone-level SFP) – calculate auxiliary energy from the AEV, and add in contributions from any ventilation specified at room level, using the room SFP parameters. This is the default, and the recommended method for UK compliance/certification analyses using the UK NCM system data wizard.

Note: Depending on the choice made here the following available options will be adjusted.

**System specific fan power (only displayed for certain auxiliary energy methods)**

The specific fan power (SFP) for the system. This is the power consumption of the system fans for each L/s of air supplied to the rooms by the system, including by means of auxiliary ventilation. For mechanically ventilated systems, the SFP contribution to auxiliary energy may be accounted for *either* at system level, using this parameter, *or* at room level, using the SFPs defined in Room Data.

**Air supply mechanism (only available if Cooling/vent. Mechanism under Cooling System is other than 'Natural ventilation')**

This parameter is only required for UK regulations compliance and certification.

Select the appropriate mechanism from the given options covering centralised, zonal and local systems.

**Auxiliary energy value (only available if AEV has been selected)**

Energy use of fans, pumps and controls, expressed per unit floor area. Auxiliary energy consumption is calculated from this parameter at times when there is a load on the system.

**Equivalent to**

The auxiliary energy value expressed in units of energy per unit floor area per year, normalised to a basis of 3255 hours of operation per year. This parameter is uneditable.

**Off-schedule heating/cooling AEV**

The auxiliary energy value

***Outside air supply ('system air supply' in Vista):***

**Supply condition**

The condition of the air supplied by the system to the rooms. Select External air or Temperature from profile. In the latter case, specify an absolute profile defining the variation of the supply air temperature.

When settings derived from the NCM System Wizard are used, the supply condition should be set to 'External air' for consistency with the underlying methodology.



## 6 UK NCM System Data Wizard

### 6.1 What is the UK NCM System Data Wizard?

This utility allows you to describe the characteristics of heating, ventilating and air conditioning systems using the method implemented in the BRE Simplified Building Energy Model (SBEM). It was developed for use in compliance testing for UK Building Regulations Part L2 (2006), but can also be applied more widely. The system specifications entered here are interpreted into Apache Systems, where they are used for sizing central plant and calculating fuel consumption and carbon emissions. They are suitable for use in Building Regulations compliance tests, ApacheSim, ASHRAE Loads and ApacheCalc.

### 6.2 Using the UK NCM System Data Wizard

The wizard is accessed using the 'UK NCM system data wizard' button on the Apache Systems dialog. The following NCM system types are available for selection:

---

GENERIC Heating only - Electric resistance  
 GENERIC Heating only - other systems  
 GENERIC Heating and mechanical cooling  
 Central heating using water: radiators  
 Central heating using water: convectors  
 Central heating using water: floor heating  
 Central heating using air distribution  
 Other local room heater - fanned  
 Other local room heater - unfanned  
 Unflued radiant heater  
 Flued radiant heater  
 Multiburner radiant heaters  
 Flued forced-convection air heaters  
 Unflued forced-convection air heaters  
 Single-duct VAV  
 Dual-duct VAV  
 Indoor packaged cabinet (VAV)  
 Fan coil systems  
 Induction system  
 Constant volume system (fixed fresh air rate)  
 Constant volume system (variable fresh air rate)  
 Multizone (hot deck/cold deck)  
 Terminal reheat (constant volume)  
 Dual duct (constant volume)  
 Chilled ceilings or passive chilled beams and displacement ventilation  
 Active chilled beams  
 Water loop heat pump  
 Split or multi-split system  
 Single room cooling system

The five tabs of the UK NCM system data wizard define different aspects of system performance. Each tab is enabled only when relevant to the chosen system type. For example for the type 'Central heating using water: radiators' the Cooling system tab will not be editable.

The UK NCM system data wizard translates the inputs into the following parameters which are displayed at the bottom of the wizard and passed back to the Apache Systems:



Heating SCoP  
Cooling SSEER  
Auxiliary Energy Value

Where appropriate, heat recovery information is also transferred to the selected Apache System.


The system types appearing at the top of the list that involve heating only, and do not specify a ventilation mechanism, are assumed by default to be served by mechanical ventilation. In cases where the building is naturally ventilated, this should be specified on the Apache Systems dialog using the 'Cooling/ventilation mechanism' setting.

The following additional guidance is provided in the SBEM documentation, and applies to the analogous settings in the UK NCM system data wizard:

The system type selected in the General sub-tab automatically brings with it some assumptions. For example, whether mechanical ventilation is an integral part of the system and the degree of local time and temperature control that is (or can be provided). The majority of system types used in UK buildings can be found in the system type drop down box. However, there are a few systems which require further guidance:

- VRF Systems have been removed, for these systems select 'split or multisplit system' – you will need to define a suitable efficiency. Multisplit is suitable for use with VRF as it is essentially a type of split/multisplit system. If these systems have additional mechanical ventilation, then this mechanical ventilation rate should now be selected at zone level with a suitable ventilation SFP.
- If Chilled ceiling is selected, the default assumption is that there is displacement ventilation
- Chilled ceiling with no mechanical ventilation – select 'Chilled ceilings or passive chilled beams and displacement ventilation' and then set the specific fan power to zero.
- Chilled ceiling with mixing ventilation – select 'Chilled ceilings or passive chilled beams and displacement ventilation' and then use twice the actual specific fan power in order to capture the effect of the higher ventilation rate.

## 6.2.1 Heating system

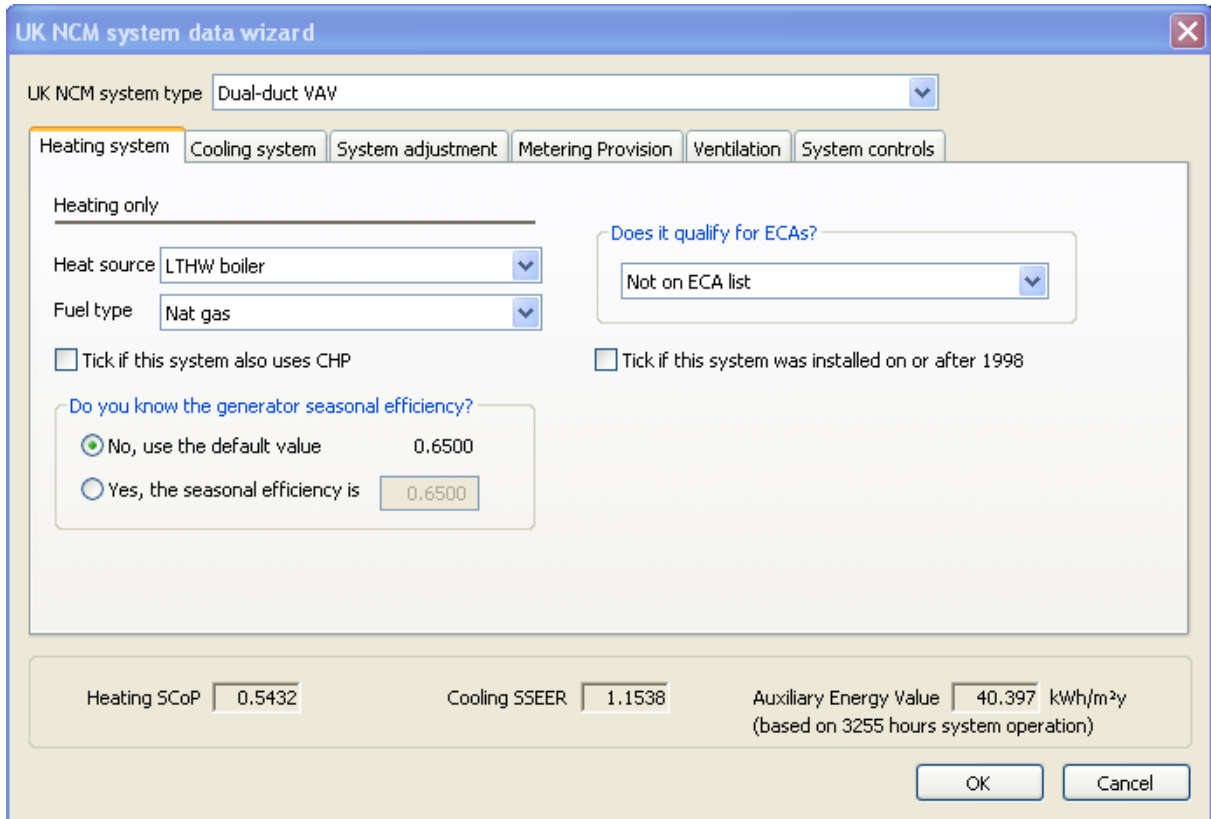

The image shows a software dialog box titled "UK NCM system data wizard". It has a tabbed interface with tabs for "Heating system", "Cooling system", "System adjustment", "Metering Provision", "Ventilation", and "System controls". The "Heating system" tab is active. At the top, there is a dropdown menu for "UK NCM system type" set to "Dual-duct VAV". Below the tabs, the "Heating only" section contains several input fields: "Heat source" (LTHW boiler), "Fuel type" (Nat gas), a checkbox for "Tick if this system also uses CHP", and a section for "Does it qualify for ECAs?" with a dropdown set to "Not on ECA list". There is also a checkbox for "Tick if this system was installed on or after 1998". A section titled "Do you know the generator seasonal efficiency?" has two radio buttons: "No, use the default value" (selected) and "Yes, the seasonal efficiency is" (with a text input field containing 0.6500). At the bottom, there are three text boxes showing calculated values: "Heating SCoP" (0.5432), "Cooling SSEER" (1.1538), and "Auxiliary Energy Value" (40.397 kWh/m²y, based on 3255 hours system operation). "OK" and "Cancel" buttons are at the bottom right.

UK NCM system data wizard dialog box: Heating system

### Heat source

Type of heat generator (eg boiler) used in the system.

### Fuel type

Fuel used by the heat generator chosen for the system.

### Tick if this system also uses CHP

Tick to use a CHP system as the base load for this heating system.

### Generator seasonal efficiency

Enter the seasonal efficiency of the heat generator if known. Accept the default if not known.


### Does it qualify for ECAs?

Indicate whether the generator qualifies for ECAs (Enhanced Capital Allowances). Generators on the ECA list can be expected to have improved efficiencies, and this is reflected in the default seasonal efficiency value.

### Was it installed on or after 1998?

This affects the default seasonal efficiency.

## 6.2.2 Cooling system:

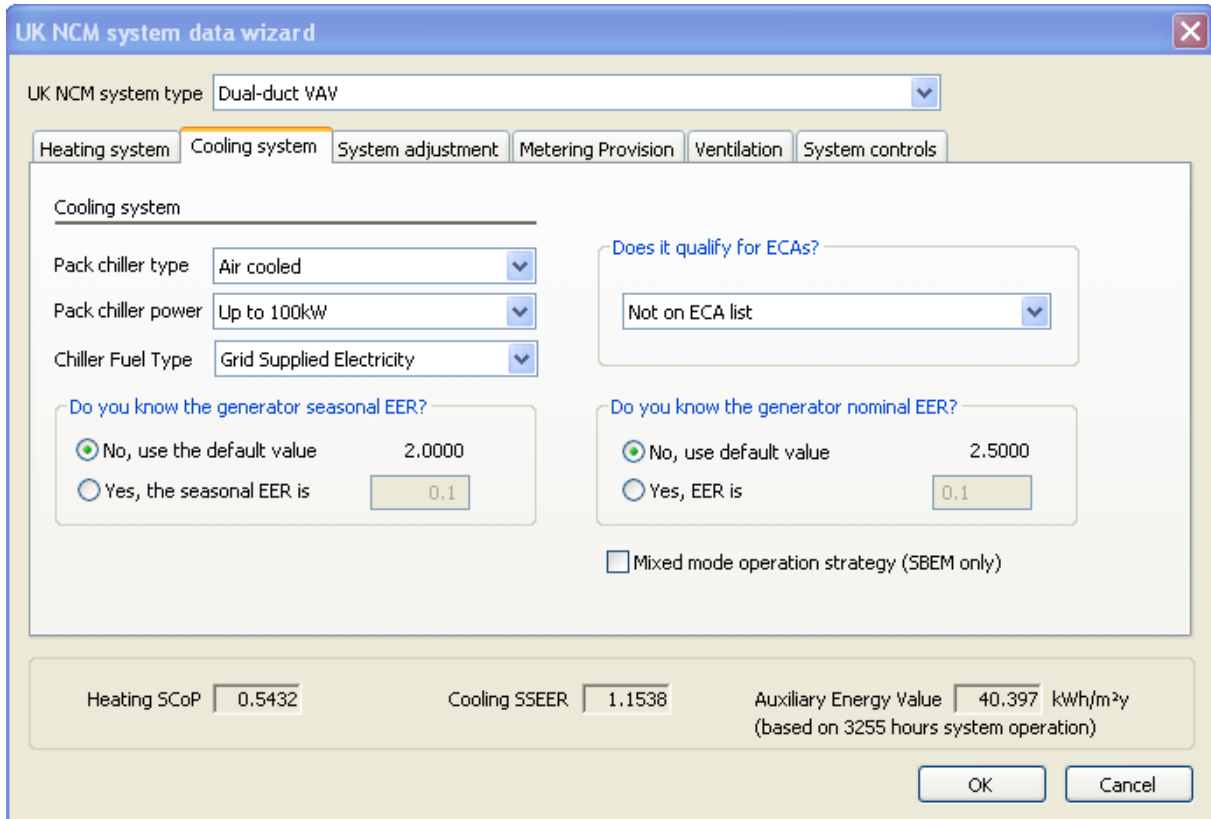

The image shows a software dialog box titled "UK NCM system data wizard". It has a tabbed interface with tabs for "Heating system", "Cooling system", "System adjustment", "Metering Provision", "Ventilation", and "System controls". The "Cooling system" tab is active. Inside this tab, there are several input fields and checkboxes. "Pack chiller type" is set to "Air cooled", "Pack chiller power" is "Up to 100kW", and "Chiller Fuel Type" is "Grid Supplied Electricity". There are two sections for EER values: "Does it qualify for ECAs?" with a dropdown set to "Not on ECA list", and "Do you know the generator seasonal EER?" and "Do you know the generator nominal EER?" both with radio buttons for "No, use the default value" (2.0000 and 2.5000 respectively) and "Yes, the seasonal EER is" (0.1). A checkbox for "Mixed mode operation strategy (SBEM only)" is present. At the bottom, there are three read-only fields: "Heating SCoP" (0.5432), "Cooling SSEER" (1.1538), and "Auxiliary Energy Value" (40.397 kWh/m²y). "OK" and "Cancel" buttons are at the bottom right.

UK NCM system data wizard dialog box: Cooling system

### Pack chiller type

Type of cold generator (eg chiller) used in the system.

### Pack chiller power

Choose the size of the cold generator chosen for the system.

### Chiller Fuel Type

Only grid supplied electricity will be available unless one of the heat pump options is selected.

### Generator seasonal Energy Efficiency Ratio (SEER)

Enter the SEER of the heat generator if known. Accept the default if not known.

### Does it qualify for ECAs?

Indicate whether the generator qualifies for ECAs (Enhanced Capital Allowances). Generators on the ECA list can be expected to have improved efficiencies, and this is reflected in the default seasonal efficiency value.


### Generator nominal Energy Efficiency Ratio (EER)

Enter the nominal EER of the heat generator if known. Accept the default if not known.

### SBEM (only) : Mixed mode operation strategy

Tick on if a mixed mode operation strategy is in use. This applies to SBEM only.

### 6.2.3 System adjustment:

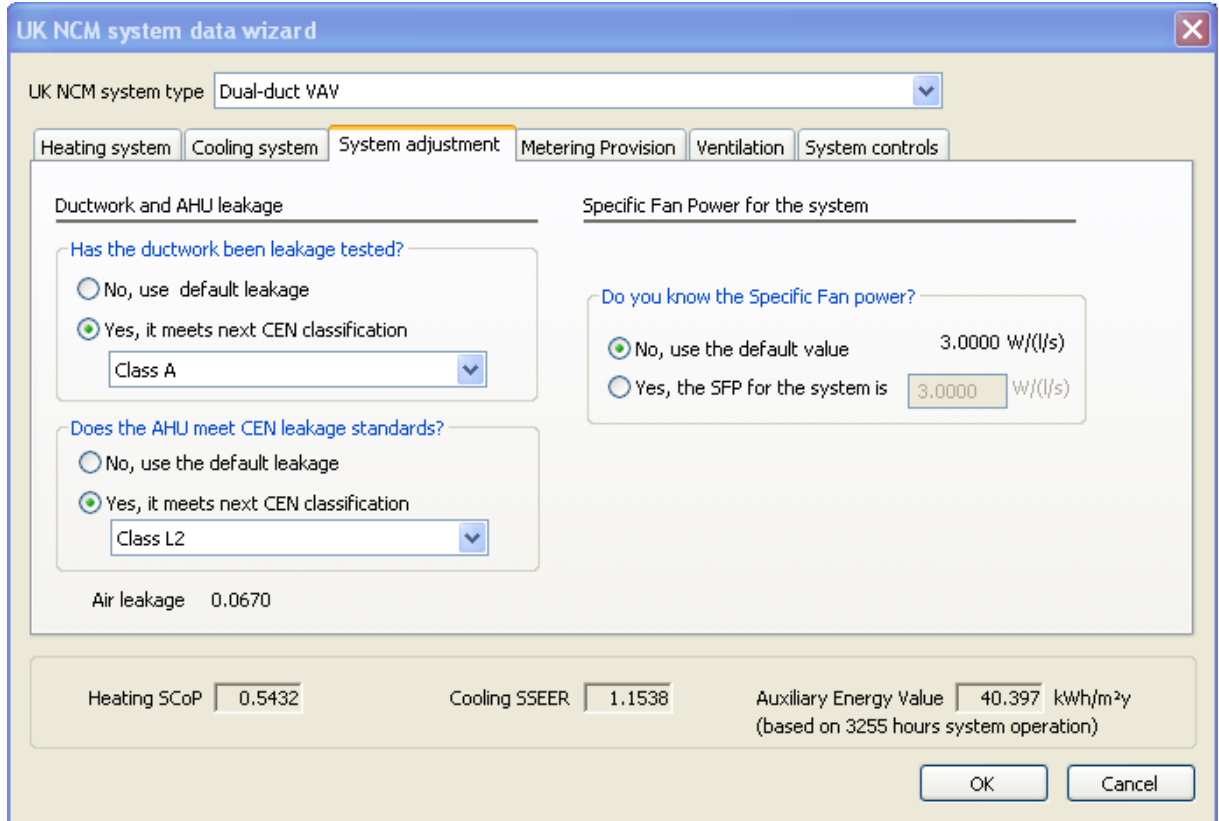

The image shows a software dialog box titled "UK NCM system data wizard". It has a tabbed interface with tabs for "Heating system", "Cooling system", "System adjustment" (which is active), "Metering Provision", "Ventilation", and "System controls".

At the top, "UK NCM system type" is set to "Dual-duct VAV".

The "System adjustment" tab contains two main sections:

- Ductwork and AHU leakage:**
  - Has the ductwork been leakage tested?**
    - ☐ No, use default leakage
    - ☒ Yes, it meets next CEN classification. Below this is a dropdown menu showing "Class A".
  - Does the AHU meet CEN leakage standards?**
    - ☐ No, use the default leakage
    - ☒ Yes, it meets next CEN classification. Below this is a dropdown menu showing "Class L2".

Air leakage 0.0670
- Specific Fan Power for the system:**
  - Do you know the Specific Fan power?**
    - ☒ No, use the default value 3.0000 W/(l/s)
    - ☐ Yes, the SFP for the system is 3.0000 W/(l/s)

At the bottom of the dialog, there are three input fields for calculated values:

- Heating SCOP: 0.5432
- Cooling SSEER: 1.1538
- Auxiliary Energy Value: 40.397 kWh/m²y (based on 3255 hours system operation)

Buttons for "OK" and "Cancel" are at the bottom right.

UK NCM system data wizard dialog box: System adjustment


#### Ductwork and AHU leakage

Specify the AHU and Ductwork leakage standards for the system.

#### Specific Fan Power for the system

Choose the specific fan power for the system. Note: the default value does not comply with the 2006 building regulations and should not be used for new buildings.

## 6.2.4 Metering Provision (Control corrections)

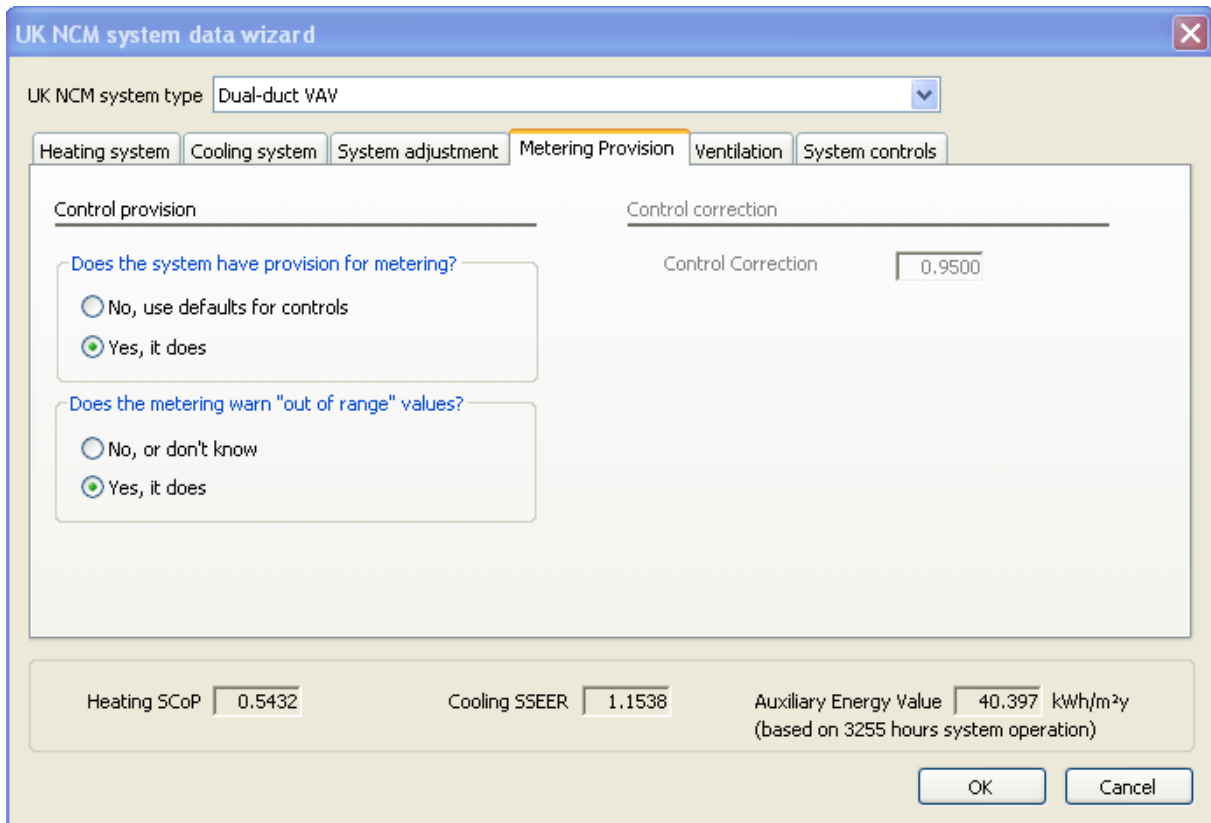

The image shows a software dialog box titled "UK NCM system data wizard". At the top, there is a dropdown menu for "UK NCM system type" set to "Dual-duct VAV". Below this are several tabs: "Heating system", "Cooling system", "System adjustment", "Metering Provision" (which is selected and highlighted), "Ventilation", and "System controls".

The "Metering Provision" tab is divided into two sections:

- Control provision:** Contains two questions with radio button options:
  - "Does the system have provision for metering?" with options "No, use defaults for controls" and "Yes, it does" (selected).
  - "Does the metering warn 'out of range' values?" with options "No, or don't know" and "Yes, it does" (selected).
- Control correction:** Contains a text field labeled "Control Correction" with the value "0.9500".

At the bottom of the dialog, there are three data fields: "Heating SCoP" with value "0.5432", "Cooling SSEER" with value "1.1538", and "Auxiliary Energy Value" with value "40.397 kWh/m²y (based on 3255 hours system operation)". At the bottom right are "OK" and "Cancel" buttons.

UK NCM system data wizard dialog box: Metering Provision


### Control provision

Choose whether the system has metering provision and whether the metering can warn about "out of range values".

### Control correction

The used Control Correction factor is displayed here, according to the settings under Control provision

## 6.2.5 Ventilation

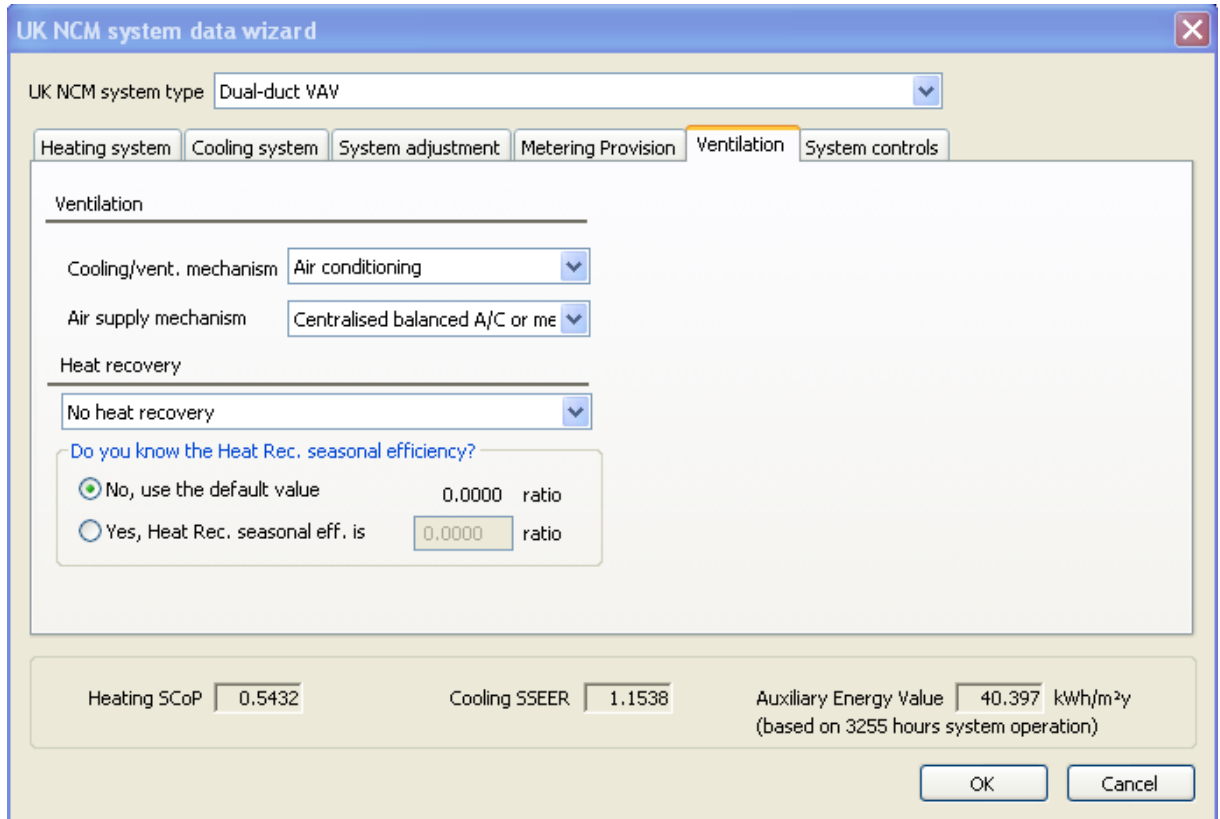

The image shows a software dialog box titled "UK NCM system data wizard". It has a blue title bar with a close button. Below the title bar, there is a dropdown menu for "UK NCM system type" set to "Dual-duct VAV". Below this are several tabs: "Heating system", "Cooling system", "System adjustment", "Metering Provision", "Ventilation" (which is selected and highlighted in orange), and "System controls". The "Ventilation" tab contains the following fields:

- Ventilation** (Section Header)
- Cooling/vent. mechanism**: A dropdown menu set to "Air conditioning".
- Air supply mechanism**: A dropdown menu set to "Centralised balanced A/C or me".
- Heat recovery** (Section Header)
- No heat recovery**: A dropdown menu set to "No heat recovery".
- Do you know the Heat Rec. seasonal efficiency?**: A question with two radio button options:
  - ☒ No, use the default value: 0.0000 ratio
  - ☐ Yes, Heat Rec. seasonal eff. is: 0.0000 ratio

At the bottom of the dialog box, there are three text boxes showing calculated values:

- Heating SCoP: 0.5432
- Cooling SSEER: 1.1538
- Auxiliary Energy Value: 40.397 kWh/m²y (based on 3255 hours system operation)

At the bottom right, there are "OK" and "Cancel" buttons.

UK NCM system data wizard dialog box: Ventilation

### Ventilation

Available cooling/ventilation mechanisms include

- Air conditioning
- Mechanical ventilation and
- Natural ventilation.

However, depending on the selected system type, not all options are available.

For example, if a system type has been selected that allows for a cooling system (Cooling system – tab has been activated), cooling/ventilation mechanism can only be set to Air conditioning.

For those systems the Cooling system tab has not been activated, the user can select between Mechanical and Natural ventilation.

Select the Air supply mechanism from the drop-down list. Note: This option is only available for Cooling/Vent. mechanisms other than Natural ventilation.

### Heat recovery

Indicate the type of heat recovery used in the system (if any). Is the Heat recovery seasonal efficiency is known, it can be specified here. A default value is used otherwise.


## 7 Domestic Hot Water Data Wizard

### 7.1 What is the Domestic Hot Water Data Wizard?

This utility allows you to describe the characteristics of the domestic hot water heating systems including definition of any solar water heating system. This approach is suitable for use in Building Regulations compliance tests, ApacheSim, ASHRAE Loads and ApacheCalc.

### 7.2 Using the Domestic Hot Water Data Dialog

The dialog is accessed using the 'Domestic Hot Water' button on the Apache Systems dialog. The dialog differs dependant upon view; the required parameters to describe the DHW and Solar water heating system are different for ApacheSim and SBEM. For further detail of the DHW heating models refer to the Renewables Calculation Methods manual. The two dialogs are shown below:

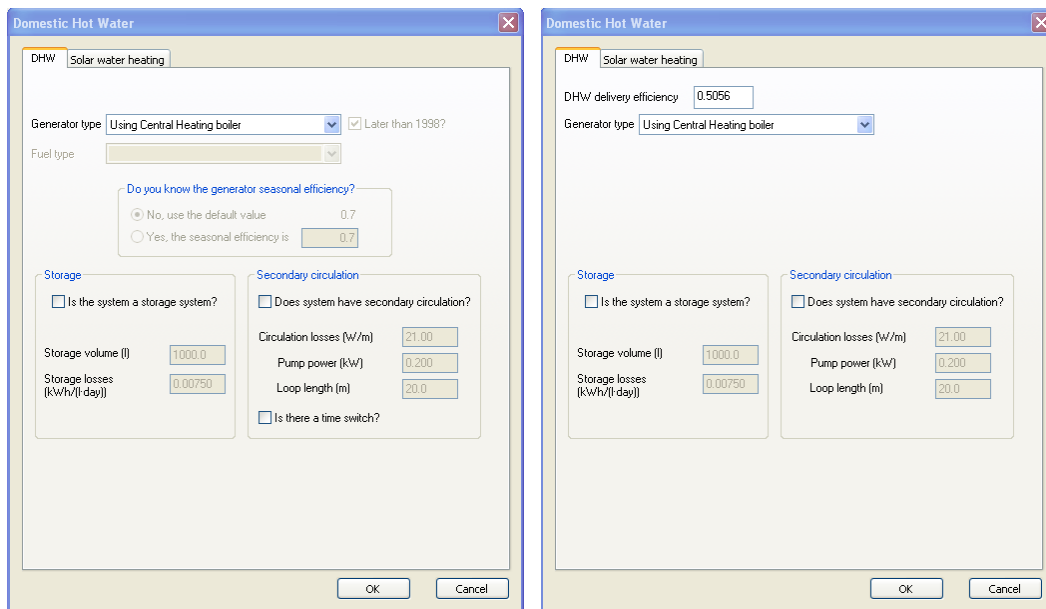

DHW: SBEM mode

DHW: ApacheSim mode

#### 7.2.1 DHW delivery efficiency

Efficiency of the delivery of Domestic Hot Water, expressed as a percentage. Heat is lost from the pipes carrying hot water from the boiler (or other heat generator) to the taps, and the resulting cooling means that a certain volume of water has to be run off before hot water reaches the outlet. The delivery efficiency accounts for this process. If secondary circulation is used the DHW delivery efficiency should be set to 100%, as the pipe heat loss is accounted for elsewhere.

#### 7.2.2 Generator type

Choose the DHW generator type from the list.



### 7.2.3 Later than 1998 (SBEM only)

Tick box if the DHW system is installed after 1998

### 7.2.4 Fuel Type (SBEM only)

Choose DHW fuel type.

### 7.2.5 DHW Generator seasonal efficiency (SBEM only)

Accept the default efficiency for the DHW generator or enter manufacturers data.

### 7.2.6 Storage

#### 7.2.6.1 Is the system a storage system?

Tick this box if the hot water system has a storage tank.

#### 7.2.6.1 Storage volume

The volume of the DHW storage tank (L). This is used to calculate tank losses.

#### 7.2.6.1 Storage losses

The DHW storage tank loss factor (kWh/l/day). This is used, with the preceding parameter, to calculate tank losses.

The following tables from SAP (2005) may be helpful in setting this parameter.

Table 2: Hot water storage loss factor (kWh/(l.day)

Insulation thickness (mm)	Cylinder loss factor (L) kWh/(l.day)	
	Factory insulated cylinder	Loose jacket
0	0.1425	0.1425
12	0.0394	0.0760
25	0.0240	0.0516
35	0.0191	0.0418
38	0.0181	0.0396
50	0.0152	0.0330
80	0.0115	0.0240
120	0.0094	0.0183
160	0.0084	0.0152

Note: Alternatively the heat loss factor, L, may be calculated for insulation thickness of t mm as follows:

1) Cylinder, loose jacket  $L = 0.005 + 1.76/(t + 12.8)$

2) Cylinder, factory insulated  $L = 0.005 + 0.55/(t + 4.0)$

Table 2a: Volume factor for cylinders and storage combis

Volume $V_c$	Volume Factor VF	Volume $V_c$	Volume Factor VF
40	1.442	180	0.874
60	1.259	200	0.843
80	1.145	220	0.817
100	1.063	240	0.794
120	1.000	260	0.773

<b>140</b>	<b>0.950</b>	<b>280</b>	<b>0.754</b>
<b>160</b>	<b>0.908</b>		

When using the data in Table 2, the loss is to be multiplied by the volume factor.

2) Alternatively, the volume factor can be calculated using the equation

$$VF = (120 / V_c)^{1/3}$$

Where:

$V_c$  – volume of cylinder or storage, litres

## 7.2.7 Secondary Circulation

### 7.2.6.1 Does the system have secondary circulation?

Tick this box if the hot water system has secondary circulation. A secondary circulation system pumps water continuously round a circuit connecting the heat source to the outlets to provide instant hot water.

### 7.2.6.1 Circulation Losses

The loss factor of the secondary circulation system, per unit length of pipework (W/m).

### 7.2.6.1 Pump Power


The rated power of the secondary system pump (kW).

### 7.2.6.1 Loop Length

The length of the secondary circulation system (m).

## 7.3 Solar Water Heating

Solar water heating is described in a simplistic way for SBEM but with more detail in ApacheSim.

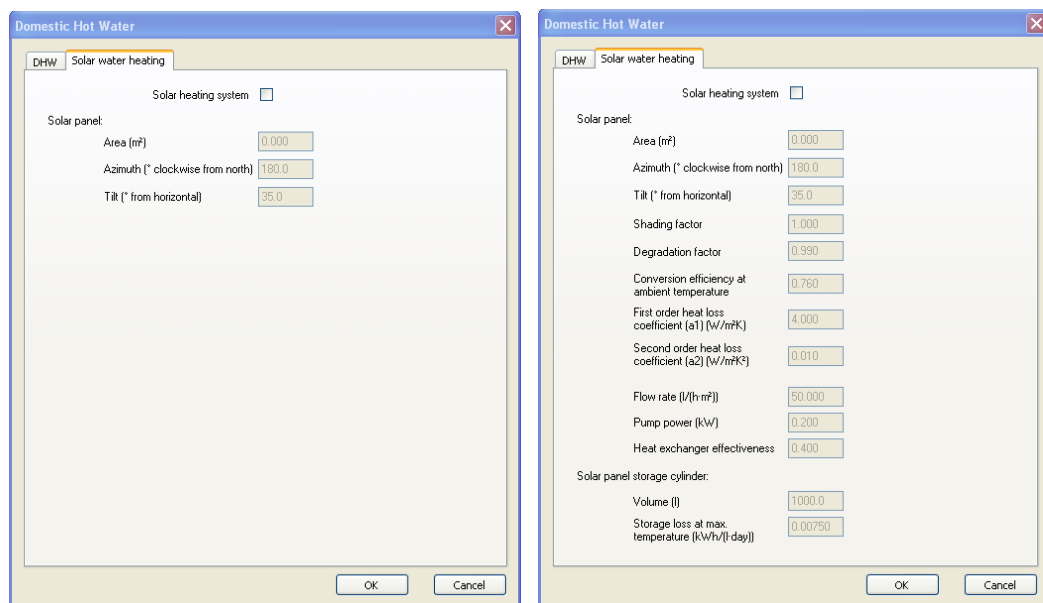

**Domestic Hot Water - SBEM mode**

Solar heating system ☐

Solar panel:

Area (m²)

Azimuth (" clockwise from north)

Tilt (" from horizontal)

**Domestic Hot Water - ApacheSim mode**

Solar heating system ☐

Solar panel:

Area (m²)

Azimuth (" clockwise from north)

Tilt (" from horizontal)

Shading factor

Degradation factor

Conversion efficiency at ambient temperature

First order heat loss coefficient (a1) (W/m²K)

Second order heat loss coefficient (a2) (W/m²K²)

Flow rate (l/h m²)

Pump power (kW)

Heat exchanger effectiveness

Solar panel storage cylinder:

Volume (l)

Storage loss at max. temperature (kWh/(l day))

Solar water heating: SBEM mode

Solar water heating: ApacheSim mode

### 7.3.1 Solar heating system

Tick this box to indicate the existence of a solar water heating system.

### 7.3.2 Solar Panel

#### 7.2.6.1 Area

Aperture area of the solar panel ( $\text{m}^2$ ).

#### 7.2.6.1 Azimuth

Panel azimuth angle in degrees clockwise from north.

#### 7.2.6.1 Tilt

Panel tilt angle in degrees from horizontal.

#### 7.2.6.1 Shading factor

If the solar panel is shaded by buildings or other objects the average shading effect can be modelled by reducing the shading factor from the default value of 1.

#### 7.2.6.1 Degradation factor

This factor accounts for the effects of soiling and aging of the panel.

#### 7.2.6.1 Conversion efficiency at ambient temperature ( $\eta_0$ )

#### 7.2.6.1 First order heat loss coefficient ( $a_1$ )

#### 7.2.6.1 Second order heat loss coefficient ( $a_2$ )

Data on solar panels expresses the performance of the device in terms of a conversion efficiency at ambient temperature,  $\eta_0$ , and two heat loss coefficients,  $a_1$  and  $a_2$ . The heat output of the device is written in terms of these coefficients by the equation

$$W = \eta_0 I - a_1(T - T_a) - a_2(T - T_a)^2$$

where

$W$  is the heat output per unit panel area

$I$  is the incident solar irradiance (after allowing for shading and degradation)

$T$  is the panel temperature, and

$T_a$  is the outside air temperature.

Values for  $\eta_0$ ,  $a_1$  and  $a_2$  are available from solar panel manufacturers.

#### 7.2.6.1 Flow rate

The fluid flow rate through the solar panel, expressed per unit panel area. A figure of 50  $\text{l}/(\text{h} \cdot \text{m}^2)$  is typical.

#### 7.2.6.1 Pump power

The rated power of the pump within the solar water heating system.

#### 7.2.6.1 Heat exchanger effectiveness

The model assumes the storage tank is heated from the collector loop by a heat exchanger of some kind, either an internal coil or an external exchanger. The heat exchanger effectiveness is the ratio of the temperature drop across the heat exchanger on the collector loop side to the maximum theoretical temperature drop (which would bring the collector loop fluid down to the tank temperature).

### 7.3.3 Solar Panel Storage Cylinder

#### 7.2.6.1 Volume

Volume of the storage tank (l). This is used to calculate tank losses.

#### **7.2.6.1 Storage loss at maximum temperature**

The DHW storage tank loss factor (kWh/l/day). This is used, with the preceding parameter, to calculate tank losses.

Tables 2 and 2a from SAP (2005), quoted above in relation to DHW storage, may be helpful in setting this parameter.

## 8 Renewables

The effect of some common renewable technologies can be included in ApacheSim analysis for both dynamic thermal modelling and for compliance analysis for Part L2. Available renewable systems are:

Photovoltaic (PV) systems

Wind generators

Combined heat and power (CHP)

Solar water heating systems (see section 7 Domestic Hot Water)

Renewables can be accessed from the 'globe' icon on the toolbar.



**Renewables**

PVS generator | Wind generator | CHP generator

PV array type: Monocrystalline silicon

☒ Derive performance parameters from PV array type?

PV module nominal efficiency: 0.1300 | Nominal cell temperature (NOCT) (°C): 45.0

Reference irradiance for NOCT (W/m2): 800 | Temperature coefficient for module efficiency (°K): 0.0040

Degradation factor: 0.9900 | Shading factor: 1.0000 | Electrical conversion efficiency: 0.8500

	Area (m²)	Azimuth (° clockwise from north)	Inclination (° from horizontal)

Add panel | Remove panel

OK | Cancel

## 8.1 PVS Generator

This dialog allows you to describe a photovoltaic system supplying electrical power to the building. Specify the existence of such a system by adding one or more entries to the list of PV panels.

### 8.1.1 PV array type and performance parameters

#### 7.2.6.1 PV array type

Choose a PV array type from the 4 options  
Monocrystalline silicon  
Polycrystalline silicon  
Amorphous silicon  
Other thin films

#### 7.2.6.1 Derive performance parameters from PV array type?

If you do not have specific data on the performance of the PV array you can tick this box to apply suitable defaults based on the PV array type.

The four parameters following are provided as standard by PV array manufacturers.

#### 7.2.6.1 PV module nominal efficiency ( $\eta_0$ )

The nominal efficiency is the fraction of solar radiant power that is converted to useful electrical power at a standard temperature and solar irradiance.

#### 7.2.6.1 Nominal cell temperature (NOCT)

The cell temperature under standard test conditions – ambient air temperature 20°C and irradiance either 800 or 1000 W/m<sup>2</sup>.

#### 7.2.6.1 Reference irradiance for NOCT

There is a degree of standardisation in the presentation of PV performance data. For example there are Standard Test Conditions (STCs) for current, voltage, output power and temperature coefficient, and Standard Operating Conditions (SOCs) for NOCT. However, two standards are in use for SOCs, based on irradiances of 800 and 1000 W/m<sup>2</sup> respectively, so one should always check the stated conditions.

#### 7.2.6.1 Temperature coefficient for module efficiency ( $\beta$ )

This parameter describes the rate at which the panel's conversion efficiency falls off with increasing cell temperature.

$$\eta = \eta_0 [1 - \beta (T_c - T_a)]$$

where

$\eta$  is the conversion efficiency at cell temperature  $T_c$  and outside temperature  $T_a$

### 8.1.2 Adjustment factors

#### 7.2.6.1 Degradation factor

Field measurements of a representative sample of PV modules may show that the PV module powers are different than the nameplate rating or that they experienced light-induced degradation upon exposure (even crystalline silicon PV modules typically lose 2% of their initial power before power stabilizes after the first few hours of exposure to sunlight). The degradation factor accounts for this drop in performance.

#### 7.2.6.1 Shading factor

If the PV array is shaded by buildings or other objects the average shading effect can be modelled by reducing the shading factor from the default value of 1.

#### 7.2.6.1 *Electrical conversion efficiency*

This is the combined efficiency of conversion of DC electrical power from the panel to delivered AC electrical power.

### 8.1.3 PV panel data

Up to 4 panels can be added. For each panel the following data must be entered:

#### 7.2.6.1 *Area*

The area of the panel (m<sup>2</sup>).


#### 7.2.6.1 *Azimuth*

Panel azimuth angle in degrees clockwise from north.

#### 7.2.6.1 *Tilt*

Panel tilt angle in degrees from horizontal.

## 8.2 Wind Generator

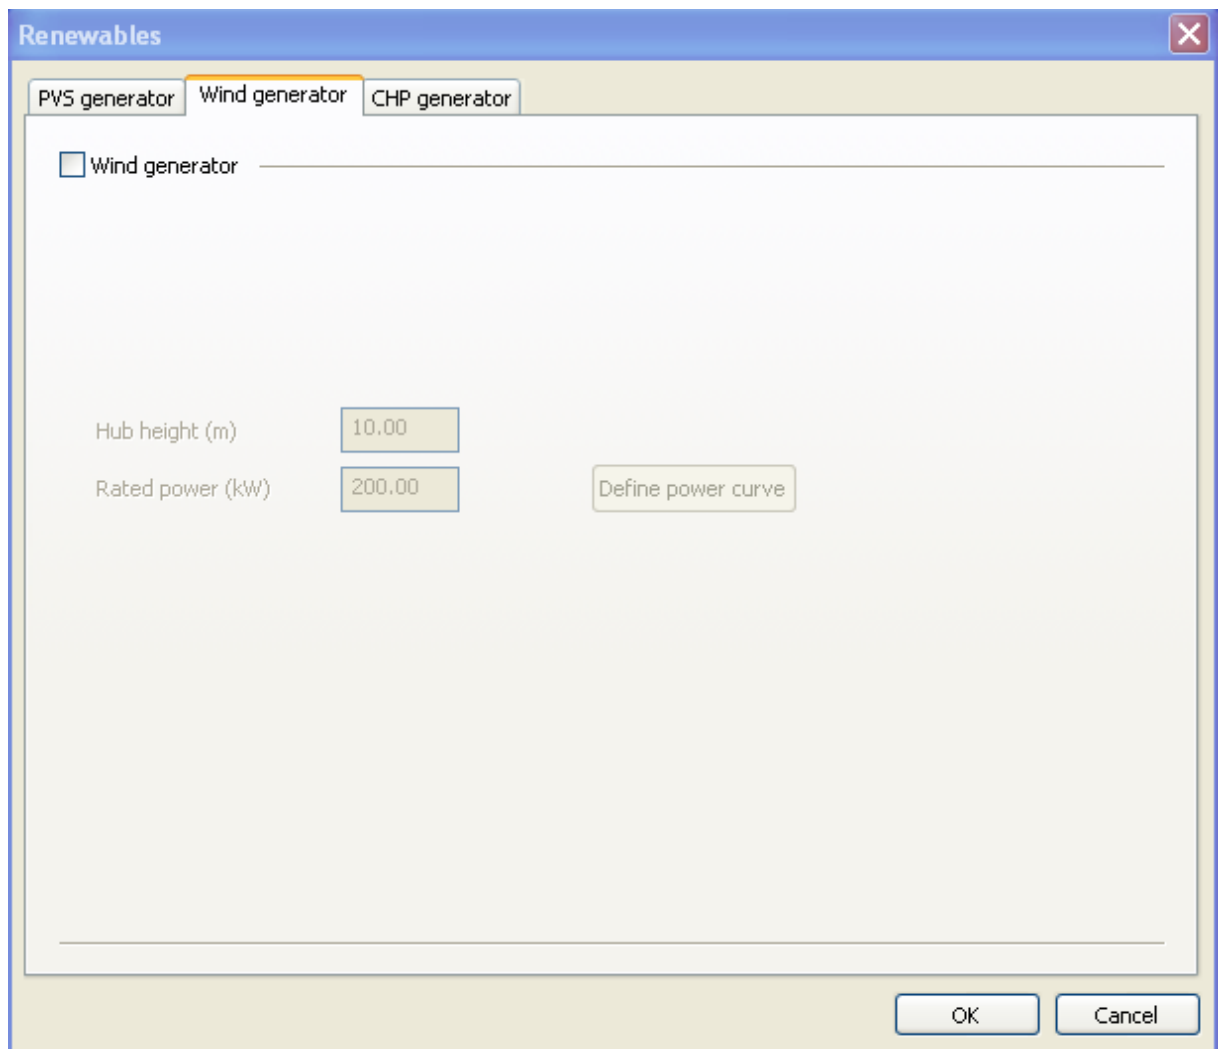

The screenshot shows a software window titled "Renewables" with a close button (X) in the top right corner. Inside the window, there are three tabs: "PVS generator", "Wind generator" (which is selected and highlighted with an orange bar), and "CHP generator". Below the tabs, there is a checkbox labeled "Wind generator" which is currently unchecked. Further down, there are two input fields: "Hub height (m)" with the value "10.00" and "Rated power (kW)" with the value "200.00". To the right of these fields is a button labeled "Define power curve". At the bottom right of the window, there are two buttons: "OK" and "Cancel".



This dialog allows you to describe a wind generator supplying electrical power to the building.

## 8.2.1 Wind generator parameters

### 7.2.6.1 Wind generator

Tick this box to specify the existence of a wind generator.

### 7.2.6.1 Hub height

The height of the turbine hub above the ground.


### 7.2.6.1 Rated power

The maximum output power of the turbine.

## 8.2.2 Power curve

Click on *Define power curve* to display the power curve parameters for editing.

You can use the default power curve or specify your own.

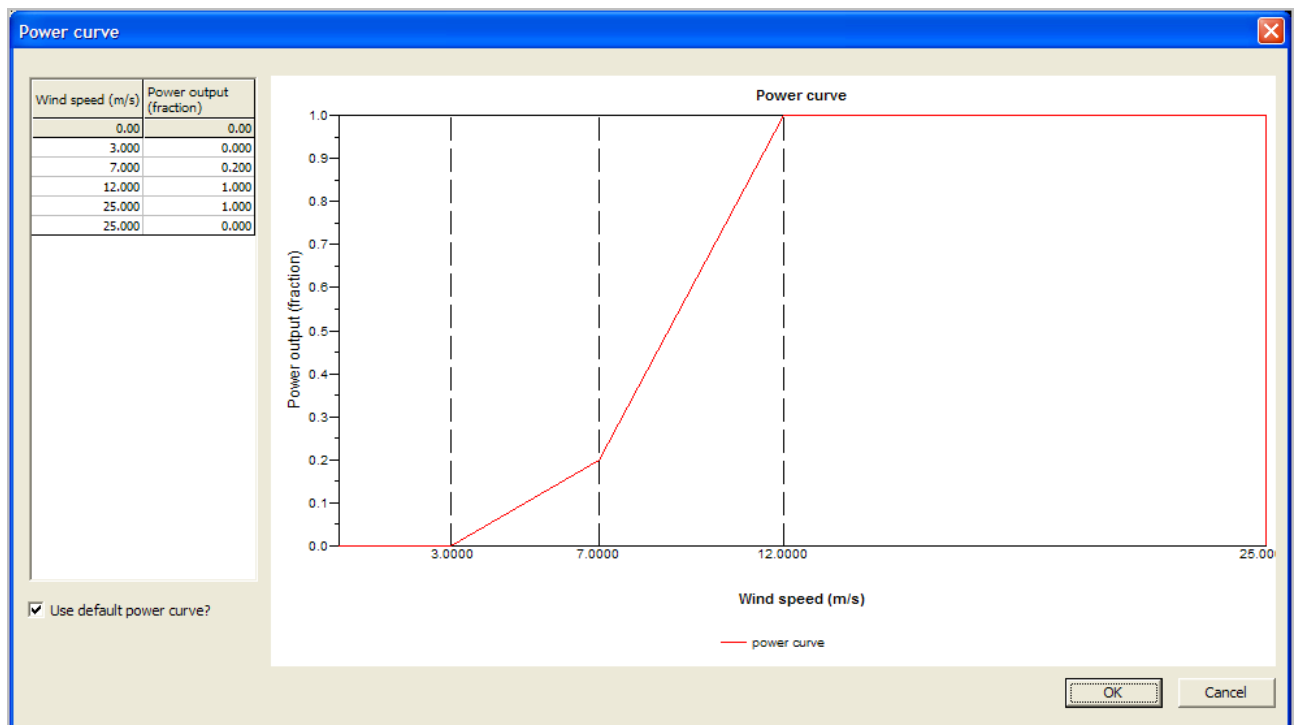


The power curve is defined as output power, here expressed as a fraction of rated power, as a function of wind speed. The first point on the power curve, which is uneditable, is (0,0). The second point indicates the cut-in wind speed – the wind speed at which the generator will start to generate power. The power output at this point is uneditable at the value zero.

Above a certain wind speed (the furling or governing speed) the turbine power output will be automatically limited in order to prevent damage to the machine. The best wind turbines will continue to deliver rated power in very high wind speeds, but many will shut down instead. The default power curve has a cut-off wind speed of 25 m/s, but wind speeds of this magnitude are rare.

The wind speed plotted on the power curve is the wind speed at hub height. This is calculated as a function of meteorological wind speed recorded on the weather file and the terrain type specified in APlocate.

### 8.3 CHP Generator

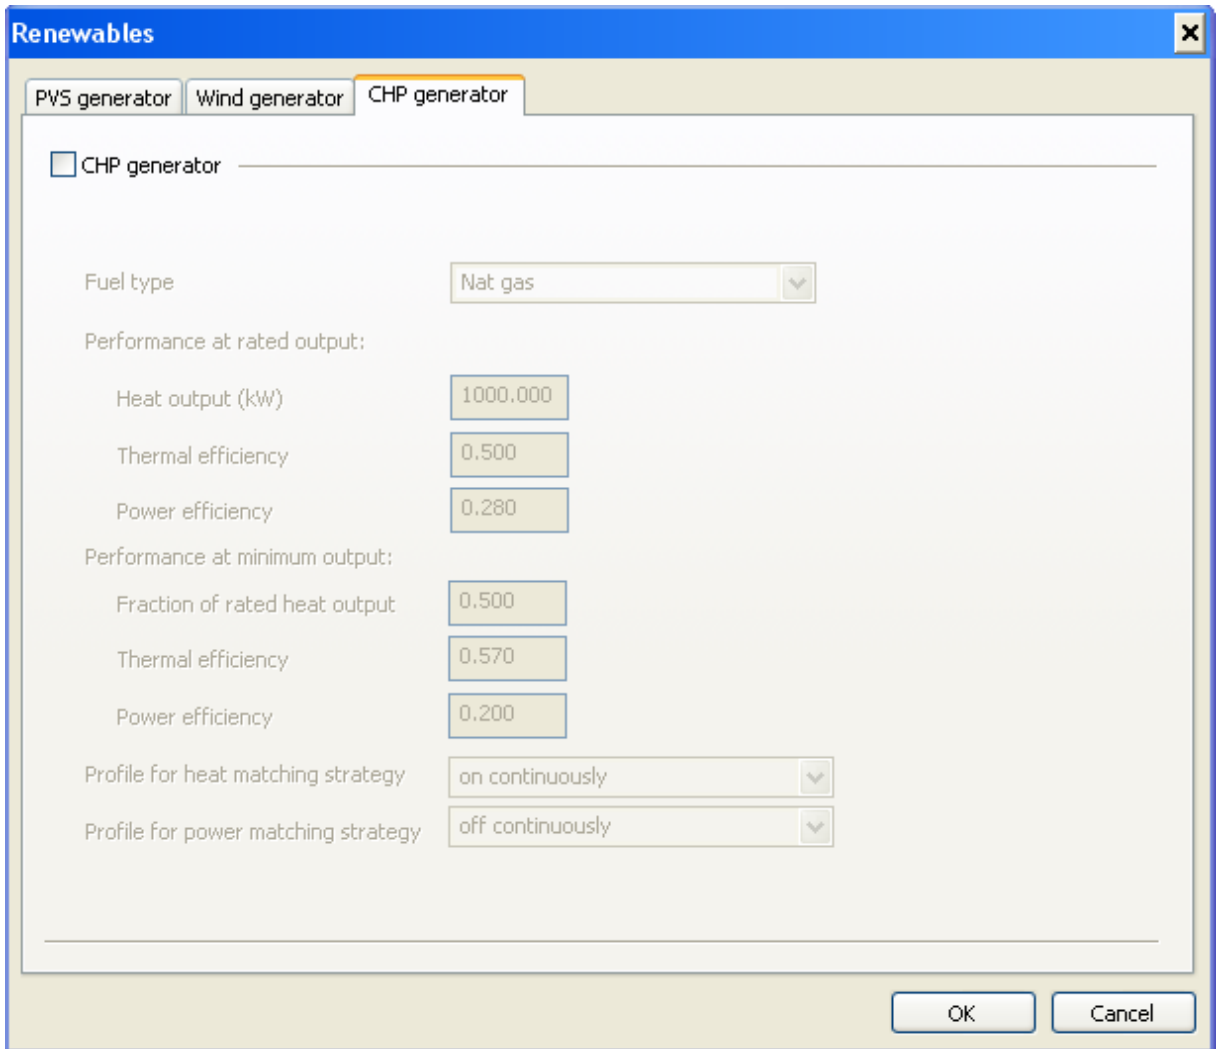

The screenshot shows the 'Renewables' dialog box with the 'CHP generator' tab selected. The 'CHP generator' checkbox is checked. The 'Fuel type' is set to 'Nat gas'. The 'Performance at rated output' section shows 'Heat output (kW)' as 1000.000, 'Thermal efficiency' as 0.500, and 'Power efficiency' as 0.280. The 'Performance at minimum output' section shows 'Fraction of rated heat output' as 0.500, 'Thermal efficiency' as 0.570, and 'Power efficiency' as 0.200. The 'Profile for heat matching strategy' is set to 'on continuously' and the 'Profile for power matching strategy' is set to 'off continuously'. The 'OK' and 'Cancel' buttons are at the bottom right.

Section	Parameter	Value
Performance at rated output:	Heat output (kW)	1000.000
	Thermal efficiency	0.500
	Power efficiency	0.280
Performance at minimum output:	Fraction of rated heat output	0.500
	Thermal efficiency	0.570
	Power efficiency	0.200
Profile for heat matching strategy	Profile for heat matching strategy	on continuously
	Profile for power matching strategy	off continuously

This dialog allows you to describe a combined heat and power plant supplying heat and electrical power to the building.

As currently configured, the CHP system operates a heat matching strategy, attempting to provide the heating needs of the building while generating electricity as a by-product. The operation of the CHP plant is dependent on:

- The enabling of the appropriate heating systems for CHP input.

- The minimum and maximum power output of the CHP system.

The profile for heat matching.

Each heating system (Apache System, ApacheHVAC boiler or ApacheHVAC direct acting heater) must be enabled for CHP input if it is to receive heat from the CHP system. This is done by ticking the CHP box for the system in question. Next to the CHP box is a *Boiler Ranking* parameter which allows you to specify the order in which the boilers are switched on when the CHP system is either off or unable to meet the total heating load. Boilers with low *Boiler Ranking* will be switched on first. These will normally be the most efficient. Where two boilers have the same Boiler Ranking the CHP plant will contribute the same fraction of the heating load for both systems.

### **8.3.1 CHP availability and fuel**

#### **7.2.6.1 CHP generator**

Tick this box to specify the existence of a CHP system.

#### **7.2.6.1 Fuel type**

The fuel burnt by the CHP system.

### **8.3.2 Performance at rated output**

The following properties define the performance of the generator at its rated output.

#### **7.2.6.1 Heat output**

The maximum heat output

#### **7.2.6.1 Thermal efficiency**

The thermal efficiency (heat output divided by energy content of fuel burnt) at rated output.

#### **7.2.6.1 Power efficiency**

The power efficiency (power output divided by energy content of fuel burnt) at rated output.

### **8.3.3 Performance at minimum output**

The following properties define the performance of the generator at its minimum heat output.

#### **7.2.6.1 Heat output**

The minimum heat output, expressed as a fraction of the rated heat output.

#### **7.2.6.1 Thermal efficiency**

The thermal efficiency at the minimum heat output.

#### **7.2.6.1 Power efficiency**

The power efficiency at the minimum heat output.

### **8.3.4 Profiles**

#### **7.2.6.1 Profile for heat matching strategy**

Select a variation profile that defines the periods when the CHP system will attempt to match the heating load. The usual setting is 'on continuously'.

#### 7.2.6.1 Profile for power matching strategy

This feature is not available in version 5.6. When enabled it will allow the CHP system to operate a power matching strategy and various combinations of heat-matching and power-matching.

## 9 Building Compliance and Settings menus


The <VE> Compliance menu bar has now been consolidated, such that one menu bar is shown for all applications, with one module-specific menu displayed when the user selects any particular application.

When <VE> Compliance is chosen from the application selector, the 'building compliance' menu will become active

### 9.1 Building Compliance menu

#### 9.1.1 Export Room Data

This facility allows you to export the room data and geometry data to a text (.TXT) file, for subsequent use in other applications (eg a spreadsheet).

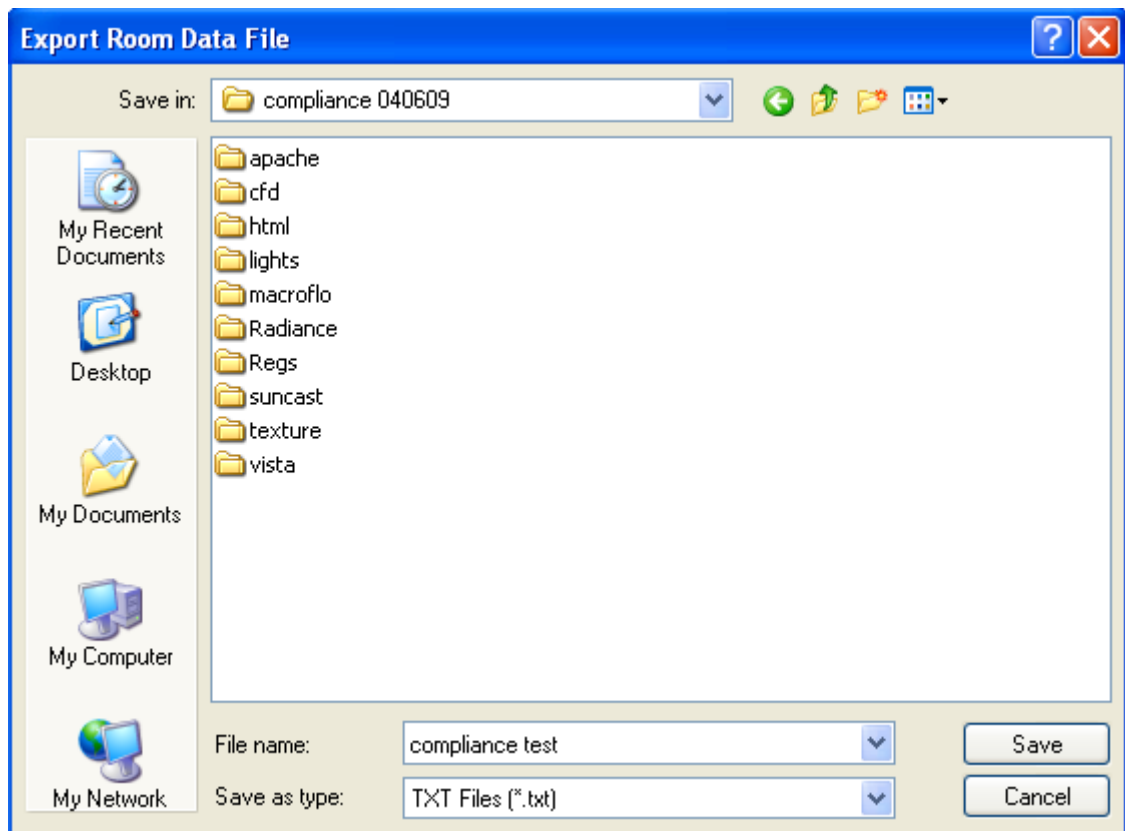

Export Room Data File dialog box

### 9.1.2 Save


Save any changes made within the <VE> Compliance module.

## 9.2 Settings menu

Settings applicable to <VE> compliance can be viewed/edited here

### 9.2.1 Building

This option displays the Building Settings dialog box.

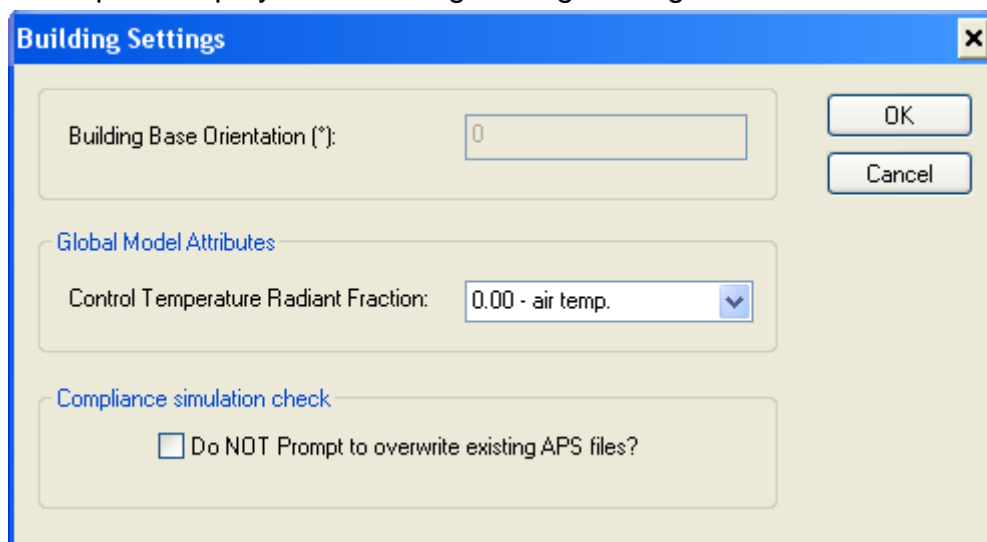

Building Settings dialog box

The building base orientation rotates the whole site clockwise by the angle chosen. If the orientation angle is zero, the top of the plan view screen is north. If the orientation angle is set at, for example, 45 degrees, then the top of the plan view screen is now north-east, and what was the north face of the building will now be the north-east face.

The north direction is shown by an arrow in the dialog bar at the bottom of the Apache view window. Note that you should be in a plan view when referring to the north arrow. Orientation is set in ModelIT.

Note that changing this angle does not visually rotate the building in the workspace plan view.

The Control Temperature Radiant Fraction is the radiant fraction of the thermostats sensing room temperature in all rooms, for the purposes of room temperature control in ApacheCalc and ApacheSim. For rooms modelled in ApacheHVAC, this parameter is overridden by parameters set in that program.

The Compliance simulation check should be ticked on if you do not wish to be alerted to the APS file being overwritten.


### 9.2.2 Heating/Cooling Zones

This option opens the Heating/Cooling Zones dialog box, and allows you to add, remove and assign names for heating and cooling zones, to which rooms can be subsequently allocated. Select the zone you wish to edit, and click on the Edit button. A dialog box will appear allowing you to edit the name of the zone.

### 9.2.3 Carbon emission factors for fuels

This option deals with parameters used in the calculation of carbon emissions and energy consumptions.

'Carbon emissions data for fuels' lists the fuels available in the Apache and ApacheHVAC views and allows you to set their carbon emission factors. Default figures can be chosen for both the current Part L2 and Section 6 of the England & Wales and Scottish Building Regulations respectively.

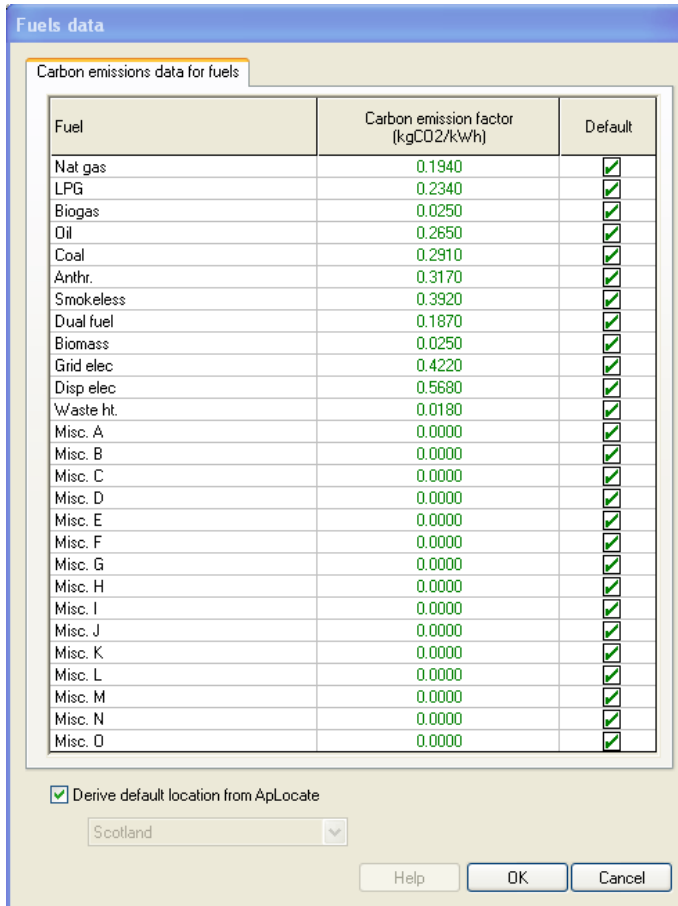

**Fuels data**

Carbon emissions data for fuels

Fuel	Carbon emission factor (kgCO <sub>2</sub> /kWh)	Default
Nat gas	0.1940	<input checked="" type="checkbox"/>
LPG	0.2340	<input checked="" type="checkbox"/>
Biogas	0.0250	<input checked="" type="checkbox"/>
Oil	0.2650	<input checked="" type="checkbox"/>
Coal	0.2910	<input checked="" type="checkbox"/>
Anthr.	0.3170	<input checked="" type="checkbox"/>
Smokeless	0.3920	<input checked="" type="checkbox"/>
Dual fuel	0.1870	<input checked="" type="checkbox"/>
Biomass	0.0250	<input checked="" type="checkbox"/>
Grid elec	0.4220	<input checked="" type="checkbox"/>
Disp elec	0.5680	<input checked="" type="checkbox"/>
Waste ht.	0.0180	<input checked="" type="checkbox"/>
Misc. A	0.0000	<input checked="" type="checkbox"/>
Misc. B	0.0000	<input checked="" type="checkbox"/>
Misc. C	0.0000	<input checked="" type="checkbox"/>
Misc. D	0.0000	<input checked="" type="checkbox"/>
Misc. E	0.0000	<input checked="" type="checkbox"/>
Misc. F	0.0000	<input checked="" type="checkbox"/>
Misc. G	0.0000	<input checked="" type="checkbox"/>
Misc. H	0.0000	<input checked="" type="checkbox"/>
Misc. I	0.0000	<input checked="" type="checkbox"/>
Misc. J	0.0000	<input checked="" type="checkbox"/>
Misc. K	0.0000	<input checked="" type="checkbox"/>
Misc. L	0.0000	<input checked="" type="checkbox"/>
Misc. M	0.0000	<input checked="" type="checkbox"/>
Misc. N	0.0000	<input checked="" type="checkbox"/>
Misc. O	0.0000	<input checked="" type="checkbox"/>

☒ Derive default location from ApLocate

Scotland

Help OK Cancel

Fuels data dialog box

#### **9.2.4 Applicable Regulation**

Launches the dialog to change the regulatory framework

#### **9.2.5 Building Regs Building and System data**

Launches the dialog to change the building regulations building and system data pertinent to the current regulatory framework.



## 10<VE> Compliance toolbar

The Building Regulations toolbar provides a quick route to some of the options on the <VE> Compliance View pull-down menus.

### 10.1 *Select object*



Switch to 'select object' mode after operations in which a mouse click is interpreted in another way. 'Select object' is currently the only mode used in the <VE> Compliance View.

### 10.2 *Edit selection set constructions*



Edit or view the construction type for the selected building elements. See 'Changing the construction type for selected elements'.

### 10.3 *Edit selection set custom attributes*



Edit or view the Room Data for selected rooms. See 'Editing Room Data' for a set of rooms for details.

### 10.4 *Assign Room Thermal Template to selection set*



Assign a Room Thermal Template to the selected rooms. See 'Assigning a Room Thermal Template' to a set of rooms.

### 10.5 *Heating & Cooling Zones*



Open the Heating/Cooling Zones dialog box, which allows you to add, remove and assign names for heating and cooling zones, to which rooms can be subsequently allocated. Select the zone you wish to edit, and click on the Edit button. A dialog box will appear, allowing you to edit the name of the zone.

### 10.6 *Apache Systems*



Edit or view Apache Systems. The Apache Systems allow you to describe the characteristics of systems supplying the heating, ventilating and air conditioning requirements of rooms. For details see the description of Apache Systems.

### **10.7 Fuels Data**



Edit carbon emission factors for fuels.

### **10.8 Apache profile database manager**



Run APpro, the Apache profile database manager. APpro is used to create and edit profiles, which define the time-variation of many parameters input to the Building Regulations, Apache and MacroFlo programs. Profiles are also accessed by the Template Manager.

Please refer to the [APpro](#) User Guide for information on using the APpro utility.

### **10.9 Apache construction database manager**



Run APcdb, the Apache construction database manager. APcdb is used to create and edit construction types, which are assigned to building elements in the <VE> Compliance View.

Please refer to the [APcdb](#) User Guide for further information.

### **10.10 Apache weather/location database manager**



Run APlocate, the Apache weather and location database manager. APlocate is used to specify weather and location data to be used by the Apache thermal analysis programs.

Please refer to the [APlocate](#) User Guide for further information.

### **10.11 Query**



Edit or view the attributes of a single selected object. The object may be a room or a building element, depending on the current level of decomposition. In the case of an element, with the decomposition mode set to adjacency, the Query function allows you to edit the element's thermal boundary condition. See

### **10.12 Model viewer**



Display a perspective view of the model. Please refer to the [ModelIT](#) User Guide for further information.

## 10.13 Renewables



 
Edit or view renewables systems. The Renewables allow you to describe the characteristics of systems supplying energy to the building such as photovoltaics, wind turbines and CHP.

## 10.14 Edit Multiple Adjacencies



Edit adjacent temperature condition for a group of surfaces of the same type (wall, ground floor or roof).

## 10.15 Regulatory framework options



These toolbar settings select the regulatory framework for the analysis, and (where relevant) the version of the building displayed.

### Regulation

Specifies the legal framework, as determined by geographical region and building class (dwelling or non-dwelling).

### Method

Specifies the method to be applied, from the following options:

ApacheSim: dynamic thermal simulation for compliance

ApacheSim – EPC: dynamic thermal simulation for Energy Performance Certificate

SBEM: BRE Simplified Building Energy Model analysis for compliance

SBEM – EPC: Simplified Building Energy Model analysis for Energy Performance Certificate

### Building

Allows you to select a version of the building (where relevant) from the following options:

Actual – the building as designed, but with standardised internal conditions

Notional – the comparison building for compliance assessment

Reference – the comparison building for the calculation of EPC Asset Rating

Typical – a version of the building conforming to 1995 standards, for which results are presented on the EPC

Only the Actual building is editable. The other 'benchmark buildings' are for inspection only.