


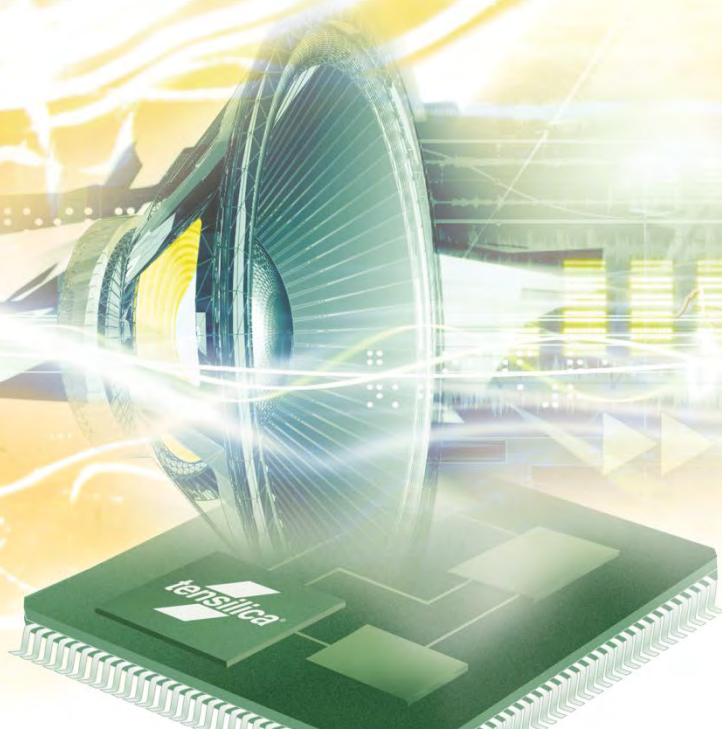

# *Opus Codec*

## Programmer's Guide

For HiFi DSPs



Cadence Design Systems, Inc.  
2655 Seely Ave.  
San Jose, CA 95134  
[www.cadence.com](http://www.cadence.com)

© 2023 Cadence Design Systems, Inc. All rights reserved.

Printed in the United States of America.

Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Trademarks: Trademarks and service marks of Cadence Design Systems, Inc. (Cadence) contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 1-800-862-4522.

All other trademarks are the property of their respective holders.

Restricted Print Permission: This publication is protected by copyright and any unauthorized use of this publication may violate copyright, trademark, and other laws. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. This statement grants you permission to print one (1) hard copy of this publication subject to the following conditions:

1. The publication may be used solely for personal, informational, and noncommercial purposes;
2. The publication may not be modified in any way;
3. Any copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement;
4. The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration; and
5. Cadence reserves the right to revoke this authorization at any time, and any such use shall be discontinued immediately upon written notice from Cadence.

Disclaimer: Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. The information contained herein is the proprietary and confidential information of Cadence or its licensors, and is supplied subject to, and may be used only by Cadence's customer in accordance with, a written agreement between Cadence and its customer. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Restricted Rights: Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor.

For further assistance, contact Cadence Online Support at <https://support.cadence.com/>.  
Copyright © 2023, Cadence Design Systems, Inc. All rights reserved.

**Version:** 1.11  
**Last Updated:** June 2023

Cadence Design Systems, Inc.  
2655 Seely Ave.  
San Jose, CA 95134  
[www.cadence.com](http://www.cadence.com)

# Contents

Contents .....	iii
Figures .....	v
Tables .....	v
1. Introduction to the HiFi Opus Codec .....	1
1.1 Opus Codec Description .....	1
1.2 Document Overview .....	1
1.3 HiFi Opus Codec Specifications .....	2
1.4 HiFi Codec Performance .....	3
1.4.1 Memory .....	4
1.4.2 Timings .....	5
2. Generic HiFi Speech Codec API .....	7
2.1 Memory Management .....	7
2.1.1 API Handle / Persistent Memory .....	7
2.1.2 Scratch Memory .....	8
2.1.3 Input Buffer .....	8
2.1.4 Output Buffer .....	8
2.2 C Language API .....	8
2.2.1 Query Functions: xa_<codec>_get_<data> .....	8
2.2.2 Initialization Functions: xa_<codec>_init .....	8
2.2.3 Execution Functions: xa_<codec> .....	9
2.3 Generic API Errors .....	10
2.4 Common API Errors .....	10
2.5 Files Describing the API .....	10
3. HiFi DSP Opus Codec API .....	11
3.1 Files Specific to the Opus Codec .....	11
3.2 I/O Formats .....	11
3.3 Control Structure for Opus Codec .....	12
3.4 API Functions .....	16
3.4.1 Startup Stage .....	16
3.4.2 Memory Allocation Stage .....	17
3.4.3 Initialization Stage .....	18
3.4.4 Execution Stage .....	22
4. Introduction to the Example Test Bench .....	29
4.1 Making Executable .....	29
Building OPUS Applications .....	29

4.2	Usage .....	32
4.2.1	OPUS Usage .....	32
4.2.2	OPUS-SILK Usage .....	36
4.2.3	OPUS-CELT Usage .....	39
5.	Appendix – Ogg Container Format Support in Decoder .....	42
5.1	Files Specific to the Ogg Parser .....	42
5.2	I/O Formats .....	42
5.3	Configuration Structure for Ogg Parser .....	43
5.4	API Functions .....	43
5.4.1	Memory Allocation Stage .....	43
5.4.2	Initialization Stage .....	45
5.4.3	Execution Stage .....	46
5.4.4	HiFi Ogg Parser Parameters .....	51
6.	Reference .....	52

## Figures

Figure 1 HiFi Speech Codec Interfaces .....	7
Figure 2 Speech Codec Flow Overview .....	9

## Tables

Table 1-1 Opus Codec Configurations .....	3
Table 3-1 Encoder Control Structure xa_opus_enc_control_t Parameters .....	12
Table 3-2 Decoder Control Structure xa_opus_dec_control_t Parameters .....	14
Table 3-3 Library Identification Functions .....	16
Table 3-4 Memory Management Functions .....	17
Table 3-5 Opus Encoder Initialization Function .....	18
Table 3-6 Opus Decoder Initialization Function .....	20
Table 3-7 Opus Encoder Execution Function .....	23
Table 3-8 Opus Decoder Execution Function .....	26
Table 5-1 xa_ogg_parse_init_cfg_t Structure Parameters .....	43
Table 5-2 Memory Management Functions .....	44
Table 5-3 HiFi Ogg Parser Initialization Function Details .....	45
Table 5-4 Execution Stage Functions .....	46
Table 5-5 HiFi Ogg Parser Process Function Details .....	46
Table 5-6 HiFi Ogg Parser Set Parameter Function Details .....	49
Table 5-7 HiFi Ogg Parser Get Parameter Function Details .....	50
Table 5-8 HiFi Ogg Parser Parameters .....	51

## Document Change History

Version	Changes
1.0	<b>Initial revision</b>
1.1	<b>Updated the performance data in Section 1.4</b>
1.2	<b>Updated performance data in Section 1.4.</b> <b>Added two new error codes in Section 3.4.3:</b> <ul style="list-style-type: none"> <li>■ XA_OPUS_CONFIG_FATAL_ENC_INVALID_PARAM_COMBINATION</li> <li>■ XA_OPUS_EXECUTE_NONFATAL_INVALID_FORCED_MODE_SETTINGS</li> </ul>
1.2.1	<b>Reference source code version updated to v1.1.3.</b> <b>Updated performance data in Section 1.4.</b> <b>Added control parameter 'variable_duration' for encoder in Section 3.3.</b>
1.3	<b>Added Ogg container support for Opus Decoder in Section 5.</b> <b>Added performance data for Ogg container support in Section 1.4.</b> <b>Added six new control parameters for decoder in Section 3.3.</b>
1.4	<b>Reference source code version updated to v1.2.1.</b> <b>Control paramter 'variable_duration' usage is deprecated. Updated Section 1.3, 3.3, 3.4.4, and 0 accordingly.</b> <b>Updated performance data in Section 1.4.</b> <b>Control parameter 'framesize' supports additional values. Updated Section 0 accordingly.</b>
1.5	<b>Added performance data for Fusion F1 DSP in Section 1.41.</b>

1.6	<p>Updated performance data, added new multistream decoder case.</p> <p>Added three new control parameters in decoder control structure to support multistream decoding in Section 3.3.</p> <p>Error code XA_OPUS_CONFIG_FATAL_ENC_INVALID_PARAM_COMBINATION is replaced by XA_OPUS_CONFIG_FATAL_INVALID_PARAM_COMBINATION for xa_opus_enc_init in Section 3.4.3.</p> <p>Error code XA_OPUS_CONFIG_FATAL_DEC_MULTISTREAM_DECODE_NOT_SUPPORTED is removed and XA_OPUS_CONFIG_FATAL_INVALID_PARAM_COMBINATION, XA_OPUS_CONFIG_FATAL_DEC_NUM_STREAMS_NOT_SUPPORTED, XA_OPUS_CONFIG_FATAL_DEC_UNKNOWN_CHANNEL_MAPPING, XA_OPUS_CONFIG_FATAL_DEC_BAD_STREAM_MAP, XA_OPUS_CONFIG_NONFATAL_DEC_STREAM_MAP_IGNORED added for xa_opus_dec_init in Section 3.4.3.</p> <p>Added new macro XA_OPUS_MAX_NUM_STREAMS and updated value of XA_OPUS_MAX_NUM_CHANNELS from 2 to 8 in Section 3.4.4.</p> <p>Updated decoder testbench help in Section 4.2, -numch range is now 0-8 and new option -strmap is added.</p>
1.7	<p>Added performance data for HiFi 5 in Section 1.4.</p>
1.8	<p>Reference source code version updated to v1.3.1.</p> <p>Updated performance data in Section 1.4.</p> <p>Now released in three packages: codec, decoder, and encoder.</p>
1.9	<p>Now released in single package that contains three libraries (codec, decoder, and encoder). Added instructions for switching library in Section 4.1.</p>
1.10	<p>Updated performance data for all cores and added new column for HiFi1 core in Section 1.4.</p> <p>Updated Section 4 to list testbench error handling source files .</p> <p>Section 4.2 updated to add details about constraint on sweep.</p>
1.11	<p>Updated build instructions in Section 4.1. Added support for standalone OPUS-SILK and OPUS-CELT libraries for encoder as well as decoder.</p>

	<p><b>Added information about usage of OPUS-SILK and OPUS-CELT libraries in Sections 4.2.2 and 4.2.3.</b></p> <p><b>Updated Memory requirements in Section 1.4.1. Added support for config based dynamic memory allocation.</b></p> <p><b>Added the following error codes in Section 3.4.4:</b></p> <ul style="list-style-type: none"><li>• XA_OPUS_EXECUTE_NONFATAL_UNSUPPORTED_MODE</li><li>• XA_OPUS_EXECUTE_NONFATAL_HYBRID_MODE_DECODED</li></ul>
--	--



---

# 1. Introduction to the HiFi Opus Codec

---

The HiFi DSP Opus Codec implements the speech codec standard specified in the definition of the Opus audio codec (RFC 6716) <sup>[1]</sup>. The HiFi DSP Opus decoder also supports decoding of Opus streams in Ogg container format.

The vendor source version is libopus 1.3.1 <sup>[2]</sup>.

## 1.1 *Opus Codec Description*

The Opus codec is designed to handle a wide range of interactive audio applications, including Voice over IP, video conferencing, in-game chat, and even live distributed music performances. It scales from low bitrate narrowband speech at 6 kbps to very high-quality stereo music at 510 kbps. Opus uses both Linear Prediction (LP) and the Modified Discrete Cosine Transform (MDCT) to achieve good compression of both speech and music.

## 1.2 *Document Overview*

This document covers all the information required to integrate the HiFi speech codecs into an application. The HiFi codec libraries implement a simple API to encapsulate the complexities of the coding operations and simplify the application and system implementation. Parts of the API are common to all the HiFi speech codecs and are described in Section 2. Section 3 covers all the features and information particular to the HiFi Opus Codec. Section 4 describes the example test bench. Section 5 describes the Ogg container format support interface of the HiFi Opus Codec. Section 6 provides references.

## 1.3 HiFi Opus Codec Specifications

The HiFi DSP Opus Codec implements the following features:

**Cadence Speech Codec API is used**

**Encoder input/decoder output PCM: 16 bits per sample**

**Supported input sampling frequencies: 8 kHz, 12 kHz, 16 kHz, 24 kHz, 48 kHz**

**Support for following complexity modes: voip, audio, and restricted-low-delay**

**Supports five audio bandwidths:**

- Narrow band (NB): 8 kHz effective sampling rate (4 kHz audio bandwidth)
- Medium band (MB): 12 kHz effective sampling rate (6 kHz audio bandwidth)
- Wideband (WB): 16 kHz effective sampling rate (8 kHz audio bandwidth)
- Super wideband (SWB): 24 kHz effective sampling rate (12 kHz audio bandwidth)
- Full-band (FB): 48 kHz effective sampling rate (20 kHz audio bandwidth)

**Constant and variable bitrate encoding from 6 kbps to 510 kbps<sup>1</sup>**

**Discontinuous Transmission (DTX)**

**Voice Activity Detection (VAD)**

**Three operating modes of OPUS libraries:**

- A SILK-only mode for use in low bitrate connections with an audio bandwidth of WB or less
- A Hybrid (SILK+CELT) mode for SWB or FB speech at medium bitrates
- A CELT-only mode for very low delay speech transmission as well as music transmission (NB to FB)

**Supports Forward Error Correction (FEC)**

**Packet Loss Resilience**

**Frame duration: 2.5, 5, 10, 20, 40, 60, 80, 100 and 120 milliseconds(ms)**

**Supports the Ogg container format in decoder**

**Supports the standalone OPUS-SILK and OPUS-CELT encoder and decoder libraries**

**Stream/Config parameter based memory allocation**

---

<sup>1</sup> RFC6716 Section 2.1.1

Table 1-1 shows the possible configurations of operating mode, audio bandwidth, and frame size.

Table 1-1 Opus Codec Configurations

Mode	Bandwidth	Frame sizes in ms
SILK-only	NB	10, 20, 40, 60, 80, 100, 120
SILK-only	MB	10, 20, 40, 60, 80, 100, 120
SILK-only	WB	10, 20, 40, 60, 80, 100, 120
Hybrid	SWB	10, 20
Hybrid	FB	10, 20
CELT-only	NB	2.5, 5, 10, 20, 40, 60, 80, 100, 120
CELT-only	WB	2.5, 5, 10, 20, 40, 60, 80, 100, 120
CELT-only	SWB	2.5, 5, 10, 20, 40, 60, 80, 100, 120
CELT-only	FB	2.5, 5, 10, 20, 40, 60, 80, 100, 120

The decoder implementation is verified to be bit-exact for all the test vectors available with the libopus 1.3.1 package. The encoder implementation is verified for internally generated test vectors and matches bit-exact with the reference implementation.

As some specific applications require only one of the SILK-only or CELT-only operating mode, standalone libraries for OPUS-SILK and OPUS-CELT encoder/decoder are provided. This reduces static and dynamic memory requirement by removing overheads of unused operating mode. For more information on the memory requirements of the standalone libraries, see Section 1.4.1.

**Note:** The OPUS-SILK and OPUS-CELT libraries follow Generic HiFi Speech Codec API and HiFi DSP Opus Codec API as described in Section 2 and Section 3. The encoder/decoder control parameters that are not supported in standalone libraries are mentioned in the description (see section 3.3).

For OPUS SILK/CELT standalone decoder binary, handling the Hybrid mode frames is challenging. The OPUS-SILK decoder is equipped with a feature to decode hybrid-mode frames with limited quality. The CELT mode is considered as invalid for OPUS-SILK standalone decoder. If the CELT mode is detected, such a frame is skipped, and decoding is resumed for next valid frame. Similarly, SILK mode and Hybrid mode frames are considered invalid for OPUS-CELT decoder and are skipped for decoding and a Non-Fatal error is returned. Warnings/Non-Fatal errors used for this feature are listed in Section 3.4.4 (Execution stage of decoder). This feature ensures that OPUS-SILK/OPUS-CELT decoder is compatible with any opus encoder and can handle opus-encoded frames using different types of modes.

Opus standard reference C code allocates memories assuming the worst-case scenario. This results in higher memory requirements for some scenarios. The Opus codec is enhanced with a feature to decide the dynamic memory requirement based on the stream and config parameters provided by the application. This feature reduces persistent/scratch/input/output memory footprint. It is achieved by calculating memory requirements based on config parameters like sample rate, number of channels, etc., instead of allocating memory based on the maximum possible value for the given config parameter.

## 1.4 HiFi Codec Performance

The HiFi DSP Opus codec is characterized on the 5-stage HiFi DSP. The memory usage and performance figures are provided for design reference.

Opus is more efficient when operating with variable bitrate (VBR), that is the default mode. Compared to the VBR mode, the constant bitrate (CBR) mode has lower audio quality at a given average bitrate and has higher computational complexity. For very low bitrates, the average CPU load (MHz) for the CBR mode is approximately 2.5 to 3 times that of the VBR mode.

## 1.4.1 Memory

Library	Code (Kbytes)					Data (Kbytes)
	HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5	
xa_opus_codec.a	187.6	191.7	201.5	211.8	224.0	24.8
xa_opus_dec.a	81.6	82.2	88.0	92.1	100.9	22.4
xa_opus_enc.a	145	148.9	156.7	165.5	175.8	23.6
xa_opus_silk_codec.a	118.6	118.2	126.0	131.7	139.4	8.9
xa_opus_silk_enc.a	92.4	92.5	98.7	103.2	110.3	7.9
xa_opus_silk_dec.a	45.2	45.0	48.8	50.7	54.9	7.4
xa_opus_celt_codec.a	102.6	106.7	112.5	118.7	125.9	17.2
xa_opus_celt_enc.a	76.1	80.0	84.2	89.8	95.3	16.0
xa_opus_celt_dec.a	56.7	56.4	61.3	64.1	70.7	16.2

## Encoder and Decoder

	Run Time Memory (Kbytes)				
	Persistent	Scratch	Stack	Input	Output
Opus Encoder (2 channels, 48KHz)	28.7	43.0	2.6	3.7	1.5
Opus Celt Encoder (2 channels, 48KHz)	11.7	39.0	2.6	3.7	1.5
Opus Encoder (1 Channel, 16KHz)	15.6	33.0	2.0	0.6	1.5
Opus Silk Encoder (1 Channel, 16KHz)	10.7	33.0	2.0	0.6	1.5
Opus Decoder Stereo (48KHz)	26.4	12.0	2.7	3.0	22.5
Opus Celt Decoder -Stereo (48KHz)	18	12.0	2.6	3.0	22.5
Opus Decoder (6 channels, 4 streams - 2 coupled, 2 uncoupled)	87.3	34.5	2.7	11.8	67.5
Opus Celt Decoder (6 channels, 4 streams - 2 coupled, 2 uncoupled)	53.9	34.5	2.6	11.8	67.5
Ogg parser (1 coupled streams)	140.6	0	0.6	4.0	3.0
Ogg parser (4 streams - 2 coupled, 2 uncoupled)	140.6	0	0.6	4.0	11.8

**Note** The Ogg parser runtime memory is only required for the Ogg Opus streams.

**Note** Ogg parser persistent memory requirement is dependent on maximum page size allowed and is configurable. The size reported above is for a default page size of 64 KB.

**Note** There is no restriction on input buffer size for Ogg Parser. If the input buffer is too small, it may require multiple calls to Ogg Parser to get an Ogg page. There is no restriction on output buffer size for Ogg Parser, but it should be large enough to hold at least one Opus packet. If the comment packet is bigger than the Opus packets, then the output buffer should be large enough to hold the comment packet.

## 1.4.2 Timings

### Encoder

Rate kHz	Nch	Bitrate (kbps)	Average CPU Load (MHz)					
			HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5	
16	1	48	47.7	48.9	43.3	41.2	37.3	SILK VBR
16	1	48	65.9	68.0	60.0	57.3	52.0	SILK VBR FEC 10% loss
24	1	40	56.1	57.8	51.1	48.4	43.4	Hybrid VBR
24	1	40	72.9	75.3	66.4	63.2	57.1	Hybrid VBR FEC 10% loss
48	2	128	13.2	14.9	12.7	12.1	10.3	CELT VBR Complexity 0
48	2	128	25.1	27.9	24.1	23.3	19.4	CELT VBR Complexity 7
48	2	128	44.9	51.1	43.5	42.3	36.1	CELT VBR Complexity 10

### Decoder

Rate kHz	Nch	Bitrate (kbps)	Average CPU Load (MHz)					
			HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5	
16	1	48	5.4	6.4	5.4	5.2	4.3	SILK (20 ms)
24	1	40	6.1	6.4	5.7	5.3	4.7	Hybrid (20 ms)
48	2	128	13.2	15.6	13.3	13.0	10.7	CELT (20 ms)
48	2	183.6	26.5	31.0	25.5	25.6	21.9	CELT (variable 2.5-20ms)
48	6	392	43.3	51.1	43.3	42.5	35.6	Multistream (20 ms, 4 streams - 2 coupled, 2 uncoupled))

### Ogg Parser

Rate kHz	Nch	Bitrate (kbps)	Average CPU Load (MHz)					
			HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5	
48	2	183.6	0.4	0.6	0.4	0.4	0.4	CELT (variable 2.5-20ms)

**Note** Performance specification measurements are carried out on a cycle-accurate simulator assuming an ideal memory system, i.e., one with zero memory wait states. This is equivalent to running with all code and data in local memories or using an infinite-size, pre-warmed cache model.

**Note** Performance numbers of Opus encoder and decoder libraries are similar to the performance numbers of Opus-SILK and Opus-CELT encoder and decoder libraries for the corresponding test streams.

**Note** The MCPS numbers for HiFi 3z/HiFi 4 are obtained by running the test that is recompiled from the HiFi 3 optimized source code in the HiFi 3z/HiFi 4 configuration. No specific optimization is done for HiFi 3z/HiFi 4. Additional optimization is done for HiFi 1, and HiFi5.

**Note** All the memory and MCPS numbers are captured with XT-CLANG compiler and RI-2022.10 tools.

**Note** Encoder performance was measured with corresponding encoding mode set using command line option `-force_mode`.

**Note** Encoder performance for SILK and Hybrid vectors was measured for the highest complexity configuration parameter (complexity = 10). Encoder performance for all vectors was measured for frame size of 20 ms.

---

## 2. Generic HiFi Speech Codec API

This section describes the API, which is common to all the HiFi speech codec libraries. The API facilitates any codec that works in the overall method shown in Figure 1.

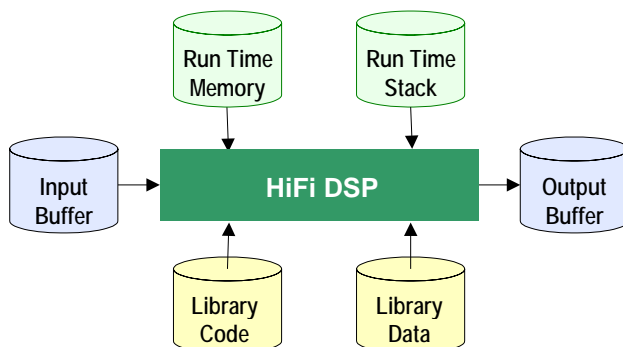


Figure 1 HiFi Speech Codec Interfaces

The following section discusses all the types of run time memory required by the codecs. There is no state information held in static memory, therefore a single thread can perform time division processing of multiple codecs. Additionally, multiple threads can perform concurrent codec processing.

### 2.1 Memory Management

The HiFi speech codec API supports a flexible memory scheme and a simple interface that eases the integration into the final application. The API allows the codecs to request the required memory for their operations during run time.

The run time memory requirement consists primarily of the scratch and persistent memory. The codecs also require an input buffer and output buffer for the passing of data into and out of the codec.

#### 2.1.1 API Handle / Persistent Memory

The codec API stores its data in a structure that is passed via a handle that is a pointer to an opaque object from the application for each API call. All state information and the memory tables that the codec requires are referenced from this structure. This object also forms the static or context memory of the speech codecs. This is the state or history information that is maintained from one codec invocation to the next within the same thread or instance. The codecs expect that the contents of the persistent memory be unchanged by the system apart from the codec library itself for the complete lifetime of the codec operation.

## 2.1.2 Scratch Memory

This is the temporary buffer used by the codec for processing. The contents of this memory region should not be changed if the actual codec execution process is active, that is, if the thread running the codec is inside any API call. This region can be freely used by the system between successive calls to the codec.

## 2.1.3 Input Buffer

This is the buffer used by the algorithm for accepting input data. Before the call to the codec, the input buffer must be completely filled with input data.

## 2.1.4 Output Buffer

This is the buffer in which the algorithm writes the output. This buffer must be made available for the codec before its execution call. The output buffer pointer can be changed by the application between calls to the codec. This allows the codec to write directly to the required output area.

# 2.2 C Language API

Figure 2 shows an overview of the codec flow. The speech codec API consists of query, initialization, and execution functions. In the naming scheme below, `<codec>` is either the codec name (for example, `opus`), or the codec name with an `_enc` or `_dec` suffix for encoder- and decoder-specific functions, respectively.

## 2.2.1 Query Functions: `xa_<codec>_get_<data>`

The query functions are used in the startup and the memory allocation codec stages to obtain information about the version and the memory requirements of the codec library.

## 2.2.2 Initialization Functions: `xa_<codec>_init`

The initialization functions are used to reset the codec to its initial state. Because the codec library is fully reentrant, a process can initialize the codec library multiple times and multiple processes can initialize the same codec library as appropriate.



## 2.2.3 Execution Functions: xa\_<codec>

The execution functions are used to encode and decode speech frames.

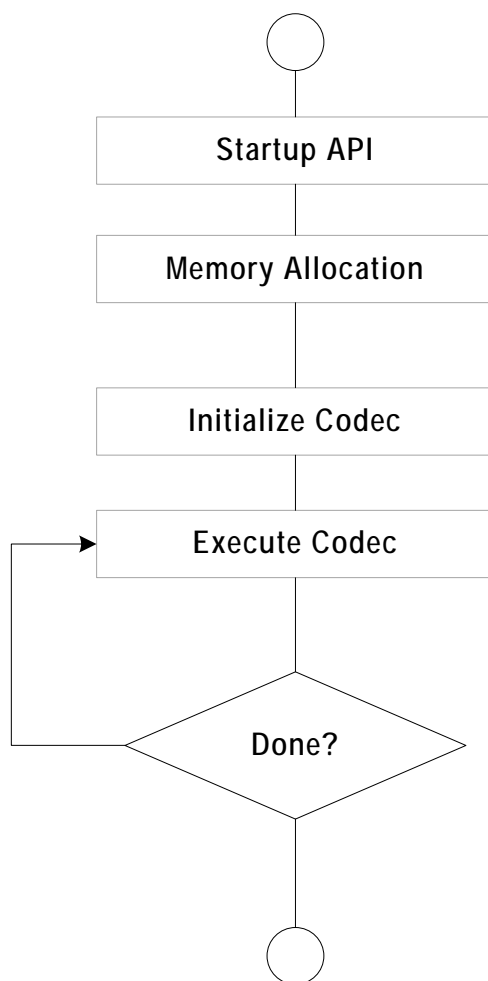


Figure 2 Speech Codec Flow Overview

## 2.3 Generic API Errors

Speech codec API functions return error code of type `XA_ERRORCODE`, that is of type `signed int`. The format of the error codes is defined in the following table.

31	30-15	14 – 11	10 - 6	5 - 0
Fatal	Reserved	Class	Codec	Sub code

The errors that can be returned from the API are subdivided into those that are fatal, which require the restarting of the entire codec, and those that are nonfatal and are provided for information to the application. The class of an error can be either API, Config, or Execution. The API category errors are concerned with the incorrect use of the API. The Config errors are produced when the codec parameters are incorrect or outside the supported usage. The Execution errors are returned after a call to the main encoding or decoding process and indicate situations that have arisen due to the input data.

## 2.4 Common API Errors

These errors are fatal and should not be encountered during normal application operation. They signal that a serious error has occurred in the application that is calling the codec.

### **`XA_API_FATAL_MEM_ALLOC`**

At least one of the pointers passed into the API function is NULL

### **`XA_API_FATAL_MEM_ALIGN`**

At least one of the pointers passed into the API function is not properly aligned

## 2.5 Files Describing the API

Following are the common include files (`include`):

### **`xa_error_standards.h`**

The macros and definitions for all the generic errors

### **`xa_error_handler.h`**

Definitions used by error handling functions

### **`xa_type_def.h`**

All the types required for the API calls

## 3. HiFi DSP Opus Codec API

The HiFi DSP Opus Codec conforms to the generic speech codec API and the codec flow shown in Figure 2. The supported I/O formats, DTX modes, bit rates as well as the API functions, and the files specific to the Opus Codec are described in the following sections.

### 3.1 Files Specific to the Opus Codec

The Opus codec parameter header file (`include/opus_codec`):

```
xa_opus_codec_api.h
```

The Opus codec library (`lib`):

```
xa_opus_codec.a
```

```
xa_opus_dec.a
```

```
xa_opus_enc.a
```

### 3.2 I/O Formats

The input for the encoder is a block of 16-bit speech samples representing 2.5 ... 120 ms of speech frame data. The Opus encoder can have a maximum of six frames per packet. The encoder can accept input signals of sampling frequency from 8 kHz, 12 kHz, 16 kHz, 24 kHz, and 48 kHz.

The decoder processes the encoded bitstream frame-by-frame. Under normal conditions, one complete packet with additional 4 bytes at the beginning is required in the input buffer. These 4 bytes should contain 'range decoder state' variable available in 4 bytes before each packet in the bitstream encoded from conformant Opus encoder. In cases where these additional 4 bytes are not available or if the application wants to skip this check, it can be done through decoder control structure element 'no\_range\_dec\_state' described in Table 3-2. In case of a lost packet, the decoder extracts the FEC data from the next packet and processes it. Thus, in case of packet loss, the application puts two packets in the input buffer for FEC to operate correctly. The decoder outputs 2.5 ... 120 ms frames composed of 16-bit PCM samples. The decoder can generate output signals of sampling frequency from 8 kHz, 12 kHz, 16 kHz, 24 kHz, and 48 kHz.

### 3.3 Control Structure for Opus Codec

The encoder control structure `xa_opus_enc_control_t` is used to communicate various parameters listed in Table 3-1 between codec library and the application.

**Note** All the parameters are of data type **WORD32**.

Table 3-1 Encoder Control Structure `xa_opus_enc_control_t` Parameters

Parameter	Input/Output	Default value	Description
application	input		Application coding mode. Supported configurations: <ul style="list-style-type: none"> <li>- XA_OPUS_APPLICATION_VOIP</li> <li>- XA_OPUS_APPLICATION_AUDIO</li> <li>- XA_OPUS_APPLICATION_RESTRICTED_LOWDELAY</li> </ul> <b>Note:</b> This parameter is not configurable in OPUS-SILK library.
API_sampleRate	input		Input signal sampling rate in Hz. As described in Section 1.3.
API_numChannels	input		Number of channels in input signal; 1/2.
bitRate	input		Bitrate during active speech in bps. Recommended range is 6000 to 510000 as described in Section 1.3. All positive values and -1 (maximum possible bitrate based on other parameters) are accepted.
cbr	input	0	Flag to enable constant bitrate, 0/1.
cvbr	input	0	Flag to enable constrained variable bitrate, 0/1.
bandwidth	input	0	Audio bandwidth (from narrowband to fullband). Supported configurations: <ul style="list-style-type: none"> <li>- XA_OPUS_AUTO (0)</li> <li>- XA_OPUS_BANDWIDTH_NARROWBAND</li> <li>- XA_OPUS_BANDWIDTH_MEDIUMBAND</li> <li>- XA_OPUS_BANDWIDTH_WIDEBAND</li> <li>- XA_OPUS_BANDWIDTH_SUPERWIDEBAND</li> <li>- XA_OPUS_BANDWIDTH_FULLBAND</li> </ul>
max_bandwidth	input		Audio bandwidth (from narrowband to fullband). Supported configurations: <ul style="list-style-type: none"> <li>- XA_OPUS_AUTO (0)</li> <li>- XA_OPUS_BANDWIDTH_NARROWBAND</li> <li>- XA_OPUS_BANDWIDTH_MEDIUMBAND</li> <li>- XA_OPUS_BANDWIDTH_WIDEBAND</li> <li>- XA_OPUS_BANDWIDTH_SUPERWIDEBAND</li> <li>- XA_OPUS_BANDWIDTH_FULLBAND</li> </ul>

Parameter	Input/ Output	Default value	Description
max_payload	input	1500	Max payload size in bytes; [1, XA_OPUS_MAX_BYTES_PER_PACKET-4] range (values outside range ignored).
complexity	input	10	Complexity mode (0-10): 0 is lowest, 5 is medium, and 10 is highest complexity.
SILK_InBandFEC_enabled	input	0	Flag to enable SILK in-band Forward Error Correction (0/1). By default, it is disabled. <b>Note:</b> This parameter is not configurable in OPUS-CELT library.
force_numChannels	input	0	Force number of output channels (0/1/2). Default is forcing disabled (0).
SILK_DTX_enabled	input	0	Flag to enable discontinuous transmission (DTX); 0/1 Default DTX is disabled. 0—disable, 1—enable. <b>Note:</b> This parameter is not configurable in OPUS-CELT library.
packetLossPercentage	input	0	Uplink packet loss in percent (0-100).
force_mode	input	0	Force encode mode. Supported configurations: - XA_OPUS_AUTO (0) - XA_OPUS_MODE_SILK_ONLY - XA_OPUS_MODE_HYBRID - XA_OPUS_MODE_CELT_ONLY <b>Note:</b> This parameter is not configurable in OPUS-SILK and OPUS-CELT libraries.
signal_type	input	0	Configures the type of signal being encoded. Supported configurations: - XA_OPUS_AUTO (0) - XA_OPUS_SIGNAL_VOICE - XA_OPUS_SIGNAL_MUSIC <b>Note:</b> This parameter is not configurable in OPUS-SILK and OPUS-CELT libraries.
reset_state	input/ output	0	Resets the encoder state to be equivalent to a freshly initialized state, 0/1. 0 – no reset 1 – reset the encoder <b>Note:</b> Non-zero values are treated as 1.
variable_duration	Input	0	Deprecated. Not used by the library.

The decoder control structure `xa_opus_dec_control_t` communicates various parameters listed in Table 3-2 between the codec library and the application.

**Note** All the parameters are of data type **WORD32** except for stream\_map which is an array of UWORD8.

Table 3-2 Decoder Control Structure xa\_opus\_dec\_control\_t Parameters

Parameter	Input/Output	Default value	Description
API_sampleRate	input		Output signal sampling rate in Hz. As described in Section 1.3.
API_numChannels	input		Number of channels of output signal; 1/2 if channel_mapping is 0, 1- XA_OPUS_MAX_NUM_CHANNELS if channel_mapping is 1.
SILK_InBandFEC_enabled	input	0	Flag to enable SILK in-band Forward Error Correction (0/1). 0–disable, 1–enable. <b>Note:</b> This parameter is not configurable in OPUS-CELT library.
gain	input	0	Decoder gain adjustment, [-32768, 32767] range. $gain = \text{pow}(10, x/(20.0*256))$
lostFlag	input	0	Packet loss indicator, 0 - no loss, 1 – loss
framesPerPacket	output		Frames per packet 1, 2, 3, 4, 5, 6.
moreInternalDecoder Frames	output		Flag to indicate that the decoder has remaining payloads internally. This flag will be set to one if there are still some bytes to be decoded in the packet. It will be set to zero after decoding all the frames in the packet. Application shall load next packet only when this flag becomes zero.
reset_state	input/output	0	This parameter is currently not used by decoder and will not affect decoding.
no_range_dec_state	input	0	'Range decoder state' conformance check variable control (Ref: RFC6716 - Section 6) 1: Excluded 'Range decoder state' variable in input payload 0: Included 'Range decoder state' variable in input payload
The following elements are required for Ogg container/multistream decode support and can be parsed from valid Opus header.			
version	input	0	Bitstream version from Opus Header. Only major version 0 streams are supported.
nb_streams	Input		Total number of streams, 1 – XA_OPUS_MAX_NUM_STREAMS, should be set to 1 for raw opus streams.

Parameter	Input/ Output	Default value	Description
<code>nb_coupled</code>	Input		Total number of coupled streams, 0 – <code>nb_streams-1</code> , For raw opus streams: should be set to 0 for mono decoding, 1 for stereo decoding
<code>channel_mapping</code>	Input	0	Channel mapping family; 0: RTP mapping <sup>2</sup> , allowed number of channels 1 or 2. 1: Vorbis channel mapping <sup>3</sup> , allowed number of channels 1 to 8 (Ref: RFC7845 - Section 5.1.1) Should be set to 0 for raw Opus streams.
<code>stream_map[XA_OPUS_MAX_NUM_CHANNELS]</code>	Input		Output channel map (ignored if <code>channel_mapping</code> is 0); Array of <code>XA_OPUS_MAX_NUM_CHANNELS</code> unsigned chars with range - 0 to ( <code>nb_streams+nb_coupled-1</code> ): route corresponding stream (for interpretation of channels refer to RFC7845- Section 5.1.1.2), 255: output silence (Ref: RFC7845 - Section 5.1.1)

<sup>2</sup> RFC7845 Section 5.1.1.1<sup>3</sup> RFC7845 Section 5.1.1.2

## 3.4 API Functions

The following sections specify the Opus codec API functions relevant to each stage in the codec flow.

### 3.4.1 Startup Stage

The API startup functions described in Table 3-3 get the various identification strings from the codec library. They are for information only and their usage is optional. These functions do not take any input arguments and return `const char *`.

Table 3-3 Library Identification Functions

Function	Description
<code>xa_opus_get_lib_name_string</code>	Get the name of the library.
<code>xa_opus_get_lib_version_string</code>	Get the version of the library.
<code>xa_opus_get_lib_api_version_string</code>	Get the version of the API.

#### Example

```
const char *name = xa_opus_get_lib_name_string();  
const char *ver = xa_opus_get_lib_version_string();  
const char *apiver = xa_opus_get_lib_api_version_string();
```

#### Errors

None



## 3.4.2 Memory Allocation Stage

During the memory allocation stage, the application must reserve the necessary memory for the Opus Encoder and Decoder API handles (persistent state) and scratch buffers. The required alignment of the handles and the scratch buffers is 8 bytes. The application can use the functions listed in Table 3-4 to query the codec library for the required size of each buffer.

While input and output frame buffers are required for the operation of the codec, they do not need to be reserved at this stage. Pointers to the frame buffers are passed in each invocation of the main codec execution function. The size and alignment requirements of the I/O buffers are specified in Section 3.4.4.

Table 3-4 Memory Management Functions

Function	Description
<code>xa_opus_enc_get_handle_byte_size</code>	Returns the size of the Opus Encoder API handle (persistent state) in bytes.
<code>xa_opus_dec_get_handle_byte_size</code>	Returns the size of the Opus Decoder API handle (persistent state) in bytes.
<code>xa_opus_enc_get_scratch_byte_size</code>	Returns the size of the Opus Encoder scratch buffer in bytes.
<code>xa_opus_dec_get_scratch_byte_size</code>	Returns the size of the Opus Decoder scratch buffer in bytes.

### Example

```
WORD32 enc_handle_size, dec_handle_size;
WORD32 enc_scratch_size, dec_scratch_size;
enc_handle_size = xa_opus_enc_get_handle_byte_size(
    WORD32 numChannels);
dec_handle_size = xa_opus_dec_get_handle_byte_size(
    WORD32 nb_streams, WORD32 nb_coupled);
```

For Opus Celt library,

```
enc_scratch_size = xa_opus_enc_get_scratch_byte_size (
    WORD32 numChannels,
    WORD32 sampleRate,
    WORD32 application);
```

For Opus Silk library and Opus library,

```
enc_scratch_size = xa_opus_enc_get_scratch_byte_size (
    WORD32 numChannels,
    WORD32 sampleRate);

dec_scratch_size = xa_opus_dec_get_scratch_byte_size(
    WORD32 channel_mapping);
```

### Errors

None

### 3.4.3 Initialization Stage

In the initialization stage, the application points the Opus codec to its API handle. The application also specifies various other parameters related to the operation of the codec and places the codec in its initial state. The API functions for Opus encoder and decoder initialization are specified in Table 3-5 and Table 3-6, respectively.

#### Opus Encoder Initialization Function

Table 3-5 Opus Encoder Initialization Function

Function	<code>xa_opus_enc_init</code>
Syntax	<pre>XA_ERRORCODE xa_opus_enc_init (xa_codec_handle_t handle,                   xa_opus_enc_control_t *enc_control);</pre>
Description	Resets the encoder API handle into its initial state. Sets up the encoder using supplied configuration. It also returns the current configuration of encoder in <code>enc_control</code> structure. You can modify this structure later before the execution call to control the behavior of encoder.
Parameters	<p>Input: <code>handle</code>            Pointer to the encoder handle (persistent state)            Required size: see <code>xa_opus_enc_get_handle_byte_size</code>            Required alignment: 8 bytes</p> <p>Input: <code>enc_control</code>            Pointer to the encoder control structure.            Refer to <i>xa_opus_enc_control_t</i> described in Section 3.3.</p>

#### Example

```
handle =(pVOID) malloc(handle_size);
xa_opus_enc_control_t enc_control;

error_code = xa_opus_enc_init (handle,
                              &enc_control);
```

## Errors

**XA\_API\_FATAL\_MEM\_ALLOC**

**XA\_API\_FATAL\_MEM\_ALIGN**

**XA\_OPUS\_CONFIG\_FATAL\_SAMP\_FREQ\_NOT\_SUPPORTED**

Sampling frequency not supported.

**XA\_OPUS\_CONFIG\_FATAL\_NUM\_CHANNEL\_NOT\_SUPPORTED**

Number of channels not supported.

**XA\_OPUS\_CONFIG\_FATAL\_ENC\_INVALID\_APP\_SETTING**

Application mode not supported.

**XA\_OPUS\_CONFIG\_FATAL\_ENC\_INVALID\_BITRATE\_SETTING**

Invalid bit rate.

**XA\_OPUS\_CONFIG\_FATAL\_INVALID\_PARAM\_COMBINATION**

Invalid configuration parameter combination. (Not used)

**XA\_OPUS\_EXECUTE\_FATAL\_INIT\_FAILURE**

Error occurred in initializing the encoder.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_FORCE\_CH\_SETTING**

Invalid encoder channel force setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_MAX\_BANDWIDTH\_SETTING**

Invalid encoder maximum bandwidth setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_BANDWIDTH\_SETTING**

Invalid encoder bandwidth setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_COMPLEXITY\_SETTING**

Invalid encoder complexity setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_PACKET\_LOSS\_PERC\_SETTING**

Invalid encoder expected packet loss percentage setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_FORCE\_MODE\_SETTING**

Invalid encoder force mode setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_SIGNAL\_TYPE\_SETTING**

Invalid encoder signal type setting.

**XA\_OPUS\_EXECUTE\_NONFATAL\_BAD\_ARG**

Invalid argument setting.

## Opus Decoder Initialization Function

Table 3-6 Opus Decoder Initialization Function

Function	<code>xa_opus_dec_init</code>
Syntax	<code>XA_ERRORCODE</code> <code>xa_opus_dec_init (</code> <code>xa_codec_handle_t handle,</code> <code>xa_opus_dec_control_t *dec_control)</code>
Description	Resets the decoder API handle into its initial state. Sets up the decoder to run using the supplied configuration in the specified encoded speech format.
Parameters	Input: <code>handle</code> Pointer to the decoder handle (persistent state) Required size: see <code>xa_opus_dec_get_handle_byte_size</code> Required alignment: 8 bytes  Input: <code>dec_control</code> Pointer to the decoder control structure. Refer to <i>xa_opus_dec_control_t</i> described in Section 3.3.

### Example

```
dec_handle = (pVOID)malloc(handle_size);
xa_opus_dec_control_t dec_control;
error_code = xa_opus_dec_init(dec_handle,
                             &dec_control);
```

### Errors

**XA\_API\_FATAL\_MEM\_ALLOC**

**XA\_API\_FATAL\_MEM\_ALIGN**

**XA\_OPUS\_EXECUTE\_FATAL\_INIT\_FAILURE**

Opus decoder init failure.

**XA\_OPUS\_CONFIG\_FATAL\_SAMP\_FREQ\_NOT\_SUPPORTED**

Not valid setting of sampling frequency.

**XA\_OPUS\_CONFIG\_FATAL\_NUM\_CHANNEL\_NOT\_SUPPORTED**

Number of channels not supported.

**XA\_OPUS\_CONFIG\_FATAL\_INVALID\_PARAM\_COMBINATION**

Invalid configuration parameter combination. Indicates that either channel\_mapping and API\_numChannels values are incompatible or nb\_coupled is more than nb\_streams.

**XA\_OPUS\_CONFIG\_FATAL\_DEC\_NUM\_STREAMS\_NOT\_SUPPORTED**

Number of streams is not supported by decoder.

**XA\_OPUS\_CONFIG\_FATAL\_DEC\_OPUS\_BITSTREAM\_VERSION\_NOT\_SUPPORTED**

Bitstream version not supported (Only major version 0 is supported).

**XA\_OPUS\_CONFIG\_FATAL\_DEC\_UNKNOWN\_CHANNEL\_MAPPING**

Unknown channel mapping family.

**XA\_OPUS\_CONFIG\_FATAL\_DEC\_BAD\_STREAM\_MAP**

Stream map is not valid for given input stream.

**XA\_OPUS\_CONFIG\_NONFATAL\_DEC\_INVALID\_GAIN\_SETTING**

Invalid decoder gain adjustment setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_DEC\_STREAM\_MAP\_IGNORED**

Output stream map ignored.

### 3.4.4 Execution Stage

The Opus codec processes the input stream and generates the output stream frame-by-frame. Each call to a codec execution function requires one complete frame as input and produces one complete packet as output.

If there is insufficient data in the input buffer, the Opus codec does not consume any bytes and returns a non-fatal error that allows the application to fill in additional data before calling the decoder again.

The Opus encoder takes as input one (2.5 ... 120) ms speech frame containing 16-bit samples. The Opus decoder also process data of a (2.5 ... 120) ms frame. It has a buffer mechanism for extracting FEC data from the next packet. It holds data for the next two packets in the input buffer.

The following macros are used to calculate I/O buffer sizes and configuration of Opus.

Defines with Values	Description
<code>XA_OPUS_MAX_NUM_STREAMS 8</code>	Maximum number of streams supported by decoder.
<code>XA_OPUS_MAX_NUM_CHANNELS 8</code>	Maximum number of channels supported by decoder, encoder support only up to 2 channels.
<code>XA_OPUS_MAX_FRAMES_PER_PACKET 6</code>	Maximum 6 20 ms frames (total 120 ms) per packet.
<code>XA_OPUS_MAX_SAMPLES_PER_FRAME_CELT 960</code>	Maximum number of samples in a frame in CELT mode.
<code>XA_OPUS_MAX_BYTES_CHANNEL_PACKET</code>  <code>XA_OPUS_MAX_SAMPLES_PER_FRAME_CELT * sizeof(WORD16) *</code>  <code>XA_OPUS_MAX_FRAMES_PER_PACKET</code>	Maximum number of bytes in one channel of a packet.
<code>XA_OPUS_MAX_FEC_DELAY 1</code>	Latency in packets in case of data lost.
<code>XA_OPUS_MAX_PACKET_IN_INP_BUF</code>  <code>XA_OPUS_MAX_FEC_DELAY + 1</code>	Number of packets in input buffer in case of packets lost.
<code>XA_OPUS_MAX_BYTES_ENCODED_PACKET 1504</code>	Maximum number of bytes in one encoded packet / maximum number of bytes in input buffer if no packets lost.
<code>XA_OPUS_MAX_DEC_INP_BYTES</code>  <code>XA_OPUS_MAX_BYTES_ENCODED_PACKET *</code>  <code>XA_OPUS_MAX_PACKET_IN_INP_BUF</code>	Max. number of data bytes in input buffer in case of packet loss.

Defines with Values	Description
XA_OPUS_APPLICATION_VOIP 2048	Setting for most VoIP/videoconference applications, where the listening quality and intelligibility matter the most.
XA_OPUS_APPLICATION_AUDIO 2049	Setting for broadcast/high-fidelity application where the decoded audio should be as close as possible to the input.
XA_OPUS_APPLICATION_RESTRICTED_LOWDELAY 2051	Setting only used when lowest-achievable latency is what matters most. Voice-optimized modes cannot be used.
XA_OPUS_AUTO 0	Value of auto/default setting
XA_OPUS_BANDWIDTH_NARROWBAND 1101	4 kHz bandwidth
XA_OPUS_BANDWIDTH_MEDIUMBAND 1102	6 kHz bandwidth
XA_OPUS_BANDWIDTH_WIDEBAND 1103	8 kHz bandwidth
XA_OPUS_BANDWIDTH_SUPERWIDEBAND 1104	12 kHz bandwidth
XA_OPUS_BANDWIDTH_FULLBAND 1105	20 kHz bandwidth
XA_OPUS_MODE_SILK_ONLY 1000	SILK mode
XA_OPUS_MODE_HYBRID 1001	Hybrid mode
XA_OPUS_MODE_CELT_ONLY 1002	CELT mode
XA_OPUS_SIGNAL_VOICE 3001	Signal being encoded is voice.
XA_OPUS_SIGNAL_MUSIC 3002	Signal being encoded is music.

The syntax of the Opus encoder and decoder execution functions is specified in Table 3-7 and Table 3-8, respectively.

## Opus Encoder Execution Function

Table 3-7 Opus Encoder Execution Function

Function	xa_opus_enc
Syntax	<pre> XA_ERRORCODE xa_opus_enc (     xa_codec_handle_t handle,     pWORD16 inp_speech,     pUWORD8 enc_speech,     WORD16 inp_samples,     xa_opus_enc_control_t *enc_control,     WORD16 *out_bytes,     pVOID scratch); </pre>
Description	Encodes one frame of data.
Parameters	Input: handle Pointer to the encoder handle (persistent state) 8 bytes alignment is required.

	<p>Input: <code>inp_speech</code>  Pointer to the input speech pcm samples. There must be at least one frame of data in the input.  8 bytes alignment is required.</p> <p>Output: <code>enc_speech</code>  Pointer to the encoded speech parameters (Opus core frame).  1-byte alignment is required.</p> <p>Input: <code>inp_samples</code>  Number of samples in the input speech buffer.</p> <p>Input/Output: <code>enc_control</code>  Pointer to the encoder control structure.  Refer to <code>xa_opus_enc_control_t</code> described in section 3.3.</p> <p>Output: <code>out_bytes</code>  Number of output bytes generated by the encoder.</p> <p>Input/Output: <code>scratch</code>  Pointer to the scratch memory.  8 bytes alignment is required.</p>
Note	None

### Example

```

WORD16 inp_samples, out_bytes;
pWORD16 inp_speech;
pUWORD8 enc_speech;
xa_opus_enc_control_t enc_control;
pVOID scratch;

error_code = xa_opus_enc(
    xa_codec_handle_t handle,
    inp_speech,
    enc_speech,
    inp_samples,
    &enc_control,
    &out_bytes,
    scratch);

```

### Errors

**XA\_API\_FATAL\_MEM\_ALLOC**

**XA\_API\_FATAL\_MEM\_ALIGN**

**XA\_OPUS\_EXECUTE\_FATAL\_NOT\_INITIALIZED**



Opus encoder is not yet initialized.

**XA\_OPUS\_EXECUTE\_FATAL\_PARAMS\_CHANGED**

Opus parameters changed. Opus must be reinitialized.

**XA\_OPUS\_EXECUTE\_FATAL\_ENC\_INVALID\_NUM\_INP\_SAMPLES**

Invalid (less than or equal to zero) number of input samples.

**XA\_OPUS\_CONFIG\_FATAL\_ENC\_INVALID\_APP\_SETTING**

Application mode not supported.

**XA\_OPUS\_CONFIG\_FATAL\_ENC\_INVALID\_BITRATE\_SETTING**

Invalid bit rate.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_FORCE\_CH\_SETTING**

Invalid encoder channel force setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_MAX\_BANDWIDTH\_SETTING**

Invalid encoder max. bandwidth setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_BANDWIDTH\_SETTING**

Invalid encoder bandwidth setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_COMPLEXITY\_SETTING**

Invalid encoder complexity setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_PACKET\_LOSS\_PERC\_SETTING**

Invalid encoder expected packet loss percentage setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_FORCE\_MODE\_SETTING**

Invalid encoder force mode setting.

**XA\_OPUS\_CONFIG\_NONFATAL\_ENC\_INVALID\_SIGNAL\_TYPE\_SETTING**

Invalid encoder signal type setting.

**XA\_OPUS\_EXECUTE\_NONFATAL\_INVALID\_FORCED\_MODE\_SETTINGS**

Invalid force mode setting used.

**XA\_OPUS\_EXECUTE\_NONFATAL\_BAD\_ARG**

Invalid argument setting.

**XA\_OPUS\_EXECUTE\_FATAL\_ENC\_OUT\_BUF\_TOO\_SHORT**

Encoder output buffer too short.

**XA\_OPUS\_EXECUTE\_NONFATAL\_INTERNAL\_ERROR**

Internal error.

## Opus Decoder Execution Function

Table 3-8 Opus Decoder Execution Function

Function	<code>xa_opus_dec</code>
Syntax	<pre> XA_ERRORCODE xa_opus_dec (     xa_codec_handle_t handle,     pWORD8 enc_speech,     pWORD16 synth_speech,     const WORD32 num_bytes_in,     xa_opus_dec_control_t *dec_control,     WORD16 *num_samples_out,     pVOID scratch); </pre>
Description	Decodes one frame of data
Parameters	<p>Input: <code>handle</code>  Pointer to the decoder handle (persistent state)  8 bytes alignment is required.</p> <p>Input: <code>enc_speech</code>  Pointer to the encoded speech parameters (Opus core frame).  1 byte alignment is required.</p> <p>Output: <code>synth_speech</code>  Pointer to the synthesized speech containing 16-bit pcm samples.  4 bytes alignment is required.</p> <p>Input: <code>num_bytes_in</code>  Number of bytes in the input buffer.</p> <p>Input: <code>dec_control</code>  Pointer to the decoder control structure.  Refer to <i>xa_opus_dec_control_t</i> described in Section 3.3.</p> <p>Output: <code>num_samples_out</code>  Number of output samples generated by the decoder.</p> <p>Input/Output: <code>scratch</code>  Pointer to the scratch memory.  8 bytes alignment is required.</p>
Note	None

### Example

```
WORD16 num_samples_out;
```

```
WORD32 num_bytes_in;
pUWORD8 enc_speech;
pWORD16 synth_speech;
xa_opus_dec_control_t dec_control;
pVOID scratch;

error_code = xa_opus_dec (
    xa_codec_handle_t handle,
    enc_speech,
    synth_speech,
    num_bytes_in,
    &dec_control,
    &num_samples_out,
    scratch);
```

## Errors

### **XA\_API\_FATAL\_MEM\_ALLOC**

### **XA\_API\_FATAL\_MEM\_ALIGN**

### **XA\_OPUS\_EXECUTE\_FATAL\_NOT\_INITIALIZED**

Opus decoder is not yet initialized.

### **XA\_OPUS\_EXECUTE\_FATAL\_PARAMS\_CHANGED**

Opus parameters changed. Opus must be reinitialized.

### **XA\_OPUS\_CONFIG\_NONFATAL\_DEC\_INVALID\_GAIN\_SETTING**

Invalid decoder gain adjustment setting.

### **XA\_OPUS\_EXECUTE\_FATAL\_DEC\_PAYLOAD\_ERROR**

The compressed data passed is corrupted.

### **XA\_OPUS\_EXECUTE\_NONFATAL\_BAD\_ARG**

Invalid arguments setting.

### **XA\_OPUS\_EXECUTE\_NONFATAL\_INSUFFICIENT\_DATA**

Insufficient data.

### **XA\_OPUS\_EXECUTE\_NONFATAL\_INTERNAL\_ERROR**

Internal error.

### **XA\_OPUS\_EXECUTE\_NONFATAL\_INVALID\_PACKET**

Invalid packet.

### **XA\_OPUS\_EXECUTE\_NONFATAL\_UNSUPPORTED\_MODE**

Invalid Mode detected by standalone SILK/CELT mode library.

**XA\_OPUS\_EXECUTE\_NONFATAL\_HYBRID\_MODE\_DECODED**

Hybrid Mode frame detected for standalone SILK mode library, Decoded frame with limited quality.

## 4. Introduction to the Example Test Bench

The Opus Codec library is provided with two sample test bench applications: one for the encoder and one for the decoder. The supplied test benches consist of the following files:

### Test bench source files (test/src)

- `xa_opus_decoder_sample_testbench.c`
- `xa_opus_encoder_sample_testbench.c`
- `xa_opus_codec_error_handler.c`
- `opus_header.c`
- `xa_common_error_handler.c`
- `xa_ogg_lib_error_handler.c`

### Makefile to build the executables (test/build)

- `makefile_testbench_sample`

### 4.1 Making Executable

This section details how to build the testbench and the required libraries. You can build both the encoder and decoder testbench or a specific encoder or decoder testbench. Similarly, you can either build both libraries or a particular library.

## Building OPUS Applications

### Building Testbench Applications

#### ■ Build Encoder and Decoder Testbench for Opus, Opus-SILK, and Opus-CELT

1. In the command prompt, navigate to the `test/build` directory.
2. Enter the following command:  
`xt-make -f makefile_testbench_sample clean all`

The Opus encoder (`xa_opus_enc_test`) and the Opus decoder (`xa_opus_dec_test`) example test bench is built using the `xa_opus_codec.a` library.

The Opus-SILK encoder (`xa_opus_silk_enc_test`) and the Opus-SILK decoder (`xa_opus_silk_dec_test`) example test bench is built using the `xa_opus_silk_codec.a` library.

The Opus-CELT encoder (`xa_opus_celt_enc_test`) and the Opus-CELT decoder (`xa_opus_celt_dec_test`) example test bench is built using the `xa_opus_celt_codec.a` library.

### ▪ Build Either an Encoder or a Decoder Testbench for Opus, Opus-SILK, and Opus-CELT

1. In the command prompt, navigate to the test/build directory.
2. Enter the following command:

```
xt-make -f makefile_testbench_sample clean
[opus_dec|opus_silk_dec|opus_celt_dec|opus_enc|opus_silk_enc|opus_celt_
enc]
```

The encoder example test bench `xa_opus_enc_test/xa_opus_silk_enc_test/xa_opus_celt_enc_test` or the decoder example test bench `xa_opus_dec_test/xa_opus_silk_dec_test/xa_opus_celt_dec_test` is built.

## Building Libraries

### ▪ Build Libraries for Opus, Opus-SILK, and Opus-CELT

If you have source code distribution for the codec package, you must build the Opus codec libraries before you build the test bench.

1. In the command prompt, navigate to the build directory.
2. Enter the following command:

```
xt-make clean all install
```

The Opus codec libraries, namely `xa_opus_codec.a`, `xa_opus_enc.a`, `xa_opus_dec.a`, `xa_opus_silk_codec.a`, `xa_opus_silk_enc.a`, `xa_opus_silk_dec.a`, `xa_opus_celt_codec.a`, `xa_opus_celt_enc.a`, and `xa_opus_celt_dec.a` are built and copied to the `lib` directory..

### ▪ Build Either an Encoder or a Decoder Library for Opus, Opus-SILK, Opus-CELT

1. In the command prompt, navigate to the build directory.
2. Enter the following command:

```
xt-make clean [opus_dec install_dec|opus_silk_dec install_silk_dec|
opus_celt_dec install_celt_dec|opus_enc install_enc|opus_silk_enc
install_silk_enc|opus_celt_enc install_celt_enc]
```

The encoder `xa_opus_enc.a`, `xa_opus_silk_enc.a`, and `xa_opus_celt_enc.a` or the decoder `xa_opus_dec.a`, `xa_opus_silk_dec.a`, and `xa_opus_celt_dec.a` libraries are built and copied to the `lib` directory.

## XWS Package

---

**Note** For information on building and executing the application from a Windows-based (.xws) based release package, refer to the `readme.html` file available in the imported application project.

---

In the XWS package, by default `testxa_opus_dec` decoder testbench project depends on the following:

- `ulibxa_opus_codec` library project in object .xws package.
- `libxa_opus_codec` library project in source .xws package.

## Switch Between Projects

To switch to the decoder ulibxa\_opus\_dec, perform the following steps in Xtensa Xplorer:

1. In the **Project Explorer** area:
  - a. Click the triangle next to ulibxa\_opus\_dec to expand the folder.
  - b. Right-click ulibxa\_opus\_dec/lib/xa\_opus\_dec.a and select **Unmanaged Binary Info**.
  - c. Select the appropriate config (for example, AE\_HiFi3\_LE5) and click **OK**.
2. Right-click testxa\_opus\_dec and select **Library Dependencies...**  
ulibxa\_opus\_dec/lib/xa\_opus\_dec.a (AE\_HiFi3\_LE5) is shown in the Available libraries area.  
Select an item and click **Add**. The item is shown in the Selected libraries area.
3. Select ulibxa\_opus\_codec/lib/xa\_opus\_codec.a (<none>) and click **Remove**, then click **Apply** and **OK**.

To switch to the decoder libxa\_opus\_dec, perform the following steps in Xtensa Xplorer:

1. In the **Project Explorer** area, right-click testxa\_opus\_dec and select **Library Dependencies...**
2. In the **Available libraries** area, select libxa\_opus\_dec and click **Add**.  
The item is shown in the Selected libraries area.
3. In the **Selected libraries** area, select libxa\_opus\_codec and click **Remove**, then click **Apply** and **OK**.

Similarly, the above steps can be used to switch to the encoder library projects ulibxa\_opus\_enc or libxa\_opus\_enc by replacing “dec” with “enc”.

The above steps are for Opus, similarly, they can be used for Opus-SILK/Opus-CELT by replacing opus with opus\_silk/opus\_celt.

## 4.2 Usage

### 4.2.1 OPUS Usage

The sample application executable can be run with direct command-line options or with a parameter file.

#### Encoder

The sample application encoder executable can be run from the command line as follows:

```
xt-run xa_opus_enc_test -app:<application> -fs:<sampling rate> -
numch:<number of channels> -bps:<bit rate> [options] -infile:<infile> -
ofile:<outfile>
```

Where:

<application>:	voip   audio   restricted-lowdelay
<sampling rate>:	8000   12000   16000   24000   48000;
<number of channels>:	1   2;
<bit rate>:	Recommended target bit rate<6000..510000> as described in Section 1.3; positive values outside the recommended range and -1 (maximum possible bitrate based on other parameters) are also accepted (this behavior is consistent with reference code[ 2]).
<infile>:	input speech file;
<outfile>:	output encoded file;
[options]:	
-force_mode:	<hybrid silk celt> forces the encoding mode; default: auto
-cbr:	<0/1> enable constant bitrate; default: variable bitrate;
-cvbr:	<0/1> enable constrained variable bitrate; default: unconstrained;
-bandwidth:	<NB MB WB SWB FB> audio bandwidth (from narrowband to fullband); default: depends on sampling rate;
-framesize:	<2.5 5 10 20 40 60 80 100 120> frame size in ms; default: 20;
-max_payload:	<bytes> maximum payload size in bytes, (1- XA_OPUS_MAX_BYTES_ENCODED_PACKET-4); default: 1500;(Ignored if out of range);
-complexity:	<comp> complexity, 0 (lowest) ... 10 (highest); default: 10;
-inbandfec:	<0/1> enable SILK inband FEC, default: disable;



-forcemono:	<0/1> force mono encoding, even for stereo input, default: disable;
-dtx:	<0/1> enable SILK DTX, default:disable;
-loss:	<perc> uplink loss estimate, in percent (0-100); default: 0;
-sweep:	<bps> sweep bitrate mode, bps – bitrate step, default: 0, if non-zero, used as a step-size to change the bitrate, recommended bitrate range<6000..510000>;
-sweep_max:	<bps> maximum bitrate in sweep bitrate mode, default: 0;
-random_framesize:	<0/1> enable random frame size, default: disable;
-random_fec:	<0/1> enable random SILK inband FEC, default: disable;
-silk8k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (8 kHz) according to predefined list, default: disable;
-silk12k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (12 kHz) according to predefined list, default: disable
-silk16k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (16 kHz) according to predefined list, default: disable;
-hybrid24k_test:	<0/1> enable dynamic changing of frame size and number of channels in Hybrid mode (24 kHz) according to predefined list, default: disable;
-hybrid48k_test:	<0/1> enable dynamic changing of frame size and number of channels in Hybrid mode (48 kHz) according to predefined list, default: disable;
-celt_test:	<0/1> enable dynamic changing of frame size, number of channels and bandwidth in CELT mode according to predefined list, default: disable;
-celt_hq_test:	<0/1> enable dynamic changing of frame size and number of channels in CELT mode (FB only) according to predefined list, default: disable.

## Decoder

The sample application decoder executable can be run from the command line as follows:

```
xt-run xa_opus_dec_test [options] -ifile:<infile> -ofile:<outfile>
```

Where:

<infile>:	input encoded speech file;
<outfile>:	output file with decoded samples;
[options]:	
-fs:	8000   12000   16000   24000   48000; default: 48000 (for raw opus streams)
-numch:	1-8; default: 2 (for raw opus streams)
-inbandfec:	<0/1> enable SILK inband FEC (non-zero value is treated as 1), default: disable;
-loss:	<perc> simulate packet loss, in percent (0- 100); default: 0;
-btype:	<ogg/raw> bitstream type, ogg or raw; default: raw;
-maxpage:n	Max Ogg page size: 'n' in kBytes, range: [1, 1024], default: 64;
-strmap:<map>	Output channel map, string of max. 8 characters, range for each character 0-8. 0-7 to route the corresponding channel from decoder output, 8 for silence, for streams with less than 8 channels (n) range becomes 0-(n- 1), default: taken from opus header. For interpretation of channels please refer to RFC7845 Section 5.1.1.2.

---

**Note** Default values for options `-fs` and `-numch` are applicable only for raw opus streams. For Ogg opus streams, `-fs` and `-numch` are taken from ogg stream header without any check if not passed on command line.

**Note** If value for `-strmap` is specified partially, remaining channels are silenced, if it is longer than number of channels then extra values are ignored. This option is ignored for raw opus streams and channel mapping family 0 ogg opus streams.

---

If no command line arguments are given, the encoder or decoder application reads the commands from the parameter file `paramfilesimple_encode.txt` or `paramfilesimple_decode.txt`, respectively.

Following is the syntax for writing the `paramfilesimple` file:

```
@Start

@Input_path <path to be appended to all input files>

@Output_path <path to be appended to all output files>
<command line 1>
<command line 2>
....
@Stop
```

The Opus encoder and decoder can be run for multiple test files using the different command lines. The syntax for command lines in the parameter file is the same as the syntax for specifying options on the command line to the test bench program.

---

**Note** All the `@<command>`s should be at the first column of a line except the `@Newline` command.

**Note** All the `@<command>`s are case sensitive. If the command line in the parameter file has to be separated to two parts on two different lines, use the `@Newline` command.

For example,  
<command line part 1> @ Newline  
<command line part 2>

**Note** Blank lines will be ignored.

**Note** Individual lines can be commented out using `"/"` at the beginning of the line.

---

## 4.2.2 OPUS-SILK Usage

The sample application executable can be run with direct command-line options or with a parameter file.

### Encoder

The sample application encoder executable can be run from the command line as follows:

```
xt-run xa_opus_silk_enc_test -fs:<sampling rate> -numch:<channels> -
bps:<bit rate> [options] -infile:<input file> -ofile:<output file>
```

Where:

<sampling rate>:	8000   12000   16000   24000   48000;
<number of channels>:	1   2;
<bit rate>:	Recommended target bit rate<6000..510000> as described in Section 1.3; positive values outside the recommended range and -1 (maximum possible bitrate based on other parameters) are also accepted (this behavior is consistent with reference code[2]).
<infile>:	input speech file;
<outfile>:	output encoded file;
[options]:	
-cbr:	<0/1> enable constant bitrate; default: variable bitrate;
-cvbr:	<0/1> enable constrained variable bitrate; default: unconstrained;
-bandwidth:	<NB MB WB>audio bandwidth (from narrowband to wideband); default: sampling rate;
-framesize:	<10 20 40 60 80 100 120> frame size in ms; default: 20;
-max_payload:	<bytes> maximum payload size in bytes, (1-XA_OPUS_MAX_BYTES_ENCODED_PACKET-4); default: 1500;(Ignored if out of range);
-complexity:	<comp> complexity, 0 (lowest) ... 10 (highest); default: 10;
-inbandfec:	<0/1> enable SILK inband FEC, default: disable;
-forcemono:	<0/1> force mono encoding, even for stereo input, default: disable;

-dtx:	<0/1> enable SILK DTX, default:disable
-loss:	<perc> uplink loss estimate, in percent (0-100); default: 0;
-sweep:	<bps> sweep bitrate mode, bps – bitrate step, default: 0, if non-zero, used as a step-size to change the bitrate, recommended bitrate range<6000..510000>;
-sweep_max:	<bps> maximum bitrate in sweep bitrate mode, default: 0;
-random_framesize:	<0/1> enable random frame size, default: disable;
-random_fec:	<0/1> enable random SILK inband FEC, default: disable;
-silk8k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (8 kHz) according to predefined list, default: disable;
-silk12k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (12 kHz) according to predefined list, default: disable
-silk16k_test:	<0/1> enable dynamic changing of frame size and number of channels in SILK mode (16 kHz) according to predefined list, default: disable;

## Decoder

The sample application decoder executable can be run from the command line as follows:

```
xt-run xa_opus_silk_dec_test -fs:<sampling rate> -numch:<channels>
[options] -ifile:<input_file> -ofile:<output_file>
```

Where:

<input_file>:	input encoded speech file;
<output_file>:	output file with decoded samples;
[options]:	
-fs:	8000   12000   16000   24000   48000; default: 48000 (for raw opus streams)
-numch:	1-8; default: 2 (for raw opus streams)
-inbandfec:	<0/1> enable SILK inband FEC (non-zero value is treated as 1), default: disable;
-loss:	<perc> simulate packet loss, in percent (0-100); default: 0;
-btype:	<ogg/raw> bitstream type, ogg or raw; default: raw;
-maxpage:n	Max Ogg page size: 'n' in kBytes, range: [1, 1024], default: 64;
-strmap:<map>	Output channel map, string of max. 8 characters, range for each character 0-8. 0-7 to route the corresponding channel from decoder output, 8 for silence, for streams with less than 8 channels (n) range becomes 0-(n-1), default: taken from opus header. For interpretation of channels please refer to RFC7845 Section 5.1.1.2.

---

**Note** Default values for options `-fs` and `-numch` are applicable only for raw opus streams. For Ogg opus streams, `-fs` and `-numch` are taken from ogg stream header without any check if not passed on command line.

**Note** If value for `-strmap` is specified partially, remaining channels are silenced, if it is longer than number of channels then extra values are ignored. This option is ignored for raw opus streams and channel mapping family 0 ogg opus streams.

---

If no command line arguments are given, the encoder or decoder application reads the commands from the parameter file `paramfilesimple_encode_silk.txt` or `paramfilesimple_decode_silk.txt`, respectively.

## 4.2.3 OPUS-CELT Usage

The sample application executable can be run with direct command-line options or with a parameter file.

### Encoder

The sample application encoder executable can be run from the command line as follows:

```
xt-run xa_opus_celt_enc_test -app:<application> -fs:<sampling rate> -
numch:<channels> -bps:<bit rate> [options] -ifile:<input file> -
ofile:<output file>
```

Where:

<application>:	audio   restricted-lowdelay
<sampling rate>:	8000   12000   16000   24000   48000;
<number of channels>:	1   2;
<bit rate>:	Recommended target bit rate<6000..510000> as described in Section 1.3; positive values outside the recommended range and -1 (maximum possible bitrate based on other parameters) are also accepted (this behavior is consistent with reference code[2]).
<input file>:	input speech file;
<output file>:	output encoded file;
[options]:	
-cbr:	<0/1> enable constant bitrate; default: variable bitrate;
-cvbr:	<0/1> enable constrained variable bitrate; default: unconstrained;
-bandwidth:	< NB MB WB SWB FB > audio bandwidth (from narrowband to fullband); default: sampling rate;
-framesize:	< 2.5 5 10 20 40 60 80 100 120> frame size in ms; default: 20;
-max_payload:	<bytes> maximum payload size in bytes, (1-XA_OPUS_MAX_BYTES_ENCODED_PACKET-4); default: 1500;(Ignored if out of range);
-complexity:	<comp> complexity, 0 (lowest) ... 10 (highest); default: 10;

-forcemono:	<0/1> force mono encoding, even for stereo input, default: disable;
-loss:	<perc> uplink loss estimate, in percent (0-100); default: 0;
-sweep:	<bps> sweep bitrate mode, bps – bitrate step, default: 0, if non-zero, used as a step-size to change the bitrate, recommended bitrate range<6000..510000>;
-sweep_max:	<bps> maximum bitrate in sweep bitrate mode, default: 0;
-random_framesize:	<0/1> enable random frame size, default: disable;
-celt_test:	<0/1> enable dynamic changing of frame size, number of channels and bandwidth in CELT mode according to predefined list, default: disable;
-celt_hq_test:	<0/1> enable dynamic changing of frame size and number of channels in CELT mode (FB only) according to predefined list, default: disable.



## Decoder

The sample application decoder executable can be run from the command line as follows:

```
xt-run xa_opus_celt_dec_test -fs:<sampling rate> -numch:<channels>
[options] -ifile:<input_file> -ofile:<output_file>
```

Where:

<input_file>:	input encoded speech file;
<output_file>:	output file with decoded samples;
[options]:	
-fs:	8000   12000   16000   24000   48000; default: 48000 (for raw opus streams)
-numch:	1-8; default: 2 (for raw opus streams)
-loss:	<perc> simulate packet loss, in percent (0-100); default: 0;
-btype:	<ogg/raw> bitstream type, ogg or raw; default: raw;
-maxpage:n	Max Ogg page size: 'n' in kBytes, range: [1, 1024], default: 64;
-strmap:<map>	Output channel map, string of max. 8 characters, range for each character 0-8. 0-7 to route the corresponding channel from decoder output, 8 for silence, for streams with less than 8 channels (n) range becomes 0-(n-1), default: taken from opus header. For interpretation of channels please refer to RFC7845 Section 5.1.1.2.

---

**Note** Default values for options `-fs` and `-numch` are applicable only for raw opus streams. For Ogg opus streams, `-fs` and `-numch` are taken from ogg stream header without any check if not passed on command line.

**Note** If value for `-strmap` is specified partially, remaining channels are silenced, if it is longer than number of channels then extra values are ignored. This option is ignored for raw opus streams and channel mapping family 0 ogg opus streams.

---

If no command line arguments are given, the encoder or decoder application reads the commands from the parameter file `paramfilesimple_encode_celt.txt` or `paramfilesimple_decode_celt.txt`, respectively.

## 5. Appendix – Ogg Container Format Support in Decoder

---

The HiFi Opus decoder supports decoding of Opus streams in Ogg container format. Ogg container format support is provided through a separate HiFi Ogg Parser interface. This HiFi Ogg Parser implements Ogg encapsulation standard defined in RFC 3533 <sup>[3]</sup> and RFC 7845 <sup>[4]</sup> and is based on libogg 1.3.2 <sup>[5]</sup>.

---

**Note** The HiFi Ogg Parser only supports parsing of Ogg streams (decode) and not packing of Ogg streams (encode) in this version.

---

The HiFi Ogg Parser performance is mentioned in Section 1.4. The following sections briefly describe the HiFi Ogg Parser details.

### 5.1 Files Specific to the Ogg Parser

The Ogg Parser parameter header file (`include/ogg_lib`):

```
xa_ogg_lib_api.h
```

### 5.2 I/O Formats

The HiFi Ogg Parser does not put any restriction on alignment and size of input buffer. Smaller input buffer size may require multiple calls to the Ogg Parser process function to parse one Ogg page. The test bench application allocates 4 kBytes input buffer.

The HiFi Ogg Parser does not put any restriction on alignment and size of output buffer.

---

**Note** If the output buffer is not sufficient to hold the produced Opus packet, the HiFi Ogg Parser will return a fatal error indicating required size of output buffer.

---

For more information, see Section 5.4.3. The test bench application uses 3 kBytes output buffer to hold two encoded Opus packets.

## 5.3 Configuration Structure for Ogg Parser

Table 5-1 xa\_ogg\_parse\_init\_cfg\_t Structure Parameters

Parameter Name	Value Type	Range / Supported Values	Default	Description
max_page_size	WORD32	1 to 1024	64	Maximum page size to be allocated in Kbytes. Values outside the range are ignored and default is used in that case.

## 5.4 API Functions

The Ogg Parser API functions relevant to each stage in the codec flow are specified in the following sections.

### 5.4.1 Memory Allocation Stage

During the memory allocation stage, the application needs to reserve the necessary memory for the HiFi Ogg Parser handles (persistent state) and scratch buffers. The required alignment of the handles and the scratch buffers is eight bytes. The application can use the functions listed in Table 5-2 to query the Ogg Parser for the required size of each buffer. The functions take a pointer of type `xa_ogg_parse_init_cfg_t` and return `WORD32`. `xa_ogg_parse_init_cfg_t` is described in Table 5-3.

`xa_ogg_parse_init_cfg_t` is a structure that contains the initialization parameters for this instance of the Ogg Parser. The default initial configuration parameters are used if `NULL` is passed, instead of a valid pointer.

While input and output frame buffers are required for the operation of the component, they do not need to be reserved at this stage. Pointers to the frame buffers are passed in each invocation of the main component execution function.

The size and alignment requirements of the I/O buffers are specified in Section 5.2.

Table 5-2 Memory Management Functions

Function	Description
<code>Xa_ogg_parse_get_handle_byte_size</code>	Returns the size of the HiFi Codec API handle (persistent state) in bytes.
<code>Xa_ogg_parse_get_scratch_byte_size</code>	Returns the size of the HiFi Codec scratch memory.

### Example

```
WORD32 handle_size;  
WORD32 scratch_size;  
handle_size = xa_ogg_parse_get_handle_byte_size(NULL);  
scratch_size = xa_ogg_parse_get_scratch_byte_size(NULL);
```

### Errors

**None**

## 5.4.2 Initialization Stage

In the initialization stage, the application points the HiFi Ogg Parser to its API handle and scratch buffer. The application also specifies various other parameters related to the operation of the Ogg Parser and places the Ogg Parser in its initial state. The API functions for the HiFi Ogg Parser initialization are specified in Table 5-3.

Table 5-3 HiFi Ogg Parser Initialization Function Details

Function	<code>xa_ogg_parse_init</code>
Syntax	<pre>XA_ERRORCODE xa_ogg_parse_init (     xa_codec_handle_t handle,     pVOID scratch,     xa_ogg_parse_init_cfg_t *cfg)</pre>
Description	Resets the HiFi Ogg Parser API handle into its initial state. Sets up the component to run using the supplied scratch buffer and the specified initial configuration parameters.
Parameters	<p><b>Input:</b> <code>handle</code>  Pointer to the component persistent memory. This is an opaque handle.  Required size: See <code>xa_ogg_parse_get_handle_byte_size</code>  Required alignment: 8 bytes</p> <p><b>Input:</b> <code>scratch</code>  Pointer to the component scratch buffer  Required size: See <code>xa_ogg_parse_get_scratch_byte_size</code>  Required alignment: 8 bytes</p> <p><b>Input:</b> <code>p_cfg</code>  Initial configuration parameters (see Section 5.3).</p> <p><b>Note:</b> The initial configuration parameters MUST be identical to those passed during the memory allocation stage.</p>

### Example

```
xa_codec_handle_t handle =
    (xa_codec_handle_t)malloc(handle_size);
pVOID scratch = malloc(scratch_size);
res = xa_ogg_parse_init(handle, scratch, NULL);
```

### Errors

#### **XA\_API\_FATAL\_MEM\_ALLOC**

`handle` or `scratch` is NULL

#### **XA\_API\_FATAL\_MEM\_ALIGN**

`handle` or `scratch` is not aligned correctly

### 5.4.3 Execution Stage

The HiFi Ogg Parser processes the input stream and generates the output stream frame-by-frame. Each call to the component execution function produces one complete Opus packet as output, if sufficient input data is provided. If partial input data is presented, it is buffered internally, and need-more-data is signaled to the application through proper error code. The application fills the input buffer with next input data and call the execution function again.

The codec uses default parameters to perform the processing. These parameters can be changed or queried at any time after the initialization stage.

Table 5-4 Execution Stage Functions

Function	Description
<code>xa_ogg_parse_process</code>	Processes one frame of audio data
<code>xa_ogg_parse_set_param</code>	Sets the value of a particular parameter
<code>xa_ogg_parse_get_param</code>	Returns the value of a particular parameter

The syntax of the execution stage functions is specified in the following tables.

#### HiFi Ogg Parser Process Function

Table 5-5 HiFi Ogg Parser Process Function Details

Function	<code>xa_ogg_parse_process</code>
Syntax	<pre>XA_ERRORCODE xa_ogg_parse_process (     xa_codec_handle_t handle,     pUWORD8 in_data,     pUWORD8 out_data,     pWORD32 num_bytes_in,     pWORD32 num_bytes_out)</pre>
Description	Processes one frame of audio using the current component state.
Parameters	<p><b>Input:</b> handle Opaque component handle.</p> <p><b>Input:</b> in_data A pointer to the input audio stream from which the input data will be read. This is the input buffer. Required alignment: 1 byte</p> <p><b>Output:</b> out_data A pointer to the output audio stream into which the output data will be written. This is the output buffer. Required alignment: 1 byte</p>

	<p><b>Input/Output:</b> num_bytes_in  Pointer to the number of input bytes. This contains the amount of data to be processed. On return, *num_bytes_in is set to the actual amount of data processed.</p> <p><b>Input/Output:</b> num_bytes_out  Pointer to the number of output bytes. This contains the space available in the output buffer, in terms of bytes. On return, *num_bytes_out is set to the actual number of output bytes generated by the codec. In case, if the output space is smaller than output bytes generated, *num_bytes_out would indicate new output space required.</p>
--	--

### Example

```
UWORD8 p_in_data[512];
UWORD8 p_out_data[512];
WORD32 in_samples = 512;
WORD32 out_samples = 512;
res = xa_ogg_parse_process(handle, p_in_data, p_out_data,
                           &in_samples, &out_samples);
```

### Errors

#### **XA\_API\_FATAL\_MEM\_ALLOC**

One of the pointers (handle, p\_in\_data, p\_out\_data, p\_in\_samples, or p\_out\_samples) is NULL.

#### **XA\_API\_FATAL\_MEM\_ALIGN**

Codec handle is not aligned correctly.

#### **XA\_OGG\_EXECUTE\_FATAL\_NOT\_INITIALIZED**

Ogg Parser is not initialized.

#### **XA\_OGG\_EXECUTE\_FATAL\_PAGE\_SIZE\_TOO\_SMALL**

Maximum page size allocated is too small to fit one page for current input stream.

Application should re-initialize Ogg Parser with higher page size.

#### **XA\_OGG\_EXECUTE\_FATAL\_CORRUPTED\_STREAM**

Corrupted input stream, two streams with same Opus serial number detected in input stream.

#### **XA\_OGG\_EXECUTE\_FATAL\_EXTRA\_PKTS\_ON\_HEADER\_PAGE**

Corrupted input stream, extra packets detected on header page.

#### **XA\_OGG\_EXECUTE\_FATAL\_EXTRA\_PKTS\_ON\_TAGS\_PAGE**

Corrupted input stream, extra packets detected on tags page.

#### **XA\_OGG\_EXECUTE\_FATAL\_OUT\_BUF\_TOO\_SMALL**

Output buffer space is too small for output generated for current input stream.

Application should reinitialize Ogg Parser with higher output buffer size, \*num\_bytes\_out should indicate new required size in this case.

**XA\_OGG\_EXECUTE\_NONFATAL\_INSUFFICIENT\_DATA**

Insufficient input data.

Application should call the process function again with new input data.

**XA\_OGG\_EXECUTE\_NONFATAL\_STREAM\_CHANGE**

A new Opus stream (Opus header) is found before end-of-stream for the current stream.

Application should treat the current output packet as Opus header and next output packet as tags packet and process them accordingly. The Opus decoder should be reinitialized with new stream parameters parsed above.

**XA\_OGG\_EXECUTE\_NONFATAL\_PAGE\_IGNORED**

Spurious page ignored (e.g. pages before Opus header page, pages with different serial number than the one currently being decoded).



## HiFi Ogg Parser Set Parameter Function

Table 5-6 HiFi Ogg Parser Set Parameter Function Details

Function	xa_ogg_parse_set_param
Syntax	XA_ERRORCODE xa_ogg_parse_set_param ( xa_codec_handle_t handle, xa_ogg_parse_param_id_t param_id, pVOID p_param_value)
Description	Sets the parameter specified by param_id to the value passed in the buffer pointed to by p_param_value.  <b>Note:</b> This function is provided only for API completeness. There is no config parameter to be set.
Parameters	<b>Input:</b> handle Opaque component handle.  <b>Input:</b> param_id Identifies the parameter to be written. No parameters are supported for this function in this version.  <b>Input:</b> p_param_value A pointer to a buffer that contains the parameter value. Required alignment: 4 bytes

## Errors

### XA\_API\_FATAL\_MEM\_ALLOC

One of the pointers (handle or p\_param\_value) is NULL

### XA\_API\_FATAL\_MEM\_ALIGN

One of the pointers (handle or p\_param\_value) is not aligned correctly.

### XA\_OGG\_EXECUTE\_FATAL\_NOT\_INITIALIZED

Function is called before HiFi Ogg Parser is initialized.

### XA\_OGG\_CONFIG\_NONFATAL\_INVALID\_PARAM

param\_id is not valid.

## HiFi Ogg Parser Get Parameter Function

Table 5-7 HiFi Ogg Parser Get Parameter Function Details

Function	xa_ogg_parse_get_param
Syntax	XA_ERRORCODE xa_ogg_parse_get_param ( xa_codec_handle_t handle, xa_ogg_parse_param_id_t param_id, pVOID p_param_value)
Description	Gets the value of the parameter specified by param_id in the buffer pointed to by p_param_value
Parameters	<b>Input:</b> handle Opaque component handle.  <b>Input:</b> param_id Identifies the parameter to be read. Refer to section 5.4.4 for the list of parameters supported.  <b>Output:</b> p_param_value A pointer to a buffer that is filled with the parameter value when the function returns. Required alignment: 4 bytes

### Example

```
WORD32 param_id = XA_OGG_PARSE_PARAM_PAGE_GRANULE;
WORD64 granule_pos;
res = xa_ogg_parse_get_param(handle, param_id, &granule_pos);
```

### Errors

#### XA\_API\_FATAL\_MEM\_ALLOC

One of the pointers (handle or p\_param\_value) is NULL

#### XA\_API\_FATAL\_MEM\_ALIGN

One of the pointers (handle or p\_param\_value) is not aligned correctly

#### XA\_OGG\_EXECUTE\_FATAL\_NOT\_INITIALIZED

Function is called before HiFi Ogg Parser is initialized

## 5.4.4 HiFi Ogg Parser Parameters

This section describes the parameters that are supported by the `xa_ogg_parse_set_param` and `xa_ogg_parse_get_param` functions described in the previous section. Table 5-8 contains the following columns:

**Parameter name:** Parameter identifier (`param_id`).

**Value type:** A pointer (`p_param_value`) to a variable of this type is to be passed.

**RW:** Indicates whether the parameter can be read (get) and/or written (set).

**Range:** The range or supported values of the parameter value.

**Default:** Default value of the parameter.

**Description:** Brief description of the parameter.

Table 5-8 HiFi Ogg Parser Parameters

Parameter Name	Value Type	RW	Range / Supported Values	Default	Description
<code>XA_OGG_PARSE_PARAM_PAGE_GRANULE</code>	WORD 64	R	Any positive value	NA	Gets the granule position for current Ogg page. The pointer to this variable must be 8 bytes aligned.
<code>XA_OGG_PARSE_PARAM_END_OF_STREAM</code>	WORD 32	R	0, 1	NA	Gets value 1 if end of stream is detected in the stream, else 0.

## 6. Reference

---

- [1] Definition of the Opus Audio Codec @ <http://tools.ietf.org/html/rfc6716>.  
Updates to the Opus Audio Codec draft-valin-codec-opus-update-00 @  
<http://tools.ietf.org/html/draft-valin-codec-opus-update-00>
  
- [2] Reference Source Code (libopus 1.3.1) @ <http://opus-codec.org/downloads/>
  
- [3] The Ogg Encapsulation Format @ <https://www.xiph.org/ogg/doc/rfc3533.txt>
  
- [4] Ogg Encapsulation for Opus Audio Codec @ <https://tools.ietf.org/html/rfc7845>
  
- [5] [downloads.xiph.org/releases/ogg/libogg-1.3.2.tar.gz](https://downloads.xiph.org/releases/ogg/libogg-1.3.2.tar.gz) 5