



SBC Encoder **Programmer's Guide**

For HiFi DSPs and Fusion F1 DSP



Cadence Design Systems, Inc.
2655 Seely Ave.
San Jose, CA 95134
www.cadence.com

© 2022 Cadence Design Systems, Inc. All rights reserved.
Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Trademarks: Trademarks and service marks of Cadence Design Systems, Inc. (Cadence) contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 1-800-862-4522.

All other trademarks are the property of their respective holders.

Patents: Licensed under U.S. Patent Nos. 7,526,739; 8,032,857; 8,209,649; 8,266,560; 8,650,516

Restricted Print Permission: This publication is protected by copyright and any unauthorized use of this publication may violate copyright, trademark, and other laws. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. This statement grants you permission to print one (1) hard copy of this publication subject to the following conditions:

- The publication may be used solely for personal, informational, and noncommercial purposes;
- The publication may not be modified in any way;
- Any copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement,
- The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration; and
- Cadence reserves the right to revoke this authorization at any time, and any such use shall be discontinued immediately upon written notice from Cadence.

Disclaimer: Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. The information contained herein is the proprietary and confidential information of Cadence or its licensors, and is supplied subject to, and may be used only by Cadence's customer in accordance with, a written agreement between Cadence and its customer. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Restricted Rights: Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor.

For further assistance, contact Cadence Online Support at <https://support.cadence.com/>.
Copyright © 2022, Cadence Design Systems, Inc. All rights reserved.

Version: 1.6

Last Updated: March 2022

Cadence Design Systems, Inc.
2655 Seely Ave.
San Jose, CA 95134
www.cadence.com

Contents

1.	Introduction to the HiFi SBC Encoder	1
1.1	SBC Description	1
1.2	Document Overview	1
1.3	HiFi SBC Encoder Specifications	1
1.4	HiFi SBC Encoder Performance	2
1.4.1	SBC Encoder Memory	2
1.4.2	SBC Encoder Timings	3
2.	Generic HiFi Audio Codec API	4
2.1	Memory Management	5
2.1.1	API Object	5
2.1.2	API Memory Table	5
2.1.3	Persistent Memory	5
2.1.4	Scratch Memory	5
2.1.5	Input Buffer	5
2.1.6	Output Buffer	6
2.2	C Language API	6
2.3	Generic API Errors	7
2.4	Commands	8
2.4.1	Start-up API Stage	9
2.4.2	Set Codec-Specific Parameters Stage	9
2.4.3	Memory Allocation Stage	10
2.4.4	Initialize Codec Stage	11
2.4.5	Get Codec-Specific Parameters Stage	12
2.4.6	Execute Codec Stage	12
2.5	Files Describing the API	13
2.6	HiFi API Command Reference	13
2.6.1	Common API Errors	14
2.6.2	XA_API_CMD_GET_LIB_ID_STRINGS	15
2.6.3	XA_API_CMD_GET_API_SIZE	18
2.6.4	XA_API_CMD_INIT	19
2.6.5	XA_API_CMD_GET_MEMTABS_SIZE	23
2.6.6	XA_API_CMD_SET_MEMTABS_PTR	24
2.6.7	XA_API_CMD_GET_N_MEMTABS	25
2.6.8	XA_API_CMD_GET_MEM_INFO_SIZE	26
2.6.9	XA_API_CMD_GET_MEM_INFO_ALIGNMENT	27
2.6.10	XA_API_CMD_GET_MEM_INFO_TYPE	28

2.6.11	XA_API_CMD_GET_MEM_INFO_PRIORITY	30
2.6.12	XA_API_CMD_SET_MEM_PTR	32
2.6.13	XA_API_CMD_INPUT_OVER	33
2.6.14	XA_API_CMD_SET_INPUT_BYTES	34
2.6.15	XA_API_CMD_GET_CURIDX_INPUT_BUF	35
2.6.16	XA_API_CMD_EXECUTE	36
2.6.17	XA_API_CMD_GET_OUTPUT_BYTES	38
3.	HiFi SBC Encoder	39
3.1	Files Specific to the SBC Encoder	40
3.2	SBC Encoder Specific Error Codes	40
3.2.1	API Errors	41
3.2.2	Configuration Errors	41
3.2.3	Execute Errors	42
3.3	Configuration Parameters	43
3.3.1	XA_API_CMD_SET_CONFIG_PARAM	44
3.3.2	XA_API_CMD_GET_CONFIG_PARAM	50
4.	Introduction to the Example Test Bench	51
4.1	Making the Executable	51
4.2	Usage	52
5.	References	54

Figures

Figure 1 HiFi Audio Codec Interfaces	4
Figure 2 API Command Sequence Overview.....	8
Figure 3 Flow Chart for SBC Encoder Integration.....	39

Tables

Table 1-1 Library Memory	2
Table 1-2 Run-Time Memory.....	2
Table 1-3 Timings.....	3
Table 2-1 Codec API	6
Table 2-2 Error Codes Format.....	7
Table 2-3 Commands for Initialization.....	9
Table 2-4 Commands for Setting Parameters.....	9
Table 2-5 Commands for Initial Table Allocation.....	10
Table 2-6 Commands for Memory Allocation	10
Table 2-7 Commands for Initialization.....	11
Table 2-8 Commands for Getting Parameters	12
Table 2-9 Commands for Codec Execution	12
Table 2-10 XA_CMD_TYPE_LIB_NAME subcommand	15
Table 2-11 XA_CMD_TYPE_LIB_VERSION subcommand	16
Table 2-12 XA_CMD_TYPE_API_VERSION subcommand	17
Table 2-13 XA_API_CMD_GET_API_SIZE command	18
Table 2-14 XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS subcommand.....	19
Table 2-15 XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS subcommand	20
Table 2-16 XA_CMD_TYPE_INIT_PROCESS subcommand.....	21
Table 2-17 XA_CMD_TYPE_INIT_DONE_QUERY subcommand	22
Table 2-18 XA_API_CMD_GET_MEMTABS_SIZE command	23
Table 2-19 XA_API_CMD_SET_MEMTABS_PTR command	24
Table 2-20 XA_API_CMD_GET_N_MEMTABS command.....	25
Table 2-21 XA_API_CMD_GET_MEM_INFO_SIZE command.....	26
Table 2-22 XA_API_CMD_GET_MEM_INFO_ALIGNMENT command.....	27
Table 2-23 XA_API_CMD_GET_MEM_INFO_TYPE command.....	28

Table 2-24 Memory Type Indices	28
Table 2-25 XA_API_CMD_GET_MEM_INFO_PRIORITY command	30
Table 2-26 Memory Priorities	31
Table 2-27 XA_API_CMD_SET_MEM_PTR Command	32
Table 2-28 XA_API_CMD_INPUT_OVER command	33
Table 2-29 XA_API_CMD_SET_INPUT_BYTES command	34
Table 2-30 XA_API_CMD_GET_CURIDX_INPUT_BUF command	35
Table 2-31 XA_CMD_TYPE_DO_EXECUTE subcommand.....	36
Table 2-32 XA_CMD_TYPE_DONE_QUERY subcommand.....	37
Table 2-33 XA_API_CMD_GET_OUTPUT_BYTES command	38
Table 3-1 XA_SBC_ENC_CONFIG_PARAM_SAMP_FREQ subcommand	44
Table 3-2 XA_SBC_ENC_CONFIG_PARAM_SUBBANDS subcommand.....	45
Table 3-3 XA_SBC_ENC_CONFIG_PARAM_BLOCKS subcommand	46
Table 3-4 XA_SBC_ENC_CONFIG_PARAM_CHMODE subcommand.....	47
Table 3-5 XA_SBC_ENC_CONFIG_PARAM_SNR subcommand	48
Table 3-6 XA_SBC_ENC_CONFIG_PARAM_BITPOOL subcommand	49
Table 3-7 XA_SBC_ENC_CONFIG_PARAM_BITRATE subcommand	50

Document Change History

Version	Changes
1.0	<ul style="list-style-type: none">■ Initial version
1.3	<ul style="list-style-type: none">■ History section added.■ Updated Section 1.4■ Added Section 3.2.■ Updated Table 3-1, Table 3-2, and Table 3-4.
1.4	<ul style="list-style-type: none">■ Added performance data for HiFi 3z and HiFi 4 in Section 1.4.
1.5	<ul style="list-style-type: none">■ Added performance data for Fusion F1 and HiFi 5 in Section 1.4.
1.6	<ul style="list-style-type: none">■ Updated performance data for all cores and added new column for HiFi 1 core in Section 1.4■ Section 3.3 updated to add details about constraint on bitpool and frame length.

1. Introduction to the HiFi SBC Encoder

The HiFi DSP SBC Encoder implements the Bluetooth Low-Complexity Sub Band Coding standard as specified in the Advanced Audio Distribution Profile (A2DP) 1.2 ^[1].

For this document, HiFi DSPs include Fusion F1 DSP.

1.1 SBC Description

According to the A2DP specification, “SBC is an audio coding system specially designed for Bluetooth A/V applications to obtain high quality audio at medium bit rates, and having a low computational complexity. SBC uses 4 or 8 sub bands, an adaptive bit allocation algorithm, and simple adaptive block PCM quantizers.” Support for SBC is mandatory in the Advanced Audio Distribution Profile (A2DP).

1.2 Document Overview

This document covers all the information required to integrate the HiFi Audio Codecs into an application. The HiFi codec libraries implement a simple API to encapsulate the complexities of the coding operations and simplify the application and system implementation. Parts of the API are common to all the HiFi codecs and these are described after the introduction. Section 3 covers all the features and information particular to the HiFi SBC Encoder. Section 4 describes the example test bench.

1.3 HiFi SBC Encoder Specifications

The HiFi DSP SBC Encoder from Cadence Tensilica implements the following features:

- Cadence Audio Codec API is used
- An A2DP V12 compliant encoder
- Sampling frequencies: 16, 32, 44.1 and 48 kHz

- Data rates: from 88 to 552 kbps (A2DP limits the maximum data rate to 320 kbps for mono and 512 kbps for two-channel modes)
- Channel modes: mono, dual channel, stereo, joint stereo
- Input PCM sample size: 16 bits
- Number of sub bands: 4 or 8
- Number of blocks: 4, 8, 12 or 16
- Allocation method: SNR or loudness

This encoder implementation has been verified to be compliant with the A2DP V12 accuracy requirements.

1.4 HiFi SBC Encoder Performance

The HiFi DSP SBC Encoder from Cadence was characterized on the 5-stage HiFi DSP processor core. The memory usage and performance figures are provided for design reference.

- The API structure size returned by XA_API_CMD_GET_API_SIZE is approximately 70 bytes.
- The memory table structure size returned by XA_API_CMD_GET_MEMTABS_SIZE is approximately 80 bytes.

1.4.1 SBC Encoder Memory

Table 1-1 Library Memory

Text (Kbytes)						Data
Fusion F1	HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5	Kbytes
7.6	6.2	6.6	6.7	7.1	6.8	2.2

Table 1-2 Run-Time Memory

Run-Time Memory (Kbytes)				
Persistent	Scratch	Stack	Input	Output
0.7	5.5	0.7	0.5	0.6

1.4.2 SBC Encoder Timings

Table 1-3 Timings

Rate kHz	Channels	Bit Rate kbps	Average CPU Load (MHz)					
			Fusion F1	HiFi 1	HiFi 3	HiFi 3z	HiFi 4	HiFi 5
48	2	516	7.5	5.5	6.0	4.8	4.7	4.3

Note	Performance specification measurements are carried on a cycle-accurate simulator assuming an ideal memory system, <i>i.e.</i> , one with zero memory wait states.
Note	The MCPS numbers for HiFi 3z/HiFi 4/HiFi 5/Fusion F1 are obtained by running the test that is recompiled from the HiFi 3 optimized source code in the HiFi 3z/HiFi 4/HiFi 5/Fusion F1 configuration. No specific optimization is done for HiFi 3z/HiFi 4/HiFi 5/Fusion F1.
Note	The code base is also specifically optimized for HiFi 1 DSP.
Note	All the memory and MCPS numbers are captured with XT-CLANG compiler and RI-2021.8 tools.

2. Generic HiFi Audio Codec API

This section describes the API that is common to all the HiFi audio codec libraries. The API facilitates any codec that works in the overall method shown in the following diagram.

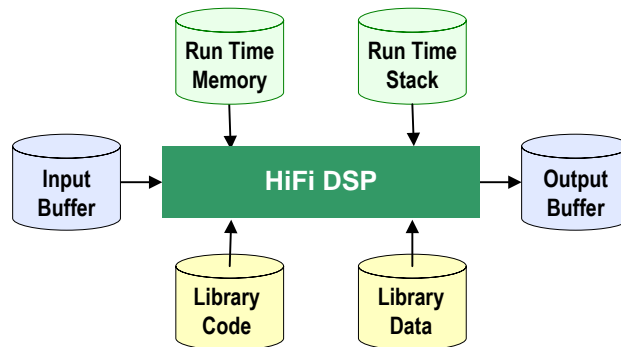


Figure 1 HiFi Audio Codec Interfaces

Section 2.1 discusses all the types of run time memory required by the codecs. There is no state information held in static memory, therefore a single thread can perform time division processing of multiple codecs. Additionally, multiple threads can perform concurrent codec processing. The API is implemented so that the application does not need to consider the codec implementation.

Through the API, the codec requests the minimum sizes required for the input and output buffers. Prior to executing the codec execution command, the codec requires that the input buffer is filled with data up to the minimum size for the input buffer. However, the codec may not consume all of the data in the input buffer. Therefore, the application must check the amount of input data consumed, copy downwards any unused portion of the input buffer, and then continue to fill the rest of the buffer with new data until the input buffer is again filled to the minimum size. The codec will produce data in the output buffer. The output data must be removed from the output buffer after the codec operation.

Applications that use these libraries should not make any assumptions about the size of the PCM “chunks” of data that each call to a codec produces or consumes. Although normally the chunks are the exact size of the underlying frame of the specified codec algorithm, they will vary between codecs and also between different operating modes of the same codec. The application should provide enough data to fill the input buffer. However, some codecs do provide information, after the initialization stage, to adjust the number of bytes of PCM data they need.

2.1 Memory Management

The HiFi audio codec API supports a flexible memory scheme and a simple interface that eases the integration into the final application. The API allows the codecs to request the required memory for their operations during run time.

The run time memory requirement consists primarily of the scratch and persistent memory. The codecs also require an input buffer and output buffer for the passing of data into and out of the codec.

2.1.1 API Object

The codec API stores its data in a small structure that is passed via a handle that is a pointer to an opaque object from the application for each API call. All state information and the memory tables that the codec requires are referenced from this structure.

2.1.2 API Memory Table

During the memory allocation, the application is prompted to allocate memory for each of the following memory areas. The reference pointer to each memory area is stored in this memory table. The reference to the table is stored in the API object.

2.1.3 Persistent Memory

This is also known as static or context memory. This is the state or history information that is maintained from one codec invocation to the next within the same thread or instance. The codecs expect that the contents of the persistent memory be unchanged by the system apart from the codec library itself for the complete lifetime of the codec operation.

2.1.4 Scratch Memory

This is the temporary buffer used by the codec for processing. The contents of this memory region should be unchanged if the actual codec execution process is active, that is, if the thread running the codec is inside any API call. This region can be used freely by the system between successive calls to the codec.

2.1.5 Input Buffer

This is the buffer used by the algorithm for accepting input data. Before the call to the codec, the input buffer needs to be completely filled with input data.

2.1.6 Output Buffer

This is the buffer in which the algorithm writes the output. This buffer needs to be made available for the codec before its execution call. The output buffer pointer can be changed by the application between calls to the codec. This allows the codec to write directly to the required output area. The codec will never write more data than the requested size of the output buffer.

2.2 C Language API

A single interface function is used to access the codec, with the operation specified by command codes. The actual API C call is defined per codec library and is specified in the codec-specific section. Each library has a single C API call. The C parameter definitions for every codec library are the same and are specified in the following table:

Table 2-1 Codec API

xa_<codec>	
Description	This C API is the only access function to the audio codec.
Syntax	<pre>XA_ERRORCODE xa_<codec>(xa_codec_handle_t p_xa_module_obj, WORD32 i_cmd, WORD32 i_idx, pVOID pv_value);</pre>
Parameters	<p>p_xa_module_obj Pointer to the opaque API structure</p> <p>i_cmd Command</p> <p>i_idx Command subtype or index</p> <p>pv_value Pointer to the variable used to pass in, or get out properties from the state structure</p>
Returns	Error Code based on the success or failure of the API command

The types used for the C API call are defined in the supplied header files as:

```
typedef signed int      WORD32;
typedef void            *pVOID;
```

Each time the C API for the codec is called, a pointer to a private allocated data structure is passed as the first argument. This argument is treated as an opaque handle as there is no requirement by the application to look at the data within the structure. The size of the structure is supplied by a specific API command so that the application can allocate the required memory. Do not use `sizeof()` on the type of the opaque handle.

Some command codes are further divided into subcommands. The command and its subcommand are passed to the codec via the second and third arguments respectively.

When a value must be passed to a particular API command or an API command returns a value, the value expected or returned is passed through a pointer, which is given as the fourth argument to the C API function. In the case of passing a pointer value to the codec, the pointer is just cast to `pVOID`. It is incorrect to pass a pointer to a pointer in these cases. An example would be when the application is passing the codec a pointer to an allocated memory region.

Due to the similarities of the operations required to decode or encode audio streams, the HiFi DSP API allows the application to use a common set of procedures for each stage. By maintaining a pointer to the single API function and passing the correct API object, the same code base can be used to implement the operations required for any of the supported codecs.

2.3 Generic API Errors

The error code returned is of type `XA_ERRORCODE`, which is of type `signed int`. The format of the error codes is defined in the following table.

Table 2-2 Error Codes Format

31	30-15	14 – 11	10 – 6	5 – 0
Fatal	Reserved	Class	Codec	Sub code

The errors that can be returned from the API are subdivided into those that are fatal, which require the restarting of the whole codec and those that are nonfatal and are provided for information to the application.

The class of an error can be API, Config, or Execution. The API errors are concerned with the incorrect use of the API. The Config errors are produced when the codec parameters are incorrect or outside the supported usage. The Execution errors are returned after a call to the main encoding or decoding process and indicate situations that have arisen due to the input data.

2.4 Commands

This section covers the commands associated with the following command sequence overview flow chart. For each stage of the flow chart there is a section that lists the required commands in the order they should occur. For individual commands, definitions, and examples refer to Section 2.6. The codecs have a common set of generic API commands that are represented by the white stages. The yellow stages are specific to each codec.

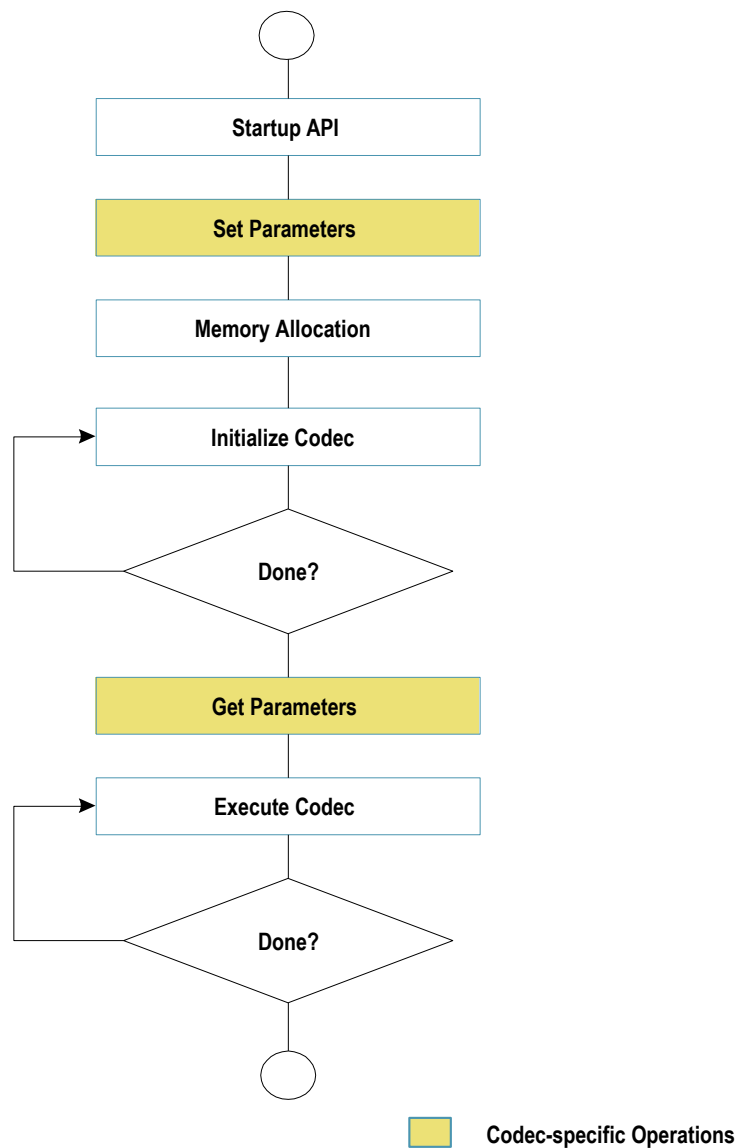


Figure 2 API Command Sequence Overview

2.4.1 Start-up API Stage

The following commands should be executed once each during start-up. The commands to get the various identification strings from the codec library are for information only and are optional. The command to get the API object size is mandatory as the real object type is hidden in the library and therefore there is no type available to use with `sizeof()`.

Table 2-3 Commands for Initialization

Command / Subcommand	Description
XA_API_CMD_GET_LIB_ID_STRINGS XA_CMD_TYPE_LIB_NAME	Get the name of the library.
XA_API_CMD_GET_LIB_ID_STRINGS XA_CMD_TYPE_LIB_VERSION	Get the version of the library.
XA_API_CMD_GET_LIB_ID_STRINGS XA_CMD_TYPE_API_VERSION	Get the version of the API.
XA_API_CMD_GET_API_SIZE	Get the size of the API structure.
XA_API_CMD_INIT XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	Set the default values of all the configuration parameters.

2.4.2 Set Codec-Specific Parameters Stage

Refer to the specific codec section for the parameters that can be set. These parameters either control the encoding process or determine the output format of the encoder PCM data.

Table 2-4 Commands for Setting Parameters

Command / Subcommand	Description
XA_API_CMD_SET_CONFIG_PARAM XA_<codec>_CONFIG_PARAM_<param_name>	Set the codec-specific parameter. See the codec-specific section for parameter definitions.

2.4.3 Memory Allocation Stage

The following commands should be executed once only after all the codec-specific parameters have been set. The API is passed the pointer to the memory table structure (MEMTABS) after it is allocated by the application to the size specified. After the codec specific parameters are set, the initial codec setup is completed by performing the post-configuration portion of the initialization to determine the initial operating mode of the codec and assign sizes to the blocks of memory required for its operation. The application then requests a count of the number of memory blocks.

Table 2-5 Commands for Initial Table Allocation

Command / Subcommand	Description
XA_API_CMD_GET_MEMTABS_SIZE	Get the size of the memory structures to be allocated for the codec tables.
XA_API_CMD_SET_MEMTABS_PTR	Pass the memory structure pointer allocated for the tables.
XA_API_CMD_INIT XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	Calculate the required sizes for all the memory blocks based on the codec-specific parameters.
XA_API_CMD_GET_N_MEMTABS	Obtain the number of memory blocks required by the codec.

The following commands should then be executed in a loop to allocate the memory. The application first requests all the attributes of the memory block and then allocates it. It is important to abide by the alignment requirements. Finally, the pointer to the allocated block of memory is passed back through the API. For the input and output buffers it is not necessary to assign the correct memory at this point. The input and output buffer locations must be assigned before their first use in the EXECUTE stage. The type field refers to the memory blocks, for example input or persistent, as described in Section 2.1.

Table 2-6 Commands for Memory Allocation

Command / Subcommand	Description
XA_API_CMD_GET_MEM_INFO_SIZE	Get the size of the memory type being referred to by the index.
XA_API_CMD_GET_MEM_INFO_ALIGNMENT	Get the alignment information of the memory-type being referred to by the index.
XA_API_CMD_GET_MEM_INFO_TYPE	Get the type of memory being referred to by the index.
XA_API_CMD_GET_MEM_INFO_PRIORITY	Get the allocation priority of memory being referred to by the index.
XA_API_CMD_SET_MEM_PTR	Set the pointer to the memory allocated for the referred index to the input value.

2.4.4 Initialize Codec Stage

The following commands should be executed in a loop during initialization. These commands should be called until the initialization is completed as indicated by the `XA_CMD_TYPE_INIT_DONE_QUERY` command. In general, decoders can loop multiple times until the header information is found. However, encoders will perform exactly one call before they signal they are done.

There is a major difference between encoding Pulse Code Modulated (PCM) data and decoding stream data. During the initialization of a decoder, the initialization task reads the input stream to discover the parameters of the encoding. However, for an encoder there is no header information in PCM data. Even so, the encoder application is still required to perform the initialization described in this stage. However, encoders will not consume data during initialization. Furthermore, this has an implication in that some encoders provide parameters that can be used to modify the input buffer data requirements after the initialization stage. These modifications will always be a reduction in the size. The application only needs to provide the reduced amount per execution of the main codec process.

In general, the application will signal to the codec the number of bytes available in the input buffer and signal if it is the last iteration. It is not normal to hit the end of the data during initialization, but in the case of a decoder being presented with a corrupt stream it will allow a graceful termination. After the codec initialization is called, the application will ask for the number of bytes consumed. The application can also ask if the initialization is complete, it is advisable to always ask, even in the case of encoders that require only a single pass. A decoder application must keep iterating until it is complete.

Table 2-7 Commands for Initialization

Command / Subcommand	Description
<code>XA_API_CMD_SET_INPUT_BYTES</code>	Set the number of bytes available in the input buffer for initialization.
<code>XA_API_CMD_INPUT_OVER</code>	Signal to the codec the end of the bitstream.
<code>XA_API_CMD_INIT</code> <code>XA_CMD_TYPE_INIT_PROCESS</code>	Search for the valid header, does header decoding to get the parameters and initializes state and configuration structures.
<code>XA_API_CMD_INIT</code> <code>XA_CMD_TYPE_INIT_DONE_QUERY</code>	Check if the initialization process has completed.
<code>XA_API_CMD_GET_CURIDX_INPUT_BUF</code>	Get the number of input buffer bytes consumed by the last initialization.

2.4.5 Get Codec-Specific Parameters Stage

Finally, after the initialization, the codec can supply the application with information. In the case of decoders this would be the parameters it has extracted from the encoded header in the stream.

Table 2-8 Commands for Getting Parameters

Command / Subcommand	Description
XA_API_CMD_GET_CONFIG_PARAM XA_<codec>_CONFIG_PARAM_<param_name>	Get the value of the parameter from the codec. See the codec-specific section for parameter definitions.

2.4.6 Execute Codec Stage

The following commands should be executed continuously until the data is exhausted or the application wants to terminate the process. This is similar to the initialization stage, but includes support for the management of the output buffer. After each iteration, the application requests how much data is written to the output buffer. This amount is always limited by the size of the buffer requested during the memory block allocation. (To alter the output buffer position use XA_API_CMD_SET_MEM_PTR with the output buffer index.)

Table 2-9 Commands for Codec Execution

Command / Subcommand	Description
XA_API_CMD_INPUT_OVER	Signal the end of bitstream to the library.
XA_API_CMD_SET_INPUT_BYTES	Set the number of bytes available in the input buffer for the execution.
XA_API_CMD_EXECUTE XA_CMD_TYPE_DO_EXECUTE	Execute the codec thread.
XA_API_CMD_EXECUTE XA_CMD_TYPE_DONE_QUERY	Check if the end of stream has been reached.
XA_API_CMD_GET_OUTPUT_BYTES	Get the number of bytes output by the codec in the last frame.
XA_API_CMD_GET_CURIDX_INPUT_BUF	Get the number of input buffer bytes consumed by the last call to the codec.

2.5 Files Describing the API

Following are the common include files (`include`):

- `xa_apicmd_standards.h`
The command definitions for the generic API calls
- `xa_error_standards.h`
The macros and definitions for all the generic errors
- `xa_memory_standards.h`
The definitions for memory block allocation
- `xa_type_def.h`
All the types required for the API calls

2.6 HiFi API Command Reference

In this section, the different commands are described along with their associated subcommands. The only commands missing are those specific to a single codec. The particular codec commands are generally the SET and GET commands for the operational parameters.

The commands are listed below in sections based on their primary commands type (`i_cmd`). Each section contains a table for every subcommand. In the case of no subcommands the one primary command is presented.

The commands are followed by an example C call. Along with the call there is a definition of the variable types used. This is to avoid any confusion over the type of the fourth argument. The examples are not complete C code extracts as there is no initialization of the variables before they are used.

The errors returned by the API are detailed after each of the command definitions. However, there are a few errors that are common to all the API commands; these are listed in Section 2.6.1. All the errors possible from the codec-specific commands will be defined in the codec-specific sections. Furthermore, the codec-specific sections also cover the Execution errors that occur during the initialization or execution calls to the API.

2.6.1 Common API Errors

These errors are fatal and should not be encountered during normal application operation. They signal that a serious error has occurred in the application that is calling the codec.

- **XA_API_FATAL_MEM_ALLOC**
`p_xa_module_obj` is NULL
- **XA_API_FATAL_MEM_ALIGN**
`p_xa_module_obj` is not aligned to 4 bytes
- **XA_API_FATAL_INVALID_CMD**
`i_cmd` is not a valid command
- **XA_API_FATAL_INVALID_CMD_TYPE**
`i_idx` is invalid for the specified command (`i_cmd`)

2.6.2 XA_API_CMD_GET_LIB_ID_STRINGS

Table 2-10 XA_CMD_TYPE_LIB_NAME subcommand

Subcommand	XA_CMD_TYPE_LIB_NAME
Description	This command obtains the name of the library in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore, the application shall pass a pointer to a buffer of a minimum size of 30 bytes. This command is optional.
Actual Parameters	<p>p_xa_module_obj NULL</p> <p>i_cmd XA_API_CMD_GET_LIB_ID_STRINGS</p> <p>i_idx XA_CMD_TYPE_LIB_NAME</p> <p>pv_value process name – Pointer to a character buffer in which the name of the library is returned</p>
Restrictions	None

Note No codec object is required due to the name being static data in the codec library.

Example

```
char process_name[30];
res = (*api_func) (NULL,
                  XA_API_CMD_GET_LIB_ID_STRINGS,
                  XA_CMD_TYPE_LIB_NAME,
                  (pVOID) process_name);
```

Errors

- XA_API_FATAL_MEM_ALLOC
This error is suppressed as p_xa_module_obj is NULL
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

Table 2-11 XA_CMD_TYPE_LIB_VERSION subcommand

Subcommand	XA_CMD_TYPE_LIB_VERSION
Description	This command obtains the version of the library in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore, the application shall pass a pointer to a buffer of a minimum size of 30 bytes. This command is optional.
Actual Parameters	<p>p_xa_module_obj NULL</p> <p>i_cmd XA_API_CMD_GET_LIB_ID_STRINGS</p> <p>i_idx XA_CMD_TYPE_LIB_VERSION</p> <p>pv_value lib_version – Pointer to a character buffer in which the version of the library is returned</p>
Restrictions	None

Note No codec object is required due to the version being static data in the codec library.

Example

```
char lib_version[30];
res = (*api_func) (NULL,
                  XA_API_CMD_GET_LIB_ID_STRINGS,
                  XA_CMD_TYPE_LIB_VERSION,
                  (pVOID) lib_version);
```

Errors

- XA_API_FATAL_MEM_ALLOC
This error is suppressed as p_xa_module_obj is NULL
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

Table 2-12 XA_CMD_TYPE_API_VERSION subcommand

Subcommand	XA_CMD_TYPE_API_VERSION
Description	This command obtains the version of the API in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore, the application shall pass a pointer to a buffer of a minimum size of 30 bytes. This command is optional.
Actual Parameters	<p>p_xa_module_obj NULL</p> <p>i_cmd XA_API_CMD_GET_LIB_ID_STRINGS</p> <p>i_idx XA_CMD_TYPE_API_VERSION</p> <p>pv_value api_version – Pointer to a character buffer in which the version of the API is returned</p>
Restrictions	None

Note No codec object is required due to the version being static data in the codec library.

Example

```
char api_version[30];
res = (*api_func) (NULL,
                  XA_API_CMD_GET_LIB_ID_STRINGS,
                  XA_CMD_TYPE_API_VERSION,
                  (pVOID) api_version);
```

Errors

- XA_API_FATAL_MEM_ALLOC
This error is suppressed as p_xa_module_obj is NULL
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.3 XA_API_CMD_GET_API_SIZE

Table 2-13 XA_API_CMD_GET_API_SIZE command

Subcommand	None
Description	This command is used to obtain the size of the API structure, in order to allocate memory for the API structure. The pointer to the API size variable is passed and the API returns the size of the structure in bytes. The API structure is used for the interface and is persistent.
Actual Parameters	<p>p_xa_module_obj NULL</p> <p>i_cmd XA_API_CMD_GET_API_SIZE</p> <p>i_idx NULL</p> <p>pv_value &api_size – Pointer to the API size variable</p>
Restrictions	The application will allocate memory with an alignment of 4 bytes.

Note No codec object is required due to the size being fixed for the codec library.

Example

```
unsigned int api_size;
res = (*api_func) (NULL,
                  XA_API_CMD_GET_API_SIZE,
                  0,
                  (pVOID) &api_size);
```

Errors

- XA_API_FATAL_MEM_ALLOC
This error is suppressed as p_xa_module_obj is NULL
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.4 XA_API_CMD_INIT

Table 2-14 XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS subcommand

Subcommand	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS
Description	This command is used to set the default value of the configuration parameters. The configuration parameters can then be altered by using one of the codec-specific parameter setting commands. Refer to the codec-specific section.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_INIT</p> <p>i_idx XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS</p> <p>pv_value NULL</p>
Restrictions	None

Example

```
res = (*api_func)(api_obj,  
                XA_API_CMD_INIT,  
                XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS,  
                NULL);
```

Errors

- Common API Errors

Table 2-15 XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS subcommand

Subcommand	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS
Description	This command is used to calculate the sizes of all the memory blocks required by the application. It should occur after the codec-specific parameters have been set.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_INIT</p> <p>i_idx XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS</p> <p>pv_value NULL</p>
Restrictions	None

Example

```
res = (*api_func) (api_obj,  
                  XA_API_CMD_INIT,  
                  XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS,  
                  NULL);
```

Errors

- Common API Errors

Table 2-16 XA_CMD_TYPE_INIT_PROCESS subcommand

Subcommand	XA_CMD_TYPE_INIT_PROCESS
Description	This command initializes the codec. In the case of a decoder, it searches for the valid header and performs the header decoding to get the encoded stream parameters. This command is part of the initialization loop. It must be repeatedly called until the codec signals it has finished. In the case of an encoder, the initialization of codec is performed. No output data is created during initialization.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_INIT</p> <p>i_idx XA_CMD_TYPE_INIT_PROCESS</p> <p>pv_value NULL</p>
Restrictions	None

Example

```
res = (*api_func) (api_obj,  
                  XA_API_CMD_INIT,  
                  XA_CMD_TYPE_INIT_PROCESS,  
                  NULL);
```

Errors

- Common API Errors
- See the codec-specific section for execution errors

Table 2-17 XA_CMD_TYPE_INIT_DONE_QUERY subcommand

Subcommand	XA_CMD_TYPE_INIT_DONE_QUERY
Description	This command checks to see if the initialization process has completed. If it has, the flag value is set to 1; otherwise it is set to zero. A pointer to the flag variable is passed as an argument.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_INIT</p> <p>i_idx XA_CMD_TYPE_INIT_DONE_QUERY</p> <p>pv_value &init_done – Pointer to a flag that indicates the completion of initialization process</p>
Restrictions	None

Example

```
unsigned int init_done;  
res = (*api_func) (api_obj,  
                  XA_API_CMD_INIT,  
                  XA_CMD_TYPE_INIT_DONE_QUERY,  
                  (pVOID) &init_done);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.5 XA_API_CMD_GET_MEMTABS_SIZE

Table 2-18 XA_API_CMD_GET_MEMTABS_SIZE command

Subcommand	None
Description	This command is used to obtain the size of the table used to hold the memory blocks required for the codec operation. The API returns the total size of the required table. A pointer to the size variable is sent with this API command and the codec writes the value to the variable.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_MEMTABS_SIZE</p> <p>i_idx NULL</p> <p>pv_value &proc_mem_tabs_size – Pointer to the memory size variable</p>
Restrictions	The application shall allocate memory with an alignment of 4 bytes.

Example

```

unsigned int proc_mem_tabs_size;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_MEMTABS_SIZE,
                  0,
                  (pVOID) &proc_mem_tabs_size);

```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.6 XA_API_CMD_SET_MEMTABS_PTR

Table 2-19 XA_API_CMD_SET_MEMTABS_PTR command

Subcommand	None
Description	This command is used to set the memory structure pointer in the library to the allocated value.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_MEMTABS_PTR</p> <p>i_idx NULL</p> <p>pv_value alloc – Allocated pointer</p>
Restrictions	The application will allocate memory with an alignment of 4 bytes.

Example

```
int * alloc; //alloc is a pointer to the allocated memory
res = (*api_func) (api_obj,
                  XA_API_CMD_SET_MEMTABS_PTR,
                  0,
                  (pVOID) alloc);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_API_FATAL_MEM_ALIGN
pv_value is not aligned to 4 bytes

2.6.7 XA_API_CMD_GET_N_MEMTABS

Table 2-20 XA_API_CMD_GET_N_MEMTABS command

Subcommand	None
Description	This command obtains the number of memory blocks needed by the codec. This value is used as the iteration counter for the allocation of the memory blocks. A pointer to each memory block will be placed in the previously allocated memory tables. The pointer to the variable is passed to the API and the codec writes the value to this variable.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_N_MEMTABS</p> <p>i_idx NULL</p> <p>pv_value &n_mems – Number of memory blocks required to be allocated</p>
Restrictions	None

Example

```
int n_mems;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_N_MEMTABS,
                  0,
                  (pVOID) &n_mems);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.8 XA_API_CMD_GET_MEM_INFO_SIZE

Table 2-21 XA_API_CMD_GET_MEM_INFO_SIZE command

Subcommand	Memory index
Description	This command obtains the size of the memory type being referred to by the index. The size in bytes is returned in the variable pointed to by the final argument. Note this is the actual size needed, not including any alignment packing space.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_MEM_INFO_SIZE</p> <p>i_idx Index of the memory</p> <p>pv_value &size – Pointer to the memory size</p>
Restrictions	None

Example

```
int index;
unsigned int size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_SIZE,
                  index,
                  (pVOID) &size);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_API_FATAL_INVALID_CMD_TYPE
i_idx is an invalid memory block number; valid block numbers obey the relation $0 \leq i_idx < n_mems$ (See XA_API_CMD_GET_N_MEMTABS)

2.6.9 XA_API_CMD_GET_MEM_INFO_ALIGNMENT

Table 2-22 XA_API_CMD_GET_MEM_INFO_ALIGNMENT command

Subcommand	Memory index
Description	This command gets the alignment information of the memory-type being referred to by the index. The alignment required in bytes is returned to the application.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_MEM_INFO_ALIGNMENT</p> <p>i_idx Index of the memory</p> <p>pv_value &alignment – Pointer to the alignment info variable</p>
Restrictions	None

Example

```
int index;
unsigned int alignment;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_MEM_INFO_ALIGNMENT,
                  index,
                  (pVOID) &alignment);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_API_FATAL_INVALID_CMD_TYPE
i_idx is an invalid memory block number; valid block numbers obey the relation $0 \leq i_idx < n_mems$ (See XA_API_CMD_GET_N_MEMTABS)

2.6.10 XA_API_CMD_GET_MEM_INFO_TYPE

Table 2-23 XA_API_CMD_GET_MEM_INFO_TYPE command

Subcommand	Memory index
Description	This command gets the type of memory being referred to by the index.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_MEM_INFO_TYPE</p> <p>i_idx Index of the memory</p> <p>pv_value &type – Pointer to the memory type variable</p>
Restrictions	None

Example

```
int index;
unsigned int type;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_MEM_INFO_TYPE,
                  index,
                  (pVOID) &type);
```

Table 2-24 Memory Type Indices

Type	Description
XA_MEMTYPE_PERSIST	Persistent memory
XA_MEMTYPE_SCRATCH	Scratch memory
XA_MEMTYPE_INPUT	Input Buffer
XA_MEMTYPE_OUTPUT	Output Buffer

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_API_FATAL_INVALID_CMD_TYPE
i_idx is an invalid memory block number; valid block numbers obey the relation
 $0 \leq i_idx < n_mems$ (See XA_API_CMD_GET_N_MEMTABS)

2.6.11 XA_API_CMD_GET_MEM_INFO_PRIORITY

Table 2-25 XA_API_CMD_GET_MEM_INFO_PRIORITY command

Subcommand	Memory index
Description	This command gets the allocation priority of memory being referred to by the index. (The meaning of the levels is defined on a codec-specific basis. This command returns a fixed dummy value unless the codec defines it otherwise.)
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_MEM_INFO_PRIORITY</p> <p>i_idx Index of the memory</p> <p>pv_value &priority – Pointer to the memory priority variable</p>
Restrictions	None

Example

```
int index;
unsigned int priority;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_MEM_INFO_PRIORITY,
                  index,
                  (pVOID) &priority);
```

Table 2-26 Memory Priorities

Priority	Type
0	XA_MEMPRIORITY_ANYWHERE
1	XA_MEMPRIORITY_LOWEST
2	XA_MEMPRIORITY_LOW
3	XA_MEMPRIORITY_NORM
4	XA_MEMPRIORITY_ABOVE_NORM
5	XA_MEMPRIORITY_HIGH
6	XA_MEMPRIORITY_HIGHER
7	XA_MEMPRIORITY_CRITICAL

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
`pv_value` is NULL
- XA_API_FATAL_INVALID_CMD_TYPE
`i_idx` is an invalid memory block number; valid block numbers obey the relation $0 \leq i_idx < n_mems$ (See XA_API_CMD_GET_N_MEMTABS)

2.6.12 XA_API_CMD_SET_MEM_PTR

Table 2-27 XA_API_CMD_SET_MEM_PTR Command

Subcommand	Memory index
Description	This command passes to the codec the pointer to the allocated memory. This is then stored in the memory tables structure allocated earlier. For the input and output buffers, it is legitimate to execute this command during the main codec loop.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_MEM_PTR</p> <p>i_idx Index of the memory</p> <p>pv_value alloc – Pointer to the memory buffer allocated</p>
Restrictions	The pointer must be correctly aligned to the requirements.

Example

```
int index;
void * alloc; //alloc is a pointer to the aligned memory
res = (*api_func)(api_obj,
                 XA_API_CMD_SET_MEM_PTR,
                 index,
                 (pVOID) alloc);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_API_FATAL_INVALID_CMD_TYPE
i_idx is an invalid memory block number; valid block numbers obey the relation $0 \leq i_idx < n_mems$ (See XA_API_CMD_GET_N_MEMTABS)
- XA_API_FATAL_MEM_ALIGN
pv_value is not of the required alignment for the requested memory block

2.6.13 XA_API_CMD_INPUT_OVER

Table 2-28 XA_API_CMD_INPUT_OVER command

Subcommand	None
Description	This command tells the codec that the end of the input data has been reached. This situation can arise both in the initialization loop and the execute loop.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_INPUT_OVER</p> <p>i_idx NULL</p> <p>pv_value NULL</p>
Restrictions	None

Example

```
res = (*api_func)(api_obj,  
                 XA_API_CMD_INPUT_OVER,  
                 0,  
                 NULL);
```

Errors

- Common API Errors

2.6.14 XA_API_CMD_SET_INPUT_BYTES

Table 2-29 XA_API_CMD_SET_INPUT_BYTES command

Subcommand	None
Description	This command sets the number of bytes available in the input buffer for the codec. It is used both in the initialization loop and execute loop. It is the number of valid bytes from the buffer pointer. It should be at least the minimum buffer size requested unless this is the end of the data.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_INPUT_BYTES</p> <p>i_idx NULL</p> <p>pv_value &buff_size – Pointer to the input byte variable</p>
Restrictions	None

Example

```
int buff_size;  
res = (*api_func) (api_obj,  
                  XA_API_CMD_SET_INPUT_BYTES,  
                  0,  
                  (pVOID) &buff_size);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.15 XA_API_CMD_GET_CURIDX_INPUT_BUF

Table 2-30 XA_API_CMD_GET_CURIDX_INPUT_BUF command

Subcommand	None
Description	This command gets the number of input buffer bytes consumed by the codec. It is used both in the initialization loop and execute loop.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_CURIDX_INPUT_BUF</p> <p>i_idx NULL</p> <p>pv_value &bytes_consumed – Pointer to the bytes consumed variable</p>
Restrictions	None

Example

```
int bytes_consumed;
res = (*api_func) (api_obj,
                  XA_API_CMD_GET_CURIDX_INPUT_BUF,
                  0,
                  (pVOID) &bytes_consumed);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.16 XA_API_CMD_EXECUTE

Table 2-31 XA_CMD_TYPE_DO_EXECUTE subcommand

Subcommand	XA_CMD_TYPE_DO_EXECUTE
Description	This command executes the codec.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_EXECUTE</p> <p>i_idx XA_CMD_TYPE_DO_EXECUTE</p> <p>pv_value NULL</p>
Restrictions	None

Example

```
res = (*api_func) (api_obj,  
                  XA_API_CMD_EXECUTE,  
                  XA_CMD_TYPE_DO_EXECUTE,  
                  NULL);
```

Errors

- Common API Errors
- See the codec-specific section for execution errors

Table 2-32 XA_CMD_TYPE_DONE_QUERY subcommand

Subcommand	XA_CMD_TYPE_DONE_QUERY
Description	This command checks to see if the end of processing has been reached. If it has, the flag value is set to 1; otherwise it is set to zero. The pointer to the flag is passed as an argument. Processing by the codec can continue for several invocations of the DO_EXECUTE command after the last input data has been passed to the codec, thus the application should not assume that the codec has finished generating all its output until so indicated by this command.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_EXECUTE</p> <p>i_idx XA_CMD_TYPE_DONE_QUERY</p> <p>pv_value &flag – Pointer to the flag variable</p>
Restrictions	None

Example

```
int flag;
res = (*api_func)(api_obj,
                  XA_API_CMD_EXECUTE,
                  XA_CMD_TYPE_DONE_QUERY,
                  (pVOID) &flag);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

2.6.17 XA_API_CMD_GET_OUTPUT_BYTES

Table 2-33 XA_API_CMD_GET_OUTPUT_BYTES command

Subcommand	None
Description	This command obtains the number of bytes output by the codec during the last execution.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_OUTPUT_BYTES</p> <p>i_idx NULL</p> <p>pv_value &out_bytes – Pointer to the output bytes variable</p>
Restrictions	None

Example

```
int out_bytes;  
res = (*api_func) (api_obj,  
                  XA_API_CMD_GET_OUTPUT_BYTES,  
                  0,  
                  (pVOID) &out_bytes);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

3. HiFi SBC Encoder

The HiFi SBC Encoder conforms to the generic codec API. The flow chart of the command sequence used on the example test bench is provided below.

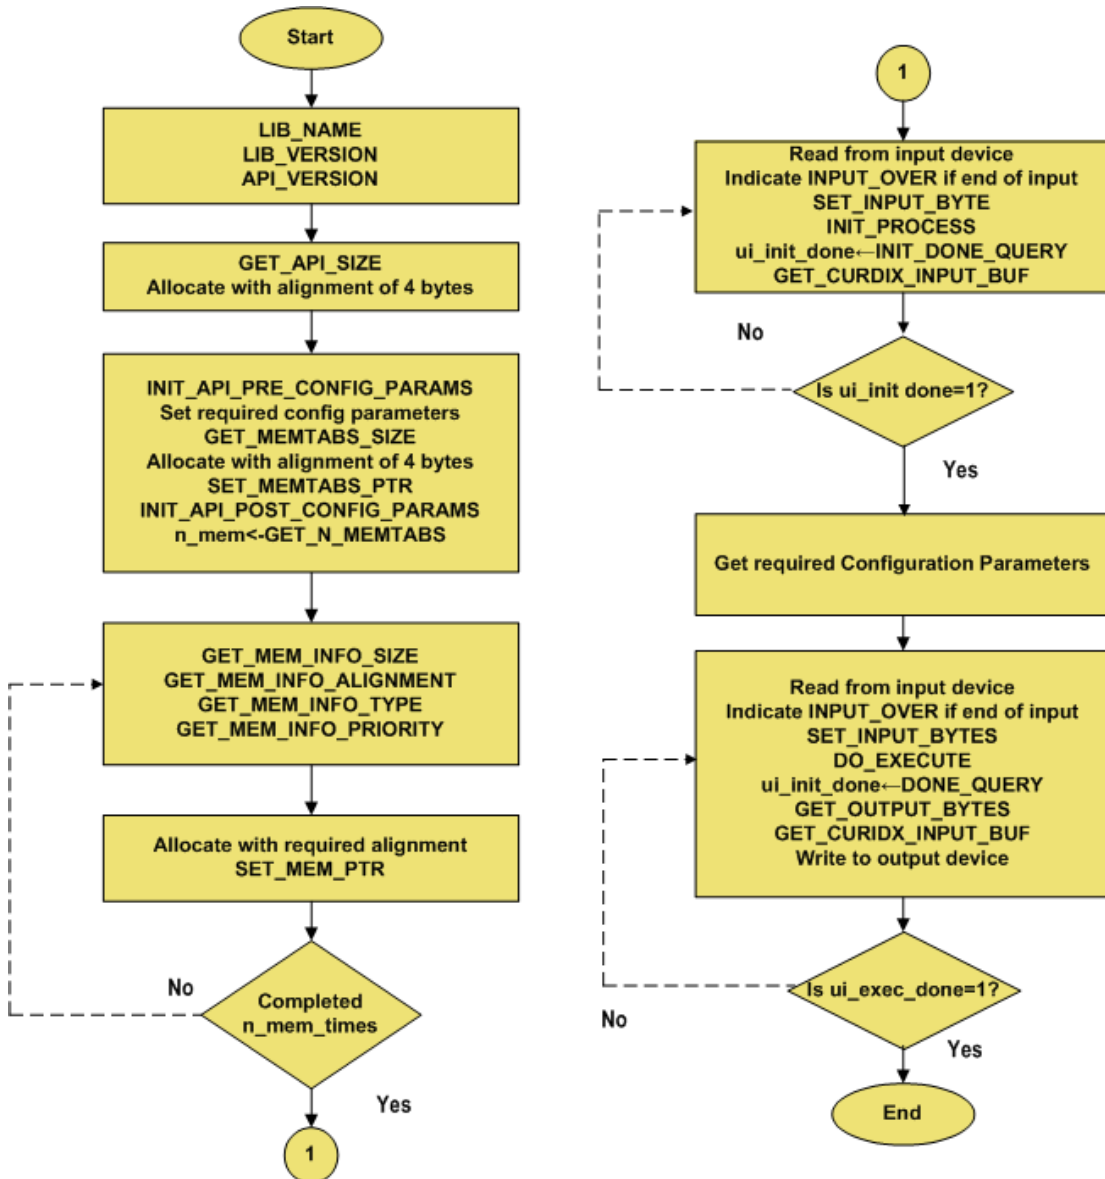


Figure 3 Flow Chart for SBC Encoder Integration

3.1 Files Specific to the SBC Encoder

The SBC encoder parameter header file (`include/sbc_enc`)

- `xa_sbc_enc_api.h`

The SBC encoder library (`lib`)

- `xa_sbc_enc.a`

The SBC encoder API call is defined as:

```
XA_ERRORCODE xa_sbc_enc(xa_codec_handle_t p_xa_module_obj,
                        WORD32             i_cmd,
                        WORD32             i_idx,
                        pVOID              pv_value);
```

3.2 SBC Encoder Specific Error Codes

Other than common error codes explained in Section 2, SBC API may also report errors specific to SBC library. These errors are classified into three classes:

- API Errors
- Configuration Errors
- Execute Errors

To simplify the text, the following terminologies are used in this section:

- INIT API or INIT process:

Calling the encoder API for `XA_API_CMD_INIT` command with subcommand `XA_CMD_TYPE_INIT_PROCESS`.

- EXEC API or EXEC process:

Calling the encoder API for `XA_API_CMD_EXECUTE` command with subcommand `XA_CMD_TYPE_DO_EXECUTE`.

- Config API:

Calling the encoder API for `XA_API_CMD_SET_CONFIG_PARAM` or `XA_API_CMD_GET_CONFIG_PARAM`

3.2.1 API Errors

API Errors are reported by the encoder library when the application tries to call the API command/subcommand out of sequence. Note the following:

- Most of the APIs cannot be called before setting the running mode
- INIT/EXEC API cannot be called before allocating required memories
- EXEC API cannot be called before a successful call of INIT API
- Specific Config parameters can be obtained only after a successful INIT
- Specific Config parameters cannot be set after a successful POST config API.

The API errors specific to SBC library are explained below.

- `XA_SBC_ENC_API_FATAL_INVALID_API_SEQ`
 - **Description:** This error is reported in case of an invalid API sequence or unexpected API call and the encoder cannot proceed further.
 - **Required or suggested actions:** Application code shall be modified. Refer to Error! Reference source not found. for the correct API sequence and refer to Section Error! Reference source not found. for accepted config API calls.
- `XA_SBC_ENC_API_NONFATAL_INVALID_API_SEQ`
 - **Description:** This error is reported in case of an invalid API sequence or unexpected API call. The encoder ignores the call.
 - **Required or suggested actions:** The application should not use the return parameters. Application programmer may also consider modifying the code to avoid this error.

3.2.2 Configuration Errors

Configuration Errors are reported when a configuration subcommand fails. The failure may be due to an invalid config parameter value provided by the application or the config parameter queried is not yet read from the stream. These errors can also be due to incorrect usage of config APIs. Config APIs may also return the common errors described in Section 2.6.1 and API errors described in Section 3.2.1.

The following are the common errors reported by configuration subcommands.

- `XA_SBC_ENC_CONFIG_FATAL_INVALID_NUM_SUBBAND`
 - **Description:** This error is returned in case of an invalid number of sub bands are supplied to the encoder.
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with valid number of sub bands as described in Section 3.3.

- `XA_SBC_ENC_CONFIG_FATAL_INVALID_NUM_BLOCKS`
 - **Description:** This error is returned in case of an invalid number of blocks supplied to the encoder.
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with a valid number of blocks as described in Section 3.3 .
- `XA_SBC_ENC_CONFIG_FATAL_INVALID_CHMODE`
 - **Description:** This error is returned in case of an invalid channel mode is supplied to the encoder.
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with the valid channel mode as described in Section 3.3.
- `XA_SBC_ENC_CONFIG_FATAL_INVALID_SAMP_FREQ`
 - **Description:** This error is returned in case of an unsupported sampling rate
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with a stream having a supported sample rate described in Section **Error! Reference source not found.**
- `XA_SBC_ENC_CONFIG_FATAL_INVALID_BITPOOL`
 - **Description:** This error is returned if the bitpool value supplied to the encoder is not in the range.
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with the correct bitpool value described in Section 3.3.

3.2.3 Execute Errors

Execute errors are errors that occurred during the initialization or execution process. Typically, these errors are caused by, but not limited to the following reasons:

- Invalid or missing configuration parameters
- Wrong input and output buffer settings
- Stream parsing errors

The following execute errors are specific to the SBC encoder.

- `XA_SBC_ENC_EXECUTE_FATAL_OUTPUT_BUFFER_OVERFLOW`
 - **Description:** This error is returned if the size of the encoded frame is bigger than the output buffer.
 - **Required or suggested actions:** The application should handle the error and initialize the encoder with the correct configuration parameter described in Section 3.3 as the encoded frame length depends on configuration parameters.

- **XA_SBC_ENC_EXECUTE_NONFATAL_NEED_MORE_DATA**
 - **Description:** This error is returned if the library needs more input to encode a complete frame.
 - **Required or suggested actions:** The application should complete the input frame in the input buffer.

3.3 Configuration Parameters

The HiFi SBC encoder library accepts the following parameters from the user:

- **samp_freq** – Input PCM sample rate in Hz
 - Values: 16,000, 32,000, 44,100, 48,000 (default)
- **chmode** – Channel mode
 - 0 – mono (default, single input channel)
 - 1 – dual (two interleaved input channels)
 - 2 – stereo (two interleaved input channels)
 - 3 – joint stereo (two interleaved input channels)
- **bitpool** – Bitpool value
 - Values: 2-256 (default, 31)
 - See Section 12.5.1 of Advanced Audio Distribution Profile (A2DP) V12 ^[1] for constraints on bitpool value based on channel modes and number of subbands.
 - See Section 12.9 of Advanced Audio Distribution Profile (A2DP) V12 ^[1] for bitpool to / from bitrate conversion.
- **subbands** – Number of subbands
 - Values: 4 or 8 (default)
- **blocks** – Number of blocks
 - Values: 4, 8, 12 or 16 (default)
- **snr** – Enable or disable SNR as the bit allocation method (psycho-acoustic model)
 - 0 – loudness
 - 1 – SNR (default)

Based on the parameters above, the frame length is calculated and for Cadence Library the maximum frame length is 512 Bytes. After the initialization, the following parameters are available:

- **bitrate** – The actual encoding data rate in bits per second. Note that this is calculated based on the bitpool, number of block, subbands and sampling frequency.

3.3.1 XA_API_CMD_SET_CONFIG_PARAM

Table 3-1 XA_SBC_ENC_CONFIG_PARAM_SAMP_FREQ subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_SAMP_FREQ
Description	This command sets the input PCM sample rate in Hz.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_SAMP_FREQ</p> <p>pv_value &samp_freq – Pointer to the sample rate variable.</p>
Restrictions	<p>Valid values: 16,000, 32,000, 44,1000, 48,000 (default)</p> <p>Cannot be changed after the memory allocation stage</p>

Example

```
int samp_freq = 44100;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_SAMP_FREQ,
                  (void *) &samp_freq);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_SBC_ENC_CONFIG_FATAL_INVALID_SAMP_FREQ
Invalid value

Table 3-2 XA_SBC_ENC_CONFIG_PARAM_SUBBANDS subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_SUBBANDS
Description	This command sets the number of subbands.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_SUBBANDS</p> <p>pv_value &subbands – Pointer to the number of subbands variable.</p>
Restrictions	<p>Valid values: 4 or 8 (default)</p> <p>Cannot be changed after the memory allocation stage</p>

Example

```
int subbands = 4;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_SUBBANDS,
                  (void *) &subbands);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_SBC_ENC_CONFIG_FATAL_INVALID_NUM_SUBBANDS
Invalid value

Table 3-3 XA_SBC_ENC_CONFIG_PARAM_BLOCKS subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_BLOCKS
Description	This command sets the number of data blocks.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_BLOCKS</p> <p>pv_value &blocks – Pointer to the number of blocks variable.</p>
Restrictions	Valid values: 4, 8, 12, 16 (default)

Example

```
int blocks = 8;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_BLOCKS,
                  (void *) &blocks);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_SBC_ENC_CONFIG_FATAL_INVALID_NUM_BLOCKS
Invalid value

Table 3-4 XA_SBC_ENC_CONFIG_PARAM_CHMODE subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_CHMODE
Description	This command sets the channel mode of the input and encoded streams.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_CHMODE</p> <p>pv_value &chmode – Pointer to the channel mode variable.</p>
Restrictions	Valid values: 0 – mono (default), 1 – dual, 2 – stereo, 3 – joint-stereo. Cannot be changed after the memory allocation stage

Example

```
int chmode = 2;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_CHMODE,
                  (void *) &chmode);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_SBC_ENC_CONFIG_FATAL_INVALID_CHMODE
Invalid channel mode

Table 3-5 XA_SBC_ENC_CONFIG_PARAM_SNR subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_SNR
Description	This command enables or disables SNR as the bit allocation method (psycho-acoustic model).
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_SNR</p> <p>pv_value &snr – Pointer to the SNR flag.</p>
Restrictions	Valid values: 0 – loudness, non-zero – SNR (default)

Example

```
int snr = 0;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_SNR,
                  (void *) &snr);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
 - pv_value is NULL

Table 3-6 XA_SBC_ENC_CONFIG_PARAM_BITPOOL subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_BITPOOL
Description	This command sets the bitpool value, which is used to calculate the data rate of the output stream.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_SET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_BITPOOL</p> <p>pv_value &bitpool – Pointer to the bitpool variable.</p>
Restrictions	The bitpool value should be within 2-256 (default 31)

Example

```
int bitpool = 36;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_BITPOOL,
                  &bitpool);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL
- XA_SBC_ENC_CONFIG_FATAL_INVALID_BITPOOL

3.3.2 XA_API_CMD_GET_CONFIG_PARAM

Table 3-7 XA_SBC_ENC_CONFIG_PARAM_BITRATE subcommand

Subcommand	XA_SBC_ENC_CONFIG_PARAM_BITRATE
Description	This command gets the data rate of the output stream in bits per second. Note that the target rate may be recalculated by the library due to available bitpool value.
Actual Parameters	<p>p_xa_module_obj api_obj – Pointer to API structure</p> <p>i_cmd XA_API_CMD_GET_CONFIG_PARAM</p> <p>i_idx XA_SBC_ENC_CONFIG_PARAM_BITRATE</p> <p>pv_value &bitrate – Pointer to the data rate variable.</p>
Restrictions	None

Example

```
int bitrate;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_SBC_ENC_CONFIG_PARAM_BITRATE,
                  (void *) &bitrate);
```

Errors

- Common API Errors
- XA_API_FATAL_MEM_ALLOC
pv_value is NULL

4. Introduction to the Example Test Bench

The supplied sample test bench contains the following files:

- Test bench source files (test/src)
 - xa_sbc_enc_error_handler.c
 - xa_sbc_enc_sample_testbench.c
- Makefile to build the executable (test/build)
 - makefile_testbench_sample
- Sample parameter file to run the test bench (test/build)
 - paramfilesimple_enc.txt

4.1 Making the Executable

To build the application, follow these steps:

1. Go to test/build.
2. At the prompt, enter

```
xt-make -f makefile_testbench_sample clean xa_sbc_enc_test
```

This will build the encoder application xa_sbc_enc_test.

Note	If you have source code distribution, you must build the SBC encoder library before building the test bench application. To build the library, follow these steps:
-------------	--

1. Go to build.
2. At the prompt, enter `xt-make clean sbc_enc install`

4.2 Usage

The sample application executable can be run with command line options or with a parameter file. The command line usage is as follows:

```
xt-run xa_sbc_enc_test
  -ifile:<input WAV file name>
  -ofile:<output SBC file name>
  [-n<subbands>]
  [-l<blocks>]
  [-b<bitpool>]
  [-s] [-j] [-p]
```

Where:

<subbands>	Number of sub-bands.
<blocks>	Number of blocks
<bitpool>	Bitpool value
-s	Stereo mode for 2-channel inputs
-j	Joint-stereo mode for 2-channel inputs
-p	Simple psycho-acoustic model (loudness)

If no command line argument is given the application reads the commands from a parameter file `paramfilesimple_enc.txt` in the current directory.

Following is the syntax of the `paramfilesimple_enc.txt` file:

```
@Start
@Input_path <path to be appended to all input files>
@Output_path <path to be appended to all output files>
<command line 1>
<command line 2>
....
@Stop
```

The HiFi SBC Encoder can be run on multiple test files using different command lines. The syntax for the command lines in the parameter file is the same as the syntax for specifying options on the command line to the test bench program.

Note All the @<command>s should be at the first column of a line except the @New_line command.

Note All the @<command>s are case sensitive. If the command line in the parameter file has to be broken to two parts on two different lines use the @New_line command.

Example:

```
<command line part 1> @New_line
```

```
<command line part 2>.
```

Note Blank lines will be ignored.

Note Individual lines can be commented out using "/" at the beginning of the line.

5. References

- [1] *Bluetooth Specification. Advance Audio Distribution Profile Specification (A2DP_SPEC, V12). www.bluetooth.org.*