


# HELEN DESTINATION LISTS DATABASE


## 1. Creating a New Directory/Folder

In order to begin using Helen a database that will contain a list of your destinations should be created.


To create New Destination List Go to **HELEN- Destination List**, Click on **'File'** menu, then click on **'New'**, this will **open** **'Create New Destination List'** window.

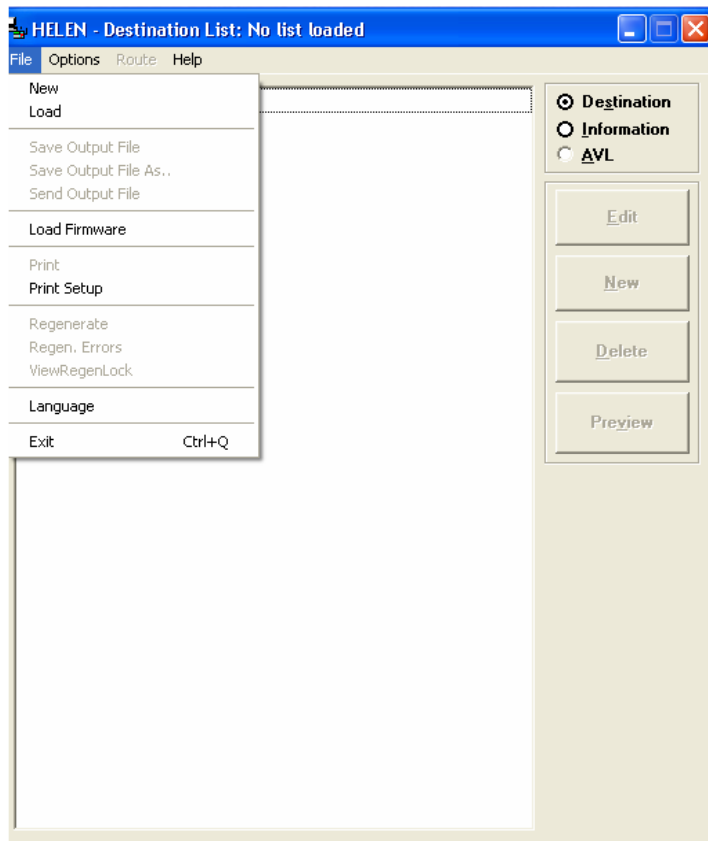

**Fig.1**

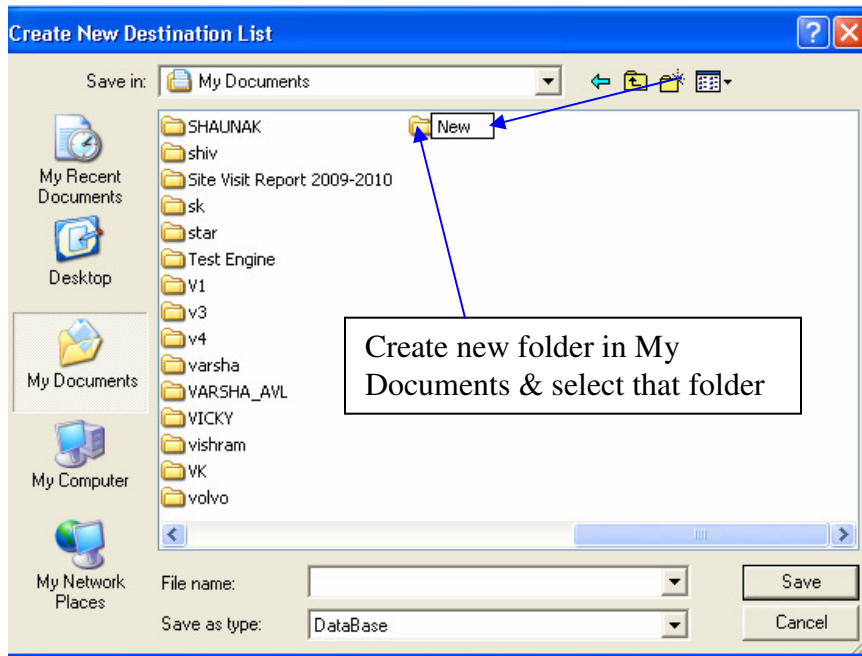


**Fig. 2**

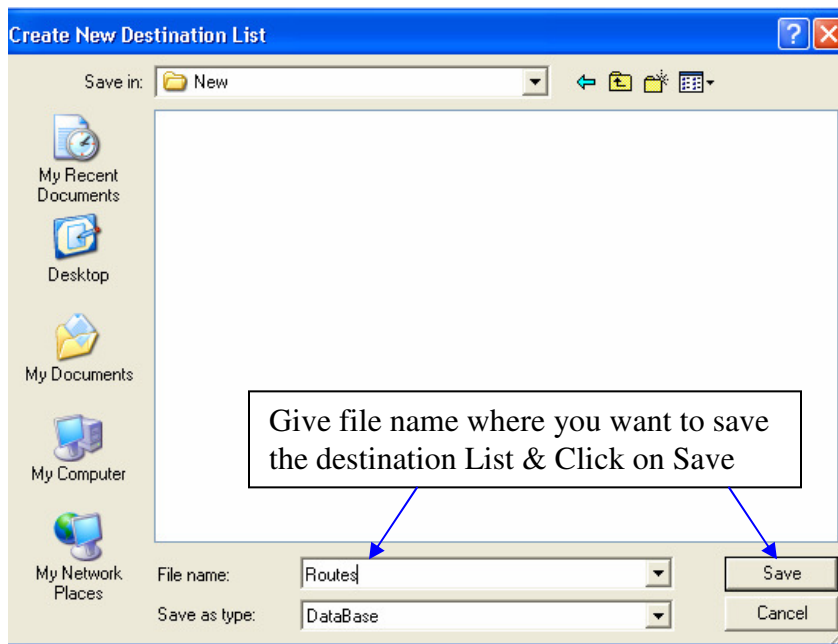

**Fig.3**

**After saving file Sign Parameter Editor Window will get open.**

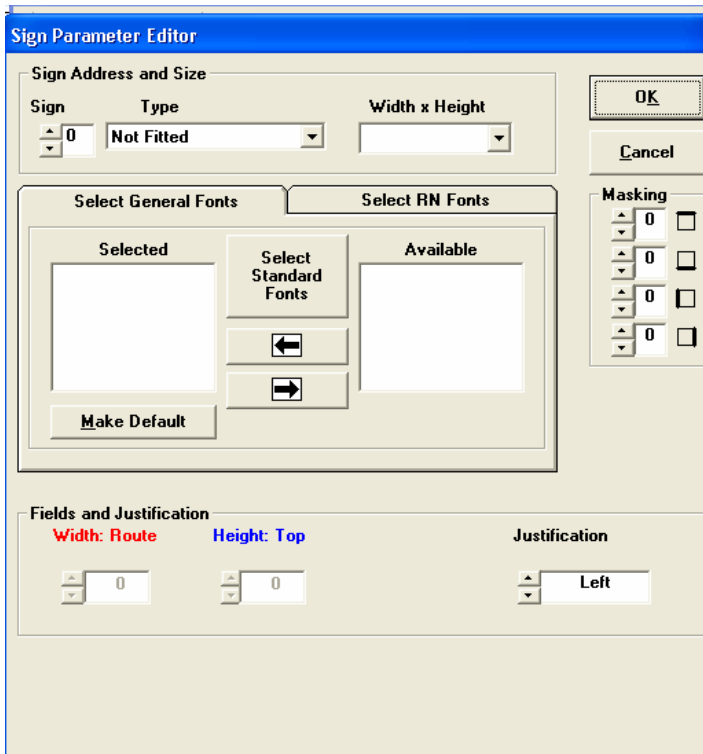

First Select, Sign 0  
 Type External  
 Width\*Height 140\*15  
 Then, Select RN Fonts  
 Then, Select Standard RN Fonts  
 Then, Select General Fonts  
 Then, Select Standard Fonts

**Fig. 4**

**Sign Parameter Editor**

**Sign Address and Size**

Sign: 0 Type: External LED Width x Height: 140 x 15

**Select General Fonts**

**Selected**

- 0705C1E1
- 0705N1E1
- 0705NC1E1
- 0708B2E1
- 1310C2E1
- 1311B3E1
- 1508C2E1

**Select Standard Fonts**

**Available**

- 0505C1E1
- 0505N1E1
- 0605C1E1
- 0605N1E1
- 0806C1E1
- 0806N1E1
- 0806NC1E1

**Masking**

0 0 0 0

**Fields and Justification**

Width: Route 35 Height: Top 7 Justification: Left

**Fig. 5**

First Select, Sign 0  
Type External LED  
Width\*Height 140\*15  
Then, Select RN Fonts  
Then, Select Standard RN Fonts  
Then, Select General Fonts  
Then, Select Standard Fonts

**Sign Parameter Editor**

**Sign Address and Size**

Sign: 1 Type: External LED Width x Height: 96 x 15

**Select General Fonts**

**Selected**

- 0705C1E1
- 0705N1E1
- 0705NC1E1
- 0708B2E1
- 1310C2E1
- 1311B3E1
- 1508C2E1

**Select Standard Fonts**

**Available**

- 0505C1E1
- 0505N1E1
- 0605C1E1
- 0605N1E1
- 0806C1E1
- 0806N1E1
- 0806NC1E1

**Masking**

0 0 0 0

**Fields and Justification**

Width: Route 28 Height: Top 7 Justification: Left

First Select, Sign 1  
Type External LED  
Width\*Height 96\*15  
Then, Select RN Fonts  
Then, Select Standard RN Fonts  
Then, Select General Fonts  
Then, Select Standard Fonts

Fig.6

**Sign Parameter Editor**

**Sign Address and Size**

Sign: 2 Type: Internal LED Width x Height: 144 x 16

**Select General Fonts**

Selected:

- 0705C1E1
- 0705N1E1
- 0708B2E1
- 0806C1E1
- 0808B2E1
- 1410C2E1
- 1411B3E1

Make Default

**Select RN Fonts**

Select Standard Fonts

Available:

- 0505C1E1
- 0505N1E1
- 0605C1E1
- 0605N1E1
- 0705NC1E1
- 0806N1E1
- 0806NC1E1

**Masking**

0 ☐

0 ☐

0 ☐


0 ☐

**Fields and Justification**

Width: Route 36 Height: Top 8 Justification: Left

First Select, Sign 2  
Type Internal LED  
Width\*Height 144\*16  
Then, Select RN Fonts  
Then, Select Standard RN Fonts  
Then, Select General Fonts  
Then, Select Standard Fonts  
Thus After configuring each sign  
Click OK

Fig. 7

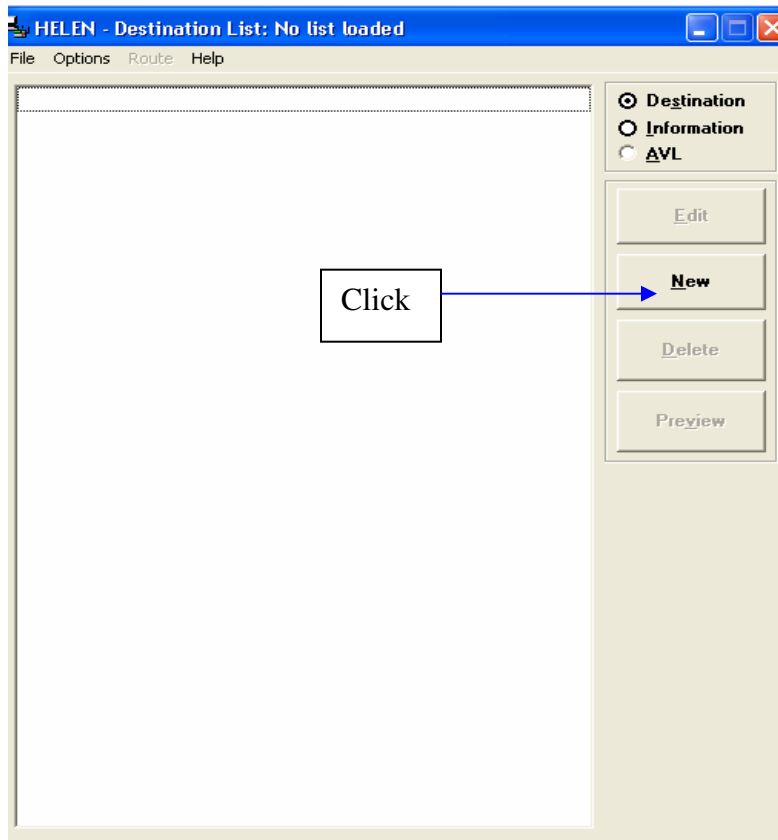

After clicking OK in Sign  
Parameter Editor it will  
enable **New** in HELEN  
Destination List.

**Fig. 8**

File Options Route Help

☒ Destination  
☐ Information  
☐ AVL

**Enter Route Code and Name**

Drop from:

☐ Drivers Msg.  
☒ Front sign

☐ Scrolling off

Drop

OK

Cancel

Dest.: Drivers Message :

Sign 0

140x15

Sign 1

96x15

Sign 2

144x16

For First Route Give Dest.: 1

Enter Route no. / Bus no.

Enter Text (Destination Name)

**Fig. 9**

HELEN - Destination List: No list loaded

File Options Route Help

☒ Destination  
☐ Information  
☐ AVL

**Enter Route Code and Name**

Drop from:  
☐ Drivers Msg.  
☒ Front sign

☐ Scrolling off

**Drop** **OK** **Cancel**

Dest.: 1 Drivers Message : 1

**Sign 0**  
 140x15 105 PUNE  
 Via: Lonawala

**Sign 1**  
 96x15

**Sign 2**  
 144x16

After Entering Text For  
Sign 0 & Dest no. Click  
**Drop**

**Fig. 10**



File Options Route Help

☒ Destination  
☐ Information  
☐ AVL

**Enter Route Code and Name**

Drop from:  
☐ Drivers Msg.  
☒ Front sign

☐ Scrolling off

Dest.: 1 Drivers Message : 105 Via: Lonawal 2

Sign 0 140x15	105	PUNE Via: Lonawala	1
Sign 1 96x15	105	PUNE Via: Lonawala	1
Sign 2 144x16	105	PUNE Via: Lonawala	1

Now Click

After clicking **Drop**,  
Text from **Sign 0** gets  
copied into **Sign 1**, **Sign 2** &  
**Drivers Message**  
Then Click **OK** to see  
Preview

**Fig.11**

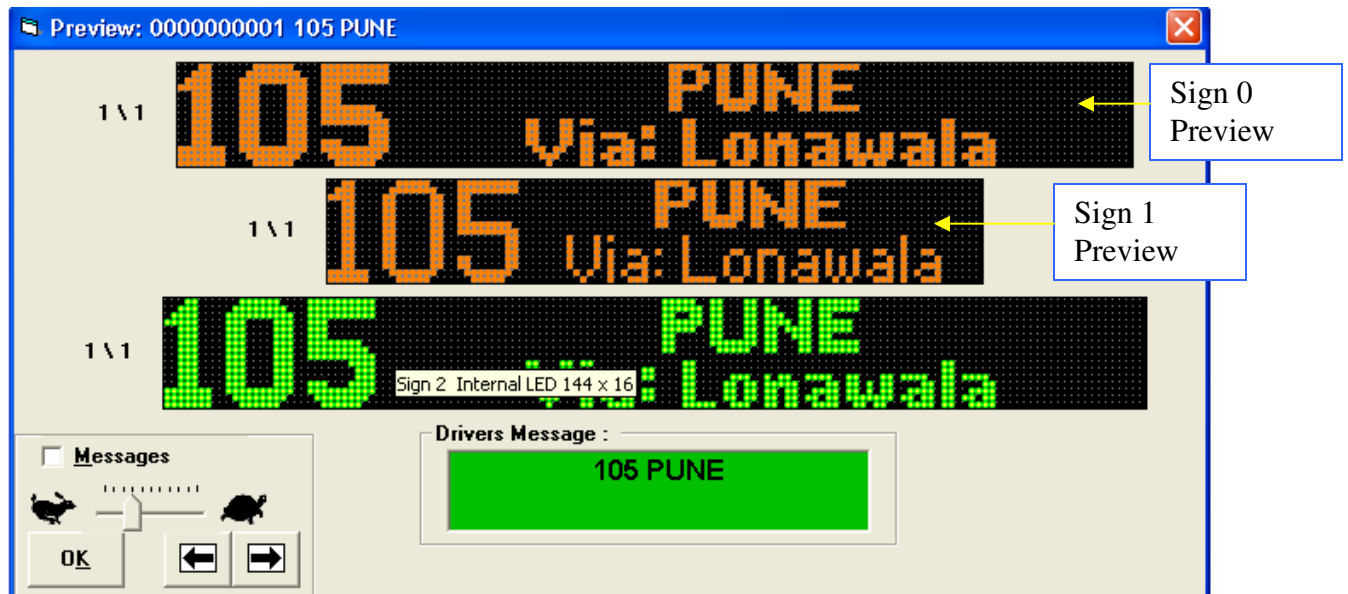


Fig. 12

## 2 How to Edit Sign?



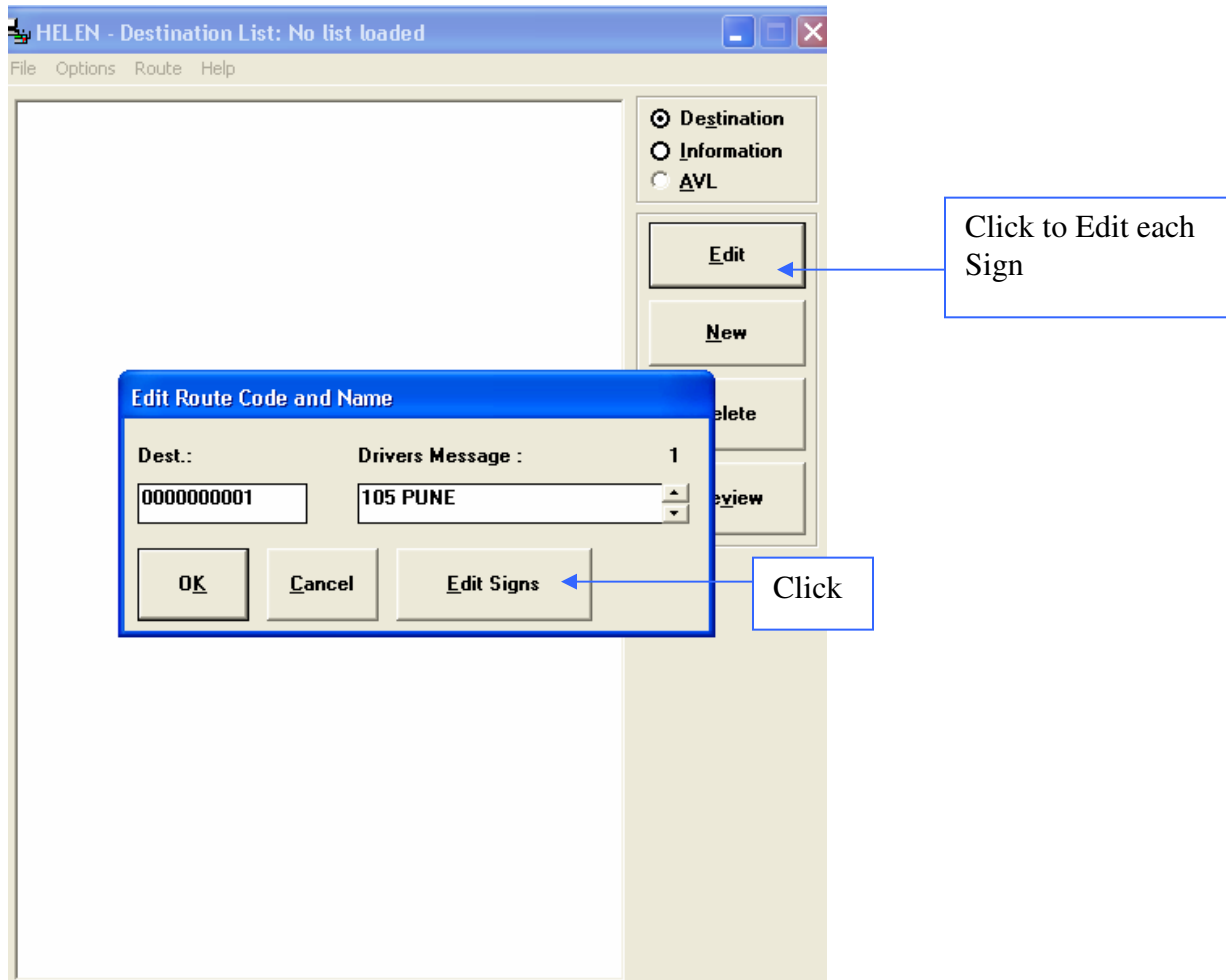


Fig. 2.1

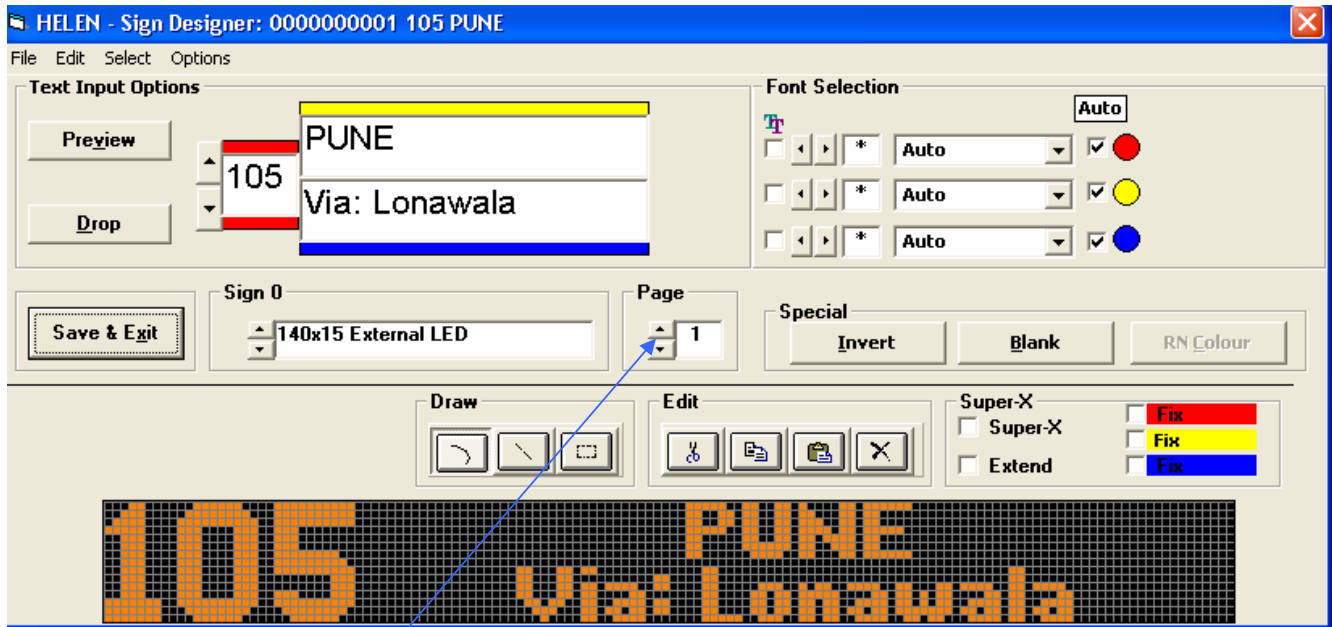

Select Page 2 to display it in Regional Language

**Fig 2.2**

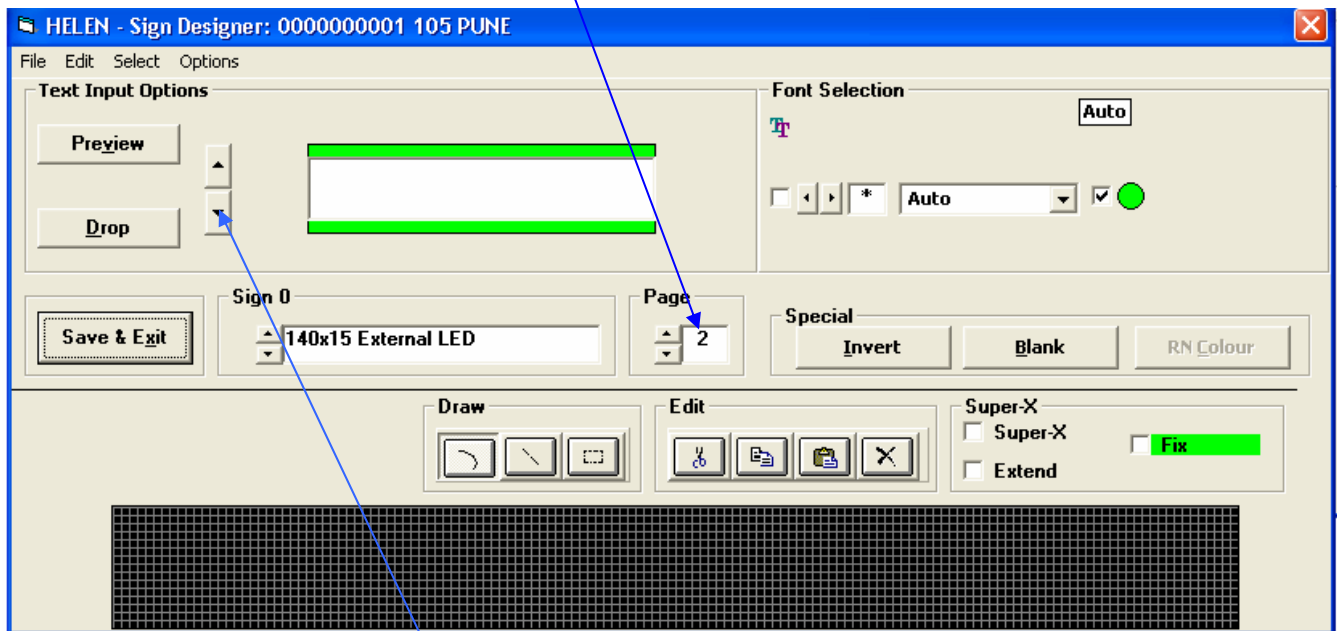

Using spin button you can arrange text box orientation as per Requirement

**Fig. 2.3**

## How to create Display in Regional Language?

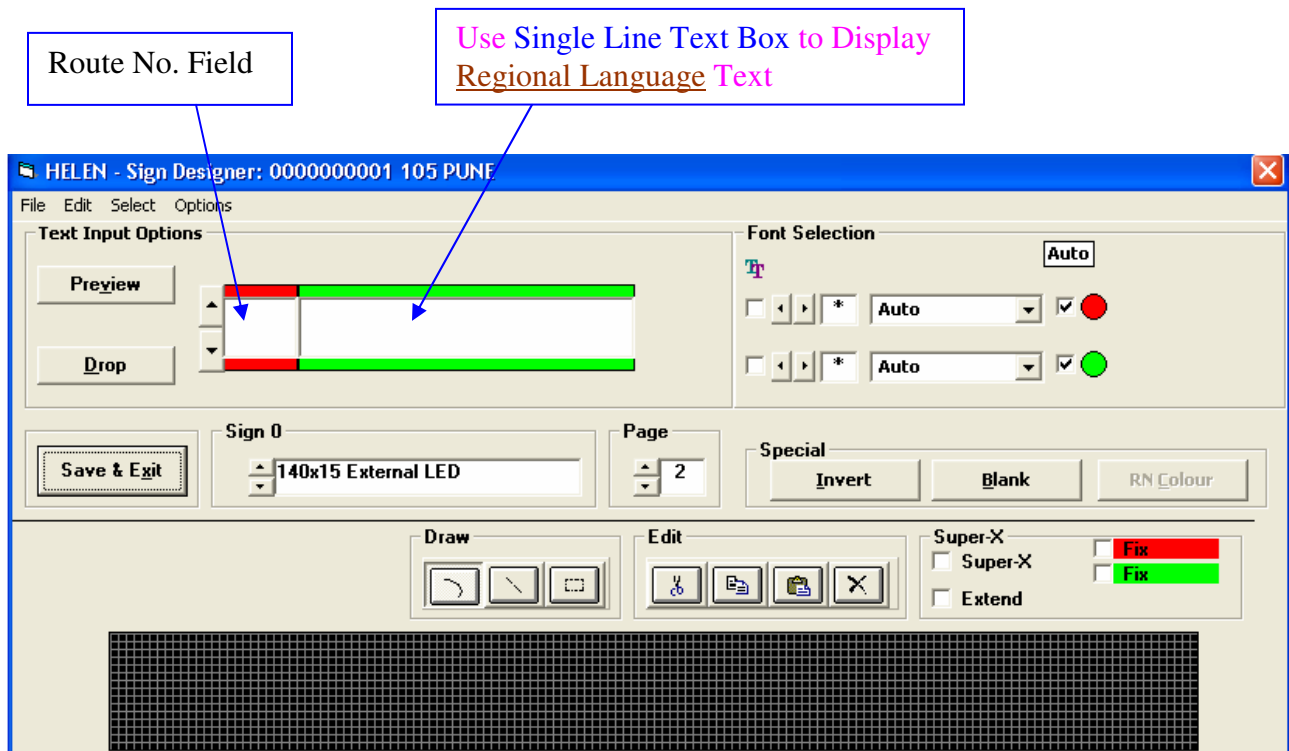


Fig. 2.4


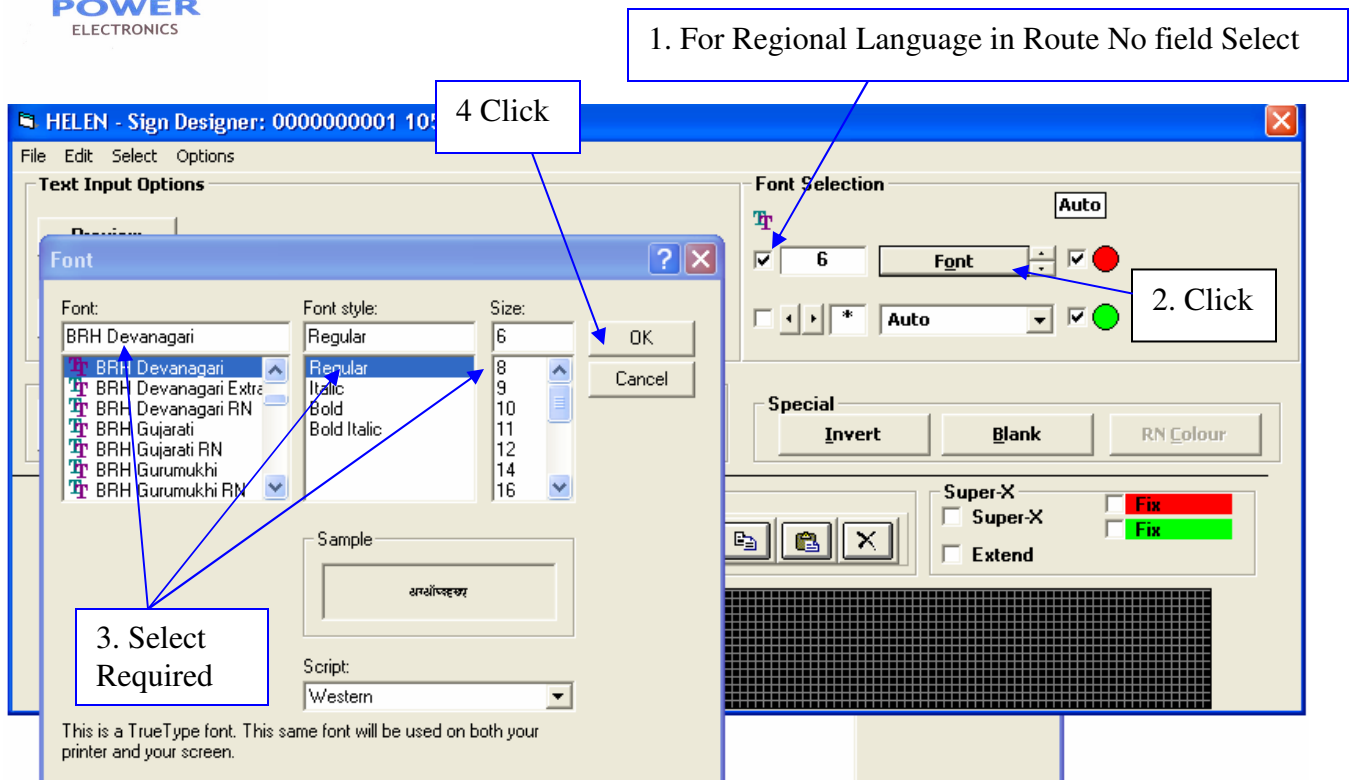


Fig. 2.5

## After 'Font Selection' in route no. field

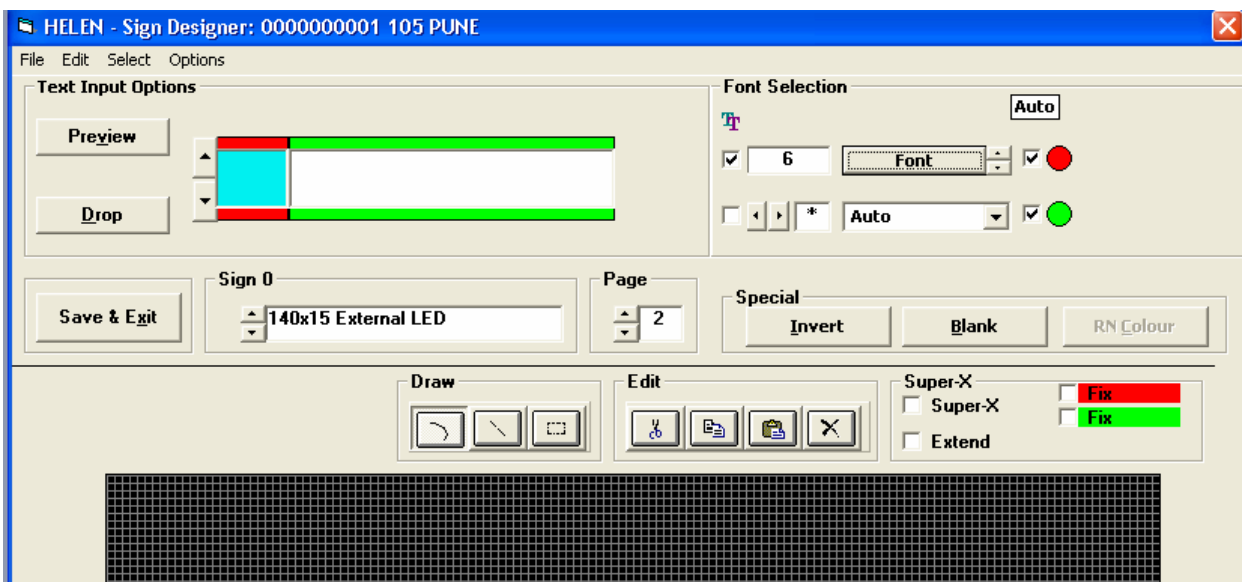

Font selection for Regional Language  
Text in single line text box

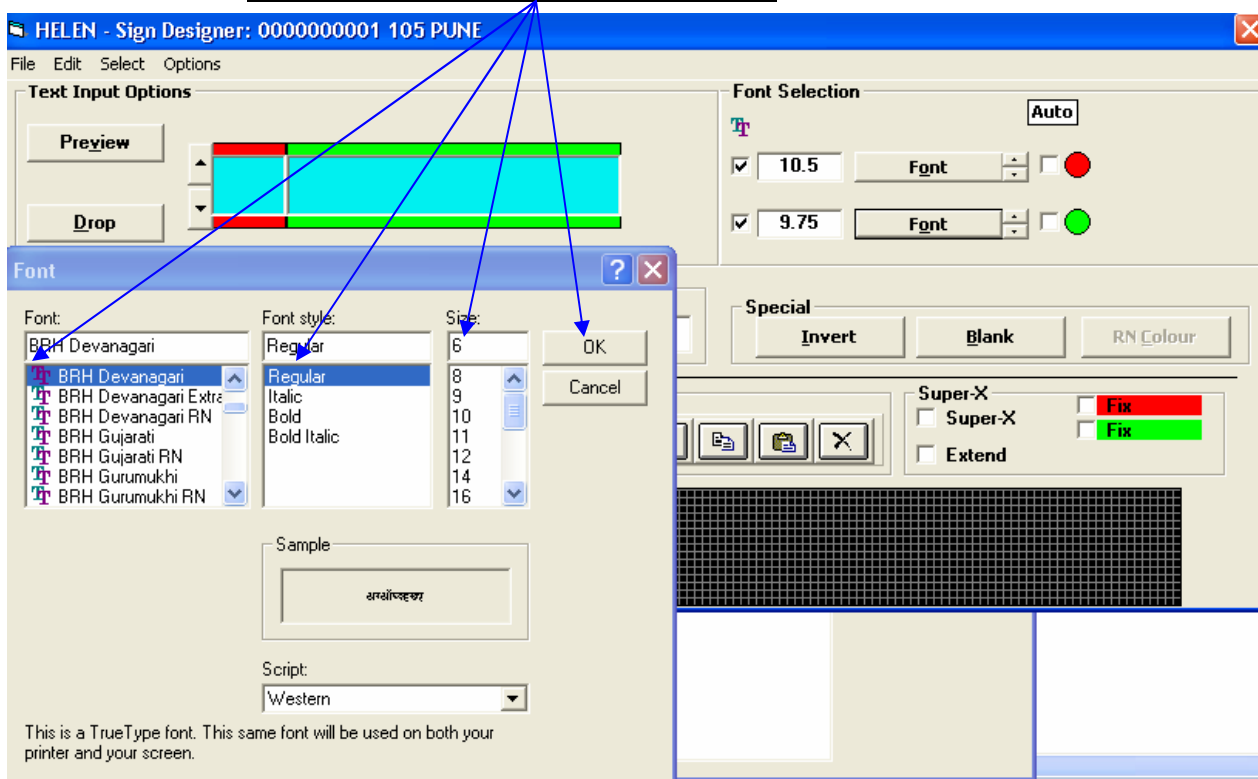


Fig. 2.5

After 'Font Selection' in single line text box

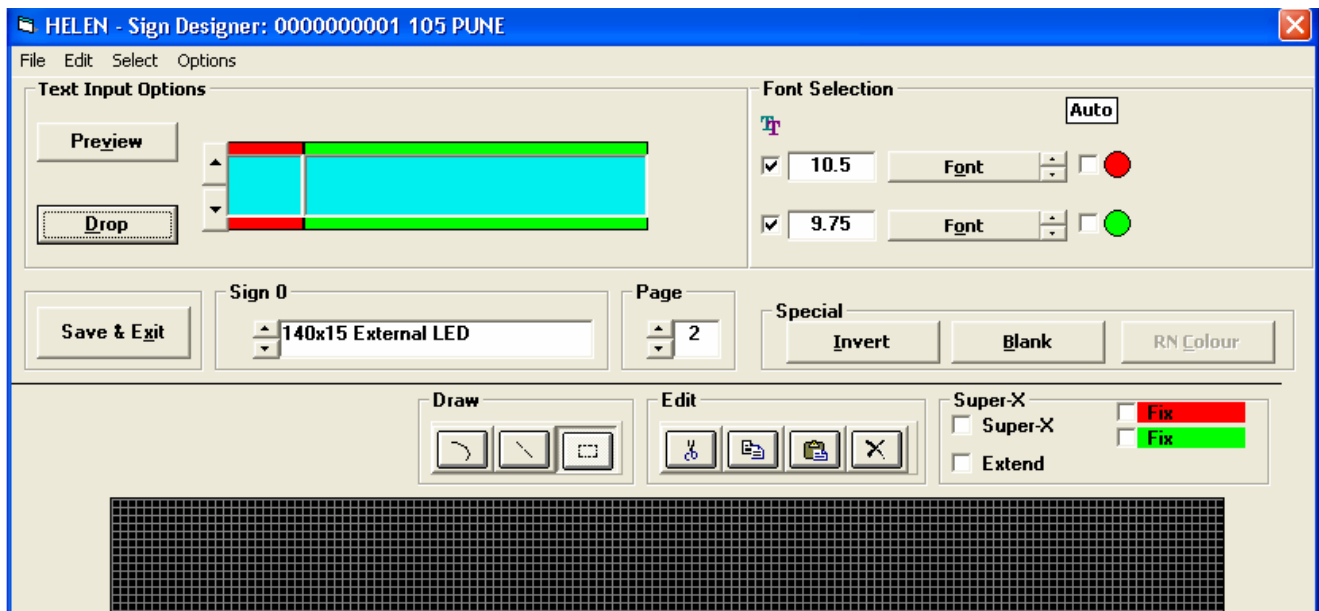


Fig. 2.6




Double click 'BahahaDirect' icon on Desktop which enables regional language typing,

1. Right Click



To Change the Language from English to other Regional Language follow the steps as shown below,

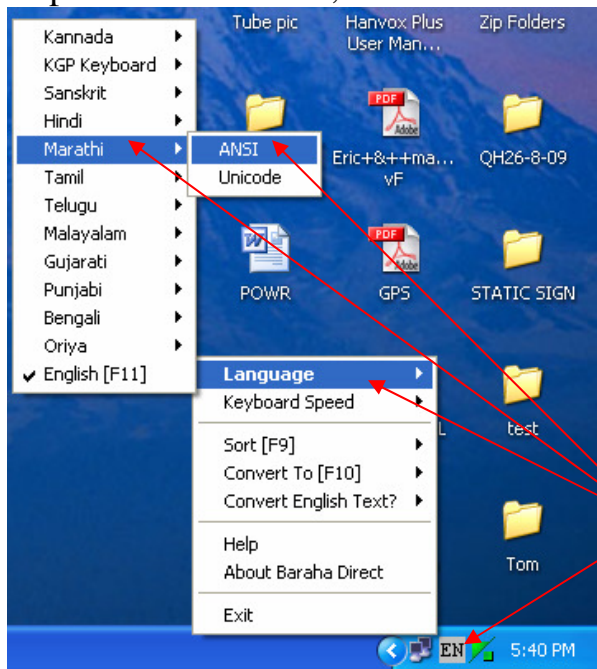

2. Select

**OR Press F11** to change language from English to desired Regional language.

Marathi  
/ ANSI





Enter text in text box as shown below & Drop.

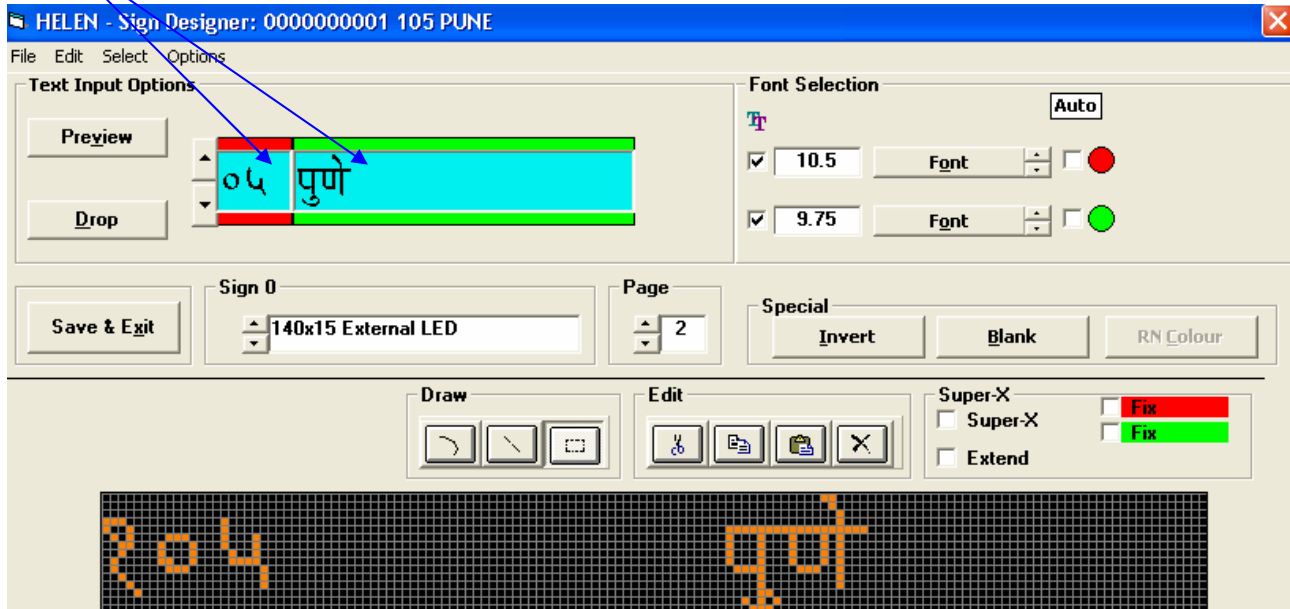


Fig.2.7

Then Save & Exit & Check Preview.

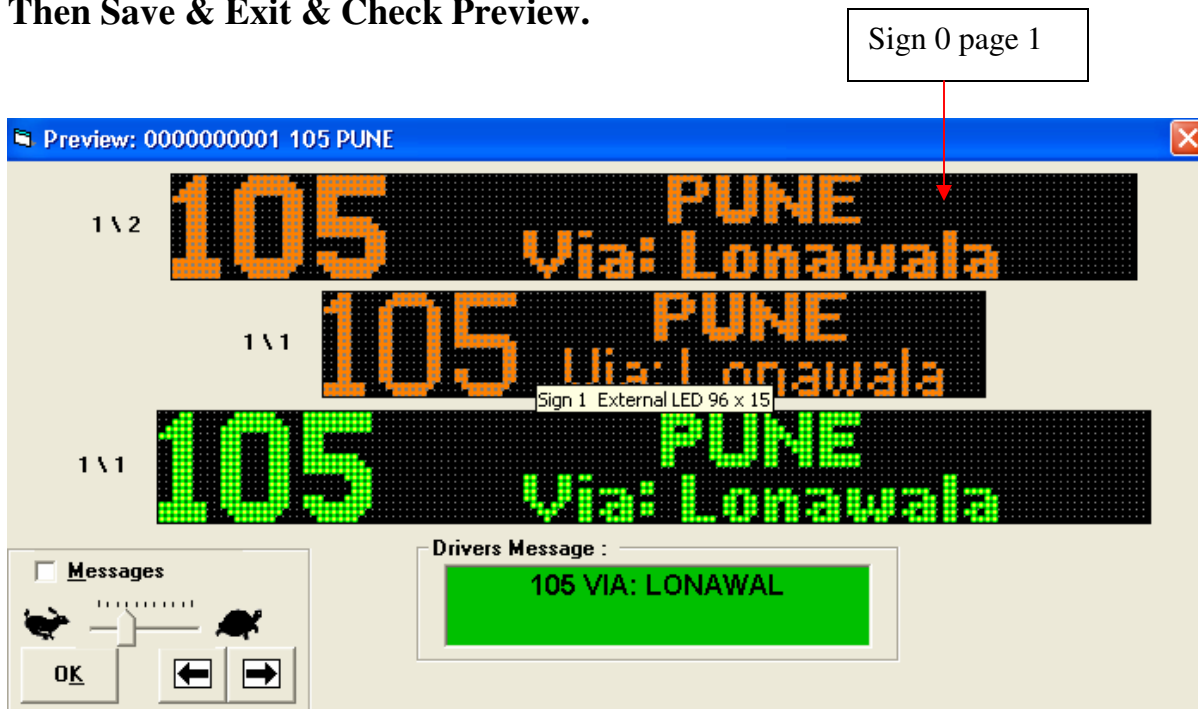


Fig 2.8

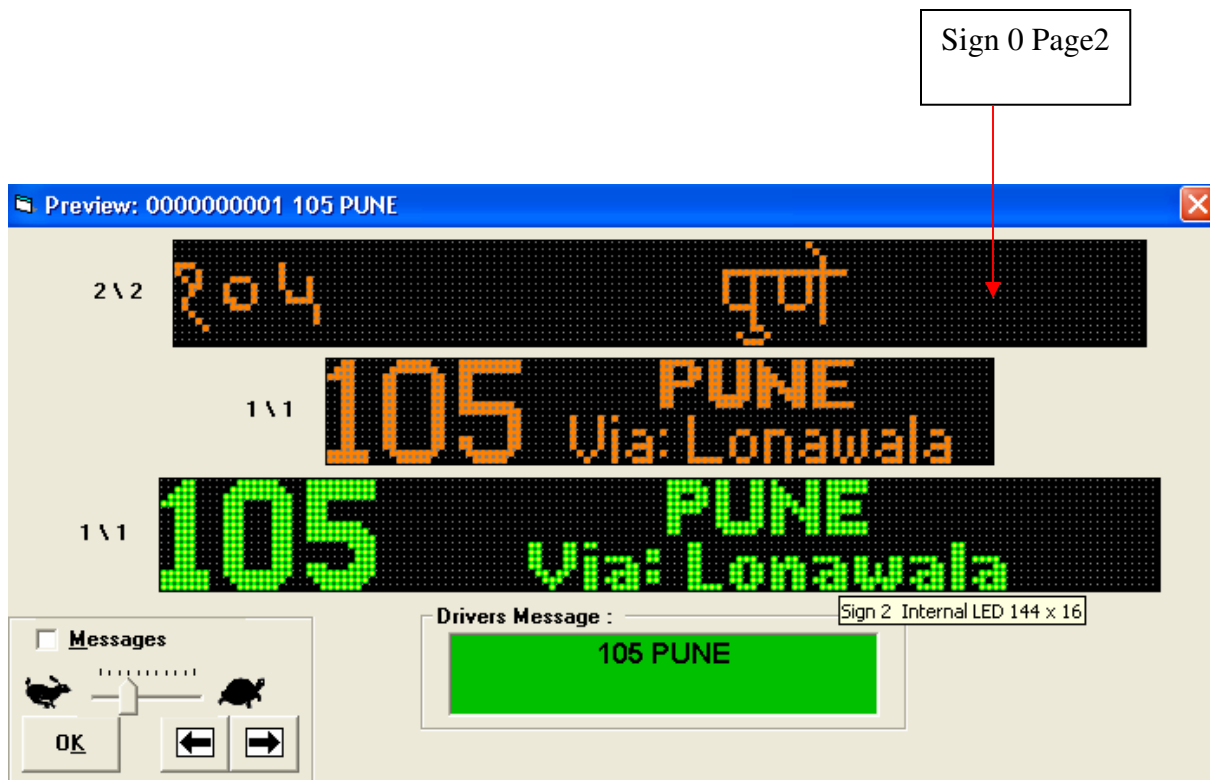


Fig 2.9

### 3. How to scroll text?

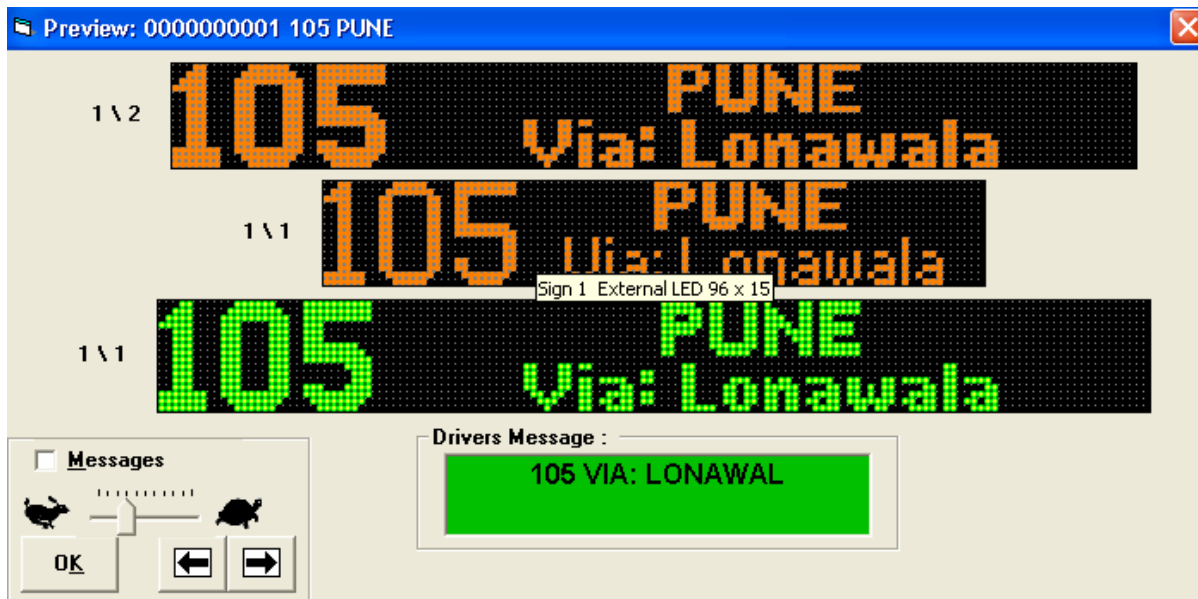


Fig 3.1

To scroll second line, select Extend

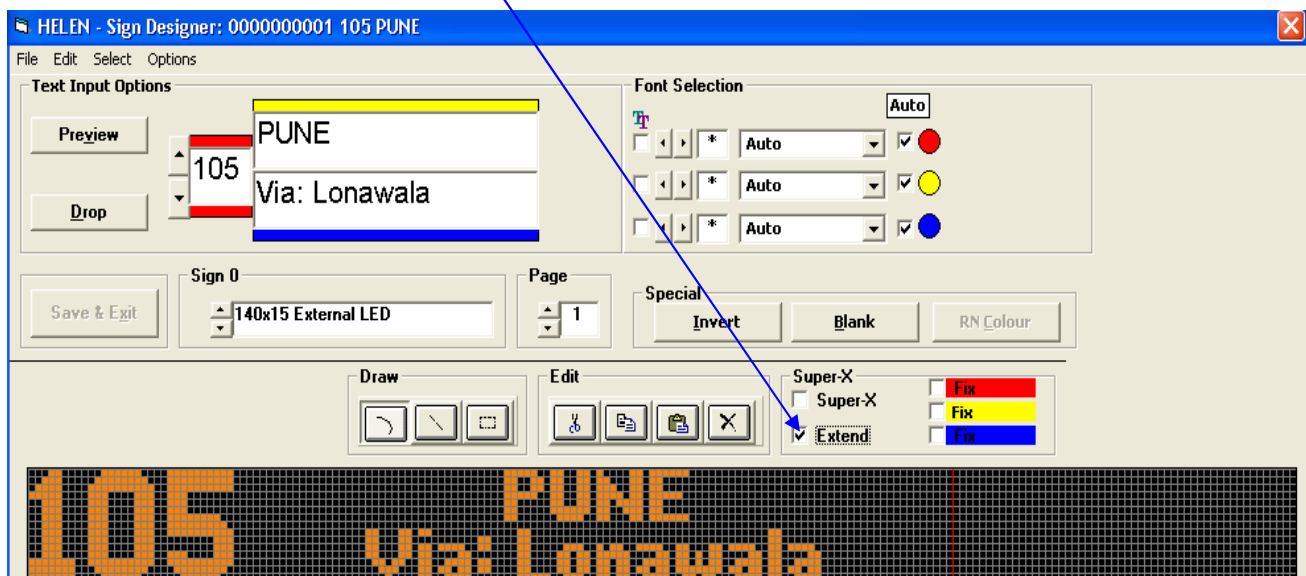


Fig. 3.2

Red line to indicate actual board size

## Then Drop

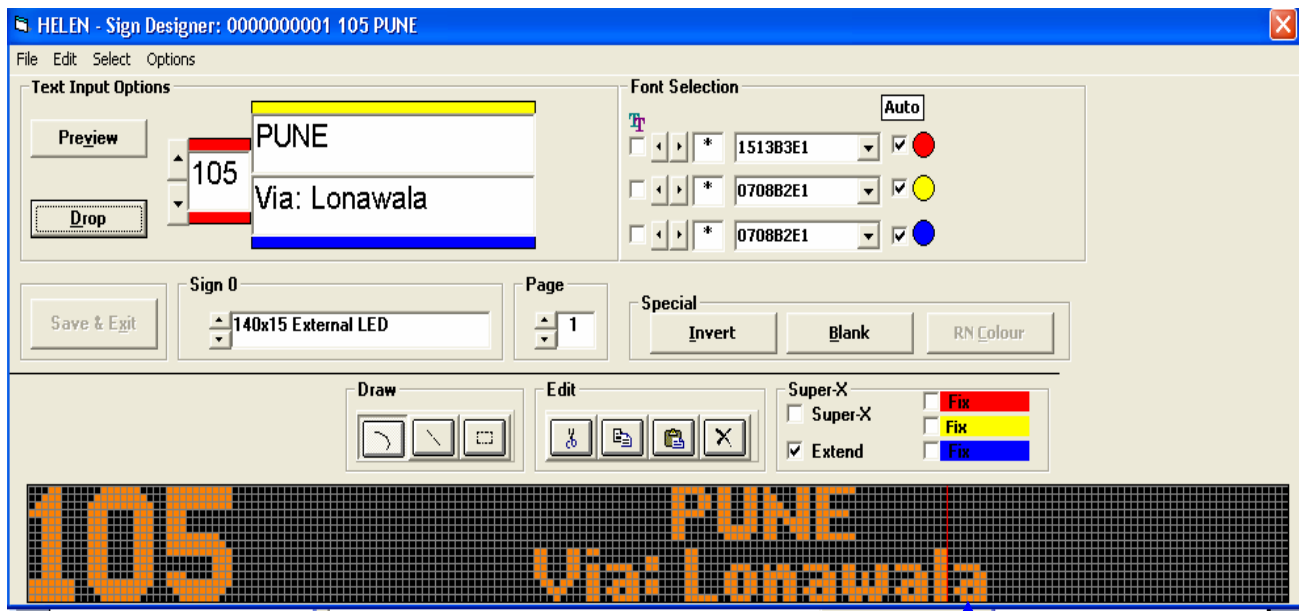


Fig. 3.3

After Drop text crosses red line



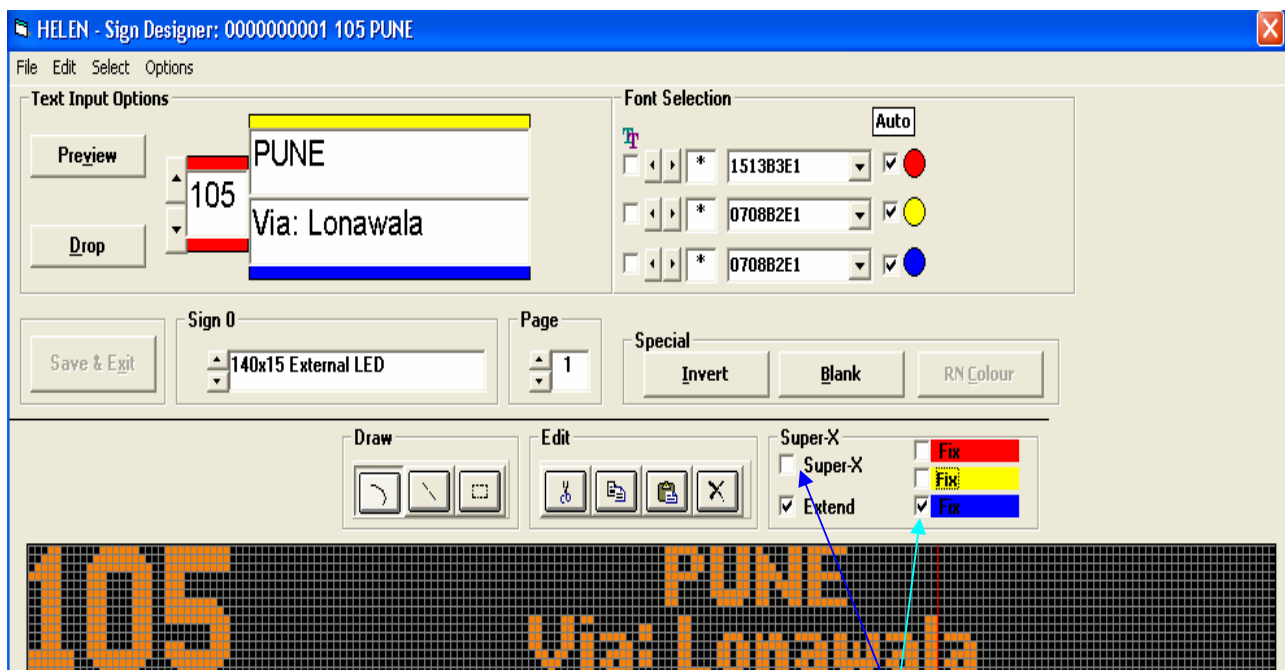


Fig. 3.4

Then select Fix & then Super-X

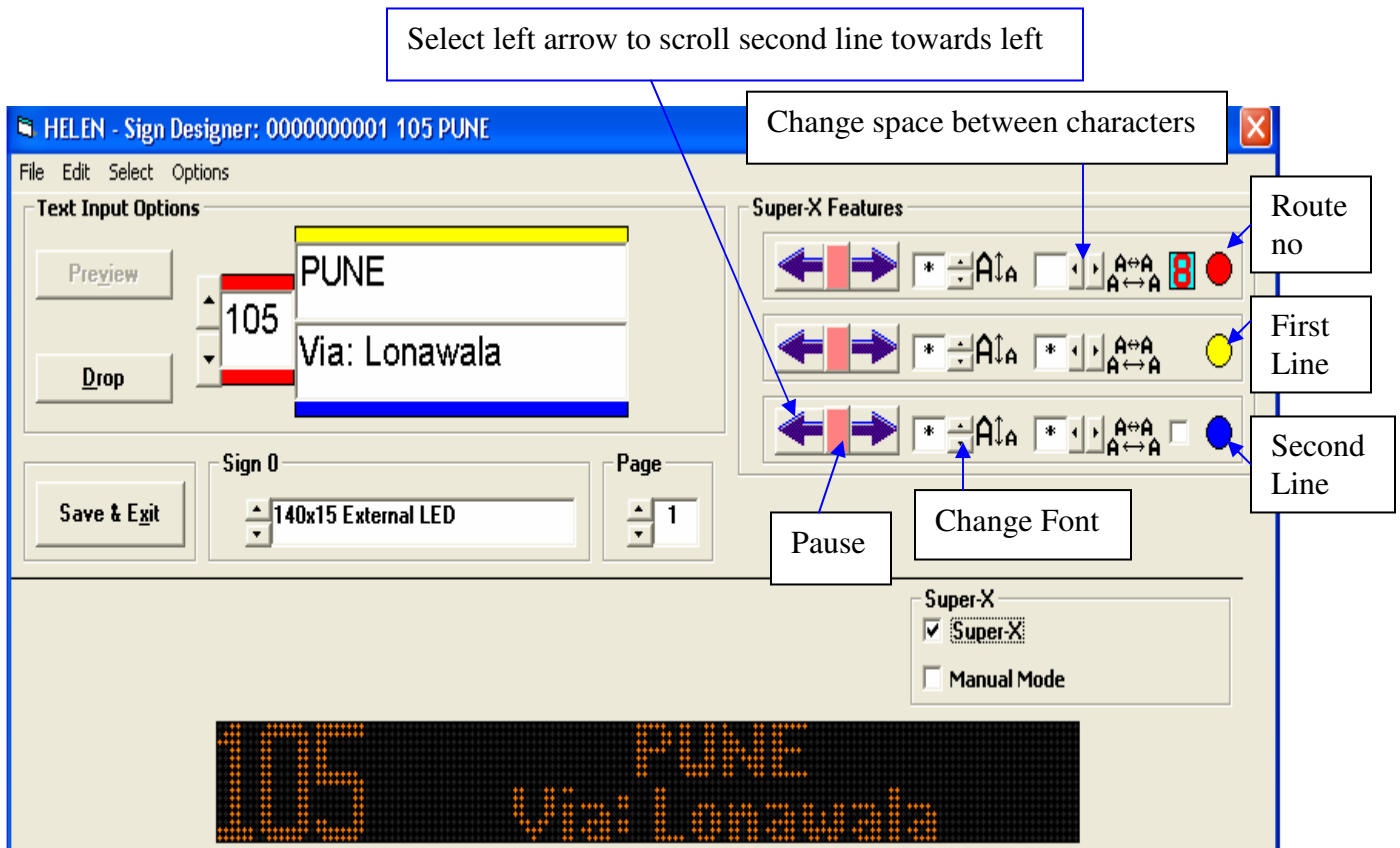

**Fig. 3.5**

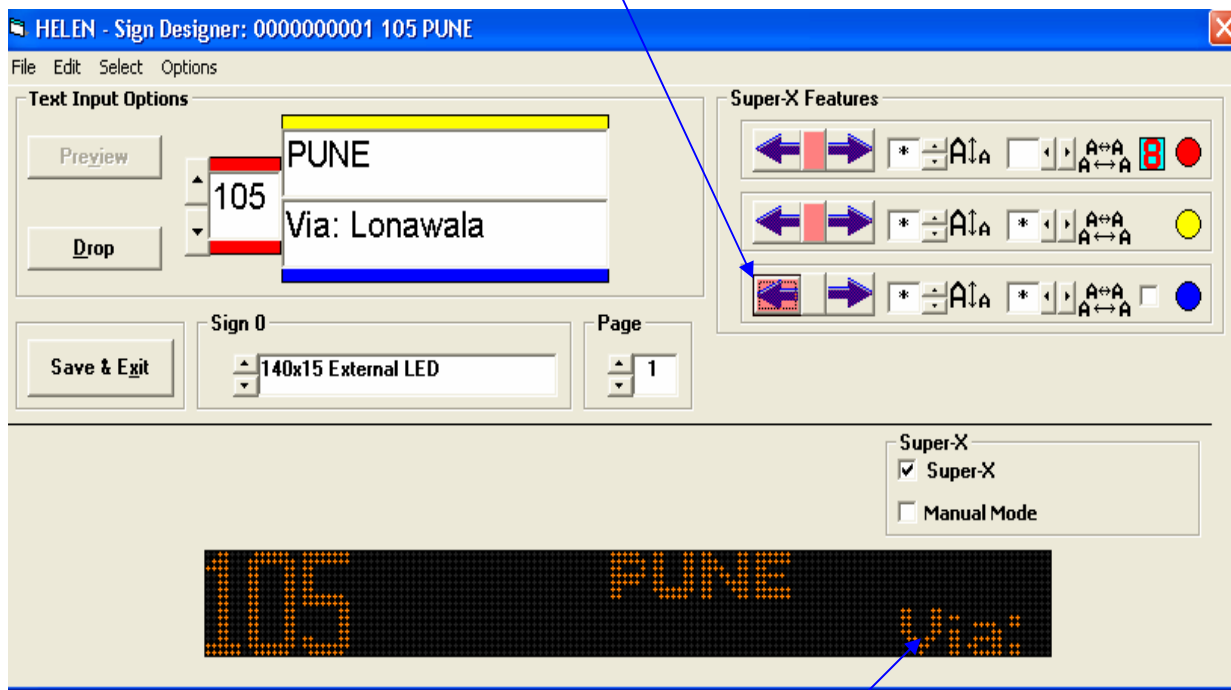


Left arrow selected to scroll second line towards left


**Fig. 3.6**

Second line text starts to scroll

**Significance of Manual Mode:** If there are two or more pages out of which one or more page contains scrolling text then after Super-X select Manual Mode

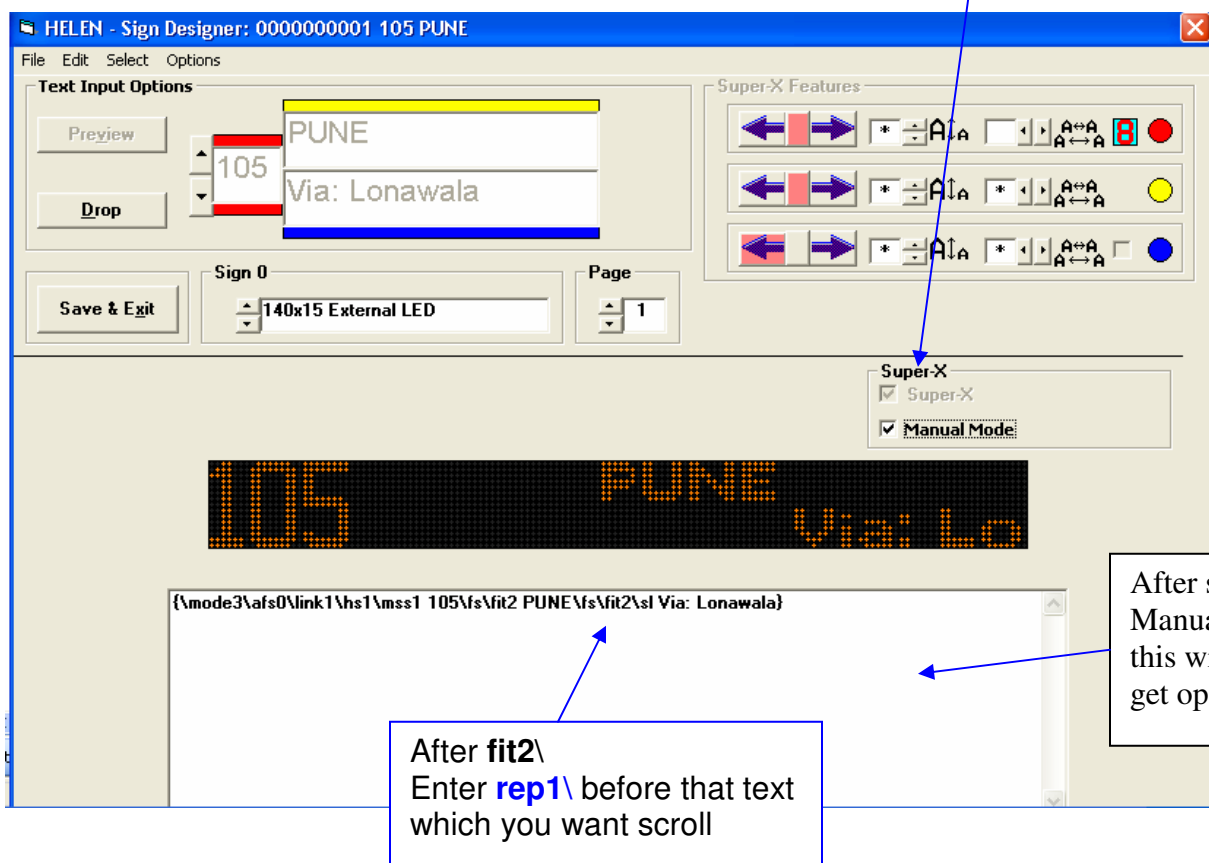

**Fig. 3.7**

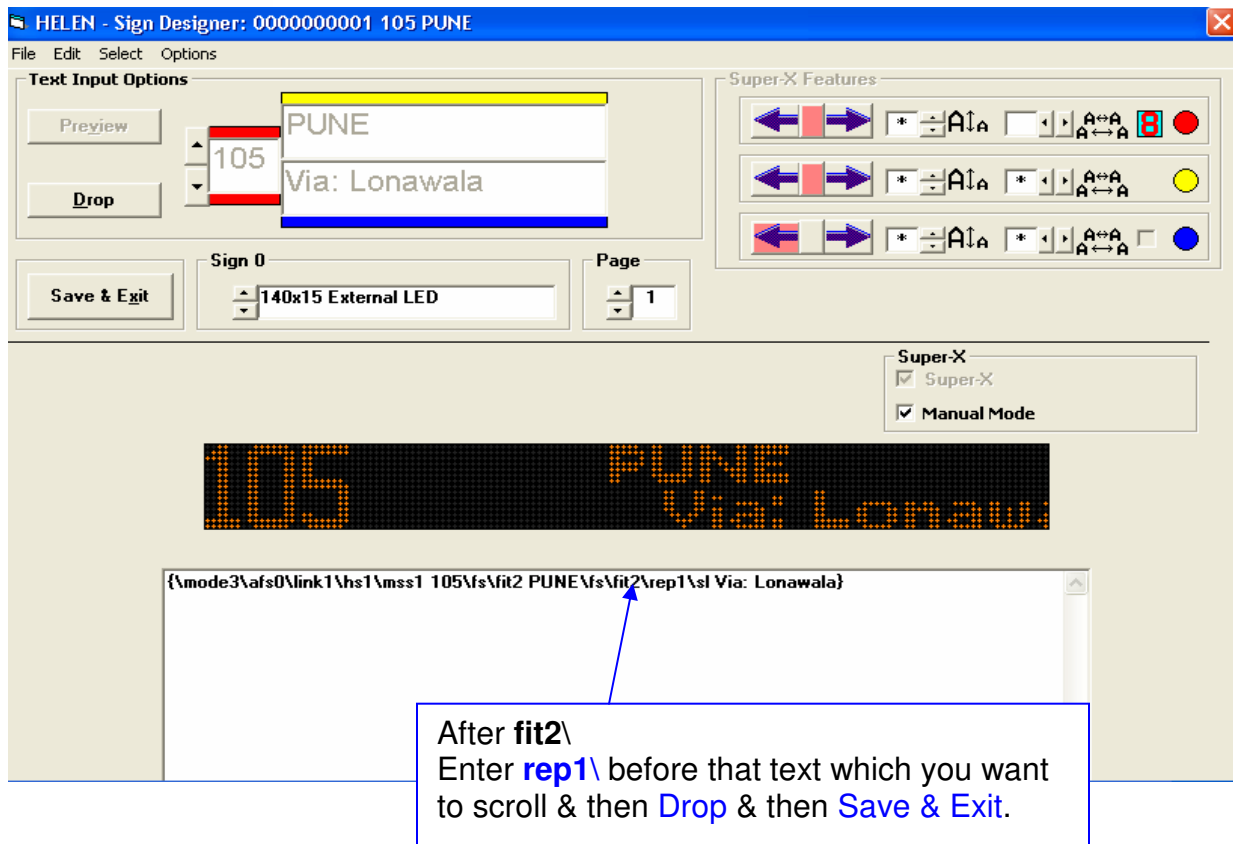

**Fig. 3.8**

After application of manual mode, that particular text scrolls & then next page displays for particular time (**which we set in Console configuration**) & again scrolling page displays & cycle repeats.




## Scrolling of Text on Internal LED Board (L063):

Enter the long text in Text Box & Drop.



All text you have entered can be seen by moving slide bar.

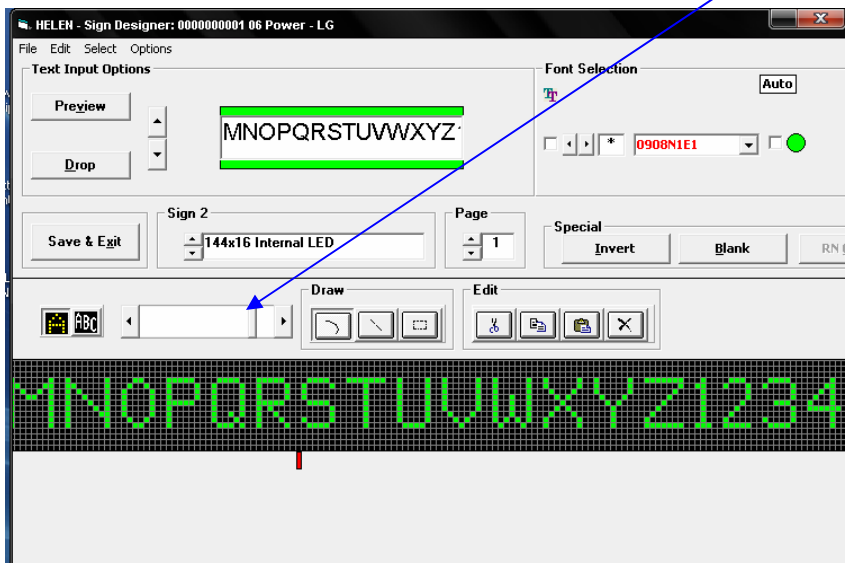




It seems to appear static text in preview but actually on Internal LED Display Sign (L063) text will be scrolling.


So Internal LED Board can display upto 30 scrolling characters with readable font size.

## 4. Console Configuration


After you finish with making Destination List with all routes, go to [Options – Console configuration](#) as shown below,

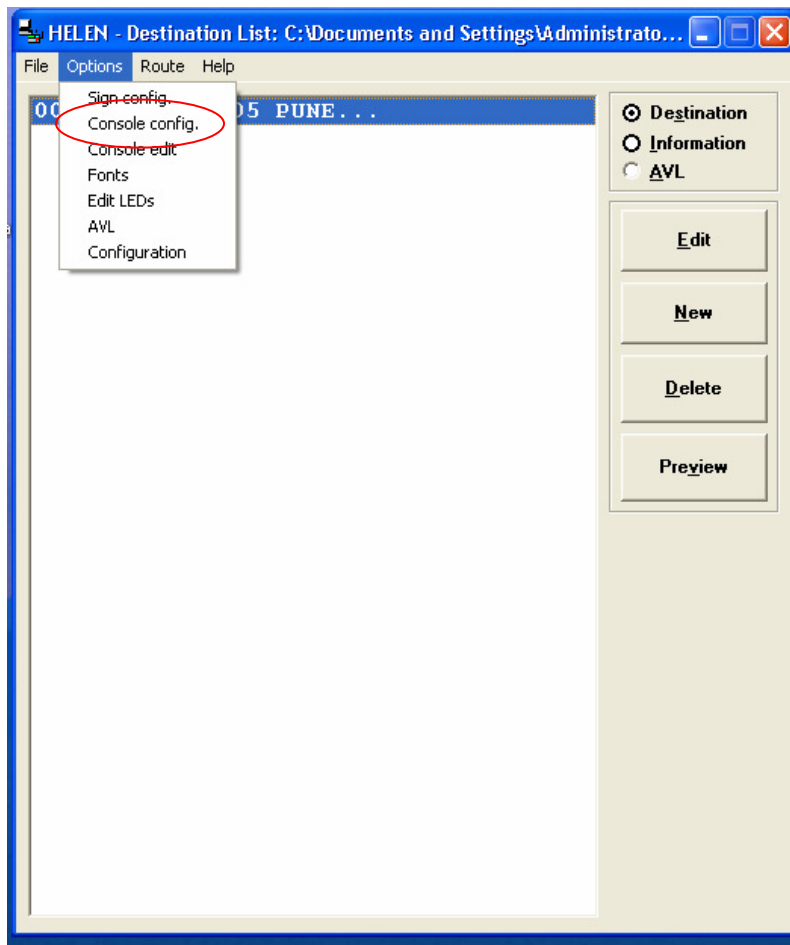


**Fig. 4.1**

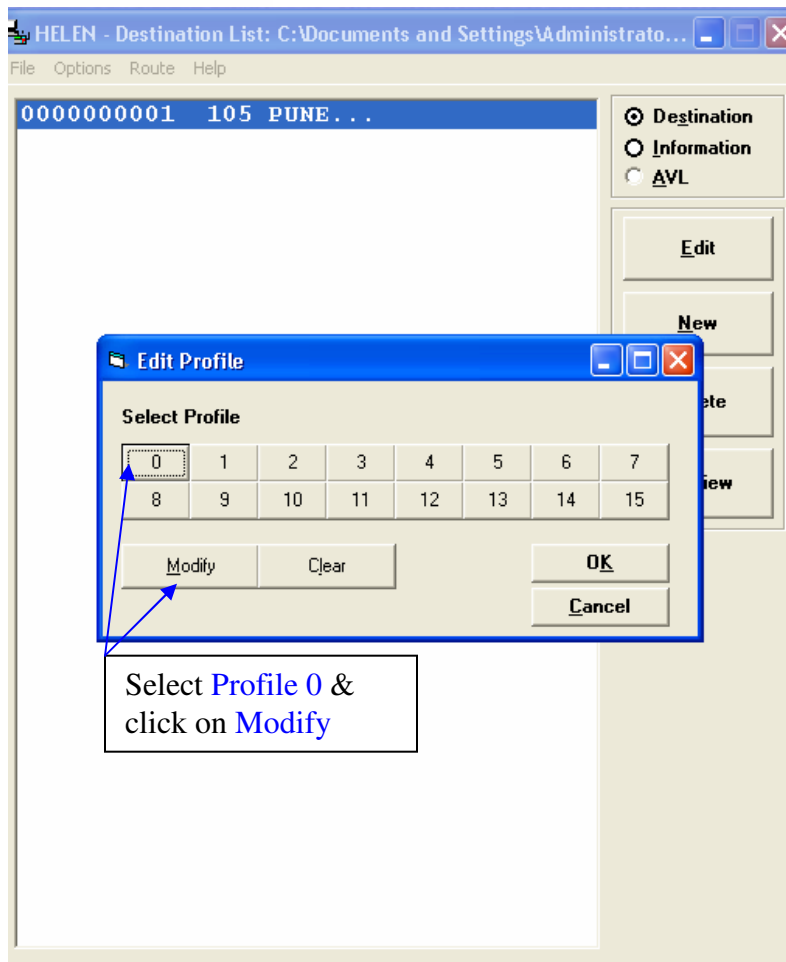


**Fig. 4.2**

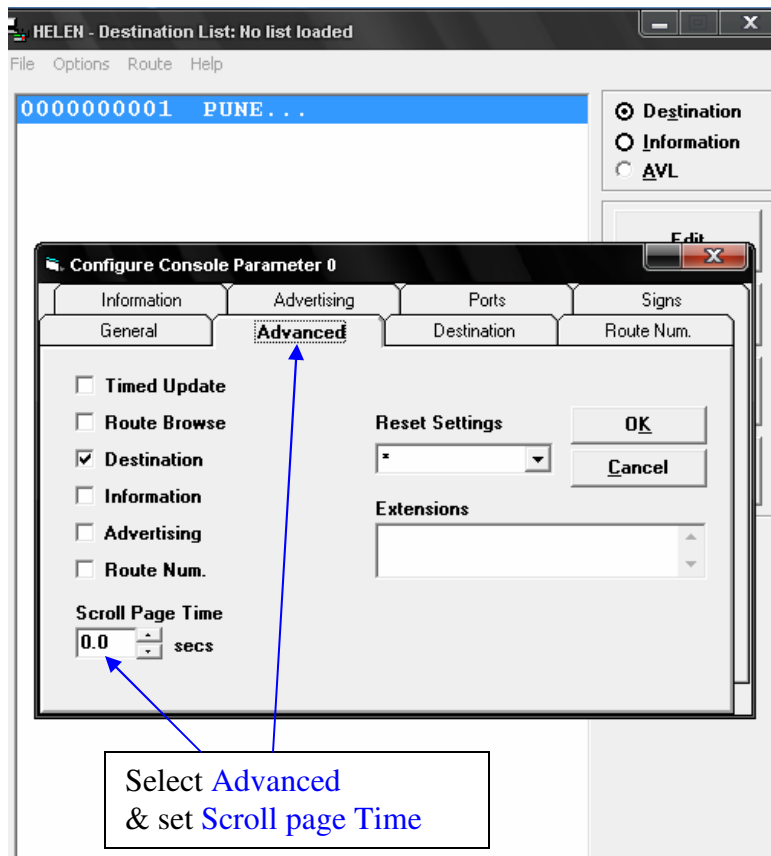

**Fig. 4.3**

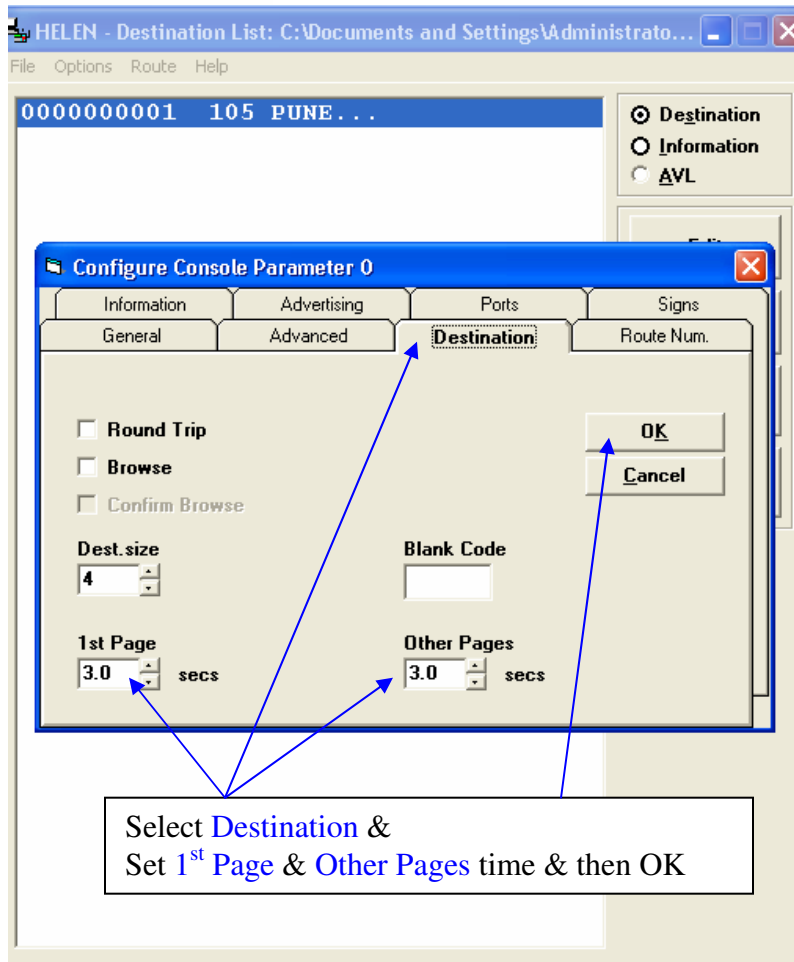


**Fig. 4.4**

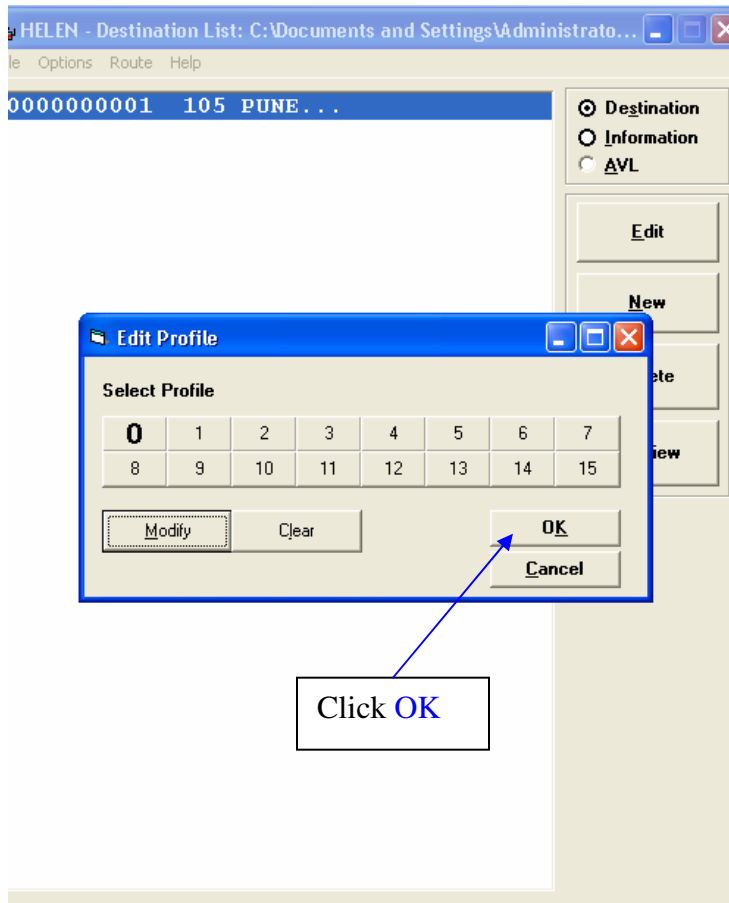

**Fig. 4.5**

## 5. Save & Send Output File


After [Console Configuration](#) save Route File as shown below,  
Go to File – Save Output File

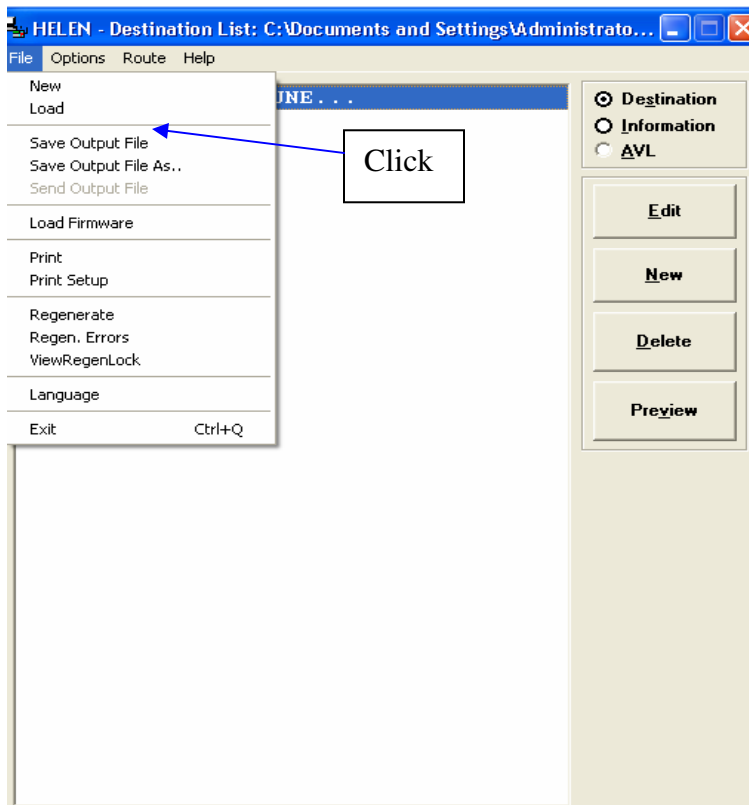

**Fig. 5.1**




Then Click **OK**

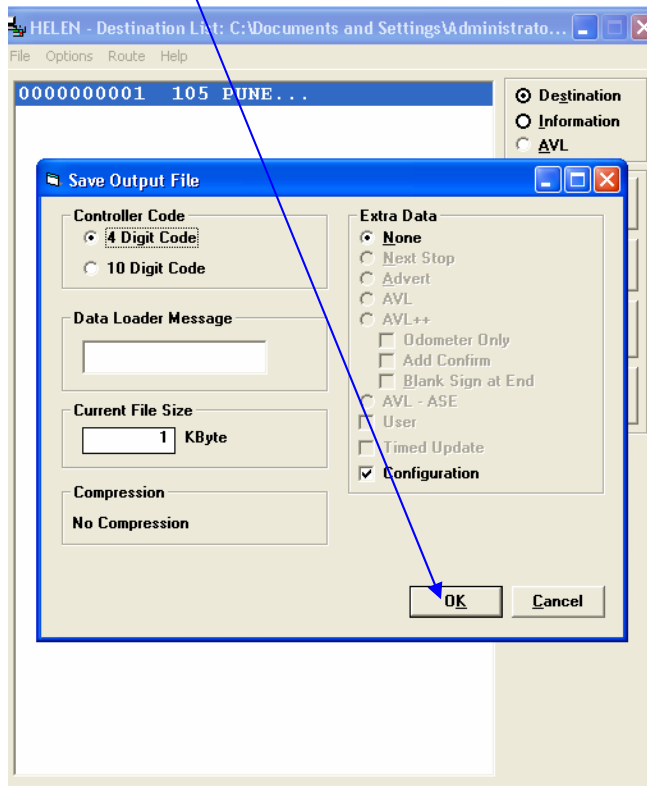

**Fig. 5.2**

Thus File gets saved.


After saving Output File load it into Kyelo. For this connect Base Station along with Kyelo to USB port & go to **File – Send Output File** as shown below

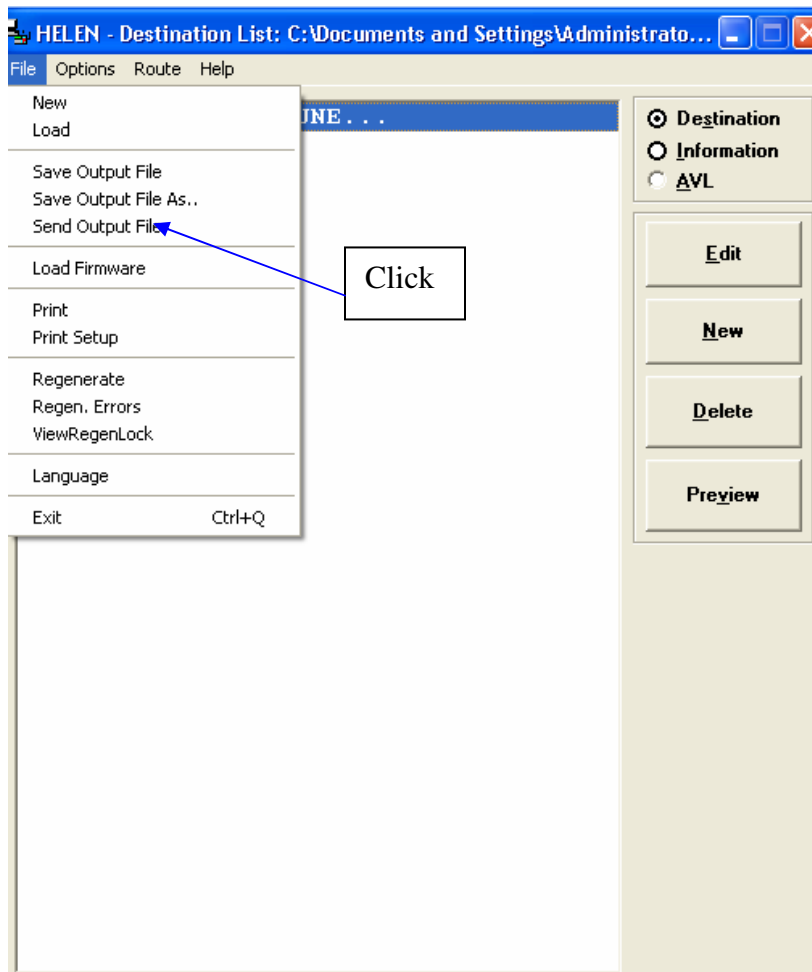

**Fig. 5.3**




**Keylo – Base Station**

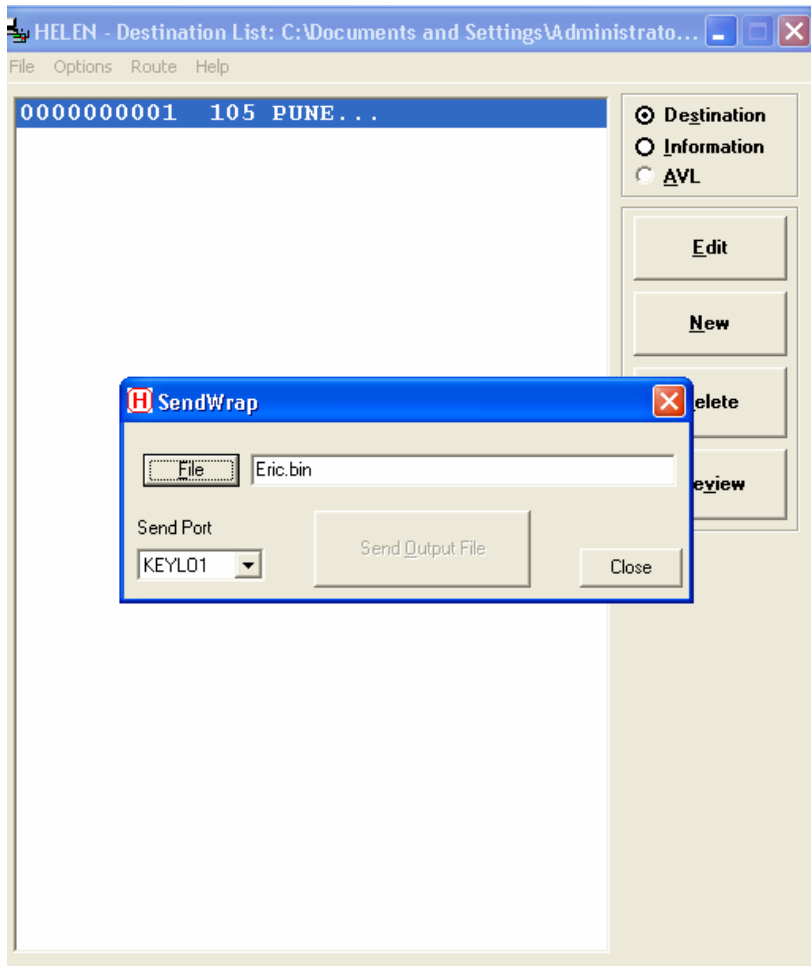

**Fig. 5.4**

**Wait Data will start to transfer.**

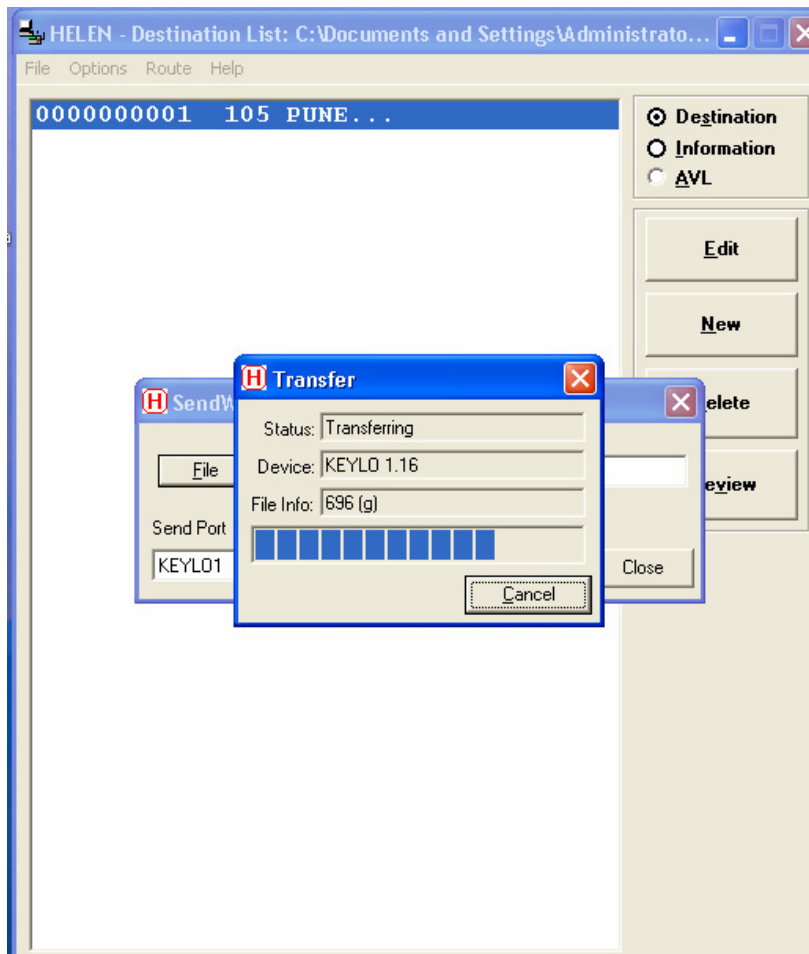

**Fig. 5.5**

While transferring Data LED on Kyelo flashes rapidly in orange & then in yellow & when it gets stable with yellow colour transfer has finished.

You can remove the Kyelo & load Data to Driver Controller – ERIC.

-----END-----