



- | | |
|--|---|
| <p>Default Serial:
RX -> RX,
TX -> TX</p> | <p>Software Serial:
RX -> D2,
TX -> D3</p> |
| <p>Software Serial, with
D2 open for INT0:
RX -> D3
TX -> D4</p> | <p>Software Serial, with
D3 open for PWM:
RX -> D2
TX -> D4</p> |