

Stopper screw
Do not move

Air Sup.

OUT2

OUT1

Pilot valve

Inlet valve B

Automatic
Manual

change-over screw
(Built-in bleed restriction)

Sensitivity adjusting screw
(Adjusts GAIN)

Inlet valve A

Feedback lever

Span adjusting lever

Actuator diaphragm

Counter weight

Vent

Diaphragm

Exhaust valve

Span adjusting lever shaft

Transmission pin

Lock screw

Compensation spring

Zero adjusting spring

Zero adjusting screw

Flapper

Nozzle

Feedback spring

Span adjusting screw

Transmission lever

Plate spring

Torque motor

Amature

Input Current teminal

