





MODES DIAGRAM

PlugBoard Mode: Choose pair of letters to connect wires. There are up to 13 pairs. Press letters to plug the pairs. ie: Press A, then B, to connect A with B. Pressing an already chosen letter deletes the wire from the plugboard. Press any bolt button to enter Rotor Mode.

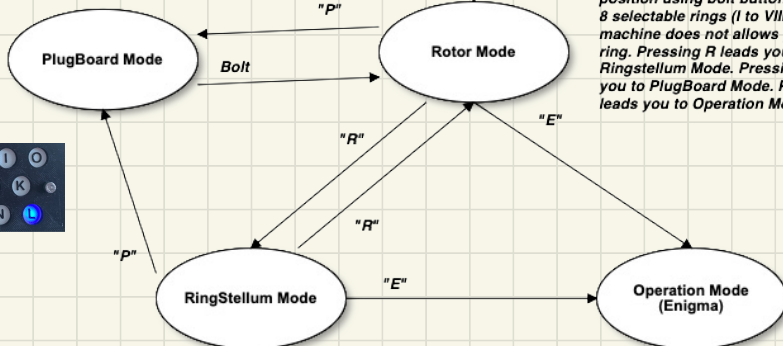

 
RingStellum Mode: Lets you setup the ringstellum configuration. Just use bolt buttons to configure the Ringstellum of each ring. Press R to enter Rotor Mode, P to enter PlugBoard Mode or E to enter Operation Mode (Enigma).



Rotor Mode: Choose your rotors and position using bolt buttons. There are 8 selectable rings (I to VIII). The machine does not allow you to repeat ring. Pressing R leads you to Ringstellum Mode. Pressing P leads you to PlugBoard Mode. Pressing E leads you to Operation Mode (Enigma).


Operation Mode (Enigma): Enter this mode once the machine has been configured. Press the bolt buttons to setup the rings initial position and press letters to encode/decode text.



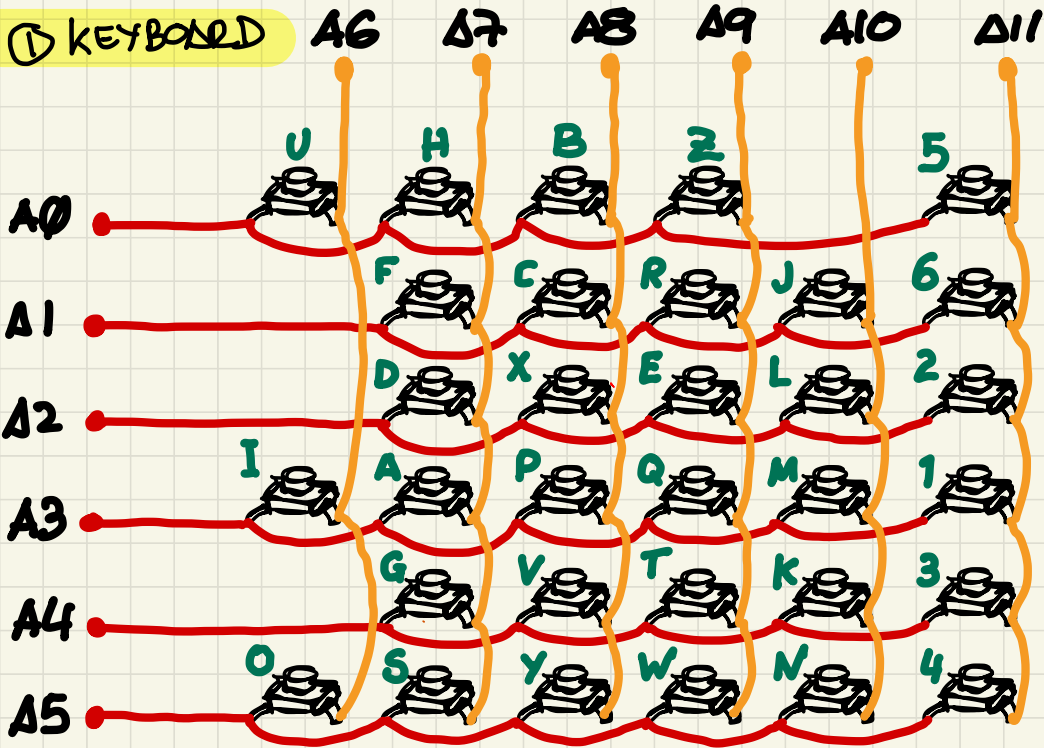

② LCD 1602

4bit Mode

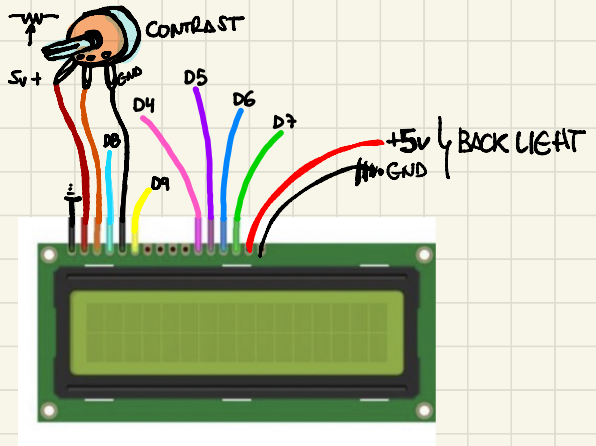

③ WS2802B

