

# How to connect to a Raspberry Pi in order to exchange files with a computer or smart phone?

## Computer (Windows):

- Connect to FileZilla with SFTP protocol
  - o CTRL + S to open site manager
  - o Type in IP address
  - o Fill in username
  - o Fill in password
  - o Click connect

## Smartphone (Android):

- Download AndFTP from the Play Store
- Hit + sign
- Type: SFTP
- Fill in username
- Fill in password
- Click save
- Click on Icon