

# Open Source Combustion Instability Low Order Simulator for Longitudinal Modes (OSCILOS\_long) User guide for version 1.3

Dr. Jingxuan LI, Dong Yang and Dr. Aimee S. Morgans

Published under the BSD Open Source license

Programmed with MATLAB 2013b

First released on April 23, 2014

Website: <http://www.oscilos.com/>

Contact: [jingxuan.li@imperial.ac.uk](mailto:jingxuan.li@imperial.ac.uk) and [a.morgans@imperial.ac.uk](mailto:a.morgans@imperial.ac.uk)

# What is OSCILOS?

- ▶ The open source combustion instability low-order simulator (OSCILOS) is an open source code for simulating combustion instability. It is written in Matlab<sup>®</sup> / Simulink<sup>®</sup> and is very straightforward to run and edit.
- ▶ It can simulate both longitudinal and annular combustor geometries. It represents a combustor as a network of connected modules.
- ▶ The acoustic waves are modeled as either 1-D plane waves (longitudinal combustors) or 2-D plane/circumferential waves (annular combustors).
- ▶ A variety of inlet and exit acoustic boundary conditions are possible, including open, closed, choked and user defined boundary conditions.
- ▶ The response of the flame to acoustic waves is captured via a flame model; flame models ranging from linear  $n-\tau$  models to non-linear flame describing functions, either prescribed analytically or loaded from experiment / CFD data, can be prescribed.
- ▶ The mean flow is calculated simply by assuming 1-D flow conditions, with changes only across module interfaces or flames.
- ▶ This current version is for longitudinal modes. This assumes a longitudinal/cannular/can combustor geometry, or an annular geometry but where only plane acoustic waves are known to be of interest.

# Who is developing OSCILOS?


- ▶ OSCILOS is being developed by Dr. Aimee Morgans, Dr. Jingxuan Li, Dong Yang and coworkers in the Department of Aeronautics, Imperial College London, UK.
- ▶ More details about the development team are available on the website: <http://www.oscilos.com/>.
- ▶ Current team members:
  - ▶ Dr. Aimee S. Morgans
  - ▶ Dr. Jingxuan Li
  - ▶ Dong Yang
  - ▶ Dr. Xingsi Han
  - ▶ Charles Luzzato

# Required Matlab toolboxes

- ▶ Control System Toolbox
- ▶ Matlab
- ▶ Optimization Toolbox
- ▶ Robust Control Toolbox
- ▶ Simulink
- ▶ Symbolic Math Toolbox

# Menu Bar

- ▶ File
  - ▶ New case
  - ▶ Load
  - ▶ Save
- ▶ Initialization
  - ▶ Chamber dimensions
  - ▶ Thermal properties
  - ▶ Flame model
  - ▶ Boundary conditions
- ▶ Frequency domain analysis
  - ▶ Eigenmode calculation
- ▶ Help
  - ▶ About
  - ▶ User guide

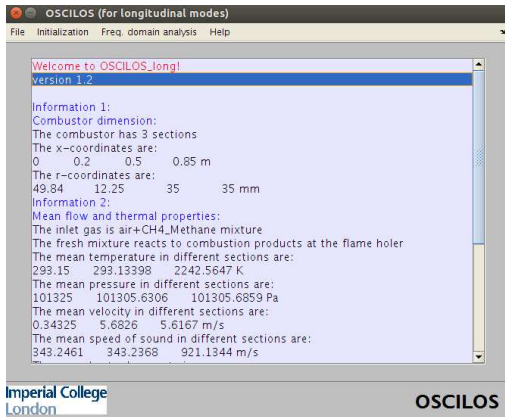


# File

- ▶ **New case:** This menu option is used to clear current calculation results and create a new calculation.
- ▶ **Load...:** This menu option is used to load data from existing Mat file. The current calculation results will be deleted once the user clicks "Yes".
- ▶ **Save...:** This menu option is used to save the current calculation results as a Mat file.

# Initialization/Chamber dimensions

- ▶ The combustor geometry is set in this interface;

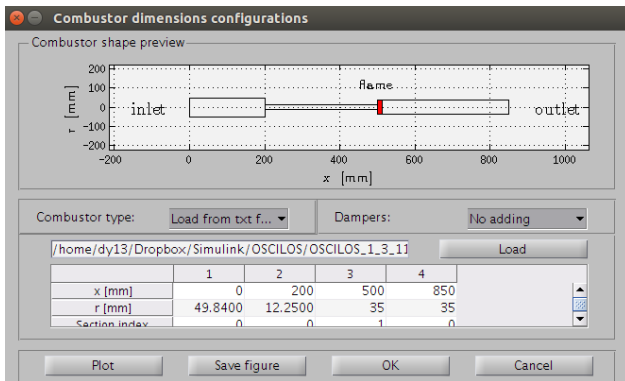

# Initialization/Chamber dimensions

- ▶ The length and radius of the combustor can be quickly configured for the case of a Rijke tube.
- ▶ For complicated combustor geometries, users can load the information from an external txt file by clicking “load”. It is better to create the txt file as the form of “CD\_example.txt” in the “subProgram” folder. The format of data is shown in the following table:

| $x$ [m] | $r$ [m] | Section index [-] |
|---------|---------|-------------------|
| 0       | 0.04984 | 0                 |
| 0.2     | 0.01225 | 0                 |
| 0.5     | 0.03500 | 1                 |
| 0.85    | 0.03500 | 0                 |

where,

- ▶  $x$  means axial position of each sectional interface;
  - ▶  $r$  indicates the radius of each section;
  - ▶ “section index” represents the type of sectional interface: ‘0’: only sectional surface area change; ‘1’: with heat addition; ‘2’: Helmholtz resonator; ‘30’ and ‘31’: left and right ends of a Liner; ‘4, 5...n’: for further developments.
- ▶ A schematic of the combustor can be previewed by clicking “Plot”.
  - ▶ The figure can be saved by clicking “save figure”.
  - ▶ The current configuration is saved by clicking “OK”. The key information will be printed in the information window.




# Initialization/Chamber dimensions – Add damper(s)

- ▶ Helmholtz resonators (HRs) and perforated liners can be added to the combustor system by choosing the “Add damper(s)” option of the “Dampers” pop-up menu when setting up the combustor geometries.

For the “Damper type”, if the “Helmholtz resonator” is chosen, users need to

- ▶ set its “Location”, “Neck length”, “Neck area”, “Cavity volume” and “Cavity Temperature”,
- ▶ choose either a “Linear” or “Nonlinear” HR model.
  - ▶ If “Linear” is chosen, a “Mean hole Mach no.” for the neck should be given,
  - ▶ If “Nonlinear” is chosen, the “Discharge coefficient” must be set.

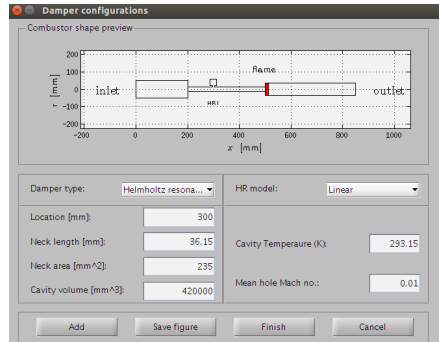


# Initialization/Chamber dimensions – Add damper(s)

If “Perforated liner” is chosen for the “**Damper type**”, users need to


- ▶ set its “Start location”, “Length” and “Liner temperature”,
- ▶ choose either a “Single liner” or “Double liner” type,
  - ▶ If “Single Liner” is chosen, four parameters (“Hole radius”, “Hole distance”, “Hole mean Mach no.” and “Thickness”) need to be set,
  - ▶ If “Double liner” is chosen, another four parameters (“Hole radius”, “Hole distance”, “Layer radius” and “Thickness” for the second perforated layer) need also to be set.

- ▶ choose either a “Large cavity” or “Rigid wall” outside boundary type for the outer liner. “Wall radius” should be set if the “Rigid wall” is chosen.

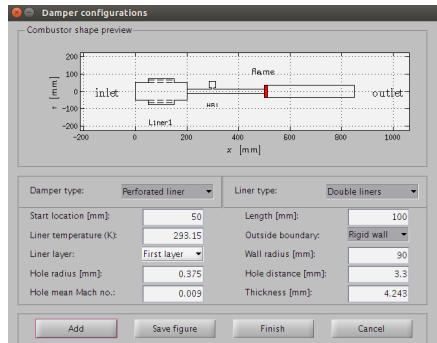

# Initialization / Thermal properties

- ▶ This menu is used to set the inlet mean flow properties and the mean heat addition.

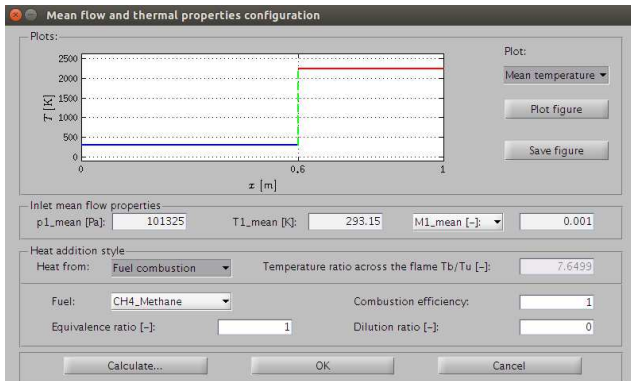


# Initialization /Thermal properties

- ▶ The mean flow and thermal properties within each combustor section are considered uniform.
- ▶ The mean properties in different sections can be calculated by clicking “Calculate” once all the inputs have been completed.
- ▶ Users can choose a model for the (mean) heat addition from the pop-up menu.
  1. Heat from a heating grid ( $T_b/T_u$  is given), where  $T_u$  represents the temperature before the heating grid, and  $T_b$  indicates that after the grid. This is often used for the case of a Rijke tube.
  2. Heat from fuel combustion.
    - ▶ Users can choose the fuel from the pop-up menu, including  $\text{CH}_4$ ,  $\text{C}_2\text{H}_4$ ,  $\text{C}_2\text{H}_6$ ,  $\text{C}_3\text{H}_8$ ,  $\text{C}_4\text{H}_8$ ,  $\text{C}_4\text{H}_{10}$  (n-butane),  $\text{C}_4\text{H}_{10}$  (isobutane) and  $\text{C}_{12}\text{H}_{23}$  (Jet-A).
    - ▶ User can also set: (1) Equivalence ratio  $\phi$ ; (2) Combustion efficiency  $\eta$ ; (3) Dilution ratio, which is used when a bias flow is accounted for.
- ▶ The distribution of mean temperature and mean flow velocity can be previewed by clicking “Plot figure”.
- ▶ The figures can be saved by clicking “Save figure”.
- ▶ The current configuration is saved by clicking “OK”. The key information will be printed in the information window.


# Initialization /Flame model

- ▶ This menu option is used to set the flame model, which describes how the (normalized) unsteady heat release rate  $\hat{q}/\bar{q}$  of the flame responds to (normalized) velocity fluctuations  $\hat{u}/\bar{u}$ .
- ▶ Users can choose between prescribing a flame transfer function model (with non-linearity options) or loading and fitting experimental / CFD data.

## 1. Analytically flame describing function setting panel

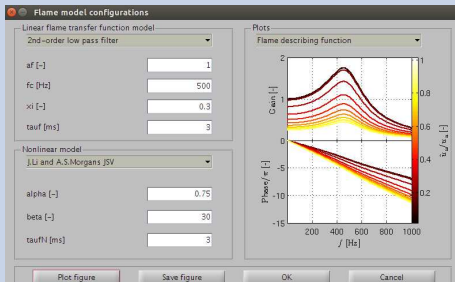

## 2. Flame describing function from Loading and fitting experimental / CFD data panel

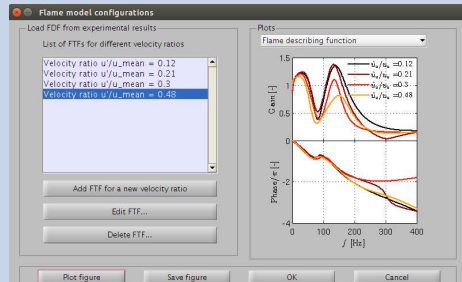

# Flame transfer function

Four kinds of flame transfer function models ( $\mathcal{T}_u(s) = \hat{q}(s)/\bar{q}/\hat{u}(s)/\bar{u}$ ) can be prescribed: the first three involve:

1. Crocco's famous  $n - \tau$  model:

$$\mathcal{T}_u(s) = a_f e^{-\tau_f s}$$

2. the  $n - \tau$  model filtered by a first order filter:

$$\mathcal{T}_u(s) = \frac{\omega_c}{s + \omega_c} a_f e^{-\tau_f s}$$

3. the  $n - \tau$  model filtered by a second order filters:

$$\mathcal{T}_u(s) = \frac{\omega_c^2}{s^2 + 2\xi\omega_c s + \omega_c^2} a_f e^{-\tau_f s}$$

The fourth option is a user-defined FTF model using a polynomial transfer function by inputting the numerator coefficients **b** and denominator coefficients **a**. The order of the numerator should not be larger than that of denominator  $n \leq m$ .

$$\mathcal{T}_u(s) = \frac{b_1 s^{n-1} + b_2 s^{n-2} + \dots + b_{n-1} s + b_n}{a_1 s^{m-1} + a_2 s^{m-2} + \dots + a_{m-1} s + a_m}$$

- ▶  $s$ : the Laplace variable
- ▶  $a_f$ : gain
- ▶  $\tau_f$ : time delay
- ▶  $f_c = \omega_c/2\pi$ : cut-off frequency
- ▶  $\xi$ : damping ratio

# Nonlinear model — 1

Users can choose between prescribing an analytically nonlinear flame describing function or loading and fitting experimental / CFD data. The first nonlinear model is an abrupt heat release rate ratio  $\hat{q}'/\bar{q}$  saturation model proposed by Dowling (JFM:1997), which can be mathematically expressed as:

$$\frac{\dot{q}'}{\bar{q}} = \begin{cases} \left(\frac{\dot{q}'}{\bar{q}}\right)_L & \text{for } \left|\frac{\dot{q}'}{\bar{q}}\right| \leq \alpha \\ \alpha \operatorname{sgn}\left(\frac{\dot{q}'}{\bar{q}}\right) & \text{else} \end{cases}$$

where  $\alpha$  is a constant associated with the saturation ( $0 \leq \alpha \leq 1$ ) and  $(\dot{q}'/\bar{q})_L$  denotes the heat release rate ratio for weak perturbations, which can be calculated from the linear flame transfer function.

## Nonlinear model — 2

The second nonlinear model is recently proposed by the authors. The nonlinear flame describing function depends on  $s$  and velocity ratio  $\hat{u}_1/\bar{u}_1$  and it is assumed here can be decoupled as:

$$\tilde{G}(\hat{u}_1/\bar{u}_1, s) = \mathcal{L}(\hat{u}_1/\bar{u}_1) \tilde{\mathcal{T}}_u(s)$$

where the superscript  $\hat{\cdot}$  indicates the signal amplitude. The nonlinear function  $\mathcal{L}(\hat{u}_1/\bar{u}_1)$  describes the saturation of heat release rate with velocity perturbations  $\hat{u}_1/\bar{u}_1$ , and  $\mathcal{L}(\hat{u}_1/\bar{u}_1) = \tilde{G}(\hat{u}_1/\bar{u}_1, 0)$ . The mathematical link is:

$$\frac{\hat{q}(\hat{u}_1/\bar{u}_1, 0)}{\bar{q}} = \mathcal{L}(\hat{u}_1/\bar{u}_1) \frac{\hat{u}_1}{\bar{u}_1} = \int_0^{\hat{u}_1/\bar{u}_1} \frac{1}{1 + (\xi + \alpha)^\beta} d\xi$$

where  $\alpha$  and  $\beta$  are two coefficients which determine the shape of the nonlinear model. One may also introduce a simple nonlinear model of the time delay, using the mathematical description:


$$\tau_f = \tau_f^0 + \tau_f^N (1 - \mathcal{L}(\hat{u}_1/\bar{u}_1))$$

where  $\tau_f^0$  means the time delay when  $\hat{u}_1/\bar{u}_1 = 0$  and  $\tau_f^N$  is a time delay to describe the change of  $\tau_f$  as  $\mathcal{L}$  changes.




# Load and fit FDF from experiment / CFD

- ▶ The flame describing function can be loaded from experimental / CFD frequency response data.
- ▶ The user can add a set of flame transfer functions measured at different velocity ratios, by clicking “Add FTF for a new velocity ratio”.

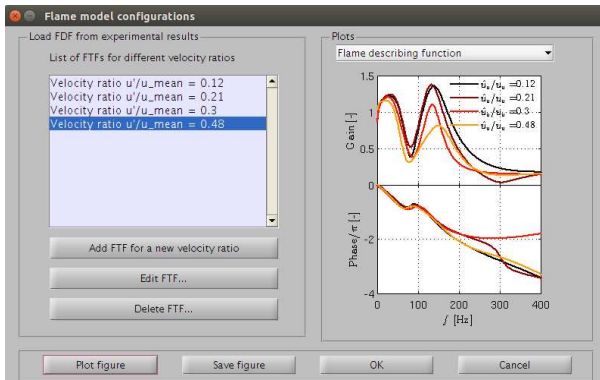


# Load and fit FDF from experiment / CFD

- ▶ Once the button “Add FTF for a new velocity ratio” is clicked, a window for displaying the experimental FTF and fitting will appear.
- ▶ The user can set the velocity ratio and then import experimental FTF from an external Mat file. (It is better to save the data in a Mat file prior to running OSCILOS).
- ▶ The user needs to set the fitting frequency range, time delay correction and fitting order, relative degree of denominator compared to numerator, which are used for fitting.
- ▶ The fitting process is operated on clicking “Fit and plot”.

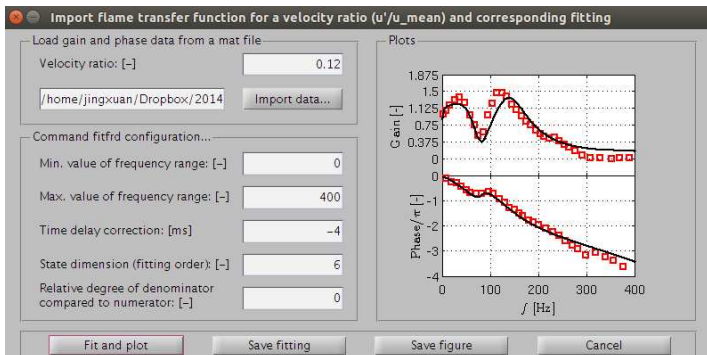

# Initialization / Boundary conditions

The link between the outward and inward propagating waves at the end of the combustor can be described by the reflection coefficients. When the indirect noise induced by the entropy waves can be neglected, the pressure reflection coefficients at the inlet and outlet are characterized by  $R_1$  and  $R_2$  respectively.

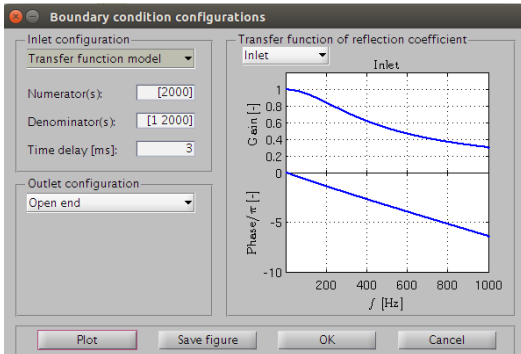

# Initialization / Boundary conditions

Six kinds of boundary conditions are provided:

1. Open end ( $R = -1$ ).
2. Closed end ( $R = 1$ ).
3. Choked end.
4. User defined (Amplitude and time delay)...
5. User defined (Amplitude and phase)...
6. User-defined model using a polynomial transfer function by inputting the numerator coefficients  $\mathbf{b}$  and denominator coefficients  $\mathbf{a}$ . The order of the numerator should not be larger than that of denominator  $n \leq m$ .

## Boundary conditions/Include indirect noise from entropy waves —1

When the user choose the choked outlet boundary, there is an option to include the indirect noise from the entropy or not. Two models accounting for the advection of entropy waves are prescribed in this work.

- ▶ A “Rectangular” model (proposed by Sattelmayer (2003)): The p.d.f. or impulse response is modelled as a rectangular pulse of length  $2\Delta\tau_C^s$  and height  $1/2\Delta\tau_C^s$  centred about the mean residence time  $\tau_C^s$ :

$$E_C^{\text{inlet}}(t) = \delta(t)$$

$$E_C^{\text{outlet}}(t) = \begin{cases} \frac{1}{2\Delta\tau_C^s} & \text{for } \tau_C^s - \Delta\tau_C^s \leq t \leq \tau_C^s + \Delta\tau_C^s \\ 0 & \text{else} \end{cases}$$

The corresponding Laplace transform of the transfer function between the entropy waves at the outlet and inlet can be expressed as:

$$\frac{\tilde{E}_C^{\text{outlet}}(s)}{\tilde{E}_C^{\text{inlet}}(s)} = \tilde{\mathcal{E}}(s) \exp(-\tau_C^s s) = \frac{\exp(\Delta\tau_C^s s) - \exp(-\Delta\tau_C^s s)}{2\Delta\tau_C^s s} \exp(-\tau_C^s s)$$

## Boundary conditions/Include indirect noise from entropy waves —2

- ▶ A “Gaussian” model (proposed by Morgans et al.(2013)): Shear dispersion is assumed to be predominantly caused by spatial variations in the time-mean velocity profile, rather than by turbulent eddies. The impulse response is modelled as a Gaussian distribution:

$$E_C^{\text{inlet}}(t) = \delta(t)$$
$$E_C^{\text{outlet}}(t) = \frac{1}{\sqrt{\pi}\Delta\tau_C^s} \exp\left(-\left(\frac{t - \tau_C^s}{\Delta\tau_C^s}\right)^2\right)$$


with the Laplace transforms of the transfer function:

$$\tilde{\mathcal{E}}(s) = \exp\left(\frac{(\Delta\tau_C^s s)^2}{4}\right)$$

where time delay  $\Delta\tau_C^s$  is proposed to describe the dispersion of resident time.

# Freq. domain analysis / Eigenmode calculation

Once all initializations are complete, the user can then progress to the “Eigenmode calculation” panel.

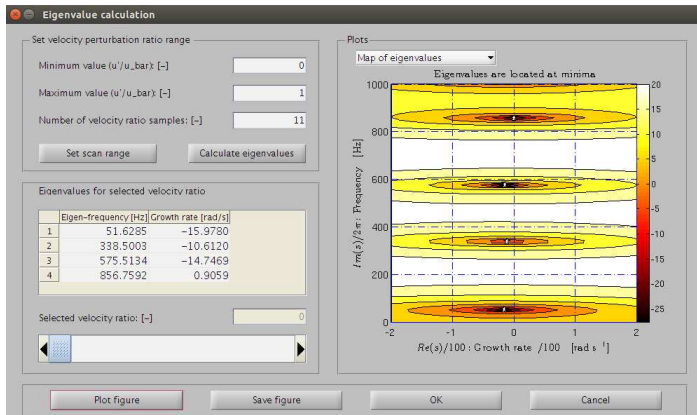

# Freq. domain analysis / Eigenmode calculation

Set velocity perturbation ratio range

Minimum value ( $u'/\bar{u}$ ): [-]

Maximum value ( $u'/\bar{u}$ ): [-]

Number of velocity ratio samples: [-]

If the user did not add any nonlinear dampers but has chosen the flame describing function model in the “Flame model” panel (which means the flame is the only nonlinear element in the system), the minimum and maximum forcing velocity amplitude ratios ( $(\hat{u}/\bar{u})_{min,max}$ ) before the flame need to be set. The number of velocity ratio samples is also needed to equally space the ratio range. Results for different flame forcing levels are then predicted.

Set inlet amplitude factor range x 100

Minimum value ( $p_1'/\bar{p}_1$ ): [-]

Maximum value ( $p_1'/\bar{p}_1$ ): [-]

Number of amplitude ratio samples: [-]

If the user added nonlinear dampers (with either linear or nonlinear flame models), the acoustic wave strength in the inlet duct is assumed and increased step by step to calculate the eigenvalue evolutions of the whole system. The minimum and maximum inlet oscillating pressure amplitude factors ( $(\hat{p}_1/\bar{p}_1)_{min,max}$ ) are set along with the number of ratio samples to equally space the ratio range.



## Freq. domain analysis / Eigenmode calculation

Then a scan range (including frequency and growth rate) to search for eigenvalues needs to be defined. This can be done by clicking “Set scan range”.

When all the sets have been done, the user can calculate the eigenvalues for a set of velocity/pressure amplitude ratios.

**Scan range configuration**

Frequency scan domain setting:

Frequency min. value [Hz]: 0

Frequency max. value [Hz]: 1000

Frequency samples [-]: 10

Growth rate scan domain setting:

Growth rate min. value [1/s]: -200


Growth rate max. value [1/s]: 200

Growth samples [-]: 10

Reset OK Cancel

## Freq. domain analysis / Eigenmode calculation

- ▶ The eigenvalues for a selected velocity ratio appears in the table (as shown in the bottom figure).
- ▶ The user can change the slider to switch the velocity ratio. The values in the table will automatically change with the velocity ratio.

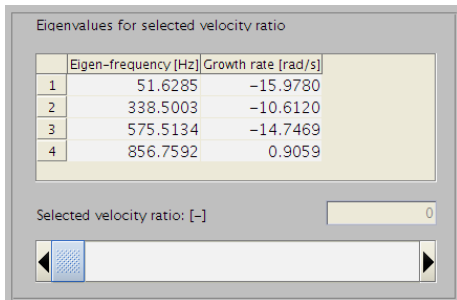


# Freq. domain analysis / Eigenmode calculation


The user can plot three kinds of figures from the choices of the popup menu:

- ▶ A contour map showing the eigenvalue locations (growth rate and frequency).
- ▶ The mode shape.
- ▶ The evolution of eigenvalues with increasing velocity ratio.

1.A contour map showing the eigenvalue locations (growth rate and frequency)

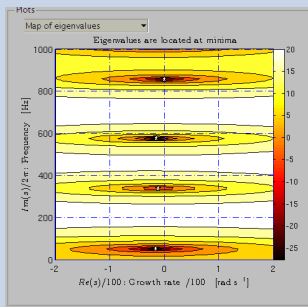

2.The mode shape

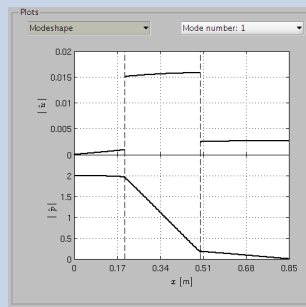

3.The evolution of eigenvalues with increasing velocity ratio

