

# Frequently Asked Questions

## How do I set an external aux controller to change banks?

Connect an aux controller to the MC6 with a stereo cable. Be sure to change the expression input type to "Aux Switch" in the Main Configuration Menu. The Aux switch will work just like a regular switch, where each switch will invoke a preset. You simply need to program a bank up and bank down message in each preset and you are good to go.

## My MC6 hangs at the main preset screen.

Check your Expression input settings. It is likely that you have your expression input setting set to "Aux Switch" but do not anything plugged into the input ports. If you have nothing plugged into your expression input(s), it should be set to "Expression Pedal" instead of Aux Switch.

## How do I paste a preset to all banks?

Go into the preset edit menu and then copy the preset. After the preset is copied, hold down the Paste button for 2 seconds. The device will paste the copied preset to all banks for the current active preset.

## How do I set the expression pedal to send different CC messages per preset?

The expression pedal inputs work on a per-bank basis, where every bank has a different expression preset. Each expression preset has 16 midi messages that you can program. By changing banks on the MC6, you can send different CC messages. You can also send different CC messages in each expression preset in the same bank by using your standard presets A-L. By programming a "Select Exp Message" midi type in your preset, you can select which of the 16 midi messages in your expression preset to be active. Hence, when using your expression pedal, only the selected messages will be sent out.

There is a lag between the time when I press the switch and the time when the MIDI message is sent out. How can I fix this?

There are several possibilities to this.

### *Switch sensitivity*

This can be adjusted in the Switch Sensitivity setting in the Main Config menu. The switch sensitivity determines how fast dual switch presses are read. A lower sensitivity will make it easier to engage a dual switch press function. If you change the setting to 5, you'll notice that the delay will decrease. You can make use of the Looper mode function, which decreases the delay to close to 0. However, you'll find that dual switch presses to change backs etc are not possible in this mode.

### *Double Tap*

If you have a Double Tap action programmed into your preset, there will be a delay as the controller is checking if a Double Tap action will occur, before sending out the message.

How do I lock my banks so that Switch A+B or B+C will not bank down or bank up?

Set your Switch Sensitivity to the maximum. This reduces the delay when a switch is pressed, and hence makes engaging dual switch functions harder.

How do I display PC Scroll numbers in the Preset Name?

It is possible to display the PC Scroll number in the Preset name by using a placeholder %E0 to %E7. Since there are 8 slots in the PC Scroll function, %E0 will display the number in the first slot, while %E7 will display the number in the 8th slot. %E1 will display the number in the second slot.

If I have a preset with a PC Scroll Up message on Slot 1 (incremental set to Yes), and my preset name is set to "Prst%E0", and assuming that the preset number in slot 1 is at 6, on the main preset page, the preset name will appear as "Prst6".

---

© 2019 Morningstar Engineering

Documentation built with MkDocs (<http://www.mkdocs.org/>).