



Abrasive Wheels Toolbox Talk

- Abrasive Wheels must only be fitted by those trained to do so.
- Always inspect the Abrasive Wheel before mounting.
- Remember to unplug the Angle Grinder or the Chop Saw before changing the Abrasive Wheel.
- Remember to wear all the required PPE.
- You must have a hot work permit before use and a fire extinguisher to hand.
- Remove all flammable materials from the line of the sparks.
- Adjust the guard if required before use.
- Do not use Angle grinders beyond the time limits.
- Wear appropriate overalls preferably heavy cotton which are Not contaminated with oils, grease, paint, solvent based sealers etc.
- Never side grind on a Cut Off Saw.
- Always ensure the Abrasive Wheel has a speed higher than or equal to that of the machine on which it is to be fitted – Read the label and check the machine.

Powered By:

The Health & Safety App™

