

## Update Your System

```
sudo apt update  
sudo apt upgrade -y
```

## Install RaspAP (Wi-Fi Access Point)

```
curl -sL https://install.raspap.com | bash
```

When prompted:

Accept default options (press Enter)

Reboot after installation:

```
sudo reboot
```

## Connect to RaspAP Hotspot

Look for a Wi-Fi network like RaspAP

Default Wi-Fi password: ChangeMe

Connect and go to <http://10.3.141.1> in your browser

Default login:

Username: admin

Password: secret

## Change SSID & Password

Go to Hotspot > Basic

Change SSID (e.g., MyAP) and password

Save and click Restart Hotspot (best is just sudo reboot)

Reconnect using the new name/password

## Install Mosquitto MQTT Broker

```
sudo apt install -y mosquitto mosquitto-clients  
sudo systemctl enable mosquitto
```

## Auto-Start Mosquitto on Boot (usually already enabled)

```
sudo systemctl enable mosquitto  
sudo systemctl start mosquitto
```

# Secure Mosquitto with Username & Password

```
sudo mosquitto_passwd -c /etc/mosquitto/passwd myuser
```

\* Change myuser to the username you want

Will ask you to enter password so enter the password you want

```
sudo nano /etc/mosquitto/mosquitto.conf
```

Add following into mosquitto.conf:

```
allow_anonymous false
```

```
password_file /etc/mosquitto/passwd
```

```
listener 1883
```

```
sudo systemctl restart mosquitto
```

To test subscriber

```
mosquitto_sub -h 10.3.141.1 -t test/topic -u username -P password
```

To test publisher

```
mosquitto_pub -h 10.3.141.1 -t test/topic -m "hello" -u username -P password
```