




Solutions for Demanding Applications

VarTech Systems Inc.

Industrial CRT and Flat Panel Displays

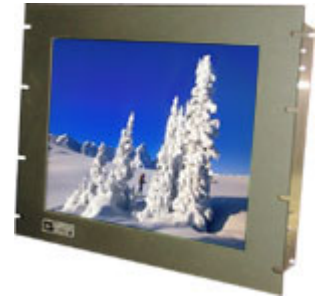

VT190 DiamondVue Series
19.0" Flat Panel Series LCD Monitors
VT190C · VT190P · VT190R
VT190P-SS · VT190W · VT190M
Transflectives:
VT190PTSR · VT190PTSRSS
VT190RTSR · VT190WTSR · VT190MTSR

User's Guide

Read these instructions completely before attempting to operate your new Color Display.

Table Of Contents

Section	Page	Section	Page
Section 1		Section 4	
Introduction		Touch screen	
1.1 About LCD Monitors	1	4.1 Touch Screen Introduction	10
1.2 Product Safety Precautions	2	4.2 Touch Screen Definition	10-11
		4.3 Touch Screen Serial Interface	11
Section 2		4.4 Setting up the Touch Interface	11
Display Setup		4.5 Installing Windows NT 4.0 Touch Drivers	12
2.1 Display Features	3	4.6 Installing Windows 95/98 Touch Drivers	12-13
2.2 Unpacking The Display	4	4.7 Installing Windows 2000 Touch Drivers	13
2.3 Included Parts	4		
2.4 Connecting Your Display	4	Section 5	
2.5 Signal Connections	4-6	Troubleshooting Tips	14-15
Section 3		Section 6	
Getting Started		Cleaning & Maintenance	16
3.1 Adjusting the Display	7		
3.2 Adjustment Procedure	8-9	Section 7	
		Mechanical Drawings	
		Panel Mount Instructions	17
		Chassis Mount Mechanical Drawings	
		Panel Mount Mechanical Drawings	18-19
		Rack Mount Mechanical Drawings	
		Wall Mount Mechanical Drawings	
		Section 8	
		Display Specifications	20

1

1.1 About LCD Monitors

What you gain by using an LCD monitor in your industrial controls

LCDs are the future of display technology. CRTs although they have dropped in cost significantly, do not offer the performance, reliability, and mounting options available with LCDs. LCD monitors consist primarily of an LCD, Video Board and a Back Light video. The LCD determines to a large extent the viewing angle, brightness and contrast. Beyond that it is the function of the video board which converts the analog RGB (Red, Green, Blue) signals from a standard video card to a high quality, digital RGB that the LCD can display.

Recently the video card has taken on a new role. It is the responsibility of this device to “scale” a particular video resolution to the “native” resolution of the LCD. Simply, consider that a computer is putting out a VGA [640x480] resolution signal, yet the LCD that is connected is an XGA [1024x768] display. The displayed picture would be in the center 1/3 of the LCD. With the introduction of the scaling engine. The converter will mathematically recalculate the 640x480 to 1024x768. This may sound simple but it is in fact a complex algorithm that adjusts for different aspect ratios and pixel alignment, essentially smoothing text and graphics to produce a picture that is pleasant to the eye.

All Vartech displays from 12.1” (800x600) to 23.1 (1600x1200) incorporate scaling engines in the converter card.

1.1 Product Safety Precautions

- ⇒ Ensure that sufficient space is available around the display to provide the circulation necessary for cooling.
- ⇒ Ensure that the ambient air temperature will not exceed the specified maximum temperature.
- ⇒ Do not attempt to service this display yourself. The rear chassis has a seal so that non qualified personal will not expose themselves to dangerous voltages or other risks.
- ⇒ To protect from electrical shock, unplug the display power supply from the wall before moving.
- ⇒ Do not expose the display to direct sunlight or heat.
- ⇒ Do not use this display near water
- ⇒ Do not place any heavy objects on the power cords. Damage may cause electrical shock.
- ⇒ Unplug the power supply from the wall or unit if one of the following conditions exists.
 - ⇒ Power cord or plug is damaged or frayed
 - ⇒ Liquid is spilled into the display or the display is exposed to rain or water.
 - ⇒ The display does not operate normally when the operating instructions are followed.
 - ⇒ The display has been dropped or the enclosure has been damaged.
 - ⇒ The display exhibits a distinct change in performance, indicating a need for service.

2

2.1 VT190 Series Display Features

- ⇒ Capable of displaying unlimited colors in a continuous spectrum. The high contrast LCD enhances the image with no geometric distortion.
- ⇒ The VT190 DiamondVue Series directly accepts an analog 5 wire RGB with separate H/V sync or 4 wire RGB with separate combined sync or 3 wire SOG.
- ⇒ The VT190 DiamondVue Series is auto synchronous adjusting the display to the appropriate input between VGA, SVGA,XGA, and SXGA.
- ⇒ The VT190 DiamondVue Series is available in Panel Mount, Rack Mount, or Wall Mount industrial packages.
- ⇒ The VT190 DiamondVue Series is supplied with a Anti-Reflective Screen unless equipped with an optional Touch System.
- ⇒ The VT190 DiamondVue Series has an integrated 115/220VAC supply as standard on all models.

2.2 Unpacking and setting up your display

Your LCD monitor package will consist of the components listed below. Open shipping container and lay all components on a flat clean surface.

2.3 What is included with your display

- ⇒ VT190R, VT190P, VT190C, VT190W or VT190M LCD Monitor
- ⇒ 5 ft Video Cable
- ⇒ 10-32 Mounting Hardware. (For use with Panel Mount only)
- ⇒ 6 ft RS232 Touch Interface Cable (Optional when touch is installed)
- ⇒ CD ROM with Touch Screen Drivers (Optional when touch is installed)
- ⇒ Users Guide (Printed or on CD)

2.4 Connecting the Display

1. Connect all cables to the computer first. This would include the VGA cable and the optional RS 232 serial touch screen connection.
2. After connecting the cables between the LCD monitor and the computer, plug the power cord into the 115/220VAC power outlet.
3. Once the 115/220VAC connection is made, the display is active.
4. If your computer was off, turn on your computer.
5. Your display should now operate as a normal computer display showing your windows or whatever video is being sent to the flat panel.

Note: If for any reason the display goes blank and gives an “out of Range” or “No Input Signal”, your computer or video source is putting out a signal that is out of range of the LCD’s video board. If this happens, reboot the computer or video source and make sure you are inputting the correct signal. If the display doesn’t work properly, it may be because:

- (a) The resolution is too high or low for the LCD.
- (b) The refresh rate is set too high. Refresh on an LCD is different than a CRT. Set the refresh to 60Hz. CRT’s need a high refresh rate to avoid flicker. The refresh rate has no impact on LCD’s.
- (c) The power source is incorrect.
- (d) The unit is malfunctioning. If you believe this to be true, disconnect the video cable from the rear of the LCD and connect to a known good computer CRT display. If the computer display is working satisfactory and the video is within the appropriate range, then contact Vartech Customer service for a RMA number at 800-223-8050.

2.5 Signal Connections

To avoid irregular operation and /or damage to the display, please insure correct video is being supplied as shown on the following page.

2.5 Signal Connections Cont.


You can use an HD-15 connector cable or a BNC adapter cable to connect the flat panel monitor to the host computer. The HD-15 video cable (supplied in the kit) you use with this monitor is equipped with a conventional HD-15 connector at each end.

Note: The following figure is the view looking into the pin end of the male connector or solder term end of the female connector.


HD15 Connector

The following table provides the pin numbers and corresponding pin assignments for the HD-15 video connector.

Pin	Signal	Pin	Signal	Pin	Signal
1	Red Video	6	Red Video Ground	11	Not Used
2	Green Video	7	Green Video Ground	12	Bi-Directional Data
3	Blue Video	8	Blue Video Ground	13	Horizontal Sync
4	Not Used	9	No Connection	14	Vertical Sync
5	Return	10	Sync Ground	15	Data Clock (SCL)

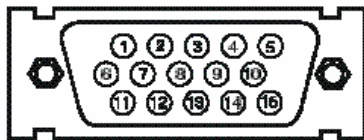

HD15 Connector

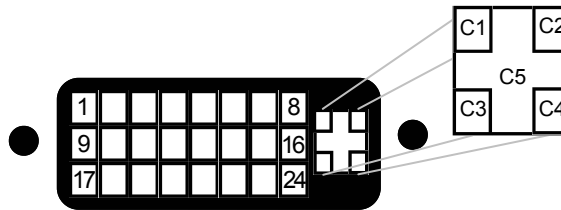

DVI-I Connector
(Digital / Analog)

DVI-I

Pin	Signal
C1	Analog Red
C2	Analog Green
C3	Analog Blue
C4	Analog H. Sync
C5	Analog Ground

DVI-I

Pin	Signal	Pin	Signal	Pin	Signal
1	T.M.D.S. Data2-	9	T.M.D.S. Data1-	17	T.M.D.S. Data0-
2	T.M.D.S. Data2+	10	T.M.D.S. Data1+	18	T.M.D.S. Data0+
3	T.M.D.S. Data2/4 Shield	11	T.M.D.S. Data1/3 Shield	19	T.M.D.S. Data0/5 Shield
4	T.M.D.S. Data4-	12	T.M.D.S. Data3-	20	T.M.D.S. Data5-
5	T.M.D.S. Data4+	13	T.M.D.S. Data3+	21	T.M.D.S. Data5+
6	DDC Clock	14	+5V Power	22	T.M.D.S. Clock Shield
7	DDC Data	15	Ground (return for +5V, H. Sync and V. Sync)	23	T.M.D.S. Clock+
8	Analog Vertical Sync	16	Hot Plug Detect	24	T.M.D.S. Clock-

Composite Video Input Connector: CVBS 1.0V p-p

S-Video: S-VHS

LUMA Signal Input 0.7V p-p

CHROMA Signal Input 0.7V p-p

2.5 Signal Connections Cont.

Optional BNC Adaptor Cable


A 5BNC-to-HD15 adapter cable is available. The functions of the cables are described below.

⇒ **R, B, and G:** Red, Green, and Blue input connectors to establish color.

These are used for RS-343 analog signals.

⇒ **HS/CS:** Separate horizontal/composite sync signal from the video source.

⇒ **VS:** Separate vertical sync signal from the video source.

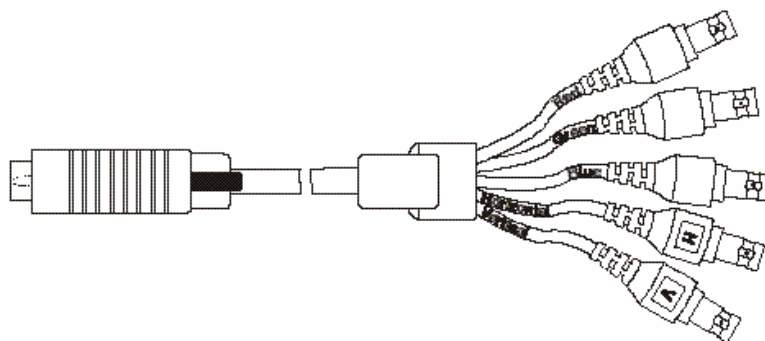


BNC Adapter Cable

This table describes the signal types you can use with the connectors:

BNC Signal Types						
BNC Signal Type	Description	R	G	B	HS/ CS	VS
Sync-on-Green (Not Available)	Use the three video connectors. Horizontal and vertical syncs are supplied on the green video line.	X	X	X		
Composite Sync (Not available)	Use the three video connectors plus the horizontal sync/ composite sync input	X	X	X	X	
Separate Horizontal and Vertical Sync.	Use the three video connectors plus the horizontal sync/ composite sync and vertical sync input.	X	X	X	X	X

3.1 Adjusting the display

The VT190 DiamondVue Series display has an embedded microprocessor in the converter card. Once you have the unit displaying the resolution you desire for your application do the following:

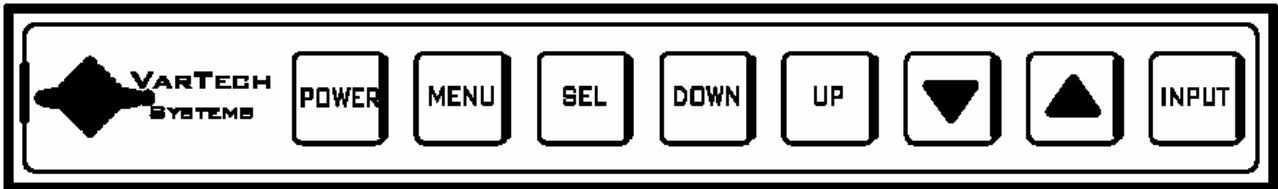

3.2 Definition of OSD (on screen display) Adjustments

On Screen Display	
Major Category	Adjustment Category
POWER	Turns the systems ON/OFF
MENU	Activates the OSD menu or goes to the previous menu
SEL	<ul style="list-style-type: none"> When the OSD menu is off, press more than 3 seconds Performs "auto-adjustment" function When the OSD menu is on Selects the highlighted icon that the user wants.
DOWN	<ul style="list-style-type: none"> Moves the highlight icon up to the function that the user wants
UP	<ul style="list-style-type: none"> Moves the highlight icon down to the function that the user want
▼	<ul style="list-style-type: none"> Decreases the adjustment of the selected function
▲	<ul style="list-style-type: none"> Increases the adjustment of the selected function
INPUT	<ul style="list-style-type: none"> Selects the Input Signal among analog RGB, Digital DVI, CVBS and S-VHS

Accessing the Menu System

1. With the OSD off, push the **MENU** button to activate the main OSD menu.
2. Use the **UP** or **DOWN** buttons to move from one function to another. As you move from one icon to another, the function name changes to reflect the function or group of functions represented by that icon. Please refer to the following clause on the next page to view a complete list of all the functions available for the driver board.
3. Pres the **SEL** button once to activate the highlighted function, use the **UP** or **DOWN** buttons to select the function.
4. After selecting a function, use the **▼** or **▲** buttons to make optimum adjustments. The setting bar moves and the numeric value indicator changes to reflect your adjustments.
Note: The numeric value indicator is provided as a point of reference only and has nothing to do with a real measurement.
5. Press the **MENU** button once to return to the main menu to select another function or press twice to exit from the OSD.

3.3 Adjustment

Adjustment (PC)

OSD Agent

Description

Adjustment is used to fine tune and get the best image by removing noises that creates unstable images with jitters and Shimmers.

Brightness

Adjusts the brightness of video

Contrast

Adjusts the contrast of video.

Clock

Removes the noises. When frequency value is wrong, the image has horizontal lines especially in 1 dot on and off.

Phase

Removes the noises. When phase value is wrong, the image has vertical lines especially in 1 dot on and off.

Auto Adjust

“Auto adjustment” allows the monitor to self-adjust to the incoming video signal. The values of phase, frequency and position are adjusted automatically.

Adjustment (DVI)

OSD Agent

Description

This function is active if you select a digital DVI source.

Brightness

Adjusts the contrast of image.

Contrast

Adjusts the brightness of image.

Adjustment (Video)

OSD Agent

Description

This function is active if you select an input source other than PC. (DVD, VCR)

Brightness

Adjusts the brightness of video

Contrast

Adjusts the contrast of video

Color

Changes the richness of color

Tint

Changes the tone of color

Sharpness

Adjusts the sharpness of video image

3.3 Adjustment Cont.

Color		
OSD Agent		Description
The color can be changes from redish to bluish white.	6500° K	Redish white
	9300° K	Bluish White
	User	User Customizable

Setup		
OSD Agent		Description
Setup is used to adjust OSD menu information and image.	Image	<ul style="list-style-type: none"> • H Position: Adjusts the horizontal position of the image. • V Position: Adjusts the vertical position of the image. • GAMMA: Bypass • Information: Displays current display mode.
	OSD	<ul style="list-style-type: none"> • Language: English, Germany, French, Italian, Spanish • Color: Change the opaqueness of the OSD background. • Position: Move the OSD Window • Duration: Indicates time until the OSD Menu will disappear after adjusting the menu. • OSD Lock: Avoids OSD control except HOT key.
	Mode Recall	Changes the image information to factory outgoing status.
	Backlight	Changes the brightness of image by controlling the backlight of panel.
	Auto Sleep	Goes to soft power off after 10 minutes when input cable is disconnected.

Audio		
OSD Agent		Description
This function is automatically activated by connecting the external audio board.	Volume	Controls the volume of sound
	Bass	Controls the low frequency band of sound
	Treble	Controls the high frequency band of sound
	Mute	Controls the sound on/off

4

4.1 Touch Screen Introduction

Touch screen interfaces have become the standard interface in the past 5 years. They are, rugged, reliable, extremely flexible and easier than ever to implement! Over 90% of the display packages Vartech Systems builds are touch screen systems. If you are uncertain about using a touch screen, or are having difficulty, please call us. The universal acceptance of the Windows GUI [Graphical User Interface] along with the extensive use of a mouse interface has significantly accelerated the use of touch interface. Basically think of your touch screen as if it were a mouse.

4.2 Touch Screen Definition

Quite simply, Vartech Systems touch systems are a mouse emulator. By installing a software driver and connecting to a serial port, the touch screen will support all the primary mouse functions:

Our standard touch screen interface, is a high resolution analog resistive. Following is a quick explanation of what all this means.

High Resolution: The touch screen resolution is 400 ppi [points per inch]

Analog Resistive: The actual touch glass is an analog device. Meaning there is a very low voltage applied to the X and Y axis of the touch screen. This current is applied to ITO [Iridium Tin Oxide] that is sputtered onto a polyester membrane. When you touch the screen you are changing the resistance on both the X and Y axis, producing an analog value that references a particular location.

This type of screen can be activated with a gloved finger or mechanical stylus.

The touch screen itself is connected to electronics that provide the Analog to Digital conversion. When the screen is touched, the electronics convert the analog voltage to a digital value and add a "Mouse Click", then sends the data to the serial port that the driver is loaded to. When the touch is released the new XY location is sent along with a "Mouse Up Click".

This system requires no special software knowledge, and can be installed and set up in minutes. The following section gives a detailed explanation of the software setup and configuration.

Since the touch screen interface is RS-232, the recommend maximum distance from the PC is 50 feet. In reality, every application is different. The touch driver default baud rate is 9600, and we have tested the driver and interface with good quality cables to 50 feet.

With RS-232 line drivers this can be extended almost indefinitely.

4.2 Touch Screen Definition Cont.

Connecting the touch screen

1. Make sure all optional cables have been received.
2. Connect one end of the 6 foot touch screen serial cable to the touch screen port D9 connector on the side of the monitor.
3. Connect the other end to any communications port on the host computer.
4. Tighten the captive screws on the cable connector to secure it.

4.3 Touch Screen Serial Interface

All touch controllers are configured by default to provide serial communications at 9600 baud, 8 data bits, 1 stop bit, no parity. For Vartech flat panels equipped with touch screens, a serial communications cable is required. This 6 foot cable comes with the unit in the accessory kit. The cable is a straight wired serial (RS-232) cable with a male DE-9 D-shell connector on the monitor end. The cable provides a communications channel between the touch screen controller, which is mounted inside the monitor, and an RS-232 serial port on the host computer.

Because the touch controller obtains power from the monitor's power supply, no external touch power connections are necessary.

Software supplied with the touch screen must be loaded on the host computer to handle communications with the touch controller over the channel.

Because the touch screen emulates a mouse, there may be compatibility issues involving how the touch screen emulates mouse buttons, especially multiple buttons.

4.4 Setting up the Touch Screen Interface

Enabling the Touch Screen Interface

The Flat Panel Monitor provides a female DE-9 connector for the touch interface.

This connector provides the serial interface for the touch controller.

Interconnecting wiring to the host serial port connection is shown in the following table.

Touch screen Interface			
Monitor (DCE Device) DE-9 (Female)	Signal Description	Host (DTE Device)	
		DE-9 (Male)	DB-25 (Male)
1	Not Connected (DCD)	1	8
2	Transmit Data (TXD)	2	3
3	Receive Data (RXD)	3	2
4	Data Terminal Ready (DTR)	4	20
5	Common Signal Return (SG)	5	7
6	Not Connected (DSR)	6	6
7	Request To Send (RTS)	7	4
8	Clear To Send (CTS)	8	5
9	Not Connected	9	22

4.5 Installing Touch Screen Driver Windows NT 4.0

1. Start your computer.
2. Insert the MonitorMouse for Windows NT disk into drive A.
3. Click the Start button then click Run.
4. Type "a:\setup" in the space provided and press Enter.
5. Follow the directions on the screen.
6. MonitorMouse for Windows NT provides two Installation options. Most users should select Typical (the default) and click Next to continue. Custom allows you to install the sample touch screen programming files.
7. The Touch screen Setup dialog box will appear. Specify the type of touch screen controller you are using and how it is connected. Also specify the language you want to use in the Touch screen Control Panel. Click OK to confirm that the Setup is correct.
8. Complete the Setup program.
9. Shutdown and restart Windows NT. Continue the steps on the next page.
10. Click the Start button, then click Settings, then click Control Panel.
11. Double-click Elo Touch screen to run the Touch screen Control Panel.
12. Click the Calibrate button and touch each of the three targets as they appear on the screen. Touch Yes when the cursor lines up correctly with your finger. Touch OK to close the Touch screen Control Panel.

Note:

If at any time the screen cursor is not directly under your finger on a touch, the touch screen can be re calibrated at anytime by going to the Windows control panel and selecting the Elo Icon and selecting Calibrate.

4.6 Installing Touch Screen Driver Windows 95/98

Start your computer.

2. Insert the MonitorMouse for Windows 95 disk into drive A.
3. Click the Start button then click Run.
4. Type "a:\setup" in the space provided and press Enter.
5. Follow the directions on the screen.
6. MonitorMouse for Windows 95 provides two installation options. Most users should select **Typical:** (the default) and click Next to continue.
Custom: allows you to install the sample touch screen programming files.
7. The Touch screen Setup dialog box will appear. Specify the type of touch screen controller you are using (Serial SmartSet Model 2210) and how it is connected.
Click OK to confirm that the Setup is correct.
8. Complete the Setup program.
9. Restart Windows 95.
10. Click the Start button, then click Settings, then click Control Panel.

4.6 Installing Touch Screen Driver Windows 95/98 Cont.

11. Double-click Elo Touch screen to run the touch screen control panel.
12. Click the Calibrate button and touch each of the three targets as they appear on the screen.
13. Click yes when the cursor lines up correctly with your finger. Click OK to close the touch screen control panel.

Note: If at any time the screen cursor is not directly under your finger on a touch, the touch screen can be calibrated at anytime by going to the Windows control panel and selecting the Elo Icon and select Calibrate.

4.7 Installing Touch Screen Driver Windows 2000

1. Start your computer.
2. Insert the MonitorMouse for Windows 2000 disk into drive A.
3. Click the Start button then click Run.
4. Type "a:\setup" in the space provided and press Enter.
5. Follow the directions on the screen.
6. MonitorMouse for Windows 2000 provides two Installation options. Most users should select

Typical (the default) and click Next to continue.

Custom allows you to install the sample touch screen programming files.

7. The Touch screen Setup dialog box will appear. Specify the type of touch screen controller you are using and how it is connected. Also specify the language you want to use in the Touch screen Control Panel. Click OK to confirm that the Setup is correct.
8. Complete the Setup program.
9. Shutdown and restart Windows 2000. Continue the steps on the next page.
10. Click the Start button, then click Settings, then click Control Panel.
11. Double-click Elo Touch screen to run the Touch screen Control Panel.
12. Click the Calibrate button and touch each of the three targets as they appear on the screen. Touch Yes when the cursor lines up correctly with your finger. Touch OK to close the Touch screen Control Panel.

Note:

If at any time the screen cursor is not directly under your finger on a touch, the touch screen can be re-calibrated at anytime by going to the Windows control panel and selecting the Elo Icon and selecting Calibrate.

Note: For latest touch information, refer to www.elotouch.com

Troubleshooting	
Trouble	Troubleshooting Tip
No Picture	<ul style="list-style-type: none"> ⇒ The signal cable should be properly connected to the display card and computer. ⇒ Try disconnecting the video cable from the display and connecting to a CRT display if available to confirm the presence of proper video. ⇒ Make sure power is connected to the proper DC or AC source. ⇒ Make sure the resolution mode is supported by the display and check settings of the display card. ⇒ Confirm that the video cable is not defective.
Image Persistence	<p>Image persistence occurs when a ghost of an image remains on the screen after the monitor has been turned off. Unlike a CRT monitor, an LCD monitor's image persistence is not permanent. To erase an image ghost, turn the monitor off for as long as the image was displayed. If the image was on for one hour and the ghost of the image remains, the display should be turned off for one hour to erase the image. To avoid this problem, use a screen saver.</p>
Picture Quality & Image Stability	<ul style="list-style-type: none"> ⇒ Check for proper video cable for proper grounding and shielding. ⇒ Check the signal source for proper signal. ⇒ Check for proper adjustment of the Phase and Frequency controls. ⇒ Check for proper recommended signal timing.
Green LED not lit	Check for proper power and power connections
Green LED blinking	This indicates absence of video or proper video for this display
Display image is not properly sized	<ul style="list-style-type: none"> ⇒ Adjust the Vertical and Horizontal size controls via the OSD. (Reference setup adjustments) ⇒ Ensure that a supported mode is selected on the display card or system being used. Consult the display card or system manual for proper video.
No S-Video or NTSC operation	<ul style="list-style-type: none"> ⇒ Check for proper connections. ⇒ Check the setup instructions for proper input selection.
If these tips do not solve your problem, contact Vartech Systems Customer Service support.	

Troubleshooting Cont.

Trouble	Troubleshooting Tip
Screen is blank.	Screen saver activated. Video Cable problem. Check for proper installation Change video cable . Faulty video display. Needs Service.
Image is dim, even with brightness and contrast controls set full UP	Video cable problem. Check for proper installation of cables Faulty video source. Faulty display.
Image not centered	Reset the horizontal and vertical positioning using the on-screen menu. Check to see if video source is operating within the monitor's range
Image will not adjust	Video timing outside of range. Use the on-screen menu to adjust the Clock Setting. Make sure timing is within VESA standard.
Image is not stable.	Monitor has incorrect or bad sync signals. Check for proper video cable installation. Replace suspected faulty cable. Check to ensure that video source is operating within the display's range.
Vertical shaded bars on Screen image	Horizontal size not properly adjusted. Adjust horizontal size settings
Colors are missing	Faulty video cable. Missing from video source. Connect video source to another display
Screen jitter or noisy display	Monitor clock phase not properly adjusted
Slight distortion in text or Graphics.	Not working in native resolution.
Display is present but "bars" Appear or roll across screen	Ground loop problem between computer and display Interference from adjacent equipment
The background looks Acceptable but text and Icons seem to be missing rows of pixels	Video running interlace mode.

6

CLEANING AND MAINTANENCE

Cleaning

Occasionally clean the display panel and cabinet with a soft cloth dampened (not soaked) with a mild (non-abrasive) glass cleaner. Keep turning a fresh side of the cloth toward the screen surface to avoid scratching it with accumulated grit.

Note:

The solvent should be applied only to the cloth, and not directly on the monitor screen.

Do not use paper products as they may scratch the surface. To minimize the risk of abrasion, allow the screen to stand dry.

Special care should be taken when cleaning a touch screen or polycarbonate shield that is installed over the screen. Abrasive and certain chemical cleaners can easily damage the surface.

Never use alcoholic or ammoniac cleaners to clean the polycarbonate shield or a touch screen.

Note:

For best results cleaning a monitor with the optional antireflective tempered glass display shield, a solution of denatured alcohol is recommended to thoroughly clean the display.

Replacing a Line Cord

To avoid shock and fire hazards, the monitor's power cord should be replaced if the insulation becomes broken or if it develops a loose internal connection.

Other Maintenance

Qualified service personnel should perform all maintenance, except for the power cord replacement described above.

Mechanical Drawings

Model	Description	Page(s)
VT190P	19.0" Panel Mount Mechanical Drawing	18-19
VT190R	19.0" Rack Mount Mechanical Drawing	
VT190W	19.0" Wall Mount Mechanical Drawing	
VT190M	19.0" Tabletop Mechanical Drawing	
VT190C	19.0" Chassis Mount Mechanical Drawing	

7.1 Panel Mount Procedure

Panel Mounting Procedure

1. Cut and drill the panel (refer to panel mount drawing). Measurements are in inches.

Panel Mounting Cutout

2. If access to the side of the monitor is not available following installation, attach the power and video cables to the side of the monitor at this time.
3. Install the monitor in the prepared cutout.
4. Install the lock nuts and washers, supplied with the monitor, behind the holes running along the sides and top/bottom of the cutout in the panel. Extra lock nuts and washers are provided.

Note:


Use #10-32 nuts for mounting.

5. Tighten all mounting nuts evenly to a torque of 24 inch-pounds.

ATTENTION: Mounting nuts must be tightened to a torque of 24 inch-pounds to provide panel seal and avoid potential damage. Vartech Systems assumes no responsibility for water or chemical damage to the monitor or other equipment within the enclosure due to improper installation.

6. Attach the power and video cables to the side of the monitor if you have not already done so.

Generic Panel Mount Diagram

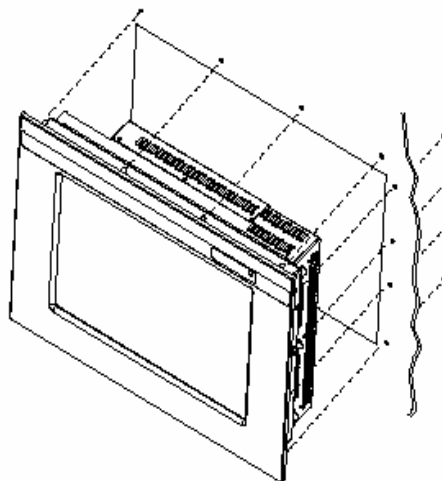

8

SPECIFICATIONS

ENGINEERING SPECIFICATIONS	
Panel Size	19.0"
Type	TFT Active matrix w/ Anti-Glare coating
Resolution Capabilities	VGA to SXGA
Pixel Pitch	0.294mm
Active Display Area	14.81" x 11.85" 376.3mm x 301.06mm
Pixel Format	640 x 480, 800 x 600, 1024 x 768, 1280 x 1024
Viewing Angle (Left/Right)	85/85°
Viewing Angle (Up/Down)	85/85°
Contrast Ratio	500:1
Brightness	VT190P, VT190PSS, VT190R, VT190C, VT190W, VT190M: 250 Nits Transflectives: over 1000 Nits*
Response Time	T _R = 15ms typical T _F = 10ms typical
Back Lights	Cold Cathode 50,000 Hrs. Half Life
Video Connector	HD15(F) DVI-I 29Pin connector (Digital/Analog) Composite Video (CVSC) S-Video (S-VHS)
Colors Supported	16.7M
Video Input	RGB Analog (0.7V p-p / 75ohm) , Digital CVBS (1.0V p-p) S-VHS, luma/chroma (.7V p-p / 75ohm)
Sync	Separate H&V, Combined, SOG (Sync On Green), Digital
Input Voltage	AC 100-240V 50/60Hz 1.0A
Power consumption	Normal: 70Watts DPMS: < 3Watts
Operating Temperature	0 to 50°C
Storage Temperature	-20 to 60°C
Operating Humidity	10 to 95%NC
Storage Humidity	10 to 95%NC
Operating Altitude	Up to 10,000 ft
Storage Altitude	Up to 40,000 ft

*Outdoor Brightness Equivalent (Varies depending upon sunlight brightness)

VARTECH SYSTEMS

HEADQUARTERS

11529 Sun Belt Ct.

Baton Rouge, Louisiana 70809

Toll-Free: 800.223.8050

International Phone: 001.225.298.0300

Fax: 225.297.2440

E-mail: sales@vartechsystems.com

www.vartechsystems.com

150-065-001
8.23.04