

# After installing python3.8

21 July 2022 16:11

FOR BLE project (Transmitter and reciever project in Mahindra)

1. Install pip using below commands

```
sudo apt-get remove python3-pip  
sudo apt-get install python3-pip
```

From <<https://stackoverflow.com/questions/30993086/pip3-command-not-found-but-python3-pip-is-already-installed>>

2. `pip3.8 install pyserial`
3. Follow next page "Installing pymssql on ubuntu"