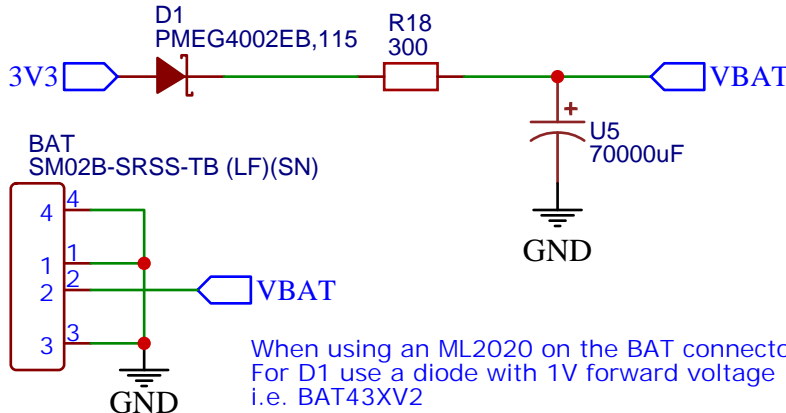
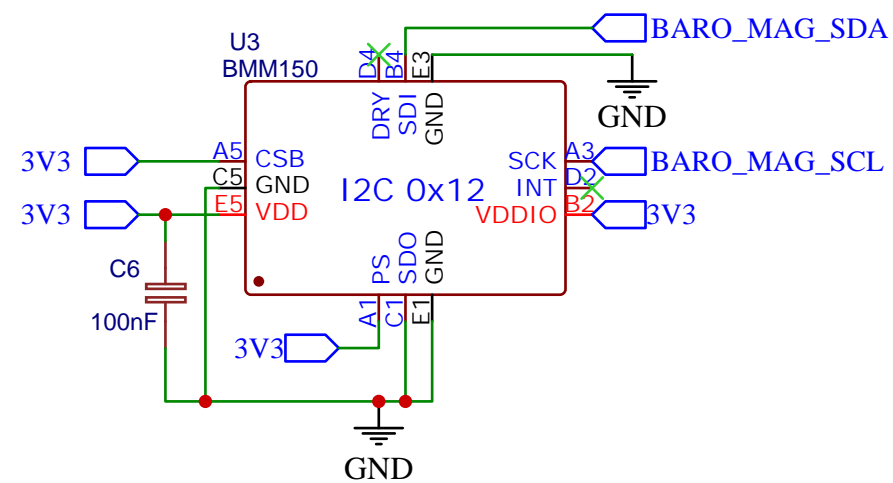
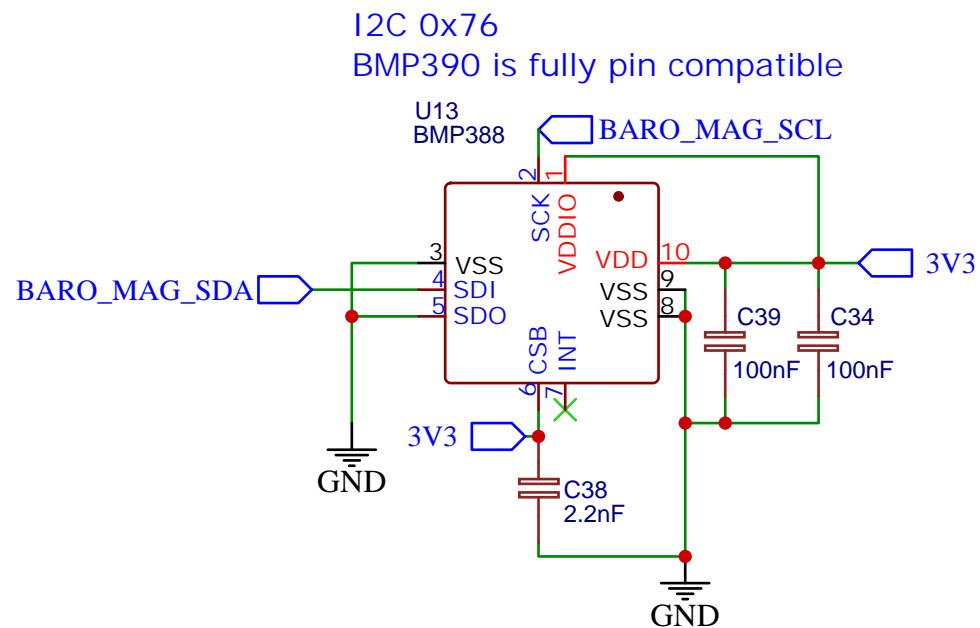
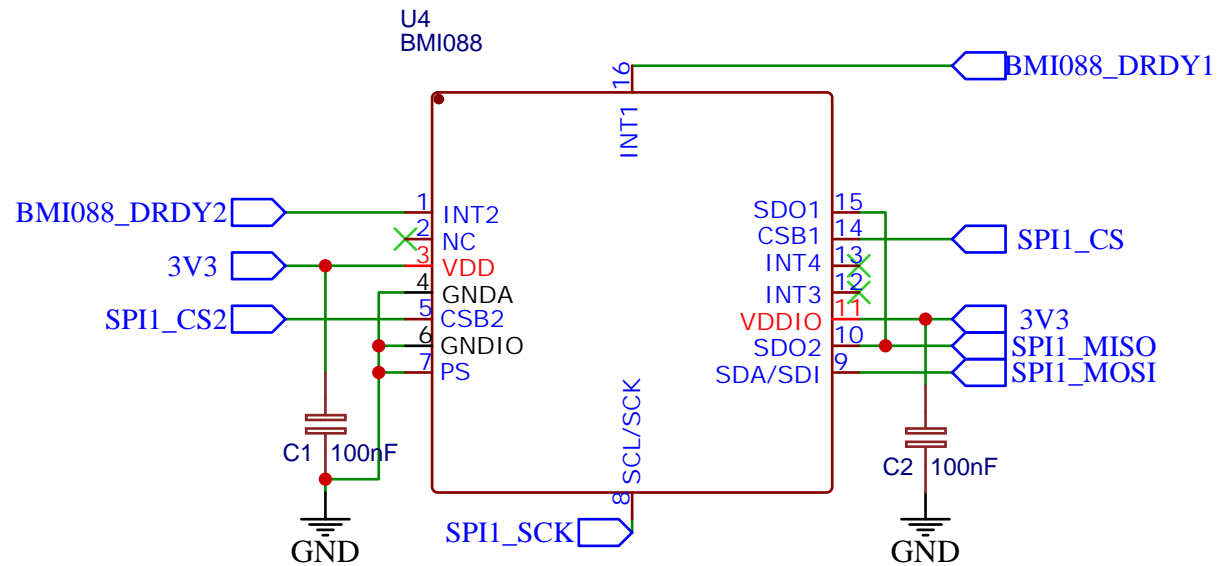
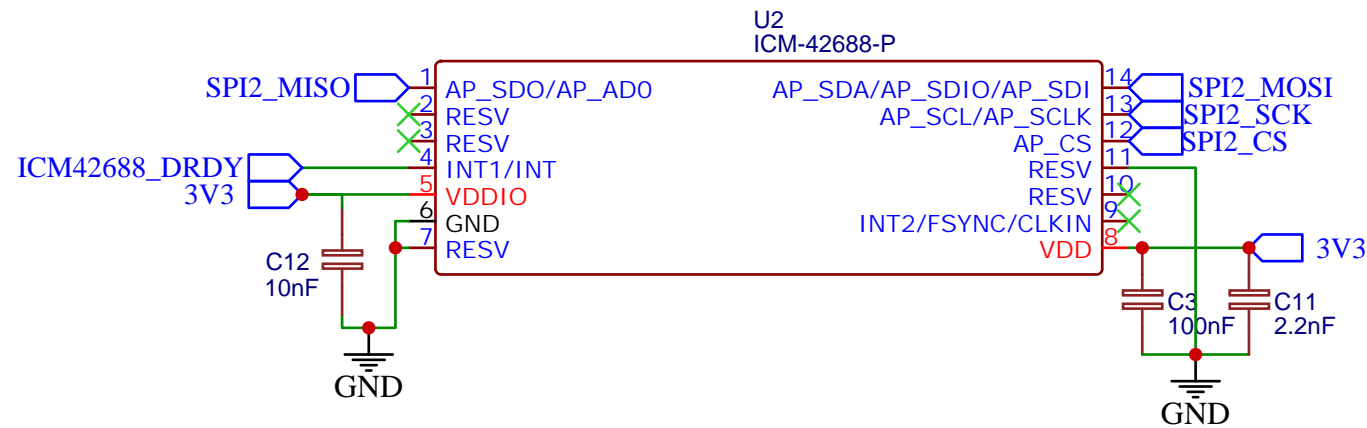

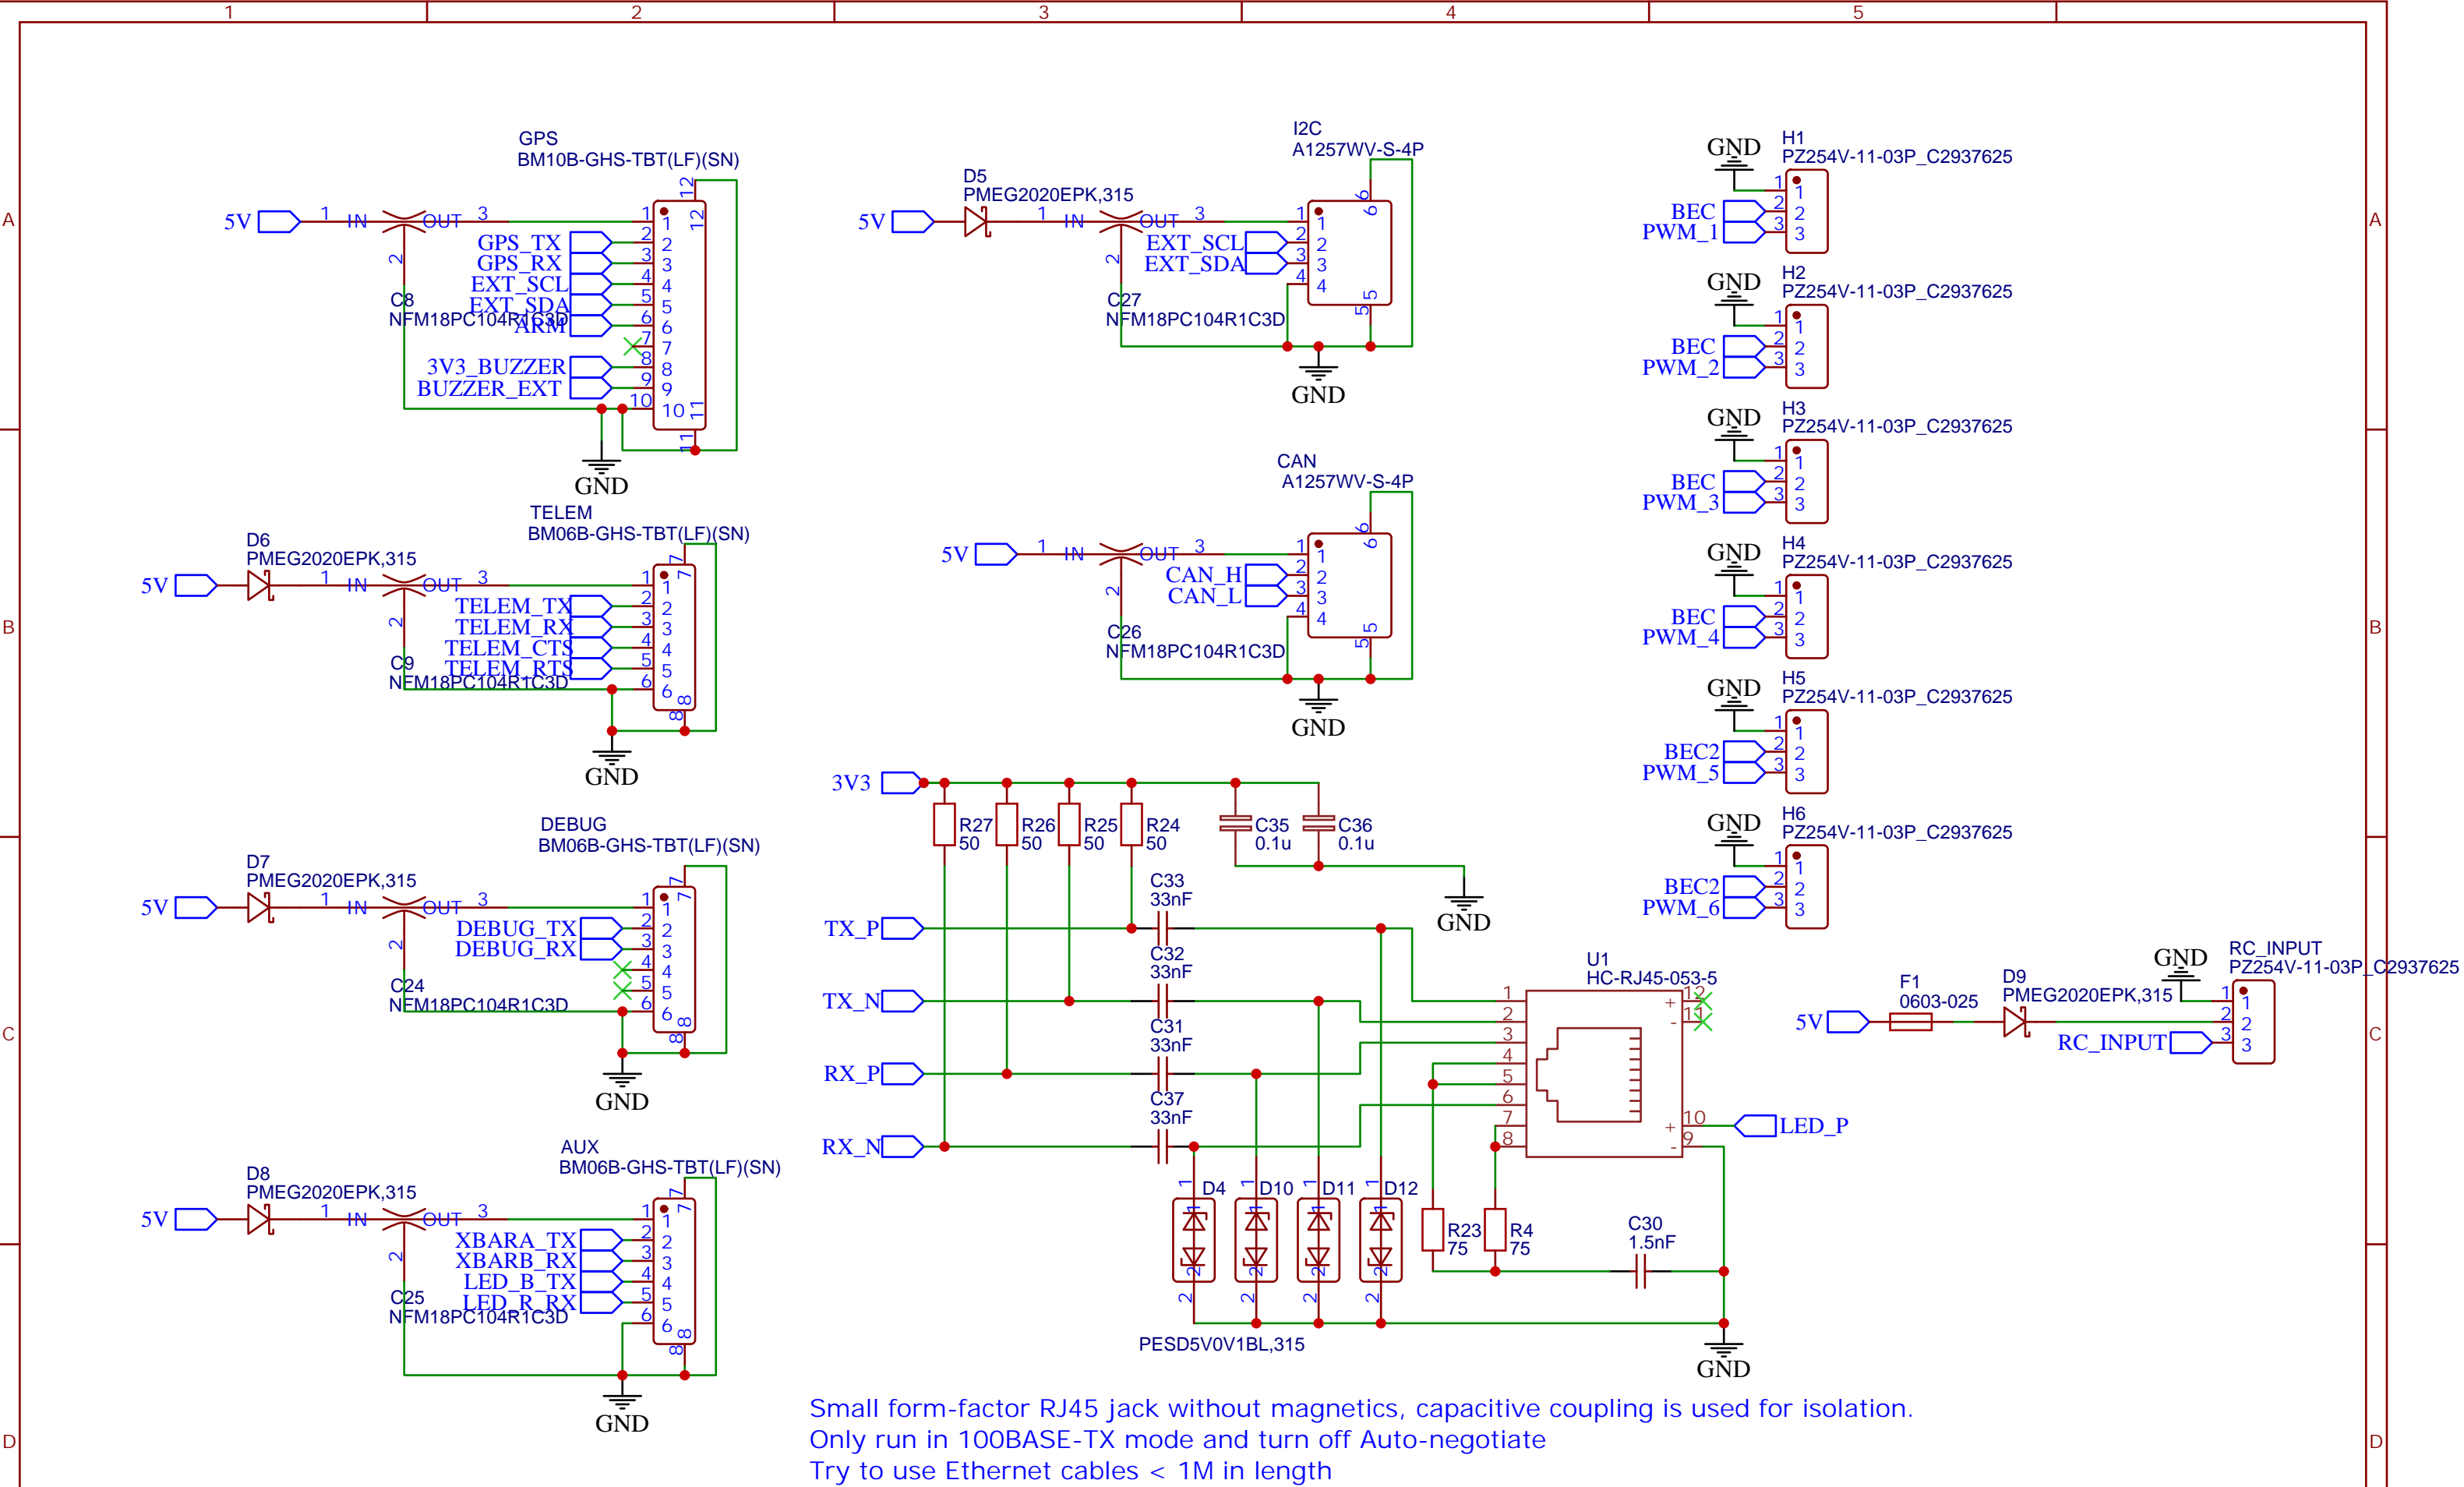


RTC Circuit DNP, you can use either a SuperCap or an ML2020 external battery





TITLE: Sensors		REV: B
	Company:	Sheet: 2/3
	Date: 2024-01-06	Drawn By: Peter van der Perk



TITLE: Connectors		REV: B
<b>TROPIC VMU</b>	Company:	Sheet: 3/3
	Date: 2024-01-06 Drawn By: Peter van der Perk	