

NetX Duo™

Telnet Protocol (Telnet) for NetX Duo

User Guide

Renesas Synergy™ Platform

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

Renesas Synergy Specific Information

If you are using NetX Duo Telnet for the Renesas Synergy platform, please use the following information.

Multi-Thread Support

Page 8: Multi-thread support for the telnet client has not been tested for SSP v1.5.0.

Product Distribution

Page 9: The distribution of Telnet included with the Renesas Synergy SSP installation does not include the file **demo_netxdue_telnet.c**. Please ignore references to this file.

Telnet Installation

Page 9: If you are using Renesas Synergy SSP and the e² studio ISDE, Telnet will already be installed. You can ignore the Installation and Use of Telnet section.



Telnet Protocol (Telnet) for NetX Duo

User Guide

Express Logic, Inc.

858.613.6640
Toll Free 888.THREADX
FAX 858.521.4259

www.expresslogic.com

©2002-2018 by Express Logic, Inc.

All rights reserved. This document and the associated NetX software are the sole property of Express Logic, Inc. Each contains proprietary information of Express Logic, Inc. Reproduction or duplication by any means of any portion of this document without the prior written consent of Express Logic, Inc. is expressly forbidden. Express Logic, Inc. reserves the right to make changes to the specifications described herein at any time and without notice in order to improve design or reliability of NetX. The information in this document has been carefully checked for accuracy; however, Express Logic, Inc. makes no warranty pertaining to the correctness of this document.

Trademarks

NetX, Piconet, and UDP Fast Path are trademarks of Express Logic, Inc. ThreadX is a registered trademark of Express Logic, Inc.

All other product and company names are trademarks or registered trademarks of their respective holders.

Warranty Limitations

Express Logic, Inc. makes no warranty of any kind that the NetX products will meet the USER's requirements, or will operate in the manner specified by the USER, or that the operation of the NetX products will operate uninterrupted or error free, or that any defects that may exist in the NetX products will be corrected after the warranty period. Express Logic, Inc. makes no warranties of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, with respect to the NetX products. No oral or written information or advice given by Express Logic, Inc., its dealers, distributors, agents, or employees shall create any other warranty or in any way increase the scope of this warranty, and licensee may not rely on any such information or advice.

Part Number: 000-1055

Revision 5.11

Contents

Chapter 1 Introduction to Telnet.....	4
Telnet Requirements	4
Telnet Constraints	4
Telnet Communication	4
Telnet Authentication.....	5
Telnet New Connection Callback	5
Telnet Receive Data Callback	5
Telnet End Connection Callback	6
Telnet Option Negotiation.....	7
Telnet Multi-Thread Support.....	8
Telnet RFCs	8
Chapter 2 Installation and Use of Telnet.....	9
Product Distribution	9
Telnet Installation	9
Using Telnet	9
Small Example System	10
Configuration Options.....	17
Chapter 3 Description of Telnet Services.....	20
nx_telnet_client_connect.....	22
nxd_telnet_client_connect.....	24
nx_telnet_client_create	26
nx_telnet_client_delete.....	27
nx_telnet_client_disconnect	28
nx_telnet_client_packet_receive	30
nx_telnet_client_packet_send	32
nx_telnet_server_create.....	34
nx_telnet_server_delete	36
nx_telnet_server_disconnect.....	37
nx_telnet_server_get_open_connection_count.....	38
nx_telnet_server_packet_send.....	39
nx_telnet_server_packet_pool_set.....	41
nx_telnet_server_start.....	42
nx_telnet_server_stop	43

Chapter 1

Introduction to Telnet

The Telnet Protocol (Telnet) is a protocol designed for transferring commands and responses between two nodes on the Internet. Telnet is a simple protocol that utilizes reliable Transmission Control Protocol (TCP) services to perform its transfer function. Because of this, Telnet is a highly reliable transfer protocol. Telnet is also one of the most used application protocols.

Telnet Requirements

In order to function properly, the NetX Duo Telnet package requires that a NetX IP instance has already been created. In addition, TCP must be enabled on that same IP instance. The Telnet Client portion of the NetX Duo Telnet package has no further requirements.

The Telnet Server portion of the NetX Duo Telnet package has one additional requirement. It requires complete access to TCP *well-known port 23* for handling all Client Telnet requests.

Telnet Constraints

The NetX Duo Telnet protocol implements the Telnet standard. However, the interpretation and response of Telnet commands, indicated by a byte with the value of 255, is the responsibility of the application. The various Telnet commands and command parameters are defined in the *nxd_telnet_client.h* and *nxd_telnet_server.h* files.

Telnet Communication

As mentioned previously, the Telnet Server utilizes the *well-known TCP port 23* to field Client requests. Telnet Clients may use any available TCP port.

Telnet Authentication

Telnet authentication is the responsibility of the application's Telnet Server callback function. The application's Telnet Server "new connection" callback would typically prompt the Client for name and/or password. The Client would then be responsible for providing the information. The Server would then process the information in the "receive data" callback. This is where the application Server code would have to authenticate the information and decide whether or not it is valid.

Telnet New Connection Callback

The NetX Duo Telnet Server calls the application specified callback function whenever a new Telnet Client request is received. The application specifies the callback function when the Telnet Server is created via the ***nx_telnet_server_create*** function. Typical actions of the "new connection" callback include sending a banner or prompt to the Client. This could very well include a prompt for login information.

The format of the application "new connection" callback routine is very simple and is defined below:

```
void telnet_new_connection(NX_TELNET_SERVER *server_ptr,
                          UINT logical_connection);
```

The input parameters are defined as follows:

Parameter	Meaning
<i>server_ptr</i>	Pointer to the calling Telnet Server.
<i>logical_connection</i>	The internal logical connection for the Telnet Server. This can be used by the application as an index into buffers and/or data structures specific for each Client connection. Its value ranges from 0 through NX_TELNET_MAX_CLIENTS - 1.

Telnet Receive Data Callback

The NetX Duo Telnet Server calls the application specified callback function whenever a new Telnet Client data is received. The application specifies the callback function when the Telnet Server is created via the

nx_telnet_server_create function. Typical actions of the “new connection” callback include echoing the data back and/or parsing the data and providing data as a result of interpreting a command from the client.

Note that this callback routine must also release the supplied packet.

The format of the application “receive data” callback routine is very simple and is defined below:

```
void telnet_receive_data(NX_TELNET_SERVER *server_ptr,
                        UINT logical_connection, NX_PACKET *packet_ptr);
```

The input parameters are defined as follows:

Parameter	Meaning
<i>server_ptr</i>	Pointer to the calling Telnet Server.
<i>logical_connection</i>	The internal logical connection for the Telnet Server. This can be used by the application as an index into buffers and/or data structures specific for each Client connection. Its value ranges from 0 through NX_TELNET_MAX_CLIENTS - 1.
<i>packet_ptr</i>	Pointer to packet containing the data from the Client.

Telnet End Connection Callback

The NetX Duo Telnet Server calls the application specified callback function whenever a Telnet Client ends the connection. The application specifies the callback function when the Telnet Server is created via the ***nx_telnet_server_create*** function. Typical actions of the “end connection” callback include cleaning up any Client specific data structures associated with the logical connection.

The format of the application “end connection” callback routine is very simple and is defined below:

```
void telnet_end_connection(NX_TELNET_SERVER *server_ptr,
                          UINT logical_connection);
```

The input parameters are defined as follows:

Parameter	Meaning
<i>server_ptr</i>	Pointer to the calling Telnet Server.
<i>logical_connection</i>	The internal logical connection for the Telnet Server. This can be used by the application as an index into buffers and/or data structures specific for each Client connection. Its value ranges from 0 through NX_TELNET_MAX_CLIENTS - 1.

Telnet Option Negotiation

The NetX Duo Telnet Server supports a limited set of Telnet options, `Echo` and `Suppress Go Ahead`.

To enable this feature the `NX_TELNET_SERVER_OPTION_DISABLE` must not be defined. By default it is not defined. The Telnet Server creates a packet pool in the `nx_telnet_server_create` service from which it allocates packets for sending telnet options requests to the Client. See “Configuration Options” for setting the packet payload (`NX_TELNET_SERVER_PACKET_PAYLOAD`) and packet pool size (`NX_TELNET_SERVER_PACKET_POOL_SIZE`) for this packet pool. It will delete this packet pool when the `nx_telnet_server_delete` service is called.

Upon making a connection with the Telnet Client, it will send out this set of telnet options to the Client if it has not received option requests from the Client:

```
will echo
dont echo
will sga
```

When it receives Telnet data from the Client, the Telnet Server checks if the first byte is the “IAC” code. If so, it will process all the options in the Client packet. Options not in the list above are ignored.

By default, the Telnet Server creates its own internal packet pool if `NX_TELNET_SERVER_OPTION_DISABLE` is not defined and it needs to transmit Telnet option commands. The Telnet Server packet pool is defined by `NX_TELNET_SERVER_PACKET_PAYLOAD` and `NX_TELNET_SERVER_PACKET_POOLSIZE`. If, however, `NX_TELNET_SERVER_USER_CREATE_PACKET_POOL` is defined, the application

must create the Telnet Server packet pool and set it as the Telnet Server packet pool by calling `_nx_telnet_server_packet_pool_set`. See Chapter 3 “Description of Telnet Services” for more details about this function.

Unlike the NetX Duo Telnet Server, the NetX Duo Telnet Client task thread does not automatically send and respond to received options from the Telnet Server. This must be done by the Telnet Client application.

Telnet Multi-Thread Support

The NetX Duo Telnet Client services can be called from multiple threads simultaneously. However, read or write requests for a particular Telnet Client instance should be done in sequence from the same thread.

Telnet RFCs

NetX Duo Telnet is compliant with RFC854 and related RFCs.

Chapter 2

Installation and Use of Telnet

This chapter contains a description of various issues related to installation, setup, and usage of the NetX Duo Telnet component.

Product Distribution

Telnet for NetX Duo is shipped on a single CD-ROM compatible disk. The package includes three source files, two include files, and a PDF file that contains this document, as follows:

<code>nxd_telnet_client.h</code>	Header file for Telnet Client for NetX Duo
<code>nxd_telnet_client.c</code>	C Source file for Telnet Client for NetX Duo
<code>nxd_telnet_server.h</code>	Header file for Telnet Server for NetX Duo
<code>nxd_telnet_server.c</code>	C Source file for Telnet Server for NetX Duo
<code>nxd_telnet.pdf</code>	PDF description of Telnet for NetX Duo
<code>demo_netxduo_telnet.c</code>	NetX Duo Telnet demonstration

Telnet Installation

In order to use Telnet for NetX Duo, the entire distribution mentioned previously should be copied to the same directory where NetX Duo is installed. For example, if NetX Duo is installed in the directory “*\threadx\arm7\green*” then the *nxd_telnet_client.h*, *nxd_telnet_client.c*, *nxd_telnet_server.c* and *nxd_telnet_server.h* files should be copied into this directory.

Using Telnet

Using Telnet for NetX Duo is easy. Basically, the application code must include *nxd_telnet_server.h* for Telnet Server applications and *nxd_telnet_client.h* for Telnet Client applications after it includes *tx_api.h* and *nx_api.h*, in order to use ThreadX and NetX Duo. Once the header is included, the application code is then able to make the Telnet function calls specified later in this guide. The application must also include *nxd_telnet_client.c* and *nxd_telnet_server.c* in the build process. These files must be compiled in the same manner as other application files and its object form must be linked along with the files of the application. This is all that is required to use NetX Duo Telnet.

If no Telnet Client capabilities are required, the *nxd_telnet_client.c* file may be omitted.

Note also that because Telnet utilizes NetX Duo TCP services, TCP must be enabled with the *nx_tcp_enable* call prior to using Telnet.

Small Example System

An example of how to use NetX Duo Telnet is shown in Figure 1.1 below. In this example, the Telnet include files are brought in at line 7 and 8. Next, the Telnet Server is created in “*tx_application_define*” at line 146. Note that the Telnet Server and Client control blocks are defined as global variables at line 23-24 previously.

Before the Telnet Server or Client can be started they must validate their IP address with NetX Duo. For IPv4 connections this is accomplished by simply waiting briefly to let the NetX driver initialize the system on line 166. For IPv6 connections, this requires enabling IPv6 and ICMPv6 which it does in lines 171-172. The Client sets its global and link local IPv6 addresses on the primary interface on lines 181-186 and waits for NetX Duo validation to complete in the background. The Server also sets its global and link local addresses on its primary interface in lines 192 – 198. Note that the two services, *nxd_ipv6_global_address_set* and *nxd_ipv6_linklocal_address_set* are replaced with *nxd_ipv6_address_set service*. The former two services are still available for legacy NetX Duo applications but are eventually deprecated. Developers are encouraged to use *nxd_ipv6_address_set* instead.

After successful IP address validation with NetX Duo, the Telnet Server is started at line 215 using the *nxd_telnet_server_start* service. At line 226 the Telnet Client is created using the *nx_telnet_client_create* service. It then connects with the Telnet Server on line 242 for IPv4 applications and line 238 for IPv6 applications using the *nxd_telnet_client_connect* and *nx_telnet_client_connect* services respectively. After successful validation and connection with the server, it makes a few exchanges before disconnecting.

```

1  /* This is a small demo of TELNET on the high-performance NetX Duo TCP/IP stack.
2     This demo relies on ThreadX and NetX Duo to show a simple TELNET connection,
3     send, server echo, and then disconnection from the TELNET server. */
4
5  #include "tx_api.h"
6  #include "nx_api.h"
7  #include "nxd_telnet_client.h"
8  #include "nxd_telnet_server.h"
9  #define DEMO_STACK_SIZE 4096
10
11
12 /* Define the ThreadX and NetX object control blocks... */
13
14 TX_THREAD test_thread;
15 NX_PACKET_POOL pool_server;
```

```

16 NX_PACKET_POOL      pool_client;
17 NX_IP               ip_server;
18 NX_IP               ip_client;
19
20
21 /* Define TELNET objects. */
22
23 NX_TELNET_SERVER     my_server;
24 NX_TELNET_CLIENT     my_client;
25
26
27 #ifdef FEATURE_NX_IPV6
28
29 /* Define NetX Duo IP address for the NetX Duo Telnet Server and Client. */
30
31 NXD_ADDRESS          server_ip_address;
32 NXD_ADDRESS          client_ip_address;
33
34 #endif
35
36 #define              SERVER_ADDRESS          IP_ADDRESS(1,2,3,4)
37 #define              CLIENT_ADDRESS          IP_ADDRESS(1,2,3,5)
38
39
40
41 /* Define the counters used in the demo application... */
42
43 ULONG                error_counter;
44
45
46 /* Define timeout in ticks for connecting and sending/receiving data. */
47
48 #define              TELNET_TIMEOUT  200
49
50 /* Define function prototypes. */
51
52 void  thread_test_entry(ULONG thread_input);
53 void  _nx_ram_network_driver(struct NX_IP_DRIVER_STRUCT *driver_req);
54
55
56 /* Define the application's TELNET Server callback routines. */
57
58 void  telnet_new_connection(NX_TELNET_SERVER *server_ptr, UINT
                               logical_connection);
59 void  telnet_receive_data(NX_TELNET_SERVER *server_ptr, UINT logical_connection,
                               NX_PACKET *packet_ptr);
60 void  telnet_connection_end(NX_TELNET_SERVER *server_ptr, UINT
                               logical_connection);
61
62
63 /* Define main entry point. */
64
65 int main()
66 {
67     /* Enter the ThreadX kernel. */
68     tx_kernel_enter();
69 }
70
71
72
73 /* Define what the initial system looks like. */
74 void tx_application_define(void *first_unused_memory)
75 {
76
77     UINT  status;
78     CHAR  *pointer;
79     UINT  iface_index, address_index;
80
81     /* Setup the working pointer. */
82     pointer = (CHAR *) first_unused_memory;
83
84     /* Create the main thread. */
85     tx_thread_create(&test_thread, "test thread", thread_test_entry, 0,
86                     pointer, DEMO_STACK_SIZE,
87                     2, 2, TX_NO_TIME_SLICE, TX_AUTO_START);
88     pointer = pointer + DEMO_STACK_SIZE;
89
90     /* Initialize the NetX system. */
91     nx_system_initialize();
92
93     /* Create packet pool. */

```

```

94     nx_packet_pool_create(&pool_server, "Server NetX Packet Pool",
95                           600, pointer, 8192);
96     pointer = pointer + 8192;
97     /* Create an IP instance. */
98     nx_ip_create(&ip_server, "Server NetX IP Instance", SERVER_ADDRESS,
99                  0xFFFFFFFFUL, &pool_server, _nx_ram_network_driver,
100                  pointer, 4096, 1);
101
102     pointer = pointer + 4096;
103
104     /* Create another packet pool. */
105     nx_packet_pool_create(&pool_client, "Client NetX Packet Pool", 600,
106                           pointer, 8192);
107     pointer = pointer + 8192;
108     /* Create another IP instance. */
109     nx_ip_create(&ip_client, "Client NetX IP Instance", CLIENT_ADDRESS,
110                  0xFFFFFFFFUL, &pool_client, _nx_ram_network_driver,
111                  pointer, 4096, 1);
112
113     pointer = pointer + 4096;
114
115     /* Enable ARP and supply ARP cache memory for IP Instance 0. */
116     nx_arp_enable(&ip_server, (void *) pointer, 1024);
117     pointer = pointer + 1024;
118
119     /* Enable ARP and supply ARP cache memory for IP Instance 1. */
120     nx_arp_enable(&ip_client, (void *) pointer, 1024);
121     pointer = pointer + 1024;
122
123     /* Enable TCP processing for both IP instances. */
124     nx_tcp_enable(&ip_server);
125     nx_tcp_enable(&ip_client);
126
127
128 #ifdef FEATURE_NX_IPV6
129
130     /* Next set the NetX Duo Telnet Server and Client addresses. */
131     server_ip_address.nxd_ip_address.v6[3] = 0x105;
132     server_ip_address.nxd_ip_address.v6[2] = 0x0;
133     server_ip_address.nxd_ip_address.v6[1] = 0x0000f101;
134     server_ip_address.nxd_ip_address.v6[0] = 0x20010db1;
135     server_ip_address.nxd_ip_version = NX_IP_VERSION_V6;
136
137     client_ip_address.nxd_ip_address.v6[3] = 0x101;
138     client_ip_address.nxd_ip_address.v6[2] = 0x0;
139     client_ip_address.nxd_ip_address.v6[1] = 0x0000f101;
140     client_ip_address.nxd_ip_address.v6[0] = 0x20010db1;
141     client_ip_address.nxd_ip_version = NX_IP_VERSION_V6;
142
143 #endif
144
145     /* Create the NetX Duo TELNET Server. */
146     status = nx_telnet_server_create(&my_server, "Telnet Server", &ip_server,
147                                     pointer, 2048, telnet_new_connection, telnet_receive_data,
148                                     telnet_connection_end);
149
150     /* Check for errors. */
151     if (status)
152         error_counter++;
153
154     return;
155 }
156
157 /* Define the test thread. */
158 void thread_test_entry(ULONG thread_input)
159 {
160
161     NX_PACKET *my_packet;
162     UINT status;
163
164     /* Allow other threads (e.g. IP thread task) to run first. */
165     tx_thread_sleep(100);
166
167 #ifdef FEATURE_NX_IPV6
168
169     /* Here's where we make the Telnet Client IPv6 enabled. */
170     nxd_ipv6_enable(&ip_client);
171     nxd_icmp_enable(&ip_client);
172

```

```

173
174 /* Wait till the IP task thread initializes the system. */
175 tx_thread_sleep(100);
176
177
178 /* Set up the Client addresses on the Client IP for the primary interface. */
179 if_index = 0;
180
181 status = nxd_ipv6_address_set(&ip_client, if_index, NX_NULL, 10,
                                &address_index);
182 status = nxd_ipv6_address_set(&ip_client, if_index, &client_ip_address,
                                64, &address_index);
183
184 /* Allow NetX Duo time to validate addresses. */
185 tx_thread_sleep(400);
186
187
188 /* Set up the Server addresses on the Client IP. */
189
190 if_index = 0;
191 status = nxd_ipv6_address_set (&ip_server, if_index, NX_NULL, 10,
                                &address_index);
192
193 status = nxd_ipv6_address_set(&ip_server, if_index, &server_ip_address,
                                64, &address_index);
194
195
196 /* Allow NetX Duo time to validate addresses. */
197 tx_thread_sleep(400);
198
199 #endif
200
201
202 /* Start the TELNET Server. */
203 status = nx_telnet_server_start(&my_server);
204
205 /* Check for errors. */
206 if (status != NX_SUCCESS)
207 {
208     return;
209 }
210
211 /* Create a TELNET client instance. */
212 status = nx_telnet_client_create(&my_client, "My TELNET Client",
                                   &ip_client, 600);
213
214 /* Check status. */
215 if (status != NX_SUCCESS)
216 {
217     return;
218 }
219
220 #ifdef FEATURE_NX_IPV6
221
222 /* Connect the TELNET client to the TELNET Server at port 23. */
223 status = nxd_telnet_client_connect(&my_client, &server_ip_address, 23,
                                     TELNET_TIMEOUT);
224
225 #else
226 /* Connect the TELNET client to the TELNET Server at port 23. */
227 status = nx_telnet_client_connect(&my_client, SERVER_ADDRESS, 23,
                                     TELNET_TIMEOUT);
228 #endif
229
230 /* Check status. */
231 if (status != NX_SUCCESS)
232 {
233     return;
234 }
235
236 /* Allocate a packet. */
237 status = nx_packet_allocate(&pool_client, &my_packet, NX_TCP_PACKET,
                              NX_WAIT_FOREVER);
238
239 /* Check status. */
240 if (status != NX_SUCCESS)

```



```

257     {
258         return;
259     }
260
261     /* Build a simple 1-byte message. */
262     nx_packet_data_append(my_packet, "a", 1, &pool_client, NX_WAIT_FOREVER);
263
264     /* Send the packet to the TELNET Server. */
265     status = nx_telnet_client_packet_send(&my_client, my_packet, TELNET_TIMEOUT);
266
267     /* Check status. */
268     if (status != NX_SUCCESS)
269     {
270         return;
271     }
272
273
274
275     /* Pickup the Server header. */
276     status = nx_telnet_client_packet_receive(&my_client, &my_packet,
                                              TELNET_TIMEOUT);
277
278     /* Check status. */
279     if (status != NX_SUCCESS)
280     {
281         return;
282     }
283
284
285     /* At this point the packet should contain the Server's banner
286        message sent by the Server callback function below. Just
287        release it for this demo. */
288     nx_packet_release(my_packet);
289
290     /* Pickup the Server echo of the character. */
291     status = nx_telnet_client_packet_receive(&my_client, &my_packet,
                                              TELNET_TIMEOUT);
292
293     /* Check status. */
294     if (status != NX_SUCCESS)
295     {
296         return;
297     }
298
299
300     /* At this point the packet should contain the character 'a' that
301        we sent earlier. Just release the packet for now. */
302     nx_packet_release(my_packet);
303
304     /* Now disconnect form the TELNET Server. */
305     status = nx_telnet_client_disconnect(&my_client, TELNET_TIMEOUT);
306
307
308     /* Check status. */
309     if (status != NX_SUCCESS)
310     {
311         return;
312     }
313
314
315     /* Delete the TELNET Client. */
316     status = nx_telnet_client_delete(&my_client);
317
318     /* Check status. */
319     if (status != NX_SUCCESS)
320     {
321         return;
322     }
323 }
324
325
326 /* This routine is called by the NetX Telnet Server whenever a new Telnet client
327    connection is established. */
328 void telnet_new_connection(NX_TELNET_SERVER *server_ptr, UINT logical_connection)
329 {
330
331     UINT      status;
332     NX_PACKET *packet_ptr;
333
334
335

```

```

336  /* Allocate a packet for client greeting. */
337  status = nx_packet_allocate(&pool_server, &packet_ptr, NX_TCP_PACKET,
                               NX_NO_WAIT);
338
339  if (status != NX_SUCCESS)
340  {
341      error_counter++;
342      return;
343  }
344
345  /* Build a banner message and a prompt. */
346  nx_packet_data_append(packet_ptr,
347      "**** Welcome to NetX TELNET Server ****\r\n\r\n\r\n", 45,
        &pool_server, NX_NO_WAIT);
348
349
350  nx_packet_data_append(packet_ptr, "NETX> ", 6, &pool_server, NX_NO_WAIT);
351
352  /* Send the packet to the client. */
353  status = nx_telnet_server_packet_send(server_ptr, logical_connection,
        packet_ptr, TELNET_TIMEOUT);
354
355  if (status != NX_SUCCESS)
356  {
357      error_counter++;
358      nx_packet_release(packet_ptr);
359  }
360
361  return;
362 }
363
364
365  /* This routine is called by the NetX Telnet Server whenever data is present on a
366  Telnet client connection. */
367  void telnet_receive_data(NX_TELNET_SERVER *server_ptr, UINT logical_connection,
368      NX_PACKET *packet_ptr)
369  {
370
371      UINT    status;
372      UCHAR   alpha;
373
374
375      /* This demo echoes the character back; on <cr,lf> sends a new prompt back to
376      the client. A real system would likely buffer the character(s) received in a
377      buffer associated with the supplied logical connection and process it. */
378
379      /* Just throw away carriage returns. */
380      if ((packet_ptr -> nx_packet_prepend_ptr[0] == '\r') &&
381          (packet_ptr -> nx_packet_length == 1))
382      {
383          printf("telnet server received just a CRLF\n");
384
385          nx_packet_release(packet_ptr);
386          return;
387      }
388
389      /* Setup new line on line feed. */
390      if ((packet_ptr -> nx_packet_prepend_ptr[0] == '\n') || (packet_ptr ->
391          nx_packet_prepend_ptr[1] == '\n'))
392      {
393          /* Clean up the packet. */
394          packet_ptr -> nx_packet_length = 0;
395          packet_ptr -> nx_packet_prepend_ptr = packet_ptr -> nx_packet_data_start +
396              NX_TCP_PACKET;
397          packet_ptr -> nx_packet_append_ptr = packet_ptr -> nx_packet_data_start +
398              NX_TCP_PACKET;
399
400          /* Build the next prompt. */
401          nx_packet_data_append(packet_ptr, "\r\nNETX> ", 8, &pool_server,
402              NX_NO_WAIT);
403
404          /* Send the packet to the client. */
405          status = nx_telnet_server_packet_send(server_ptr, logical_connection,
406              packet_ptr, TELNET_TIMEOUT);

```

```

405         if (status != NX_SUCCESS)
406         {
407             error_counter++;
408             nx_packet_release(packet_ptr);
409         }
410         return;
411     }
412
413     /* Pickup first character (usually only one from client). */
414     alpha = packet_ptr -> nx_packet_prepend_ptr[0];
415
416     /* Echo character. */
417     status = nx_telnet_server_packet_send(server_ptr, logical_connection,
418                                           packet_ptr, TELNET_TIMEOUT);
419
420     if (status != NX_SUCCESS)
421     {
422         error_counter++;
423         nx_packet_release(packet_ptr);
424     }
425
426     /* Check for a disconnection. */
427     if (alpha == 'q')
428     {
429         /* Initiate server disconnection. */
430         nx_telnet_server_disconnect(server_ptr, logical_connection);
431     }
432 }
433
434 /* This routine is called by the NetX Telnet Server when the client disconnects. */
435 void telnet_connection_end(NX_TELNET_SERVER *server_ptr, UINT logical_connection)
436 {
437     /* Cleanup any application specific connection or buffer information. */
438     return;
439 }
440
441
442

```

Figure 1.1 Example of Telnet use with NetX Duo

Configuration Options

There are several configuration options for building Telnet for NetX Duo. These #defines can be set by the application prior to inclusion of *nxd_telnet_server.h* and *nxd_telnet_client.h*.

Following is a list of all options, where each is described in detail:

Define	Meaning
NX_DISABLE_ERROR_CHECKING	Defined, this option removes the basic Telnet error checking. It is typically used after the application has been debugged.
NX_TELNET_MAX_CLIENTS	The maximum number of Telnet Clients supported by the Server thread. By default, this value is defined as 4 to specify a maximum of 4 clients at a time.
NX_TELNET_SERVER_PRIORITY	The priority of the Telnet Server thread. By default, this value is defined as 16 to specify priority 16.
NX_TELNET_TOS	Type of service required for the Telnet TCP requests. By default, this value is defined as NX_IP_NORMAL to indicate normal IP packet service.
NX_TELNET_FRAGMENT_OPTION	Fragment enable for Telnet TCP requests. By default, this value is NX_DONT_FRAGMENT to disable Telnet TCP fragmenting.
NX_TELNET_SERVER_WINDOW_SIZE	Server socket window size. By default, this value is 2048 bytes.
NX_TELNET_TIME_TO_LIVE	Specifies the number of routers this packet can pass before it

is discarded. The default value is set to 0x80.

NX_TELNET_SERVER_TIMEOUT

Specifies the number of ThreadX ticks that internal services will suspend for. The default value is set to 10 seconds.

NX_TELNET_ACTIVITY_TIMEOUT

Specifies the number of seconds that can elapse without any activity before the Server disconnects the Client connection. The default value is set to 600 seconds.

NX_TELNET_TIMEOUT_PERIOD

Specifies the number of seconds between checking for Client activity timeouts. The default value is set to 60 seconds.

NX_TELNET_SERVER_OPTION_DISABLE

Defined, Telnet option negotiation is disabled. By default this option is not defined.

NX_TELNET_SERVER_USER_CREATE_PACKET_POOL

If defined, the Telnet Server packet pool must be created externally. This is only meaningful if NX_TELNET_SERVER_OPTION_DISABLE is not defined. By default this option is not defined and the Telnet Server thread creates its own packet pool.

NX_TELNET_SERVER_PACKET_PAYLOAD

Defines the size of the packet payload created by the Telnet Server for option negotiation. Note that the Telnet Server only creates this packet pool if NX_TELNET_SERVER_OPTION_DISABLE is not defined (Telnet options are enabled).

The default value of this option is 300.

NX_TELNET_SERVER_PACKET_POOL_SIZE

Defines the size of the Telnet Server packet pool used for Telnet negotiations. Note that the Telnet Server only creates this packet pool if NX_TELNET_SERVER_OPTION_DISABLE is not defined (Telnet options are enabled). The default value of this option is 2048 (~5-6 packets).

Chapter 3

Description of Telnet Services

This chapter contains a description of all NetX Telnet services (listed below) in alphabetic order.

In the “Return Values” section in the following API descriptions, values in **BOLD** are not affected by the **NX_DISABLE_ERROR_CHECKING** define that is used to disable API error checking, while non-bold values are completely disabled.

`nx_telnet_client_connect`

Connect a Telnet Client with IPv4 address

`nxd_telnet_client_connect`

Connect an IPv6 Telnet Client with IPv6 address

`nx_telnet_client_create`

Create a Telnet Client

`nx_telnet_client_delete`

Delete a Telnet Client

`nx_telnet_client_disconnect`

Disconnect a Telnet Client

`nx_telnet_client_packet_receive`

Receive packet via Telnet Client

`nx_telnet_client_packet_send`

Send packet via Telnet Client

`nx_telnet_server_create`

Create a Telnet Server

`nx_telnet_server_delete`

Delete a Telnet Server

`nx_telnet_server_disconnect`

Disconnect a Telnet Client

`nx_telnet_server_get_open_connection_count`
Retrieve the number of open connections

`nx_telnet_server_packet_send`
Send packet through Client connection

`nx_telnet_server_packet_pool_set`
Set packet pool as Telnet Server packet pool

`nx_telnet_server_start`
Start a Telnet Server

`nx_telnet_server_stop`
Stop a Telnet Server

nx_telnet_client_connect

Connect a Telnet Client with IPv4 address

Prototype

```
UINT nx_telnet_client_connect(NX_TELNET_CLIENT *client_ptr,
                             ULONG server_ip, UINT server_port,
                             ULONG wait_option);
```

Description

This service attempts to connect the previously created Telnet Client instance to the Server at the specified IP and port using an IPv4 address for the Telnet Server. This service actually inserts the ULONG server IP address in an NXD_ADDRESS control block and sets the IP version to 4 before calling the *nxd_telnet_client_connect* service described below.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
server_ip	IPv4 Address of the Telnet Server.
server_port	TCP Port of Server (Telnet Server is port 23).
wait_option	Defines how long the service will wait for the Telnet Client connect. The wait options are defined as follows: timeout value (0x00000001 through 0xFFFFFFFFE) TX_WAIT_FOREVER (0xFFFFFFFF) Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request. Selecting a numeric value (1-0xFFFFFFFFE) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.

Return Values

NX_SUCCESS	(0x00)	Successful Client connect.
-------------------	--------	----------------------------

NX_TELNET_NOT_DISCONNECTED

	(0xF4)	Client already connected.
NX_PTR_ERROR	(0x07)	Invalid Client pointer.
NX_IP_ADDRESS_ERROR	(0x21)	Invalid IP address.
NX_CALLER_ERROR	(0x11)	Invalid caller of service.

Allowed From

Threads

Example

```

/* Connect the Telnet Client instance "my_client" to the Server at
   IP address 1.2.3.4 and port 23. */
status = nx_telnet_client_connect(&my_client, IP_ADDRESS(1,2,3,4), 23, 100);

/* If status is NX_SUCCESS the Telnet Client instance was successfully
   connected to the Telnet Server. */

```

nxd_telnet_client_connect

Connect a Telnet Client with IPv6 or IPv4 address

Prototype

```
UINT nxd_telnet_client_connect(NX_TELNET_CLIENT *client_ptr,
                              NXD_ADDRESS *server_ip_address,
                              UINT server_port,
                              ULONG wait_option);
```

Description

This service attempts to connect the previously created Telnet Client instance to the Server at the specified IP and port using the Telnet Server's IPv6 address. This service can take an IPv4 or an IPv6 address but must be contained in the NXD_ADDRESS variable *server_ip_address*.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
server_ip_address	IP Address of Server.
server_port	TCP Port of Server (Telnet Server is port 23).
wait_option	Defines how long the service will wait for the Telnet Client connect. The wait options are defined as follows: timeout value (0x00000001 through 0xFFFFFFFFE) TX_WAIT_FOREVER (0xFFFFFFFFF) Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request. Selecting a numeric value (1-0xFFFFFFFFE) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.

Return Values

NX_SUCCESS	(0x00)	Successful Client connect.
-------------------	--------	----------------------------

NX_TELNET_ERROR	(0xF0)	Client connect error.
NX_TELNET_NOT_DISCONNECTED	(0xF4)	Client already connected.
NX_PTR_ERROR	(0x07)	Invalid Client pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of service.
NX_TELNET_INVALID_PARAMETER	(0xF5)	Invalid non pointer input

Allowed From

Threads

Example

```
/* Connect the Telnet Client instance "my_client" to the Server at
   IPv6 address 20010db1:0:f101::101 and port 23. */
status = nxd_telnet_client_connect(&my_client, &server_ip_address, 23, 100);

/* If status is NX_SUCCESS the Telnet Client instance was successfully
   connected to the Telnet Server. */
```

nx_telnet_client_create

Create a Telnet Client

Prototype

```
UINT nx_telnet_client_create(NX_TELNET_CLIENT *client_ptr,
                             CHAR *client_name, NX_IP *ip_ptr, ULONG window_size);
```

Description

This service creates a Telnet Client instance.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
client_name	Name of Client instance.
ip_ptr	Pointer to IP instance.
window_size	Size of TCP receive window for this Client.

Return Values

NX_SUCCESS	(0x00)	Successful Client create.
NX_TELNET_ERROR	(0xF0)	Socket create error.
NX_PTR_ERROR	(0x07)	Invalid Client or IP pointer.

Allowed From

Initialization, Threads

Example

```
/* Create the Telnet Client instance "my_client" on the IP instance "ip_0". */
status = nx_telnet_client_create(&my_client, "My Telnet Client", &ip_0, 2048);

/* If status is NX_SUCCESS the Telnet Client instance was successfully
   created. */
```

nx_telnet_client_delete

Delete a Telnet Client

Prototype

```
UINT nx_telnet_client_delete(NX_TELNET_CLIENT *client_ptr);
```

Description

This service deletes a previously created Telnet Client instance.

Input Parameters

client_ptr Pointer to Telnet Client control block.

Return Values

NX_SUCCESS	(0x00)	Successful Client delete.
NX_TELNET_NOT_DISCONNECTED	(0xF4)	Client still connected.
NX_PTR_ERROR	(0x07)	Invalid Client pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service.

Allowed From

Threads

Example

```
/* Delete the Telnet Client instance "my_client". */
status = nx_telnet_client_delete(&my_client);

/* If status is NX_SUCCESS the Telnet Client instance was successfully
   deleted. */
```

nx_telnet_client_disconnect

Disconnect a Telnet Client

Prototype

```
UINT nx_telnet_client_disconnect(NX_TELNET_CLIENT *client_ptr,
                                ULONG wait_option);
```

Description

This service disconnects a previously connected Telnet Client instance.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
wait_option	Defines how long the service will wait for the Telnet Client disconnect. The wait options are defined as follows:
timeout value	(0x00000001 through 0xFFFFFFFF)
TX_WAIT_FOREVER	(0xFFFFFFFF)
	Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request.
	Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.

Return Values

NX_SUCCESS	(0x00)	Successful Client disconnect.
NX_TELNET_NOT_CONNECTED	(0xF3)	Client not connected.
NX_PTR_ERROR	(0x07)	Invalid Client pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service.

Allowed From

Threads

Example

```
/* Disconnect the Telnet Client instance "my_client". */
status = nx_telnet_client_disconnect(&my_client, 100);

/* If status is NX_SUCCESS the Telnet Client instance was successfully
   disconnected. */
```


nx_telnet_client_packet_receive

Receive packet via Telnet Client

Prototype

```
UINT nx_telnet_client_packet_receive(NX_TELNET_CLIENT *client_ptr,
                                     NX_PACKET **packet_ptr,
                                     ULONG wait_option);
```

Description

This service receives a packet from the previously connected Telnet Client instance.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
packet_ptr	Pointer to the destination for the received packet.
wait_option	Defines how long the service will wait for the Telnet Client packet receive. The wait options are defined as follows:

timeout value (0x00000001 through 0xFFFFFFFF)

TX_WAIT_FOREVER (0xFFFFFFFF)

Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request.

Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.

Return Values

NX_SUCCESS	(0x00)	Successful Client packet receive.
NX_PTR_ERROR	(0x07)	Invalid pointer input

NX_CALLER_ERROR	(0x11)	Invalid caller of service.
-----------------	--------	----------------------------

Allowed From

Threads

Example

```
/* Receive a packet from the Telnet Client instance "my_client". */
status = nx_telnet_client_packet_receive(&my_client, &my_packet, 100);

/* If status is NX_SUCCESS the "my_packet" pointer contains data received from
   the Telnet Client connection. */
```

nx_telnet_client_packet_send

Send packet via Telnet Client

Prototype

```
UINT nx_telnet_client_packet_send(NX_TELNET_CLIENT *client_ptr,
                                  NX_PACKET *packet_ptr,
                                  ULONG wait_option);
```

Description

This service sends a packet through the previously connected Telnet Client instance.

Input Parameters

client_ptr	Pointer to Telnet Client control block.
packet_ptr	Pointer to the packet to send.
wait_option	Defines how long the service will wait for the Telnet Client packet send. The wait options are defined as follows:

timeout value (0x00000001 through 0xFFFFFFFF)

TX_WAIT_FOREVER (0xFFFFFFFF)

Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request.

Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.

Return Values

NX_SUCCESS	(0x00)	Successful Client packet send.
NX_TELNET_ERROR	(0xF0)	Send packet failed – caller is responsible for releasing the packet.

NX_PTR_ERROR	(0x07)	Invalid pointer input
NX_CALLER_ERROR	(0x11)	Invalid caller of service.

Allowed From

Threads

Example

```
/* Send a packet via the Telnet Client instance "my_client". */
status = nx_telnet_client_packet_send(&my_client, my_packet, 100);

/* If status is NX_SUCCESS the packet was successfully sent. */
```

nx_telnet_server_create

Create a Telnet Server

Prototype

```
UINT nx_telnet_server_create(NX_TELNET_SERVER *server_ptr,
                             CHAR *server_name, NX_IP *ip_ptr,
                             VOID *stack_ptr, ULONG stack_size,
                             void (*new_connection)(struct NX_TELNET_SERVER_STRUCT
                                                       *telnet_server_ptr, UINT logical_connection),
                             void (*receive_data)(struct NX_TELNET_SERVER_STRUCT
                                                       *telnet_server_ptr, UINT logical_connection,
                                                       NX_PACKET *packet_ptr),
                             void (*connection_end)(struct NX_TELNET_SERVER_STRUCT
                                                       *telnet_server_ptr, UINT logical_connection));
```

Description

This service creates a Telnet Server instance on the specified IP instance.

Input Parameters

server_ptr	Pointer to Telnet Server control block.
server_name	Name of Telnet Server instance.
ip_ptr	Pointer to associated IP instance.
stack_ptr	Pointer to stack for the internal Server thread.
sack_size	Size of the stack, in bytes.
new_connection	Application callback routine function pointer. This routine is called whenever a new Telnet Client connection request is detected by the Server.
receive_data	Application callback routine function pointer. This routine is called whenever a new Telnet Client data is present on the connection. This routine is responsible for releasing the packet.
end_connection	Application callback routine function pointer. This routine is called whenever a Telnet Client connection is disconnected by the Client or the Client connection times out ("activity timeout" expires). The Server can also disconnect via the <i>nx_telnet_server_disconnect</i> service described below.

Return Values

NX_SUCCESS	(0x00)	Successful Server create.
NX_PTR_ERROR	(0x07)	Invalid Server, IP, stack, or application callback pointers.

Allowed From

Initialization, Threads

Example

```
/* Create a Telnet Server instance "my_server". */
status = nx_telnet_server_create(&my_server, "Telnet Server", &ip_0,
                                pointer, 2048, telnet_new_connection, telnet_receive_data,
                                telnet_connection_end);

/* If status is NX_SUCCESS the Telnet Server was successfully created. */
```

nx_telnet_server_delete

Delete a Telnet Server

Prototype

```
UINT nx_telnet_server_delete(NX_TELNET_SERVER *server_ptr);
```

Description

This service deletes a previously created Telnet Server instance.

Input Parameters

server_ptr Pointer to Telnet Server control block.

Return Values

NX_SUCCESS	(0x00)	Successful Server delete.
NX_PTR_ERROR	(0x07)	Invalid Server pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service.

Allowed From

Threads

Example

```
/* Delete the Telnet Server instance "my_server". */
status = nx_telnet_server_delete(&my_server);

/* If status is NX_SUCCESS the Telnet Server was successfully deleted. */
```

nx_telnet_server_disconnect

Disconnect a Telnet Client

Prototype

```
UINT nx_telnet_server_disconnect(NX_TELNET_SERVER *server_ptr,
                                UINT logical_connection);
```

Description

This service disconnects a previously connected Client on this Telnet Server instance. This routine is typically called from the application's receive data callback function in response to a condition detected in the data received.

Input Parameters

server_ptr Pointer to Telnet Server control block.

logical_connection Logical connection corresponding the Client connection on this Server. Valid value range from 0 through NX_TELNET_MAX_CLIENTS.

Return Values

NX_SUCCESS	(0x00)	Successful Server disconnect.
NX_TELNET_ERROR	(0xF0)	Server disconnect failed.
NX_OPTION_ERROR	(0x0A)	Invalid logical connection.
NX_PTR_ERROR	(0x07)	Invalid Server pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service.

Allowed From

Threads

Example

```
/* Disconnect the Telnet Client associated with logical connection 2 on
   the Telnet Server instance "my_server". */
status = nx_telnet_server_disconnect(&my_server, 2);

/* If status is NX_SUCCESS the Client on logical connection 2 was
   disconnected. */
```


nx_telnet_server_get_open_connection_count

Return number of currently open connections

Prototype

```
UINT nx_telnet_server_get_open_connection_count(NX_TELNET_SERVER
                                                *server_ptr, UINT *connection_count);
```

Description

This service returns the number of currently connected Telnet Clients.

Input Parameters

server_ptr Pointer to Telnet Server control block.

Connection_count
 Pointer to memory to store connection count

Return Values

NX_SUCCESS	(0x00)	Successful completion.
NX_PTR_ERROR	(0x07)	Invalid Server pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of this service.

Allowed From

Threads

Example

```
/* Get the number of Telnet Clients connected to the Server. */
status = nx_telnet_server_get_open_connection_count(&my_server, &conn_count);
/* If status is NX_SUCCESS the conn_count holds the number of open connections.
*/
```

nx_telnet_server_packet_send

Send packet through Client connection

Prototype

```
UINT nx_telnet_server_packet_send(NX_TELNET_SERVER *server_ptr,
                                  UINT logical_connection,
                                  NX_PACKET *packet_ptr,
                                  ULONG wait_option);
```

Description

This service sends a packet to the Client connection on this Telnet Server instance. This routine is typically called from the application's receive data callback function in response to a condition detected in the data received.

Input Parameters

server_ptr	Pointer to Telnet Server control block.
logical_connection	Logical connection corresponding the Client connection on this Server. Valid value range from 0 through NX_TELNET_MAX_CLIENTS.
packet_ptr	Pointer to the received packet.
wait_option	<p>Defines how long the service will wait for the Telnet Server packet send. The wait options are defined as follows:</p> <p>timeout value (0x00000001 through 0xFFFFFFFF)</p> <p>TX_WAIT_FOREVER (0xFFFFFFFF)</p> <p>Selecting TX_WAIT_FOREVER causes the calling thread to suspend indefinitely until the Telnet Server responds to the request.</p> <p>Selecting a numeric value (1-0xFFFFFFFF) specifies the maximum number of timer-ticks to stay suspended while waiting for the Telnet Server response.</p>

Return Values

NX_SUCCESS	(0x00)	Successful packet send.
NX_TELNET_FAILED	(0xF2)	TCP socket send failed.
NX_OPTION_ERROR	(0x0A)	Invalid logical connection.
NX_PTR_ERROR	(0x07)	Invalid Server pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of service.

Allowed From

Threads

Example

```
/* Send a packet to the Telnet Client associated with logical connection 2 on
   the Telnet Server instance "my_server". */
status = nx_telnet_server_packet_send(&my_server, 2, my_packet, 100);

/* If status is NX_SUCCESS the packet was sent to the Client on logical
   connection 2. */
```

nx_telnet_server_packet_pool_set

Set previously created packet pool as Telnet Server pool

Prototype

```
UINT nx_telnet_server_packet_pool_set(NX_TELNET_SERVER *server_ptr,
                                       NX_PACKET_POOL *packet_pool_ptr);
```

Description

This service sets a previously created packet pool as the Telnet Server packet pool if `NX_TELNET_SERVER_USER_CREATE_PACKET_POOL` is defined. It also requires that `NX_TELNET_SERVER_OPTION_DISABLE` not be defined such that the Telnet Server needs a packet pool to transmit Telnet options to Telnet clients.

This permits applications to create the packet pool in different memory e.g. no cache memory, than the Telnet Server stack. Note that if this function does not check if the Telnet Server packet pool is already set. If it is called on a non null Telnet Server packet pool pointer, it will overwrite it and replace the existing packet pool with packet pool pointed to by the input pointer.

Input Parameters

server_ptr Pointer to Telnet Server control block

packet_pool_ptr Pointer to previously created packet pool

Return Values

NX_SUCCESS	(0x00)	Successfully set pool.
NX_PTR_ERROR	(0x07)	Invalid Server pointer.

Allowed From

Init, Threads

Example

```
status = nx_packet_pool_create(&telnet_server_packet_pool, "Telnet Server Packet
                               Pool", telnet_server_pool_area, 600*10);

/* Set the packet pool as the Telnet Server packet pool. */
status = nx_telnet_server_packet_pool_set(&my_server,
                                           &telnet_server_packet_pool);

/* If status is NX_SUCCESS the packet pool is set as Telnet Server pool. */
```

nx_telnet_server_start

Start a Telnet Server

Prototype

```
UINT nx_telnet_server_start(NX_TELNET_SERVER *server_ptr);
```

Description

This service starts a previously created Telnet Server instance.

Input Parameters

server_ptr Pointer to Telnet Server control block.

Return Values

NX_SUCCESS	(0x00)	Successfully started.
NX_TELNET_NO_PACKET_POOL	(0xF6)	No packet pool set
NX_PTR_ERROR	(0x07)	Invalid Server pointer.

Allowed From

Initialization, Threads

Example

```
/* Start the Telnet Server instance "my_server". */
status = nx_telnet_server_start(&my_server);

/* If status is NX_SUCCESS the Server was started. */
```

nx_telnet_server_stop

Stop a Telnet Server

Prototype

```
UINT nx_telnet_server_stop(NX_TELNET_SERVER *server_ptr);
```

Description

This service stops a previously created and started Telnet Server instance.

Input Parameters

server_ptr Pointer to Telnet Server control block.

Return Values

NX_SUCCESS	(0x00)	Successfully stopped
NX_PTR_ERROR	(0x07)	Invalid Server pointer.
NX_CALLER_ERROR	(0x11)	Invalid caller of service

Allowed From

Threads

Example

```
/* Stop the Telnet Server instance "my_server". */
status = nx_telnet_server_stop(&my_server);

/* If status is NX_SUCCESS the Server was stopped. */
```

Telnet Protocol (Telnet) for NetX Duo User Guide

Publication Date: Rev.5.12 Nov 8, 2018

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc.

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.

Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3

Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K

Tel: +44-1628-651-700

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany

Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China

Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China

Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan

Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949

Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia

Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India

Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea

Tel: +82-2-558-3737, Fax: +82-2-558-5338

Telnet Protocol (Telnet) for NetX Duo User Guide