

FADR-4 User Guide

MIDI Channel Edit

- HOLD button until display changes then RELEASE button
- Display will show current Midi Channel (Example “**c01**”)
- MOVE any fader to change channel number
- PRESS button to SAVE and EXIT

MIDI CC Edit

DISPLAY Current CC Numbers

- PRESS and RELEASE button
- Display will toggle between Fader Number and CC Number
- PRESS and RELEASE button again to see next fader.
- Mode will EXIT after 8 Seconds of inactivity

EDIT CC Numbers

- PRESS and RELEASE button until desired fader is displayed
- HOLD Button until display FLASHES
- MOVE fader to select CC number (keep holding button)
- RELEASE Button to SAVE and EXIT to CC DISPLAY Mode