

## ACME Widget Pro 3000 User Manual

Welcome to your new ACME Widget Pro 3000! This manual will guide you through setup, operation, and troubleshooting.

### Table of Contents:

- Page 2: Getting Started
- Page 3: Basic Operations
- Page 4: Troubleshooting

## Getting Started

### Initial Setup:

1. Remove the Widget Pro from packaging
2. Connect the power cable to a standard outlet
3. Press the green POWER button for 3 seconds
4. Wait for the blue LED to stop blinking

### Account Setup:

To create your account, visit [setup.acme.com](https://setup.acme.com) and enter the serial number found on the bottom of your device.

### Default Settings:

- WiFi: Disabled (enable in Settings > Network)
- Volume: 50%
- Auto-sleep: 30 minutes

## Basic Operations

### Password Reset:

To reset your password:

1. Go to Settings > Security > Password
2. Click "Forgot Password"
3. Enter your registered email address
4. Check your email for a reset link
5. Create a new password (minimum 8 characters)

### Volume Control:

Use the side buttons (+/-) to adjust volume, or say "Hey Widget, volume up/down" for voice control.

### WiFi Connection:

1. Go to Settings > Network > WiFi
2. Select your network from the list
3. Enter your WiFi password
4. Press Connect

## Troubleshooting

Device won't turn on:

- Ensure power cable is securely connected
- Try a different outlet
- Hold POWER button for 10 seconds to force restart

WiFi connection issues:

- Ensure you're within range of your router
- Restart your router and the Widget Pro
- Check if other devices can connect to WiFi

Blue light keeps blinking:

This indicates the device is updating. Do not unplug during updates.

Updates typically complete within 5-10 minutes.

Factory Reset:

To restore factory settings, hold POWER + VOLUME DOWN for 15 seconds.

Warning: This will erase all personal data and settings.

Support Contact:

Email: [support@acme.com](mailto:support@acme.com)

Phone: 1-800-ACME-HELP