

### **5 big dots: Ved vanlig oppstart**

1. Blinking when loader is running. Green when loader finished.
2. Blinking when kernel modules are loaded from ramfs and root filesystem is mounted. Green just after kernel switch to root filesystem.
3. Blinking when modules from root filesystem are being loaded. Green when modules are loaded and inferno is starting.
4. Blinking when inferno is starting. Green when inferno is started.
5. Blinking when mozilla is starting. Green when mozilla is started.

### **10 small dots (Ved ny SW): Denne vil ta ca 10 min**

1. Blinking when loader is started. Green, when next dot is activated.
  2. Blinking when loader is waiting for user request (e.g. force download code). Green when next dot is activated.
  3. Blinking when initializing download is started. Green when next dot is activated.
  4. Blinking when retrieving download header. Green when verifying download version. Blinking red when: download header not found, download header invalid, invalid hardware version, invalid customer id. Red when downloaded software version is invalid.
  5. Blinking when verifying download target. Green when next dot is activated. Blinking red when invalid download target.
  6. Blinking when collecting download. Green when next dot is activated.
  7. Blinking when processing download data. Green when download data processed. Blinking red when invalid download data.
  8. Blinking when writing download. Green when next dot is activated. Blinking red when storage error.
  9. Blinking when verifying write correctness. Green when next dot is activated.
  10. Blinking when finalizing download. Green when download finalized without error.
- 10 small red dots when software download failed.