

ITE Demo AP User Guide v.2.5

Eric Su

2016/11/03



Outline

❖ Preparation

❖ Operations

- Load Image from file and send to IT8951
- Display
- Firmware upgrade steps

Preparation

❖ Hardware

- IT8951 Demo Board
- Micro SD Card
- USB Cable


❖ Software

- ITE Demo AP
- Firmware code
 - If you need to upgrade FW

Beginning


❖ Please connect IT8951 to your PC via USB Cable

- The IT8951 will be power on when USB cable is plugged
- There will be a mass storage detected
 - Please Click Cancel to ignore it.

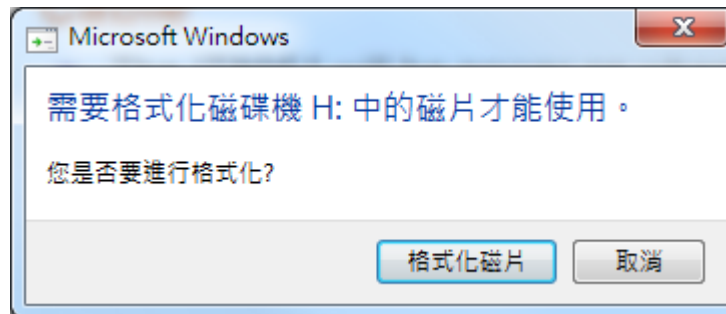

ITE Demo AP overview

❖ Open AP

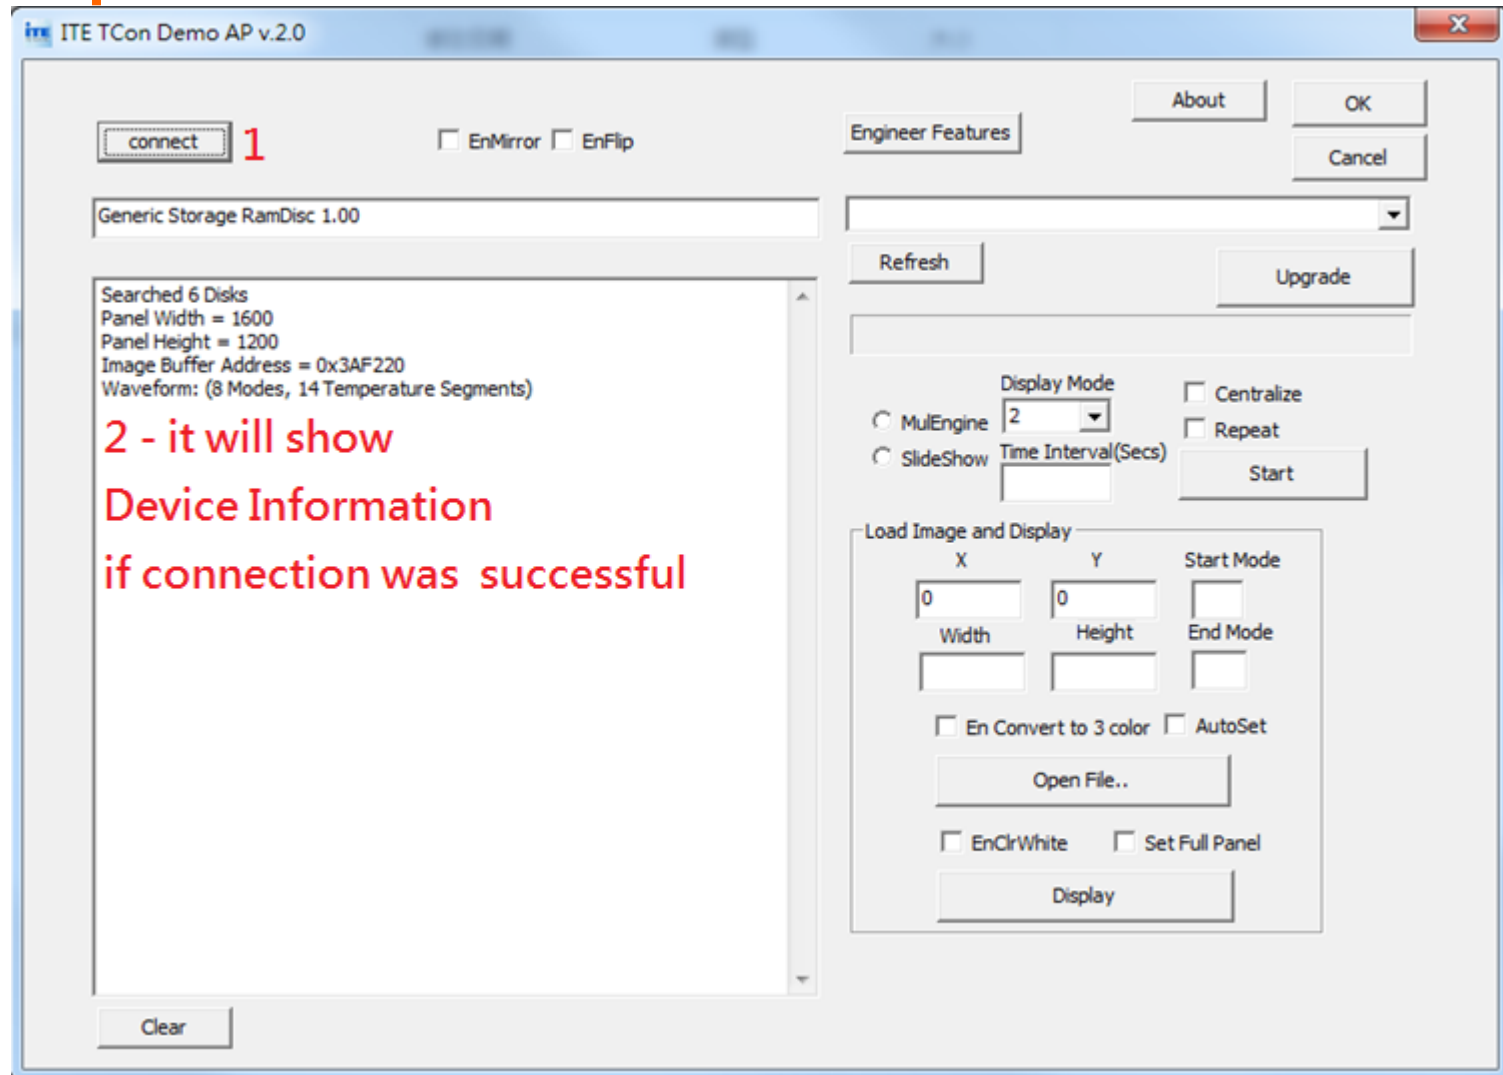

Load Image from File(0)

❖ Please set (x,y) first

- Default (0,0)
- Or you can set (x,y) before you opening image file

Display Mode: ☐ MulEngine ☐ SlideShow ☐ Centralize ☐ Repeat

Time Interval(Secs):

Load Image and Display

X: Y: Start Mode:

Width: Height: End Mode:



☐ En Convert to 3 color ☐ AutoSet

☐ EnClrWhite ☐ Set Full Panel

Load Image from File(1)

❖ Select Image file


- it supports *.jpg and *.bmp

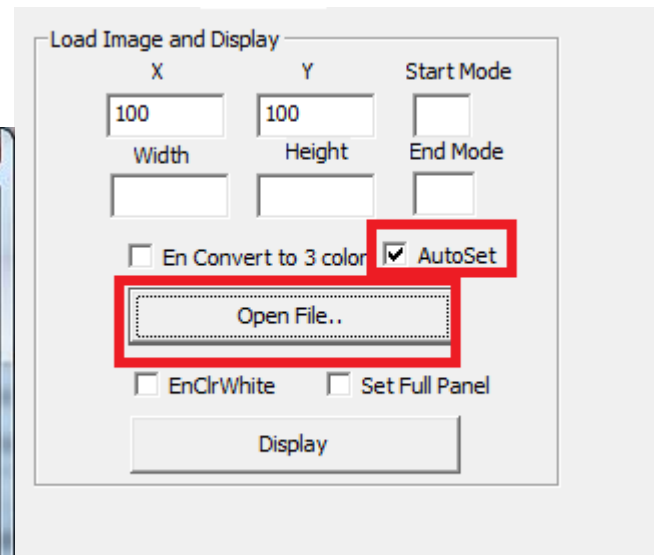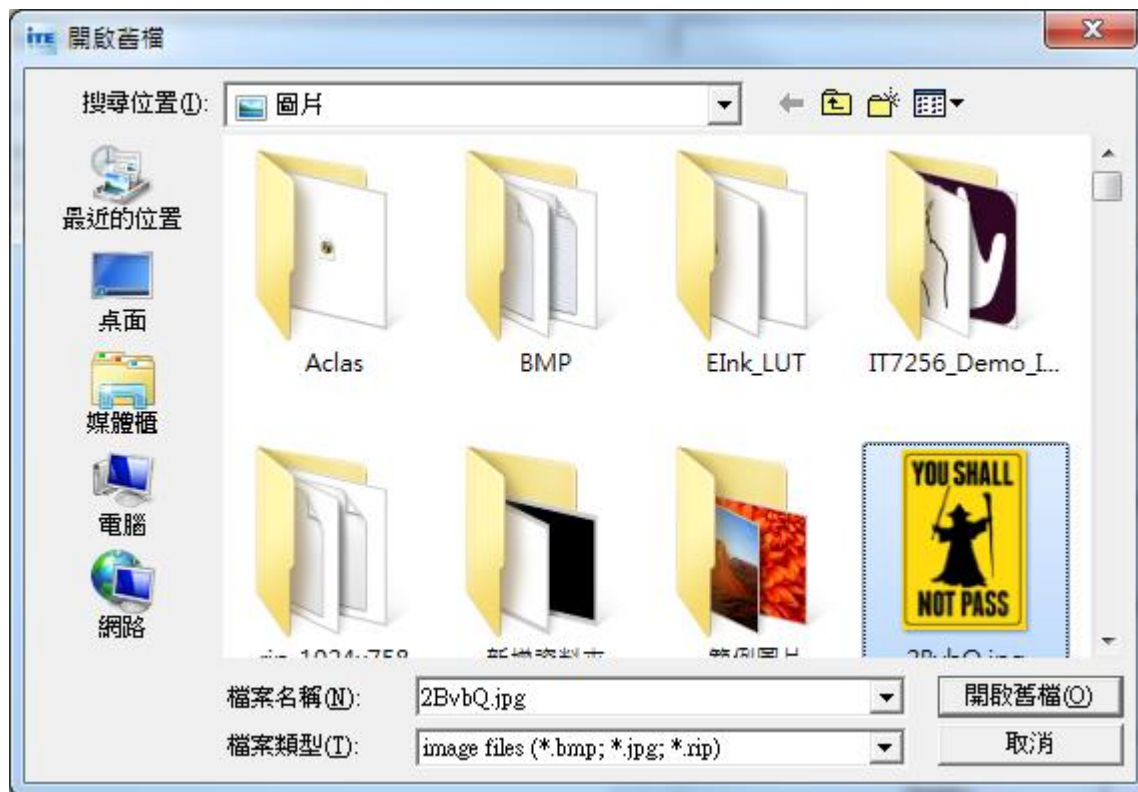

Load Image from File(2)

❖ Load Image file and send to IT8951

- ITE demo AP will convert to Raw data from selected image file And then send to IT8951
- The image (w,h) will be set which depends on selected image size if AutoSet ticked

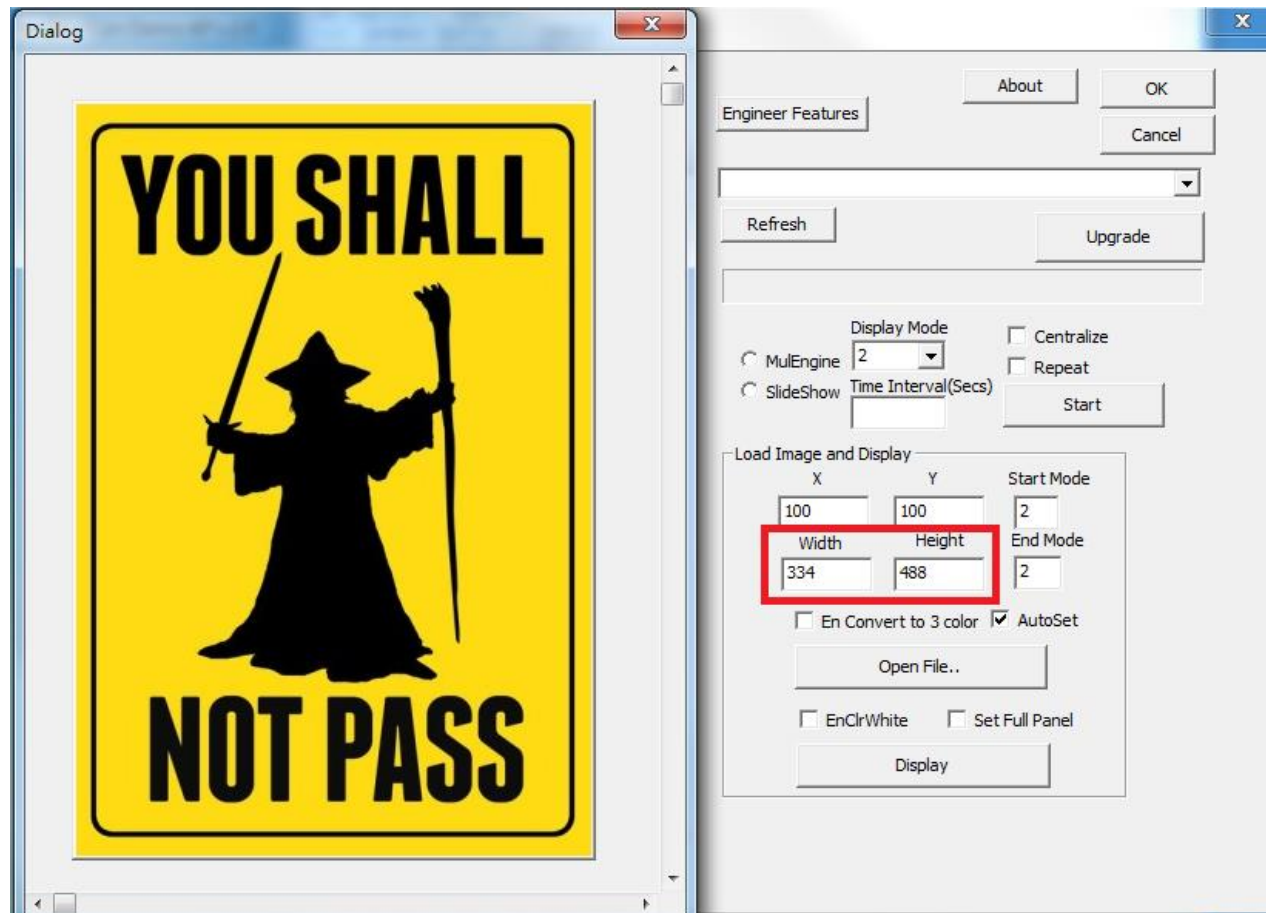

❖ Send Display Command to IT8951 to perform Display Flow

- The EPD Panel will be updated after clicking Display
- Display Mode
 - It depends on waveform definition
 - Mode 0 for clear all white
 - Mode 2 for display 16 gray scale
 - Start mode -> End Mode
 - If start mode is equal to end mode -> it means 1 Display mode only
 - e.g. - Start mode = 2 , End Mode = 2
=> Display mode = 2
 - Otherwise , it Display from **Start mode ~ End Mode**
 - e.g. Start mode = 0, End Mode = 1
=> Display Mode 0 => Display Mode 1

Load Image and Display

X	Y	Start Mode
100	100	2

Width	Height	End Mode
334	488	2

☐ En Convert to 3 color ☒ AutoSet

Open File..


☐ EnClrWhite ☐ Set Full Panel

Display

Other features

❖ Slide Show




- Please set display mode first
- Tick Centralized
- Please put the your Image files which you want to show in Path
 - **\\SlideShowImages**
 - create it if you have no this named folder
- Click Start

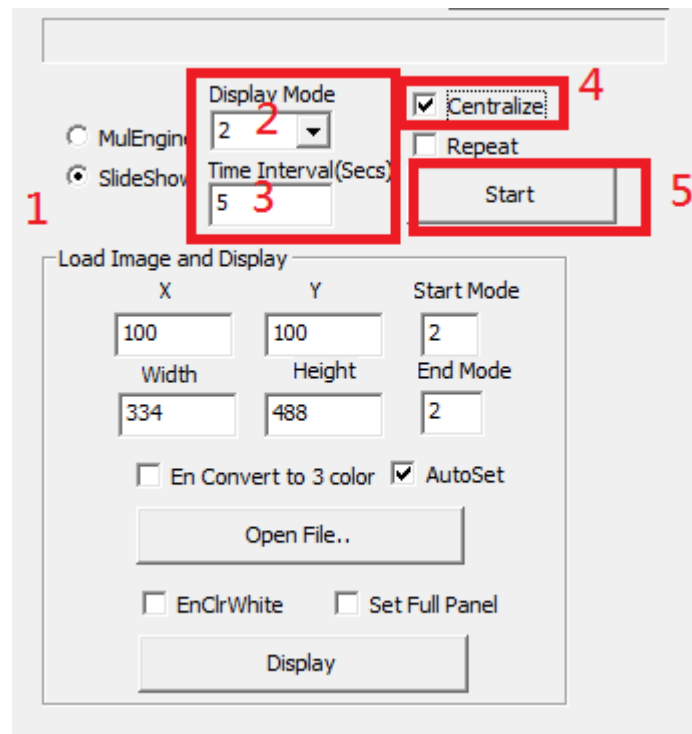

FW Upgrade(*.bin)

❖ Steps

- ❖ Please put your Firmware xxx.bin on the same current Path with ITE DemoAP
 - ❖ **Connect** (if not connected)
 - 1. Select firmware(*.bin) Refresh
 - 2. Select the firmware from combo list for upgrade
 - 3. Upgrade
 - 4. Check FW Upgrade result

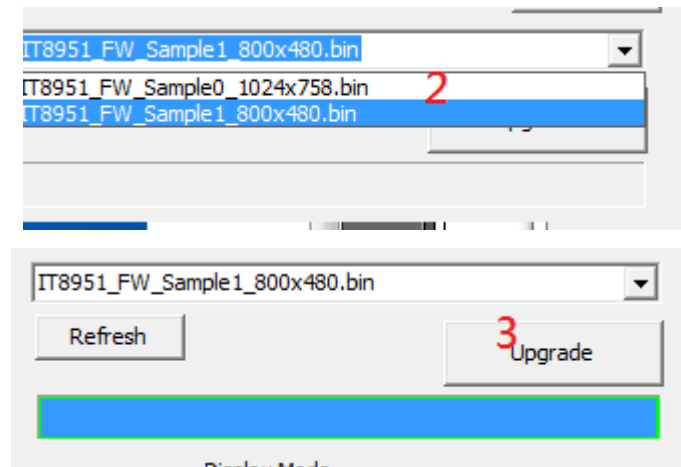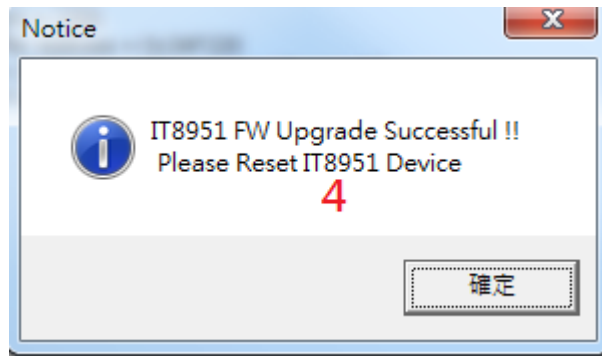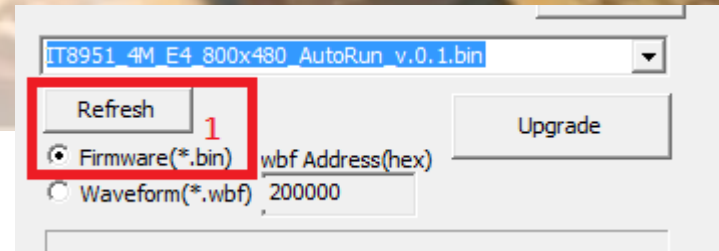

Waveform Upgrade (*.wbf)

Create Corporate and Shareholders' Benefits

❖ Steps

- ❖ Please put your waveform file xxx.wbf on the same current Path with ITE DemoAP
 - ❖ **Connect** (if not connected)
 - 1. Select Waveform
 - 2. Refresh
 - 3. Select the wavefom file(*.wbf) from combo list for upgrade
 - 4. Upgrade
 - 5. Check wbf Upgrade result

