## **Bluetooth Log**

- Enable Developer options: Open Settings -> System -> About phone -> Click "Build number" several times until to be a developer.
- 2. Enable HCI log: Open Settings -> System -> Developer options -> turn "Enable Bluetooth HCI snoop log" switch on.
- 3、 Please input "\*#\*#07206633#\*#\*" command. ( Picture1)
- 4、 Select the menu " **MTKLOG** ". (Picture 2).
- 5. Click the icon " "(Picture 2), swipe up and enter Open Bluetooth log Tool(Picture 3)-> turn Bluetooth Log switch on. Then Open Bluetooth log Tool(Picture 3)-> More Settings
  -> Firmware Test Situation: -> choose Debug(Picture 4)

Ø         0         ▲         ♥         4G <sup>™</sup> 18% □         10           +2         Create new contact         ■         ■         0         ■         ■         0         ■	22 ● O ●		■ I I I 4G <sup>™</sup> 52% = 2:38 More Settings
Add to a contact      Send SMS	0.00.00	ModemLog	Bluetooth Log Host Test Situation: SQC
: *#*#07206633#*# (	0.00.00	NetworkLog	Firmware Test Situation
1 2 3	<ul> <li>MobileLog stopped</li> <li>ModemLog stopped</li> </ul>	GPSLog	OFF
4 5 6	NetworkLog stopped	ADVANCED SETTINGS	⊖ sqc
7 8 9 PQRS TUV WXYZ	GPSLog stopped	Enable Tag Log Enable or disable tag log function	Debug
* 0, #	Log path: /storage/emulated/0/mtklog/	Log storage location Phone storage	go to MtkLogger home screen
<b>C</b>	7562M Used 46022M Free	Open Bluetooth log Tool Enter Bluetooth setting UI	Open EngineerMode Speech VM: Hardware Testing > Audio > Speech Logger
Picture 1	Picture 2	Picture 3	Picture 4
			0

Click the icon " ", the old mtklog will be deleted. Click the icon " ", now MTKLogger is running and MobileLog & ModemLog & NetworkLog & GPSLog are recording. (Picture 2)

4、 Turn off Bluetooth and then turn on Bluetooth. When the problem recurs, first longpress the power key and the volume down key at the same time to get a Screenshot, then enter

EngineerMode and click " **•** " to stop MTKLogger . (Picture 2)

5. Enter the **file Manager**, You can find the folder named "mtklog", send this folder and the Screenshot to our company (tech-support@unihertz.com).



APPENDIX: How to increase mtklog size? How to change the storage of mtklog?

Click the icon " ( Picture 2), then select the menu "**MobileLog**" (Picture 5), First, choose " **Limit Current Log Size**" (Picture 6), Increase the number from 500 to 5000; Second, choose " **Limit Total Log Size**", Increase the number from 1000 to 8000;

