



RL78 1wire UART Adaptor

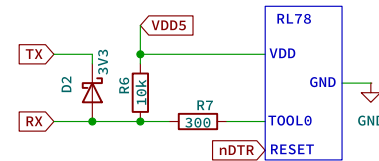

It allows 5V input.

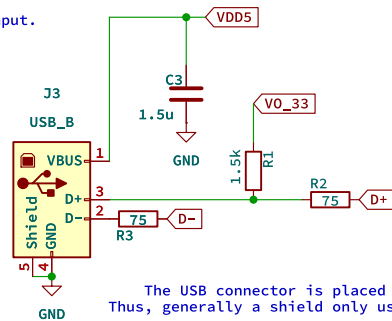

The USB connector is placed on this side.  
Thus, generally a shield only use pin #1-5, 25-28.