



**CLOCK**  
Clock output is normalled to sequencer run. Each clock pulse advances the sequencer one step.

**PLAY/PAUSE**  
Starts or pauses the clock running. Pressing the button the first time begins the clock, pressing a second time pauses it where it is. Pressing again resumes the clock running at the next clock pulse.

NAME	Bridge Sysem On-Ramp
DATE	10-28-2023
REVISION	2