

Arduino Controlled Radio Default Pinout

Function	Connector Pins		Input
	Arduino Pin		
	D13 Trigger		
Tuning	D10 Input	27	
Volume	A0	25	Top of control to +5, bottom to GND, cente
			Top of control to +5, bottom to GND,
			wiper to input for 2 band, use voltage
Band	A1	23	divider for multiple bands

+5 pins are 18,22,26

GND pins are 2,4,5,6,10,12,14,16,20,24,28,30

Odd pins are nearest board edge

r to input