

Astrid

Steering compass, 1974

Magnetic to Compass: +W (or -W) deviation.
Compass to Magnetic: +E (or -W) deviation. May require second round correction^{*}

To convert directly between Magnetic, Compass and True bearings download
a conversion rose from http://www.omnirose.com/deviation_tables/30/

