
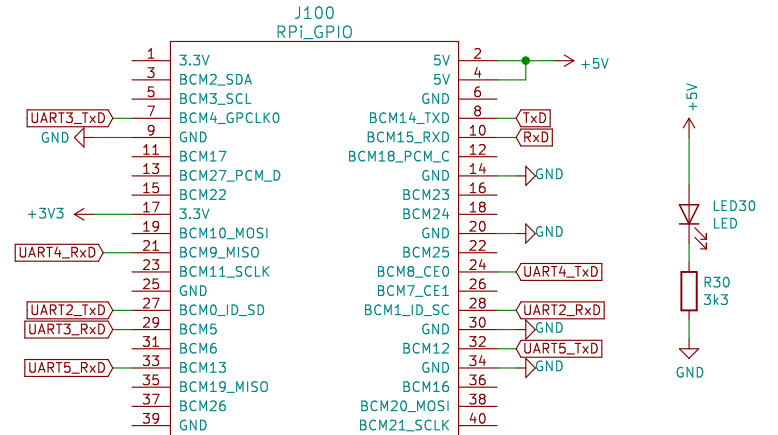


The DC/DC converter can be used for external voltages from 9V to 36V.

To use 5V from an external supply directly, the DC/DC parts shouldn't be placed and JP3 must be closed. D31 and D32 should be replaced by OR or solder bridge.

D30 should be placed also when using 5V externally.

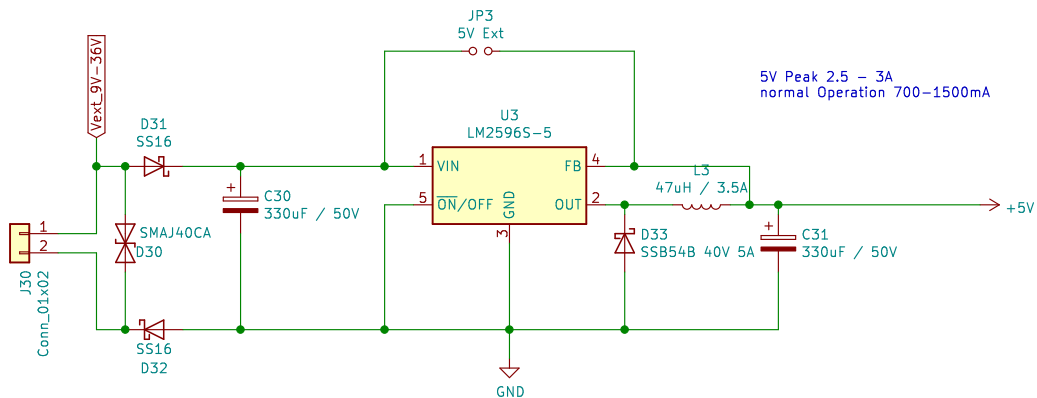

<https://github.com/OpenKNX/OpenKNX/wiki/OpenKNX-RasPi-HAT>

by SirSydom <com@sirsydom.de>

OpenKNX

Sheet: /

File: RasPi-HAT.sch

Title: RasPi HAT

Size: A4 Date: 2022-06-21

KiCad E.D.A. kicad (5.1.4)-1

Rev: V00.10

Id: 1/1