

# Make your own software with DasHard2006.dll and our Intelligent Dmx Interface

## Overview

Our DasHard2006.dll is a 32 bit Windows DLL (Dynamic Link Library). and works on Windows ME, 2000, XP; VISTA and SEVEN. It has been tested on Visual C++.

## Files

The required files are:

- DasHard.h
- DasHard2006.dll

## Function prototypes

The DasHard2006.dll contains only one function :

```
int DasUsbCommand( int command, int param, unsigned char *bloc );
```

The first parameter <command> defines the thing to do :

command	explanation	param	bloc	return value	Interfaces
DHC_INIT	Initialisation of the DLL	not used	not used	If the function succeeds (positive values), the return value is the version of the DLL	Siudi5 Siudi6
DHC_EXIT	Closes the dll and free memory prior to application exit	not used	not used		Siudi5 Siudi6
DHC_OPEN	Enables to open the communication with the interface	not used	not used	DHE_OK if the function succeeds.	Siudi5 Siudi6
DHC_CLOSE	Enables to stop the communication with the interface	not used	not used	DHE_OK If the function succeeds. DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the function fails.	Siudi5 Siudi6

DHC_DMXOUT	Enables to send a DMX block through the first DMX universe	Specifies the size, in bytes, of the DMX block of memory to send. The normal value is 512	<b>[out]</b> Pointer to the DMX block of memory to send	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5 Siudi6
DHC_DMX2OUT	Enables to send a DMX block through the second DMX universe	Specifies the size, in bytes, of the DMX block of memory to send. The normal value is 512	<b>[out]</b> Pointer to the DMX block of memory to send	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_DMX3OUT	Enables to send a DMX block through the third DMX universe	Specifies the size, in bytes, of the DMX block of memory to send. The normal value is 512	<b>[out]</b> Pointer to the DMX block of memory to send	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi7A
DHC_DMXOUTOFF	Enables to clean the DMX output (force all levels to 0)	not used	not used	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5 Siudi6
DHC_DMXIN	Enables to read the DMX block from the first DMX universe.	Specifies the size, in bytes, of the DMX block of memory to read. The normal value is 512	<b>[In]</b> Pointer to the DMX block of memory to read.	Number of bytes read.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_DMX2IN	Enables to read the DMX block from the second DMX universe.	Specifies the size, in bytes, of the DMX block of memory to read. The normal value is 512	<b>[In]</b> Pointer to the DMX block of memory to read.	Number of bytes read.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_DMX3IN	Enables to read the DMX block from the third DMX universe.	Specifies the size, in bytes, of the DMX block of memory to read. The normal value is 512	<b>[In]</b> Pointer to the DMX block of memory to read.	Number of bytes read.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C

DHC_DMXSCODE	Enables to change the start code	Value of the Start Code	not used	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5A Siudi5C
DHC_DMXPENABLE	Enables to switch the first DMX universe from Input to Output	1 for change IN -> OUT 0 for change OUT -> IN	not used	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_DMXP2ENABLE	Enables to switch the second DMX universe from Input to Output	1 for change IN -> OUT 0 for change OUT -> IN	not used	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_DMXP3ENABLE	Enables to switch the third DMX universe from Input to Output	1 for change IN -> OUT 0 for change OUT -> IN	not used	DHE_OK If the function succeeds DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the communication fails.	Siudi5A Siudi5C Siudi7A Siudi8A Siudi8C
DHC_PORTREAD	Enables to read the state of the 8 ports and the Next/Previous buttons	not used	not used	DHE_ERROR_NOTOPEN If the interface is not open. If the function succeeds, the return value is from 0 to 1023 (10bits), Bit0=NEXT, Bit1=PREVIOUS, Bit2-9=State of 8ports	Siudi5A Siudi5C
DHC_WRITEMEMORY	Enables to write the stand alone memory.	Specifies the size, in bytes, of the block of memory to write.	[out] Pointer to the block of memory	DHE_OK If the function succeeds. DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the function fails.	Siudi5A Siudi6A
DHC_READMEMORY	Enables to read the stand alone memory.	Specifies the size, in bytes, of the block of memory to read.	[in] Pointer to the block of memory	DHE_OK If the function succeeds. DHE_ERROR_NOTOPEN If the interface is not open. DHE_ERROR_COMMAND If the	Siudi5A Siudi6A

				function fails.	
DHC_SIZEMEMORY	Enables to know the size of the stand alone memory.	not used	not used	DHE_ERROR_NOTOPEN EN If the interface is not open. return the size, in bytes, of the stand alone memory.	Siudi5A Siudi6A
DHC_VERSION	Enables to know the firmware version	not used	not used	return the firmware version	Siudi5 Siudi6
DHC_SERIAL	Enables to know the serial number	not used	not used	return the serial number	Siudi5 Siudi6

#### Remarks:

- All the constants DHC\_OPEN, DHC\_CLOSE, DHE\_OK .... are defined in the "\_DasHard.h" include file.

You can use up to 10 interfaces simultaneously.

To do this, just add a value in the <command> parameter :

- add 100 (DHC\_SIUDI1) if you want to use the interface #2
- add 200 (2 \* DHC\_SIUDI1) if you want to use the interface #3 ...

Example: DasUsbCommand( DHC\_SIUDI1+DHC\_OPEN, 0, 0 ) opens the interface #2

## Example of code using our DLL - C++ style

***Opening the interface when your application is starting:***

```

int interfaceOpen;
int numberofInterface;
unsigned char dmxBlock[512];

DasUsbCommand(DHC_INIT, 0, NULL);
interfaceOpen = DasUsbCommand(DHC_OPEN, 0, 0);
if (interface_open>0){
    for(int i=0;i<512;i++)
        dmxblock[i] = 0;
}
}
```

### ***Sending the DMX signal :***

```
if (interface_open>0){  
    DasUsbCommand(DHC_DMXOUT, 512, dmxblock);  
}
```

Note :

- After 5 seconds without communication, the interface go in stand alone mode. This is why we propose to **write the dmx signal all the time** to force a communication.

### ***Closing the interface when your application is stopping:***

```
if (interface_open>0)  
    DasUsbCommand(DHC_CLOSE,0,0);  
DasUsbCommand(DHC_EXIT,0, NULL);
```

## **Data format of the stand alone memory**

```
8bits      set to 2
8bits      set to 5
8bits      first channel           0=1 1=3 ... 255=511
8bits      [c]: number of channels   0=2 1=4 ... 255=512
8bits      set to 0
8bits      set to 0
16bits     [s]: number of scenes
8bits      [p]: number of ports       (to trigger scenes with external ports)
8bits      [n]: number of time trigger (to trigger scenes with internal clock)
16bits     [t]: size of time trigger bloc data
[p]x 16bits port trigger bloc data: each 16bits contains scene number(0 for nothing)
          ex: port1 (=address1) for scene2 [0]->2;
              port4 (=address8) for scene3 [8]->3.
[t]x 8bits  time trigger bloc data: contains the trigger data, the scene number
          ([t] = [n] x XXbits, XX = [32bits..128bits], [n] = [0..20])
[c]x 8bits  channels settings: bit8 (0 for CUT,1 for FADE), bit7 (1 for DIMMER on)
[s]x 16bits  Address/2 of each scene: [0]-> address/2 of scene1..., [1]-> address/2
of scene2
```

## SCENE 1

```
16bits      <number of steps> = [p]
8bits       <number of loops, set 0 to loop always>
8bits       <scene settings, bit0=AUTONEXT, bit1=JUMP, bit2=FADE>
16bits      <index of next scene if AUTONEXT>
STEP1 16bits      <fade time step1>
        16bits      <wait time step1>
        [c] x 8bits <DMX levels step1>
STEP2 16bits      <fade time step2>
        16bits      <wait time step2>
        [c] x 8bits <DMX levels step2>
STEP3 . . . . .
```

## *SCENE 2*

• • •

### Note :

For 16 bits number, high byte is the first.

**JUMP** parameter for a scene means that this scene cannot be called with next and previous buttons.

## **Time trigger bloc data (Only for Siudi5A interfaces) :**

20 scenes can be triggered by the internal clock.

There are 3 types of trigger :

- Appointed time
  - Repeating time slot
  - Unsettled time (not yet implemented)

Each trigger can have different options:

- triggering everyday
  - triggering only one day (dd/mm)
  - triggering several days (from dd/mm to dd/mm)

## Data format of each type of triggering

The first 8 bytes define the type of trigger and the options :

- ED: triggering everyday . Parameters « day 1 » and « day 2 » are not used.
- OD: triggering only the « day 1 ». Parameter « day 2 » is not used.
- FTD: triggering from « day 1 » to « day 2 » .
- SS: Unsettled time (not yet implemented)
- OH: triggering at « hour 1 ». Parameter « hour 2 » is not used.
- FTT: triggering from « hour 1 » to « hour 2 » every « hour 3 » .

HOUR =  $hour * 60 + minute$  (16 bits)

DAY =  $month * 100 + day$  (16 bits)

If  $month$  is set to 0, it means all month.

If  $day$  is set to 32, it means sunday.

If  $day$  is set to 33, it means monday.

If  $day$  is set to 34, it means tuesday

SCENE is 8 bits

 
For DAY and HOUR is coded *high byte is the first*

### Case 1 or trigger everyday at a specified time:




ED = 1, OD = 0, FTD = 0, SS = 0, OH = 1, FTT = 0 (0x42).

### Case 2 or trigger the « day 1 » at « hour 1 »:



ED = 0, OD = 1, FTD = 0, SS = 0, OH = 1, FTT = 0 (0x22).

### Case 3 or trigger from « day 1 » to « day 2 » at « hour 1 »:

 


ED = 0, OD = 0, FTD = 1, SS = 0, OH = 1, FTT = 0 (0x12)

**Case 4 or trigger everyday from « hour 1 » to « hour 2 » every « hour 3 »:**




ED = 1, OD = 0, FTD = 0, SS = 0, OH = 0, FTT = 1 (0x41)

**Case 5 or trigger the « day 1 », from « hour 1 » to « hour 2 » every « hour 3 »:**

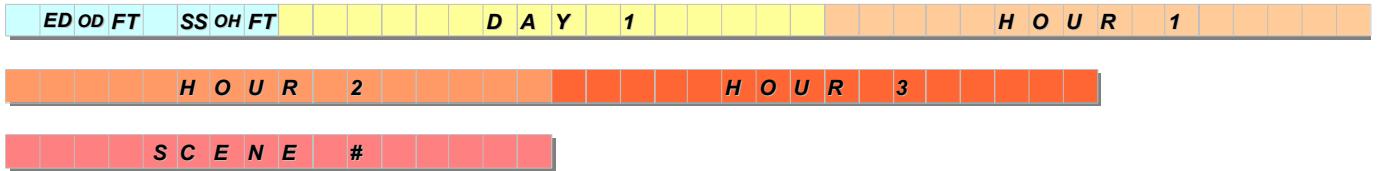

ED = 0, OD = 1, FTD = 0, SS = 0, OH = 0, FTT = 1 (0x21)

**Case 6 or trigger from « day 1 » to « day 2 », from « hour 1 » to « hour 2 » every « hour 3 »:**

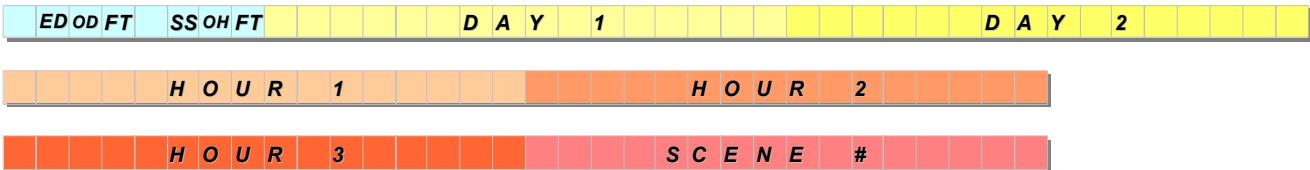

ED = 0, OD = 0, FTD = 1, SS = 0, OH = 0, FTT = 1 (0x11)

**Case 7:**

Not yet implemented

**Case 8:**

Not yet implemented

**Case 9:**

Not yet implemented

Comments on version 110:

First official release

Comments on version 130:

Comments on version 131:

Siudi6 management

New functions added and some minor bugs corrected.

Comments on version 136:

Firmware Siudi6A v1.15 and Siudi6C v1.14 supported.

Some minor bugs corrected.

Comments on version 137:

Siudi7 and Siudi8 management.

Please report any problems to [julien@nicolaudie.com](mailto:julien@nicolaudie.com)

Copyright (c) Nicolaudie Europe, 1998-2007

[www.nicolaudie.com](http://www.nicolaudie.com)