

## How to Add a Sound

1. Create a WAV file
2. Make sure the file's name is no more 8 than characters long
3. Copy the file onto the robot's SD card
4. In the RomiboCommands.txt file, add of the format:  
    wav\_to\_play.wav,Label on the button  
    This will make your new sound show up on the list of choices when you press and hold a button on the adult screen
5. If you want your new button to show up by default (or it should appear in a child screen where there is no long press gesture): In the screens or simple\_screens directory, add the same line to the screen you want to display your button and new sound