

**ONLY OPERATE THE SCALE ON A STABLE,
VIBRATION FREE SURFACE.**

OPERATION

1. Place scale on a horizontal flat surface, press [ON/OFF] key to turn on the scale.
2. Wait until "0.0" is displayed
3. Put the object(s) on the weighing platform
4. Using the [MODE] key, you can change the weighing units.

TARE SETTING

1. Turn on scale as described above
2. Place the "tare item" on the platform
3. Press [TARE] and wait until "0.0" is displayed
4. Add the "net-weight-item"

CALIBRATION

1. Place the scale on a stable surface and turn on the scale.
2. Press and hold [MODE] button and release when the display shows "CAL"
3. Press [MODE] again, the LCD display will show the required calibration weight "500.0 or 2000.0".
4. Gently place the required weight on the scale and wait 3 seconds.
5. The display will show "PASS" when calibration is complete and return to the normal weighing mode

**PLEASE CHECK THE AVAILABILITY OF WEIGHTS AT
THE STORE YOU BOUGHT YOUR SCALE FROM.**

SPECIFICATIONS

Tare Range	Full capacity
Auto Off	60 seconds off
Op. Temp	15 to 30 degrees C
Display	LCD 5 digits
Power	2 x AAA
Scale Dim.	113 x 88 x 25 mm
Tray	95 mm x 68 mm

Proscale XC 500 / XC 2000

Capacity	500g / 2000g
Readability	0.01g / 0.1g
Modes	g/oz/gn/ct/dwt/ozt/lb
Calibration	500g / 2000g

DISPLAY ERROR MESSAGES

[Lo] Change the batteries.

[O-LD] You are overloading the scale. Remove the excessive load immediately.

[UnST] Use the scale in a more stable position.



Manufactured in China