



MICROMAX LED 32 INCH TV

USER MANUAL

MODEL 1113 V1.04



TABLE OF CONTENTS

 
BASIC OPERATIONS	1
FIRST TIME SETUP AND TURNING ON/OFF THE TV SET	1
AMAZON FIRE TV STICK	2
REMOTE CONTROL	5
INSTALLING AND REPLACING BATTERIES	6
SCREEN MIRRORING	7
CASTING PHONE APPLICATIONS ON TV	7
CONNECTING PHONE TO TV USING CABLE	7
CONNECTING LAPTOP TO TV	8
SAFETY AND MAINTENANCE	9

BASIC OPERATIONS

FIRST TIME SETUP AND TURNING ON/OFF THE TV SET

Follow the given instructions to set up the TV for first time use and operate:

1. Plug the power cable and switch on the power button on the TV.
2. Press **Power** button on the remote control for standby mode.

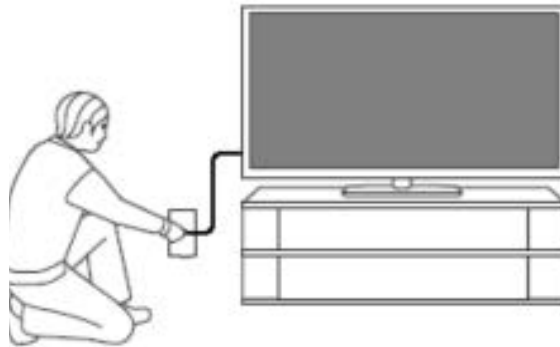


3. *No Signal* message appears until command is received.



4. Press **Source** button and select the desired **Input** setting. Select TV for normal TV viewing.
5. When the TV is powered on for the first time, setting screen appears.
6. Set the time zone and country using the **navigation** and **OK** buttons on the remote control,

7. Set the TV aspect ration using the **Aspect** key.

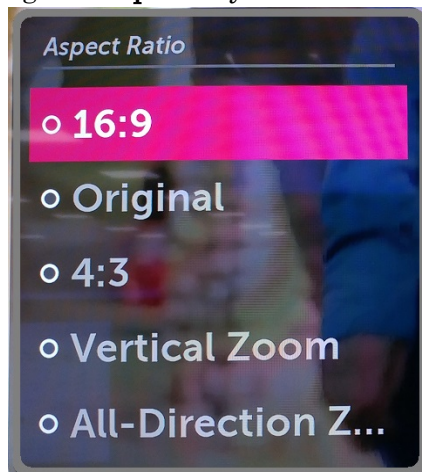

8. Press the **Ch** and **Number** buttons to view your desired channels.

9. You can also set the color and screen mode of the TV screen using **P Effect** and **Menu** button.



10. Press **Exit** to come out of the settings screen.

Note: If the remote control gets damaged or stops working, use the **Power**, **Channel** and **Volume** buttons situated behind the front screen at the botton.

AMAZON FIRE TV STICK

Follow the given steps to attach and operate the Amazon Fire TV Stick:

1. Plug your Fire TV into your TV's HDMI port and then plug the power adapter into an outlet.

 


2. Connect the power adapter and your Fire TV using the USB cable.
3. Put 2 AAA batteries in your Fire TV remote.



4. Turn on your TV and switch to the required HDMI. Remote will pair automatically.
5. Press the **Home** button until **Press Play Pause To Start** appears on-screen if the remote does not pair automatically.
6. Follow the on-screen instructions to connect to Wi-Fi and download the latest software update.

7. Sign in to your Amazon account by entering the username and password.

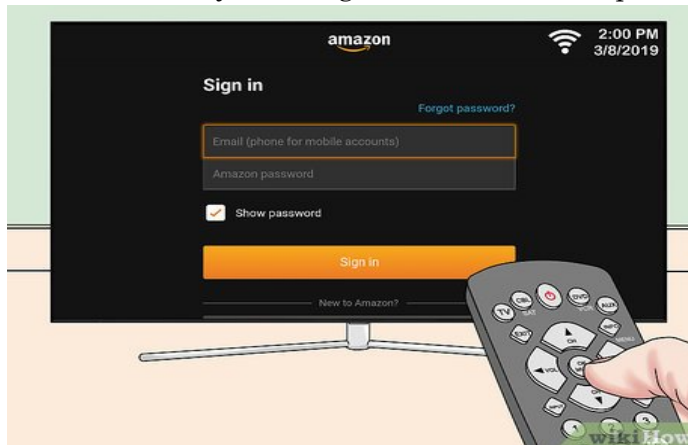


8. Follow the on-screen questions to set up equipment control for devices like soundbars.
9. To operate Amazon fire stick daily, keep it plugged to the TV set.
10. Switch the TV on with the Micromax TV remote control. *No Signal* message appears.
11. Press the **Select** button on the Fire Stick remote.
12. Home screen appears with all the downloaded and available Applications.
13. Use the **Navigation** key and press the **Select** button to launch the desired application.



REMOTE CONTROL

To operate the remote control, point the remote and aim on the TV remote sensor at the bottom of the TV frame. Following are the buttons on the remote and their usage:

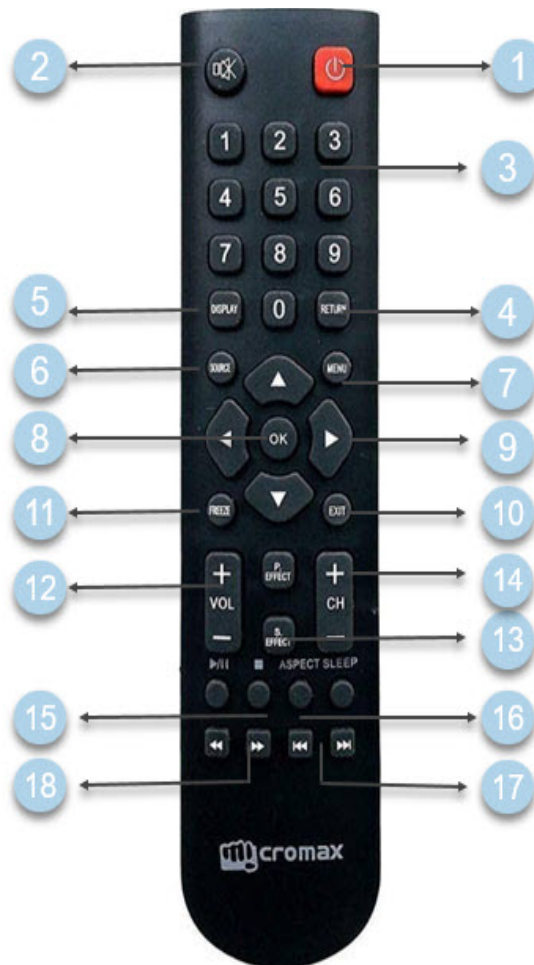

1. **POWER:** To switch on or off the TV set.
2. **MUTE:** To make the volume less distinct and without any sound.
3. **NUMBER BUTTONS:** They are the digits to switch to a particular channel directly.
4. **RETURN:** To go back to the previous menu/channel
5. **DISPLAY:** Press to display your favorite channel.
6. **SOURCE:** To toggle between different signal sources available.

7. **MENU**: To display and control the TV features like picture quality contrast, brightness and sharpness.
8. **OK**: To execute the selected item on the menu screen.
9. **NAVIGATION BUTTON**: Up/Down/Left/Right: To select the direction to navigate through the menu list.
10. **EXIT**: To quit the current screen or display.
11. **FREEZE**: To freeze and unfreeze the screen.
12. **VOL+/-**: Increase/Decrease audio volume.
13. **P EFFECT S EFFECT**: To access the picture and sound effects of the TV and to adjust as per convenience.
14. **CH+/-**: Scroll to next/previous channel.
15. **PAUSE PLAY STOP**: To pause and play in media mode.
16. **SLEEP & ASPECT**: To set the clock to turn off the TV automatically after a designated time and to adjust the aspect ratio of the video.
17. **REVERSE FORWARD**: To Fast reverse and fast forward in USB Screen.
18. **PREVIOUS NEXT**: To navigate to Previous and Next in USB Screen.

INSTALLING AND REPLACING BATTERIES

- Open the back cover of the remote control
- Install 2 AAA batteries
- Insert the cover




Note: When the batteries become weak, the operating distance of the remote from the TV will be reduced. This is when you will need to replace the batteries.

SCREEN MIRRORING

CASTING PHONE APPLICATIONS ON TV

1. Connect your device to the same Wi-Fi network as your Android TV.
2. Open the app that has the content you want to cast.
3. In the application, find and select the Cast icon.
4. On your device, select the name of your TV.
5. When Cast icon changes color, you're successfully connected.
6. To stop casting, on your device, select Cast and then Disconnect.

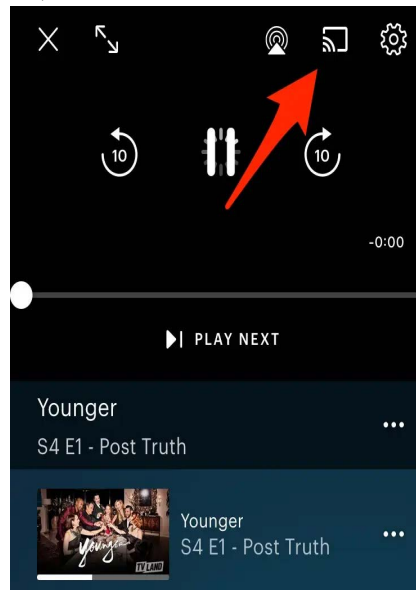

CONNECTING PHONE TO TV USING CABLE

1. Plug one end of the USB cable to your phone and other end to TV's USB port.
2. Keep the phone plugged in and press **Source** button on the remote control
3. Source menu appears. Select **USB**.

4. The phone screen will now display on the TV. To stop casting, on your device, select Cast and then Disconnect.




CONNECTING LAPTOP TO TV

1. Plug one end of the HDMI cable into your HDMI input on your laptop.
2. Plug the other end of the cable into one of the HDMI port behind the TV.
3. Press Source button on the remote control.
4. Using the arrow navigation button select HDMI 1
5. The laptop screen will now display on the TV.




SAFETY AND MAINTENANCE

- Do not use water near the TV to avoid water spillage.
- Avoid walking on the power cord.
- Clean with dry cloth only. Do not spray surface cleaner on the TV screen directly..

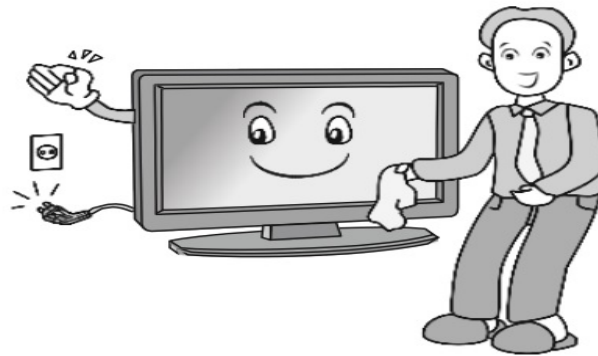

- Avoid placing your finger on the screen for long as it may distort the image.
- Do not place objects over the TV that have a risk of dripping or spilling.
- In case of damage, get the TV repaired through Micromax qualified service centers only.

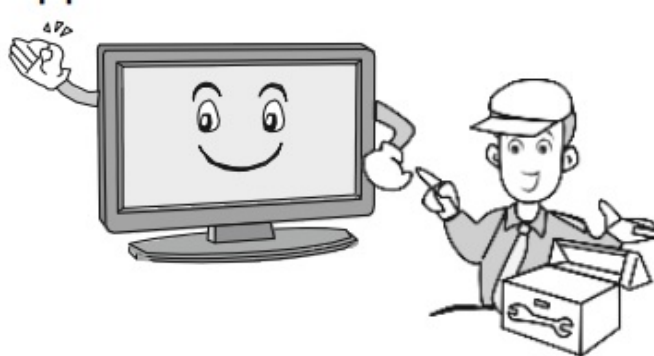


- While installing and operating the TV, maintain distance. In case of abnormal ventilation or temperature, the TV may get heated and catch fire.

- Unplug the TV during lightning and storms.



- Dispose the remote batteries along with electronic waste only to protect the environment.
- When the TV is not in use, keep the Mains switched off and unplug whenever possible.
- Place the TV away from other heating machines and apparatus

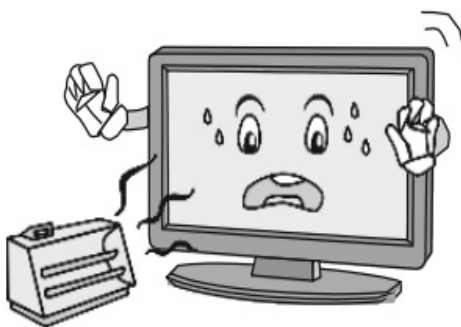

- Do not cover the ventilation holes at the back socket.
- Do not leave the TV on standby for a long time

