



ZebOS-XP®

Network Platform

Version 1.4

Extended Performance

Virtual Router Redundancy Protocol
Command Reference
December 2015

© 2015 IP Infusion Inc. All Rights Reserved.

This documentation is subject to change without notice. The software described in this document and this documentation are furnished under a license agreement or nondisclosure agreement. The software and documentation may be used or copied only in accordance with the terms of the applicable agreement. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording for any purpose other than the purchaser's internal use without the written permission of IP Infusion Inc.

IP Infusion Inc.
3965 Freedom Circle, Suite 200
Santa Clara, CA 95054
+1 408-400-1900
<http://www.ipinfusion.com/>

For support, questions, or comments via E-mail, contact:
support@ipinfusion.com

Trademarks:

IP Infusion, OcNOS, VirNOS, ZebM, ZebOS, and ZebOS-XP are trademarks or registered trademarks of IP Infusion. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Contents

Preface	v
Audience	v
Conventions	v
Contents	v
Related Documents	v
Support	vi
Comments	vi
CHAPTER 1 Command Line Interface	7
Overview	7
Starting the Command Line Interface	7
Command Line Interface Help	7
Command Completion	8
Command Abbreviations	9
Command Line Errors	9
Command Negation	9
Syntax Conventions	10
Variable Placeholders	11
Command Description Format	12
Keyboard Operations	12
Show Command Modifiers	13
Begin Modifier	13
Include Modifier	14
Exclude Modifier	14
Redirect Modifier	15
Command Modes	15
Command Mode Tree	16
Debug Command	16
CHAPTER 2 VRRP Commands	17
accept-mode	18
advertisement-interval	19
circuit-failover	20
debug vrrp	21
disable	22
enable	23
preempt-mode	24
router vrrp	25
show debugging vrrp	26
show running-config router vrrp	27
snmp restart vrrp	28
switch-back-delay	29
undebg vrrp events	30

v2-compatible	31
virtual-ip	32
vrrp vmac	33
CHAPTER 3 VRRP v6 Commands	35
advertisement-interval	36
circuit-failover	37
disable	38
enable	39
preempt-mode	40
priority	41
router ipv6 vrrp	42
router ipv6 vrrp vlan	43
show running-config router ipv6 vrrp	44
virtual-ipv6	45
Index	47

Preface

This document describes the ZebOS-XP commands for Virtual Router Redundancy Protocol (VRRP).

Audience

This document is intended for network administrators and other engineering professionals who configure and manage VRRP.

Conventions

Table P-1 shows the conventions used in this guide.

Table P-1: Conventions

Convention	Description
<i>Italics</i>	Emphasized terms; titles of books
Note:	Special instructions, suggestions, or warnings
<code>monospaced type</code>	Code elements such as commands, functions, parameters, files, and directories

Contents

This document contains these chapters:

- [Chapter 1, Command Line Interface](#)
- [Chapter 2, VRRP Commands](#)
- [Chapter 3, VRRP v6 Commands](#)

Related Documents

The following guides are related to this document:

- *Virtual Router Redundancy Configuration Guide*
- *Network Services Module Command Reference*
- *Network Services Module Developer Guide*
- *Installation Guide*
- *Architecture Guide*

Note: All ZebOS-XP technical manuals are available to licensed customers at http://www.ipinfusion.com/support/document_list.

Support

For support-related questions, contact support@ipinfusion.com.

Comments

If you have comments, or need to report a problem with the content, contact techpubs@ipinfusion.com.

CHAPTER 1 Command Line Interface

This chapter introduces the ZebOS-XP Command Line Interface (CLI) and how to use its features.

Overview

You use the CLI to configure, monitor, and maintain ZebOS-XP devices. The CLI is text-based and each command is usually associated with a specific task.

You can give the commands described in this manual locally from the console of a device running ZebOS-XP or remotely from a terminal emulator such as `putty` or `xterm`. You can also use the commands in scripts to automate configuration tasks.

Starting the Command Line Interface

You must start daemons as described in this section before you can use the CLI. The general steps are listed below. For details about the ZebOS-XP daemons, see the *Installation Guide*.

1. Start your terminal emulator and connect to the device or go to the console of the device running ZebOS-XP.
2. Connect to the directory where you installed the ZebOS-XP executables.
3. Start the Network Services Module (NSM).

```
# ./nsm -d
```

4. Start the protocol module daemons that your organization uses, such as `mstpd`, `ospf6d`, or `ripd`.

```
# ./mstpd -d
```

5. Start the Integrated Management Interface (IMI) daemon.

```
# ./imi -d
```

6. Start the IMI shell.

```
# ./imish
```

Note: Your organization may use a ZebOS-XP build that does not include `imish`. If that is the case, you must connect to a port on which a protocol daemon is listening. For details, see the *Installation Guide*.

You can now begin using the CLI.

Command Line Interface Help

You access the CLI help by entering a full or partial command string and a question mark “?”. The CLI displays the command keywords or parameters along with a short description. For example, at the CLI command prompt, type:

```
> show ?
```

The CLI displays this keyword list with short descriptions for each keyword:

```
show ?
  application-priority      Application Priority
```

arp	Internet Protocol (IP)
bfd	Bidirectional Forwarding Detection (BFD)
bgp	Border Gateway Protocol (BGP)
bi-lsp	Bi-directional lsp status and configuration
bridge	Bridge group commands
ce-vlan	COS Preservation for Customer Edge VLAN
class-map	Class map entry
cli	Show CLI tree of current mode
clns	Connectionless-Mode Network Service (CLNS)
control-adjacency	Control Adjacency status and configuration
control-channel	Control Channel status and configuration
cspf	CSPF Information
customer	Display Customer spanning-tree
cvlan	Display CVLAN information
debugging	Debugging functions (see also 'undebug')
dot1x	IEEE 802.1X Port-Based Access Control
etherchannel	LACP etherchannel
ethernet	Layer-2
...	

If you type the ? in the middle of a keyword, the CLI displays help for that keyword only.

```
> show de?
debugging  Debugging functions (see also 'undebug')
```

If you type the ? in the middle of a keyword, but the incomplete keyword matches several other keywords, ZebOS-XP displays help for all matching keywords.

```
> show i? (CLI does not display the question mark).
interface  Interface status and configuration
ip          IP information
isis       ISIS information
```

Command Completion

The CLI can complete the spelling of a command or a parameter. Begin typing the command or parameter and then press the tab key. For example, at the CLI command prompt type `sh`:

```
> sh
```

Press the tab key. The CLI displays:

```
> show
```

If the spelling of a command or parameter is ambiguous, the CLI displays the choices that match the abbreviation. Type `show i` and press the tab key. The CLI displays:

```
> show i
interface  ip          ipv6      isis
> show i
```

The CLI displays the `interface` and `ip` keywords. Type `n` to select `interface` and press the tab key. The CLI displays:

```
> show in
> show interface
```

Type `?` and the CLI displays the list of parameters for the `show interface` command.

```
> show interface
IFNAME  Interface name
|       Output modifiers
```



```
>          Output redirection
<cr>
```

The CLI displays the only parameter associated with this command, the `IFNAME` parameter.

Command Abbreviations

The CLI accepts abbreviations that uniquely identify a keyword in commands. For example:

```
> sh in eth0
```

is an abbreviation for:

```
> show interface eth0
```

Command Line Errors

Any unknown spelling causes the CLI to display the error `Unrecognized command` in response to the `?`. The CLI displays the command again as last entered.

```
> show dd?
% Unrecognized command
> show dd
```

When you press the Enter key after typing an invalid command, the CLI displays:

```
(config)#router ospf here
                        ^
% Invalid input detected at '^' marker.
```

where the `^` points to the first character in error in the command.

If a command is incomplete, the CLI displays the following message:

```
> show
% Incomplete command.
```

Some commands are too long for the display line and can wrap mid-parameter or mid-keyword, as shown below. This does *not* cause an error and the command performs as expected:

```
area 10.10.0.18 virtual-link 10.10.0.19 authent
ication-key 57393
```

Command Negation

Many commands have a `no` form that resets a feature to its default value or disables the feature. For example:

- The `ip address` command assigns an IPv4 address to an interface
- The `no ip address` command removes an IPv4 address from an interface

Syntax Conventions

Table 1-1 describes the conventions used to represent command syntax in this reference.

Table 1-1: Syntax conventions

Convention	Description	Example
monospaced font	Command strings entered on a command line	<code>show running-config router vrrp</code>
lowercase	Keywords that you enter exactly as shown in the command syntax.	<code>show running-config router vrrp</code>
UPPERCASE	See Variable Placeholders	<code>IFNAME</code>
()	Optional parameters, from which you must select one. Vertical bars delimit the selections. Do not enter the parentheses or vertical bars as part of the command.	<code>(A.B.C.D <0-4294967295>)</code>
()	Optional parameters, from which you select one or none. Vertical bars delimit the selections. Do not enter the parentheses or vertical bars as part of the command.	<code>(A.B.C.D <0-4294967295>)</code>
()	Optional parameter which you can specify or omit. Do not enter the parentheses or vertical bar as part of the command.	<code>(IFNAME)</code>
{ }	Optional parameters, from which you must select one or more. Vertical bars delimit the selections. Do not enter the braces or vertical bars as part of the command.	<code>{intra-area <1-255> inter-area <1-255> external <1-255>}</code>
[]	Optional parameters, from which you select zero or more. Vertical bars delimit the selections. Do not enter the brackets or vertical bars as part of the command. A '?' before a parameter in square brackets limits that parameter to one occurrence in a command string.	<code>[<1-65535> AA:NN internet local-AS no-advertise no-export]</code>
.	Repeatable parameter. The parameter that follows a period can be repeated more than once. Do not enter the period as part of the command.	<code>set as-path prepend .<1-65535></code>

Variable Placeholders

Table 1-2 shows the tokens used in command syntax use to represent variables for which you supply a value.

Table 1-2: Variable placeholders

Token	Description
WORD	A contiguous text string (excluding spaces)
LINE	A text string, including spaces; no other parameters can follow this parameter
IFNAME	Interface name whose format varies depending on the platform; examples are: <code>eth0</code> , <code>Ethernet0</code> , <code>ethernet0</code> , <code>xe0</code>
A.B.C.D	IPv4 address
A.B.C.D/M	IPv4 address and mask/prefix
X:X::X:X	IPv6 address
X:X::X:X/M	IPv6 address and mask/prefix
HH:MM:SS	Time format
AA:NN	BGP community value
XX:XX:XX:XX:XX:XX	MAC address
<1-5> <1-65535> <0-2147483647> <0-4294967295>	Numeric range

Command Description Format

[Table 1-3](#) explains the sections used to describe each command in this reference.

Table 1-3: Command descriptions

Section	Description
Command Name	The name of the command, followed by what the command does and when should it be used
Command Syntax	The syntax of the command
Parameters	Parameters and options for the command
Default	The state before the command is executed
Command Mode	The mode in which the command runs; see Command Modes
Example	An example of the command being executed

Keyboard Operations

[Table 1-4](#) lists the operations you can perform from the keyboard.

Table 1-4: Keyboard operations

Key combination	Operation
Left arrow or Ctrl+b	Moves one character to the left. When a command extends beyond a single line, you can press left arrow or Ctrl+b repeatedly to scroll toward the beginning of the line, or you can press Ctrl+a to go directly to the beginning of the line.
Right arrow or Ctrl-f	Moves one character to the right. When a command extends beyond a single line, you can press right arrow or Ctrl+f repeatedly to scroll toward the end of the line, or you can press Ctrl+e to go directly to the end of the line.
Esc, b	Moves back one word
Esc, f	Moves forward one word
Ctrl+e	Moves to end of the line
Ctrl+a	Moves to the beginning of the line
Ctrl+u	Deletes the line
Ctrl+w	Deletes from the cursor to the previous whitespace
Alt+d	Deletes the current word
Ctrl+k	Deletes from the cursor to the end of line
Ctrl+y	Pastes text previously deleted with Ctrl+k, Alt+d, Ctrl+w, or Ctrl+u at the cursor

Table 1-4: Keyboard operations (Continued)

Key combination	Operation
Ctrl+t	Transposes the current character with the previous character
Ctrl+c	Ignores the current line and redisplay the command prompt
Ctrl+z	Ends configuration mode and returns to exec mode
Ctrl+l	Clears the screen
Up Arrow or Ctrl+p	Scroll backward through command history
Down Arrow or Ctrl+n	Scroll forward through command history

Show Command Modifiers

You can use two tokens to modify the output of a `show` command. Enter a question mark to display these tokens:

```
# show users ?
  | Output modifiers
  > Output redirection
```

You can type the | (vertical bar character) to use output modifiers. For example:

```
> show rsvp | ?
begin      Begin with the line that matches
exclude    Exclude lines that match
include    Include lines that match
redirect   Redirect output
```

Begin Modifier

The `begin` modifier displays the output beginning with the first line that contains the input string (everything typed after the `begin` keyword). For example:

```
# show run | begin eth1
...skipping
interface eth1
  ipv6 address fe80::204:75ff:fee6:5393/64
!
interface eth2
  ipv6 address fe80::20d:56ff:fe96:725a/64
!
line con 0
  login
!
end
```

You can specify a regular expression after the `begin` keyword. This example begins the output at a line with either “eth3” or “eth4”:

```
# show run | begin eth[3-4]

...skipping
interface eth3
```

```
shutdown
!
interface eth4
shutdown
!
interface svlan0.1
no shutdown
!
route-map myroute permit 3
!
route-map mymap1 permit 10
!
route-map rmap1 permit 3
!
line con 0
login
line vty 0 4
login
!
end
```

Include Modifier

The `include` modifier includes only those lines of output that contain the input string. In the output below, all lines containing the word “input” are included:

```
# show interface eth1 | include input
input packets 80434552, bytes 2147483647, dropped 0, multicast packets 0
input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 1, missed 0
```

You can specify a regular expression after the `include` keyword. This examples includes all lines with “input” or “output”:

```
#show int eth0 | include (in|out)put
input packets 597058, bytes 338081476, dropped 0, multicast packets 0
input errors 0, length 0, overrun 0, CRC 0, frame 0, fifo 0, missed 0
output packets 613147, bytes 126055987, dropped 0
output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0
```

Exclude Modifier

The `exclude` modifier excludes all lines of output that contain the input string. In the following output example, all lines containing the word “input” are excluded:

```
# show interface eth1 | exclude input
Interface eth1
Scope: both
Hardware is Ethernet, address is 0004.75e6.5393
index 3 metric 1 mtu 1500 <UP,BROADCAST,RUNNING,MULTICAST>
VRF Binding: Not bound
Administrative Group(s): None
DSTE Bandwidth Constraint Mode is MAM
inet6 fe80::204:75ff:fee6:5393/64
output packets 4438, bytes 394940, dropped 0
output errors 0, aborted 0, carrier 0, fifo 0, heartbeat 0, window 0
collisions 0
```

You can specify a regular expression after the `exclude` keyword. This example excludes lines with “output” or “input”:

```
# show interface eth0 | exclude (in|out)put
Interface eth0
  Scope: both
  Hardware is Ethernet Current HW addr: 001b.2139.6c4a
  Physical:001b.2139.6c4a Logical:(not set)
  index 2 metric 1 mtu 1500 duplex-full arp ageing timeout 3000
  <UP,BROADCAST,RUNNING,MULTICAST>
  VRF Binding: Not bound
  Bandwidth 100m
  DHCP client is disabled.
  inet 10.1.2.173/24 broadcast 10.1.2.255
  VRRP Master of : VRRP is not configured on this interface.
  inet6 fe80::21b:21ff:fe39:6c4a/64
  collisions 0
```

Redirect Modifier

The `redirect` modifier writes the output into a file. The output is not displayed.

```
# show history | redirect /var/frame.txt
```

The output redirection token (`>`) does the same thing:

```
# show history >/var/frame.txt
```

Command Modes

Commands are grouped into modes arranged in a hierarchy. Each mode has its own set of commands. [Table 1-5](#) lists the command modes common to all protocols.

Table 1-5: Common command modes

Name	Description
Executive mode	Also called <i>view</i> mode, this is the first mode to appear after you start the CLI. It is a base mode from where you can perform basic commands such as <code>show</code> , <code>exit</code> , <code>quit</code> , <code>help</code> , <code>list</code> , and <code>enable</code> .
Privileged executive mode	Also called <i>enable</i> mode, in this mode you can run additional basic commands such as <code>debug</code> , <code>write</code> , and <code>show</code> .
Configure mode	Also called <i>configure terminal</i> mode, in this mode you can run configuration commands and go into other modes such as <code>interface</code> , <code>router</code> , <code>route map</code> , <code>key chain</code> , and <code>address family</code> .
Interface mode	In this mode you can configure protocol-specific settings for a particular interface. Any setting you configure in this mode overrides a setting configured in router mode.
Router mode	This mode is used to configure router-specific settings for a protocol such as RIP or OSPF.

Command Mode Tree

The diagram below shows the common command mode hierarchy.

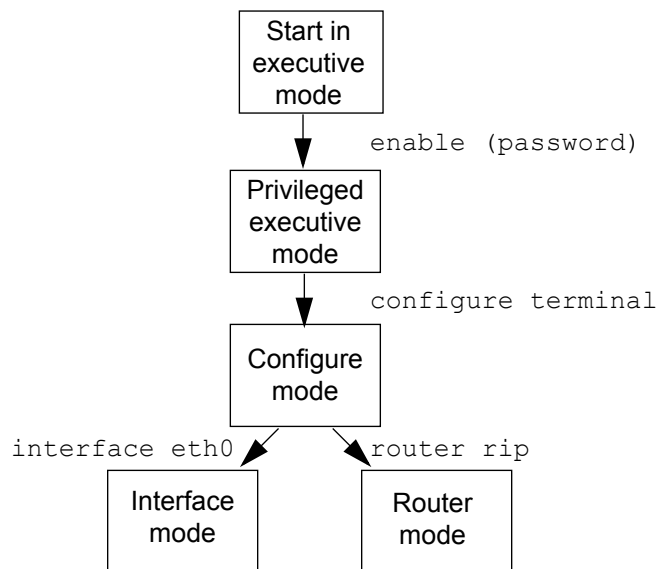


Figure 1-1: Common command modes

To change modes:

1. Enter privileged executive mode by entering `enable` in Executive mode.
2. Enter configure mode by entering `configure terminal` in Privileged Executive mode.

The example below shows starting `imish` and then moving from executive mode to privileged executive mode to configure mode and finally to router mode:

```
# ./imish
> enable mypassword
# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
(config)# router rip
(config-router)#
```

Note: Each protocol can have modes in addition to the common command modes. See the command reference for the respective protocol for details.

Debug Command

Whether the settings you make for a `debug` command persist between sessions depends on the mode where you make the settings:

- When you make settings for a `debug` command in executive mode, the configuration is valid for the current session only and is not saved in the `ZebOS.conf` file.
- When you make settings for a `debug` command in configuration mode, the configuration is retained and saved in `ZebOS.conf` and used even after the session restarts.

CHAPTER 2 VRRP Commands

This chapter describes the commands for VRRP.

- [accept-mode](#) on page 18
- [advertisement-interval](#) on page 19
- [circuit-failover](#) on page 20
- [debug vrrp](#) on page 21
- [disable](#) on page 22
- [enable](#) on page 23
- [preempt-mode](#) on page 24
- [router vrrp](#) on page 25
- [show debugging vrrp](#) on page 26
- [snmp restart vrrp](#) on page 28
- [v2-compatible](#) on page 31
- [virtual-ip](#) on page 32
- [show running-config router vrrp](#) on page 27
- [vrrp vmac](#) on page 33

accept-mode

Use this command to enable accept mode for the session

Use the `no` parameter with this command to restore the default setting.

Command Syntax

```
accept-mode true
accept-mode false
```

Parameter

None

Command Mode

Router mode

Examples

The example below shows how to set and unset the accept mode.

```
#configure terminal
(config)#router vrrp 2 eth0
(config-router)#accept-mode true
(config-router)#accept-mode false
```

advertisement-interval

Use this command to configure the advertisement interval of a virtual router. This is the length of time, in seconds, between each advertisement sent from the master to its backup(s). The master virtual router sends VRRP advertisements to other VRRP routers in the same group. The advertisements communicate the priority and state of the master virtual router. The VRRP advertisements are encapsulated in IP packets and sent to the multicast address assigned to the VRRP group (224.0.0.18). Advertisements are sent every second by default.

Note: VRRP Master router and backup routers should be configured with the same advertisement interval. If there is a mismatch in the configuration, VRRP goes to the INIT state.

Use the `no` parameter with this command to restore the default setting.

Command Syntax

```
advertisement-interval <5-4095>
no advertisement-interval
```

Parameter

<5-4095>	Specify the advertisement interval in centi-seconds (in multiples of 5) when VRRPv3 is enabled
----------	--

Command Mode

Router mode

Examples

The example below shows how to configure an advertisement interval of 50 seconds for the virtual router with VR ID 2 on interface eth0.

```
#configure terminal
(config)#router ip vrrp 2 eth0
(config-router)#advertisement-interval 50
```

circuit-failover

Use this command to enable the VRRP circuit failover feature.

Use the `no` parameter with this command to disable this feature.

Command Syntax

```
circuit-failover [IFNAME] |<1-253>
no circuit-failover [IFNAME] |<1-253>
```

Parameters

IFNAME	Specify an interface of the router that is monitored by the virtual router. This is usually an upstream interface. Should the interface go down, another router, configured as backup within the VRRP group, may take over as a master.
<1-253>	Specify the delta value. The value by which the virtual router decrements its priority value during a circuit failover event. Configure this value to be greater than the difference of priorities between the master and backup routers.

Command Mode

Router mode

Examples

The example below shows how to configure circuit failover for the VRRP session with VR ID 1. Interface eth1 is considered the monitored interface.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#circuit-failover eth1 30
```

debug vrrp

Use this command to specify debugging options for VRRP.

Use the `no` parameter with this command to disable debugging.

Command Syntax

```
debug vrrp (all|event|packet [send|recv])
no debug vrrp (all|event|packet [send|recv])
```

Parameters

<code>all</code>	Specify debugging options for all VRRP events.
<code>event</code>	Specify debugging options for VRRP event troubleshooting.
<code>packet</code>	Specify debugging options for VRRP packets
<code>send</code>	Specify the debug option set for sent packets.
<code>recv</code>	Specify the debug option set for received packets.

Command Mode

Configure mode and Privileged Exec mode

Examples

The example below shows how to enable all VRRP debug options.

```
#configure terminal
(config)#debug vrrp all
```

The example below shows how to enable debugging options for VRRP events.

```
#configure terminal
(config)#debug vrrp events
```

The example below shows how to enable debug options for VRRP packets sent.

```
#configure terminal
(config)#debug vrrp packet send
```

The example below shows how to enable debug options for VRRP packets received.

```
#configure terminal
(config)#debug vrrp packet recv
```

disable

Use this command to disable a VRRP session on the router (to stop the router from participating in virtual routing). When this command is configured, a backup Router assumes the Role of Master depending on its priority.

Command Syntax

```
disable
```

Parameters

None

Command Mode

Router mode

Example

The example below shows how to disable a VRRP session.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#disable
```

Related Commands

enable

enable

Use this command to enable a VRRP session on the router (to make it participate in virtual routing). To make any changes to the VRRP configuration, first disable the router from participating in virtual routing using the `disable` command.

Note: Configure the virtual IP address and define an interface for the VRRP session (using the `virtual-ip` and `interface` commands) before using this command.

Command Syntax

```
enable
```

Parameters

None

Command Mode

Router mode

Example

The example below shows how to enable a VRRP session with VR ID 1 on interface eth0.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#enable
```

Related Commands

`disable`

preempt-mode

Use this command to configure preempt mode. If set to `true`, the highest priority backup is always the master when the default master is unavailable. If set to `false`, a higher priority backup does not preempt a lower priority backup which is acting as master.

When the master router fails, the backup routers come online in priority order — highest to lowest. Preempt mode set to `true` allows a higher priority backup router to relieve a lower priority backup.

By default, a preemptive scheme is enabled whereby a higher priority backup virtual router that becomes available takes over for the backup virtual router that was elected to become master virtual router. This preemptive scheme can be disabled using the `preempt-mode false` command. If preemption is disabled, the backup virtual router that is currently elected as Master does not transition to backup again when the alternate backup router with higher priority becomes available.

Command Syntax

```
preempt-mode (true|false)
```

Parameters

<code>true</code>	Specify that preemption is enabled.
<code>false</code>	Specify that preemption is disabled.

Default

Default is `true`.

Command Mode

Router mode

Examples

The example below shows how to enable the preempt mode.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#preempt-mode false

#configure terminal
(config)#router vrrp 1 eth0
(config-router)#preempt-mode true
```

router vrrp

Use this command to enter router mode and to configure an VRRP routing process for an interface.

Use the no parameter with this command to terminate an VRRP routing process from an interface.

Command Syntax

```
router vrrp <1 -255> IFNAME
no router vrrp <1-255> IFNAME
```

Parameters

<1-255>	Range of the router virtual router identifier.
IFNAME	Specify an interface of the router.

Command Mode

Configure mode

Example

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#
```

show debugging vrrp

Use this command to display the set VRRP debugging option.

Command Syntax

```
show debugging vrrp
```

Parameters

None

Command Mode

Exec mode and Privileged Exec mode

Example

```
#show debugging vrrp
  VRRP event debugging is on
  VRRP packet debugging is on

#
```

show running-config router vrrp

Use this command to show the running configuration for VRRP.

Command Syntax

```
show running-config router vrrp
```

Parameters

None

Command Mode

Exec mode and Privileged Exec mode

Example

The example below shows the running configuration of VRRP. Virtual Router is configured as Master and Owner of IP address.

```
#show running-config router vrrp
!
router vrrp 1 eth0
 virtual-ip 39.0.0.24 master
 circuit-failover eth1 30
 advertisement-interval 6
 preempt-mode false
 enable
!
```

snmp restart vrrp

Use this command to restart SNMP in Virtual Routing Redundancy Protocol (VRRP).

Command Syntax

```
snmp restart vrrp
```

Parameters

None

Command Mode

Configure mode

Examples

```
#configure terminal  
(config)#snmp restart vrrp
```

switch-back-delay

Use this command to set a switch-back delay timer for the master VRRP router. This feature prevents the original master VRRP router from transitioning back to the master state after coming back online until the configured delay timer has expired.

Command Syntax

```
switch-back-delay <1-500000>
no switch-back-delay
```

Parameters

<1-500000> Specify a switch-back delay in milliseconds.

Command Mode

Router mode

Default

By default, the switch-back delay is set to 0.

Examples

The example below shows how to set a switch-back delay timer of 7000 milliseconds.

```
#configure terminal
(config)#router vrrp 5 eth1
(config-router)#switch-back-delay 7000
```

undebg vrrp events

Use this command to disable debugging options for VRRP.

Command Syntax

```
undebg vrrp (all|event|packet [send|recv])
no undebg vrrp (all|event|packet [send|recv])
```

Parameters

all	Specify debugging options for all VRRP events.
event	Specify debugging options for VRRP event troubleshooting.
packet	Specify debugging options for VRRP packets
send	Specify the debug option set for sent packets.
recv	Specify the debug option set for received packets.

Command Mode

Privileged Exec mode

Examples

```
#undebg vrrp all
```

The example below shows how to disable debug options for VRRP events.

```
#undebg vrrp events
```

The example below shows how to disable debug options for VRRP packets sent.

```
#undebg vrrp packet send
```

The example below shows how to disable debug options for VRRP packets received.

```
#undebg vrrp packet recv
```

v2-compatible

Use this command to enable the backward-compatibility feature. When enabled, both VRRPv3 and VRRPv2 inter-operation are supported.

Use the `no` parameter with this command to disable this feature

Command Syntax

```
v2-compatible
no v2-compatible
```

Parameters

None

Default

Enable

Command Mode

Router mode

Examples

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#v2-compatible
```

virtual-ip

Use this command to set the virtual IP address for the VRRP virtual router as VRRP Owner. This is the IP address used by end hosts to address their default gateway.

The VRRP Owner of the Virtual IP address only responds to packets destined to the Virtual IP address (for example, ICMP packets destined to the Virtual IP address).

Use the `no` parameter with this command to remove the virtual IP address assignment.

Syntax Description

```
virtual-ip [A.B.C.D] owner
no virtual-ip
```

Parameters

A.B.C.D	Specify the virtual IP address of the interface that participates in virtual routing.
owner	Specify the IP address as the owner.

Command Mode

Router mode

Example

The example below shows how to configure the Router as VRRP Owner.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#virtual-ip 10.10.20.30 owner
```

The example below removes the virtual IP address assignment.

```
#configure terminal
(config)#router vrrp 1 eth0
(config-router)#no virtual-ip
```

vrrp vmac

Use this command to enable or disable Virtual MAC (VMAC).

This command affects all VRRP groups in a router. On a single network segment, multiple VRRP groups can be configured, each using a different VMAC. The use of VMAC addressing allows for faster switchover when a backup router assumes the master role. When this command is used to enable a VMAC, the virtual router forwards packets with a special-purpose multicast VMAC address (0:0:5e:0:01:<VR ID>). Otherwise, it forwards with its interface's physical address.

The VMAC address is assigned to a router interface at the time the VRRP group is enabled in the router.

Command Syntax

```
vrrp vmac (enable|disable)
```

Parameters

<code>enable</code>	Enable virtual MAC addressing.
<code>disable</code>	Disable virtual MAC addressing and use physical MAC addressing.

Command Mode

Configure mode

Example

The example below shows how to enable a virtual MAC address on the router.

```
#configure terminal
(config)#vrrp vmac enable
```

The example below shows how to disable a virtual MAC address on the router.

```
#configure terminal
(config)#vrrp vmac disable
```


CHAPTER 3 VRRP v6 Commands

This chapter describes the commands for VRRP IPv6.

- [advertisement-interval](#) on page 36
- [circuit-failover](#) on page 37
- [disable](#) on page 38
- [enable](#) on page 39
- [preempt-mode](#) on page 40
- [priority](#) on page 41
- [router ipv6 vrrp](#) on page 42
- [router ipv6 vrrp vlan](#) on page 43
- [show running-config router ipv6 vrrp](#) on page 44
- [virtual-ipv6](#) on page 45
- [snmp restart vrrp](#) on page 28

advertisement-interval

Use this command to configure the advertisement interval of a virtual router. This is the length of time, in seconds, between each advertisement sent from the master to its backup(s). The master virtual router sends VRRP advertisements to other VRRP routers in the same group. The IPV6 VRRP advertisements are sent to the multicast address assigned to the VRRP IPV6 group (FF02:0:0:0:0:XXXX:XXXX) and a backup virtual router has to join all multicast groups within this range. As a convenient assignment, ZebOS-XP sends a VRRP advertisement to the multicast address FF02::12. The advertisements are sent every second by default.

Note: VRRP Master router and backup routers should be configured with the same advertisement interval. If there is a mismatch in the configuration, VRRP goes to the INIT state.

Use the `no` parameter with this command to restore the default setting.

Command Syntax

```
advertisement-interval <5-4095>
no advertisement-interval
```

Parameter

<5-4095>	Specify the advertisement interval in centi-seconds (multiples of 5) when VRRPv3 is enabled
----------	---

Command Mode

Router mode

Examples

The example below shows how to configure an advertisement interval of 10 seconds for the virtual router with VR ID 3 on interface eth0.

```
#configure terminal
(config)#router ipv6 vrrp 3 eth0
(config-router)#advertisement-interval 10
```

circuit-failover

Use this command to enable the VRRP circuit failover feature.

Use the `no` parameter with this command to disable this feature.

Command Syntax

```
circuit-failover IFNAME <1-253>
no circuit-failover IFNAME <1-253>
no circuit-failover (IFNAME|)
```

Parameters

IFNAME	Specify an interface of the router that is monitored by the virtual router. This is usually an upstream interface. Should the interface go down, another router, configured as backup within the VRRP group, may take over as a master.
<1-253>	Specify the delta value. The value by which the virtual router decrements its priority value during a circuit failover event. Configure this value to be greater than the difference of priorities between the master and backup routers.

Command Mode

Router mode

Examples

The example below shows how to configure circuit failover for the VRRP session with VR ID 1. Interface eth1 is considered the monitored interface.

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#circuit-failover eth1 30
```

disable

Use this command to disable a VRRP session on the router (to stop the router from participating in virtual routing). Refer to [enable](#) on page 39 to enable a VRRP session on the router.

When this command is configured, a backup router assumes the role of master depending on its priority.

Command Syntax

```
disable
```

Parameters

None

Command Mode

Router mode

Example

The example below shows to disable VRRP session.

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#disable
```

enable

Use this command to enable a VRRP session on the router, so the router participates in virtual routing. To make any changes to the VRRP configuration, first disable the Router from participating in Virtual Routing using the `disable` command.

Note: Configure the virtual IP address and define an interface for the VRRP session (using the `virtual-ip` and `interface` commands) before using this command.

Command Syntax

```
enable
```

Parameters

None

Command Mode

Router mode

Example

The example below shows to enable VRRP session with VR ID 1 on interface eth0

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#enable
```

preempt-mode

Use this command to configure preempt mode. If set to `true`, the highest priority backup is always the master when the default master is unavailable. If set to `false`, a higher priority backup does not preempt a lower priority backup that is acting as master.

When the master router fails, the backup routers come online in priority order — highest to lowest. Preempt mode set to `true` allows a higher priority backup router to relieve a lower priority backup.

By default, a preemptive scheme is enabled whereby a higher priority backup virtual router that becomes available takes over for the backup virtual router that was elected to become master virtual router. This preemptive scheme can be disabled using the `preempt-mode false` command. If preemption is disabled, the backup virtual router that is currently elected as Master does not transition to backup again when the alternate backup router with higher priority becomes available.

Command Syntax

```
preempt-mode true
preempt-mode false
```

Parameters

<code>true</code>	Specify that preemption is enabled.
<code>false</code>	Specify that preemption is disabled.

Default

Default is `true`.

Command Mode

Router mode

Example

The example below shows to configure preempt mode as False.

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#preempt-mode false
```

priority

Use this command to configure the VRRP router priority within the virtual router. Priority determines the role that each VRRP router plays and what happens if the master virtual router fails. If a VRRP router owns the IP address of the virtual router and the IP address of the physical interface, this router functions as the master virtual router.

Priority also determines whether a VRRP router functions as a backup virtual router and the order of ascendancy to becoming a master virtual router if the master virtual router fails.

Use the `no` parameter with this command to disable this feature.

Command Syntax

```
priority <1-255>
no priority
```

Parameter

<code><1-255></code>	Specify a priority. For the master router, specify 255; otherwise use any number in the range <1-254>.
----------------------------	--

Default

Default values for priority are:

- master router = 255
- backup = 100

Command Mode

Router mode

Examples

The example below shows to set the priority

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#priority 101
```

router ipv6 vrrp

Use this command to associate an IPv6 interface with a VRRP session. When issued, this command enters the `Router mode`.

Use the `no` parameter with this command to remove the IPv6 VRRP configuration. Disable the IPv6 VRRP session before using this `command`.

Command Syntax

```
router ipv6 vrrp <1-255> IFNAME
no router ipv6 vrrp <1-255> IFNAME
```

Parameters

<1-255>	Specify the ID of the virtual router session to create.
IFNAME	Specify the name of the IPv6 interface on which VRRP is enabled.

Command Mode

Configure mode

Example

The example below shows how to enable an IPv6 VRRP session with VR ID 1 on interface eth0.

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#
```

router ipv6 vrrp vlan

Use this command to associate a VLAN with a VRRP session. When issued, this command enters the `Router` mode.

Use the `no` parameter with this command to remove the IPv6 VRRP configuration. Disable the IPv6 VRRP session before using this `command`.

Command Syntax

```
router ipv6 vrrp <1-255> vlan <1-4094>
no router ipv6 vrrp <1-255> vlan <1-4094>
```

Parameters

<1-255>	Specify a virtual router identifier. Must be unique for each routing process.
<1-4094>	Specify the actual VLAN identifier

Command Mode

Configure mode

Examples

This example shows the use of the `router vrrp` command to enter router mode. Note the change in the prompt.

```
#configure terminal
(config)#router ipv6 vrrp 100 vlan 123
(config-router)#
```

show running-config router ipv6 vrrp

Use this command to show the running configuration for VRRP.

Command Syntax

```
show running-config router ipv6 vrrp
```

Parameters

None

Command Mode

Exec mode and Privileged Exec mode

Example

The example below shows the running configuration of IPv6 VRRP. Virtual Router is configured as Master and Owner of IP address.

```
#show running-config router ipv6 vrrp
!
router ipv6 vrrp 1 eth0
  virtual-ip fe80::202:b3ff:fed5:983e master
  circuit-failover eth1 30
  advertisement-interval 6
  preempt-mode false
  enable
!
#
```

virtual-ipv6

Use this command to set the virtual IPv6 address for the VRRP session. The virtual IPv6 address is the IPv6 address of the virtual router that end-hosts set as their default gateway.

VRRP Owner of the Virtual IP address only responds to the packets destined to the Virtual IP address (for example, ICMP packets destined to the Virtual IP address).

Use the `no` parameter with this command to disable this feature.

Syntax Description

```
virtual-ipv6 X:X::X:X owner
no virtual-ipv6
```

Parameters

`X:X::X:X` Specify the virtual IP address of the interface that participates in virtual routing

Note: The virtual-ip address should be the IPv6 link-local address of the interface.

`owner` Specify the IP address as the owner.

Command Mode

Router mode

Example

The example below shows how to configure a router as VRRP Master and Owner:

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#virtual-ipv6 fe80::202:b3ff:fed5:983e owner
```

The example below removes the virtual IP address assignment.

```
#configure terminal
(config)#router ipv6 vrrp 1 eth0
(config-router)#no virtual-ipv6
```


Index

A

advertisement interval, VRRP Commands
 advertisement-interval 18, 36

B

begin modifier 13
BGP community value
 command syntax 11
braces
 command syntax 10

C

circuit-failover 20, 37
command abbreviations 9
command completion 8
command line
 errors 9
 help 7
 keyboard operations 12
 starting 7
command modes 15
 configure 15
 exec 15
 interface 15
 privileged exec 15
 router 15
command negation 9
command syntax
 () 10
 {} 10
 | 10
 A.B.C.D 11
 A.B.C.D/M 11
 AA:NN 11
 BGP community value 11
 braces 10
 conventions 10
 curly brackets 10
 HH:MM:SS 11
 IFNAME 11
 interface name 11
 IPv4 address 11
 IPv6 address 11
 LINE 11
 lowercase 10
 MAC address 11
 monospaced font 10
 numeric range 11
 parentheses 10
 period 10

 square brackets 10
 time 11
 uppercase 10
 variable placeholders 11
 vertical bars 10
 WORD 11
 X:X::X:X 11
 X:X::X:X/M 11
 XX:XX:XX:XX:XX:XX 11
configure mode 15
configuring preempt mode 24, 40
curly brackets
 command syntax 10

D

debug vrrp 21
disable VRRP session 22, 38
display information about all VRRP sessions 28

E

enable VRRP sessions 23, 39
exec command mode 15

H

how to disable VRRP session 22, 38
how to enable VRRP session 23, 39
how to enable/disable Virtual MAC 33
how to enter router mode 42
how to set the Virtual IP address 32
how to set the Virtual IPv6 address 45

I

IFNAME 11
interface mode 15
IPv4 address
 command syntax 11
IPv6 address
 command syntax 11
ipv6 router mode 42

L

LINE 11

M

MAC address
 command syntax 11

P

- parentheses
 - command syntax 10
- period
 - command syntax 10
- preempt-mode 24, 40
- priority 25, 41
- privileged exec mode 15

R

- router mode 15
- router vrrp 25

S

- setting router priority 25, 41
- show commands 13
 - exclude modifier 14
 - include modifier 14
 - redirect modifier 15
- show debugging vrrp 26
- show running-config router vrrp 27
- show vrrp command 28
- square brackets
 - command syntax 10

T

- time
 - command syntax 11

U

- undebug vrrp events 28

V

- vertical bars
 - command syntax 10
- virtual IP address 32
- virtual IPv6 address 45
- Virtual MAC command 33
- virtual-ip 32
- virtual-ip command 45
- VRRP Commands 17, 35
 - circuit-failover 20, 37
 - debug vrrp 21
 - disable 22, 38
 - enable 23, 39
 - preempt-mode 24, 40
 - priority 25, 41
 - show debugging vrrp 26
 - show running-config router vrrp 27
 - show vrrp 28
 - undebug vrrp events 28
 - virtual-ip 32
 - vrrp vmac 33
- VRRPv6 Commands
 - router ipv6 vrrp 42
 - virtual-ip 45

W

- WORD 11