

Supreme Edition

S4 MK3 Controls



FX Controls
FX Controls of the selected FX Unit
Note: Select the FX Unit you want to control on the FX Settings View
FX Buttons (Hold Favorite)
4 FX Presets

Flux
Flux Mode
Reverse (Hold)
Reverse Play / Flux Reverse Play
Note: Depends of the Flux State

Grid (Edit Mode)
Tap BPM
Grid (Shift) (Edit Mode)
Edit Mode Zoom In/Out
Grid
Edit Mode
Grid (Hold)
Modifier

Hotcue
Hotcue Mode
Hotcue (Shift)
Loop Mode / Advanced Loop Mode / Loop Roll Mode / Tone Play Mode

Stems
Stems Mode
Stems (Shift)
Pad FX Mode
Samples
Remix Modes
Samples (Shift)
Sequencer Mode
Samples (Hold Grid)
Freeze Mode

FX Assign Left/Right
Assign FX Unit 1/2 to channel
FX Assign Left/Right (Shift)
Assign FX Unit 3/4 to channel
Note: 4 FX Units Mode must be enabled

Quantize
Enable Quantize
Quantize (Shift)
Enable Snap
Favourite
Settings View
Favourite (Shift)
FX Settings View
Favourite (Hold)
Modifier

Browser/Settings View
Press
Back
Hold
Return to Deck View

Deck View
Press (Browser in Screens Disabled)
Full-Screen Browser
Press (Shift)
Alternate View (Original/Supreme)

Browser View
Push
Open folder or Load selected track
Turn
Navigate through library
Turn (Hold Preview)
Seek through Preview Player
Turn (Hold Favorite)
Browse through Favorite Playlists

Deck View
Push
Open Browser
Turn / Turn (Shift)
Waveform Zoom / Traktor Pro WF Zoom
Turn (Hold Master)
MasterClock 1 BPM
Push (Hold Master)
MasterClock Mode
Turn (Hold REC)
Modify Remix Capture Source on current Remix Deck
Turn (Hold Samples)
Modify remix samples on current Remix Deck
Turn (Hold Slot Selector)
Sequencer Sample Selector

Master
Set as Master
Master (Shift)
Tempo Reset
Master (Hold)
Modifier
Sync
BeatSync / TempoSync
Sync (Shift)
Tempo Lock / KeyLock
Sync (Hold)
Key Sync (**Note:** Only if Internal Clock isn't master)
Sync (Hold Grid) (Edit Mode)
GridLock

Cue / Cue (Shift)
CUE / CUP / Restart
Play (Shift)
Time Code / Vinyl Break

Default Loop Move Mode
Turn
Move Loop Size
Turn (Shift)
Move ± 1 Beat
Push
Active
Push (Shift)
Active

Sequencer Mode
Turn
Modify current slot Pattern Size
Turn (Shift)
Modify all Patterns sizes
Push
Enable Step Sequencer
Push (Shift)

Edit Mode
Turn
Coarse Grid Adjus
Turn (Shift)
Fine Grid Adjust
Turn (Hold Grid)
Scan througuh Waveform

Default Loop Size Mode
Turn
Loop Size
Turn (Shift)
± 1 Semitone
Push
Set AutoLoop
Push (Shift)
Key Reset / KeyLock (with Reset) / KeyLock (without Reset) / Key Sync

Sequencer Mode (Enabled when you enter Sequencer Mode)
Turn
Modify current slot Pattern Size
Turn (Shift)
Modify all Patterns sizes
Push
Enable Step Sequencer
Push (Shift)

Edit Mode (Enabled when you enter **Edit Mode**)
Turn
± 1 BPM
Turn (Shift)
± 0.05 BPM
Turn Left (Hold Grid)
Half BPM (/2)
Turn Righ (Hold Grid)
Double BPM (x2)
Push
Reset BPM
Push (Shift)
Auto BPM (Analyze)

Supreme Edition

Screen & Pads

Hotcues Mode

Grid	Load	Fade In	Hotcue
Loop	Hotcue	Loop	Fade Out

Advanced Loop Mode

BeatJump -Loop Size	Loop In	Loop Out	BeatJump +Loop Size
BeatJump -4 Beats	BeatJump -1 Beat	BeatJump +1 Beat	BeatJump +4 Beats

Stems Mode

Mute Stem	Mute Stem	Mute Stem	Mute Stem
Slot Selector Reset Slot Parameters (Shift)	Slot Selector Reset Slot Parameters (Shift)	Slot Selector Reset Slot Parameters (Shift)	Slot Selector Reset Slot Parameters (Shift)

Legacy Remix Mode

Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)
Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop/Delete Sample (Shift)

Default Loop Mode

Loop Roll	Loop Roll	Loop Roll	Loop Roll
BeatJump	BeatJump	BeatJump	BeatJump

Loop Roll Mode

Loop Roll 1/16 Beat	Loop Roll 1/8 Beat	Loop Roll 1/4 Beat	Loop Roll 1/2 Beat
Loop Roll 1 Beat	Loop Roll 2 Beats	Loop Roll 4 Beats	Loop Roll 8 Beats

Remix Mode

Trigger/Capture/ Load Sample Stop + Delete Pattern/ Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop + Delete Pattern/ Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop + Delete Pattern/ Delete Sample (Shift)	Trigger/Capture/ Load Sample Stop + Delete Pattern/ Delete Sample (Shift)
Slot Selector	Slot Selector	Slot Selector	Slot Selector

Sequencer Mode

Enable Step X Edit Steps 1-8 Slot 1 (Shift)	Enable Step X Edit Steps 1-8 Slot 2 (Shift)	Enable Step X Edit Steps 1-8 Slot 3 (Shift)	Enable Step X Edit Steps 1-8 Slot 4 (Shift)
Enable Step X Edit Steps 9-16 Slot 1 (Shift)	Enable Step X Edit Steps 9-16 Slot 2 (Shift)	Enable Step X Edit Steps 9-16 Slot 3 (Shift)	Enable Step X Edit Steps 9-16 Slot 4 (Shift)

Sizes set in Traktor Settings —> S8 Settings

Capture: A Loop Sample of N beats (the Loop Size of the deck will be captured from TrackDeck X/LoopRecorder when an empty cell is pressed and you are not in Browser Mode.

Load: If you are in Browser Mode and you press an empty cell, the currently selected track/sample will be loaded to that cell.