 


Warming Tips

1. The user age should be better than 14. Children under 14 should use it under adult supervision.
2. When the robot moves, please keep yourself at a safe distance from accidental injury.
3. When the robot moves, please keep your fingers away from the range of motion from getting hurt.
4. Please remember to put the robot on a smooth ground if you want to use it, or it will easily fall down.
5. Please remember to turn off the switch to prevent the servo from burning out if there is something wrong with servo, such as shivering or locked-rotor.
6. Please don't forcibly twist the joint when the robot is powered on so as not to cause joint damage or the deformation of metal support.
7. Please be careful to prevent it from falling from a high place. We will not responsible for the damage caused by that.
8. Please remember to prevent the battery from over charging or over discharging. Turn off the switch while you are not using it. If you find the robot start beeping like "Di Di Di", please switch off the electricity and charge it right away.
9. If you find the robot moving unsteadily, you can check the volumn of battery, please remember to charge it when the battery is running out. If there is no problem in battery, you can check the servo whether it is aging or not. Servo is consumables. It needs to be replaced after overusing it.
10. If you find the individual servo doesn't work while you are controlling the robot, please check the servo wire whether it is loosing or not.
11. After keeping running for over 15min, please remember to make our robot take a rest until the servo cools down.
12. Do not take the robot apart by yourself. If you have any questions, please feel free to contact us at support@lewansoul.com

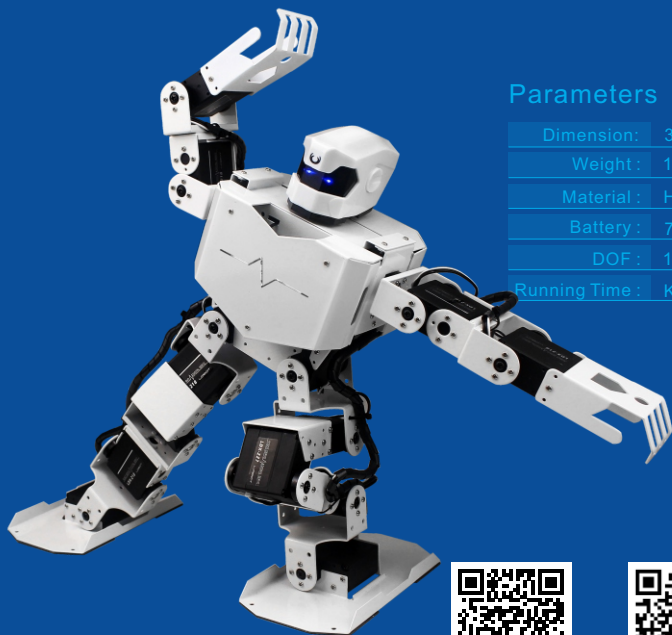

Parameters

Dimension:	365mm*192mm(14.37in*7.56in)
Weight :	1.68kg(3.70lb)
Material :	Hard Aluminium Alloy
Battery :	7.4V 2200mAh(capacity)
DOF :	16DOF
Running Time :	Keep running for 120min



Get Android/iOS App



Get software




Get video tutorial

LewanSoul

RoboSoul H3S User Manual

Product list

Robot	1pcs
Charger	1pcs
USB cable	1pcs
User Manual	1pcs

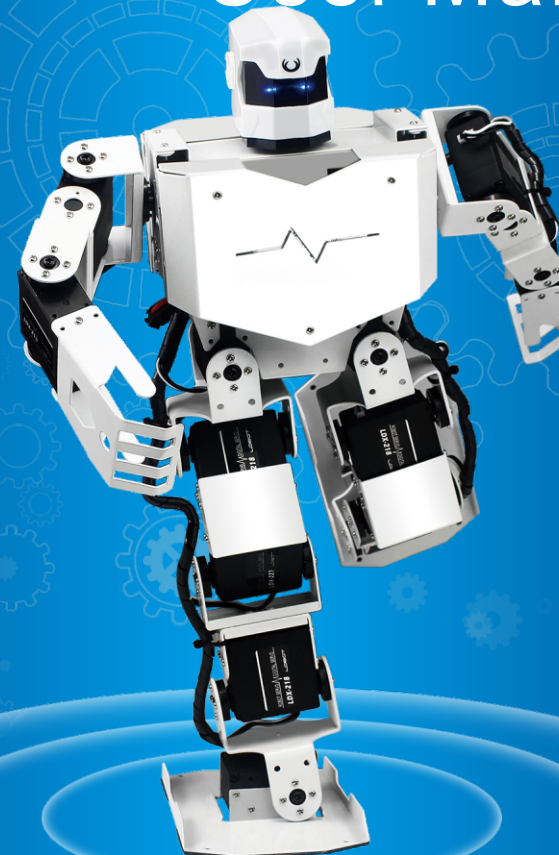 

Introduction

H3S is an intelligent robot which integrates the function of education and entertainment.

We will provide you with a visual programming interface, which helps you easily program for the robot. It can not only walk, turn left/right, but also sing and dance, play boxing, play football, and do gymnastic exercises. Because of its excellent flexibility, our H3S robot will definitely satisfied all your desires of the humanoid robot.

Besides, we will offer our mobile phone app to you so that you can directly use it to remote control our robot.

More thinking, more acting, your robot, your partner!

Basic Operation—Mobile Phone App Control

Acquiescent Condition: Standard Mode



Bluetooth Indicator

Red means the robot unconnected with the Bluetooth; blue means the robot connected successfully.



Mini-bubble slider

Control the robot to move forward, move backward, slide to the left/right.



 
Turn left/ Turn right



Dance Button



Battery Voltage

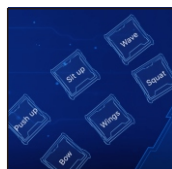


Skill Button



Attention

 
Return to original position

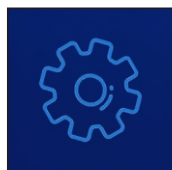

Settings


Working mode can be changed

 Football Mode

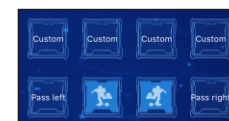


Skill Button

 Fighting Mode

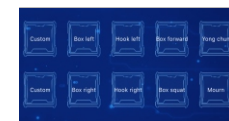

Skill Button

 

Automatic Standing Button